



69ERT Models - Electrical Manifold

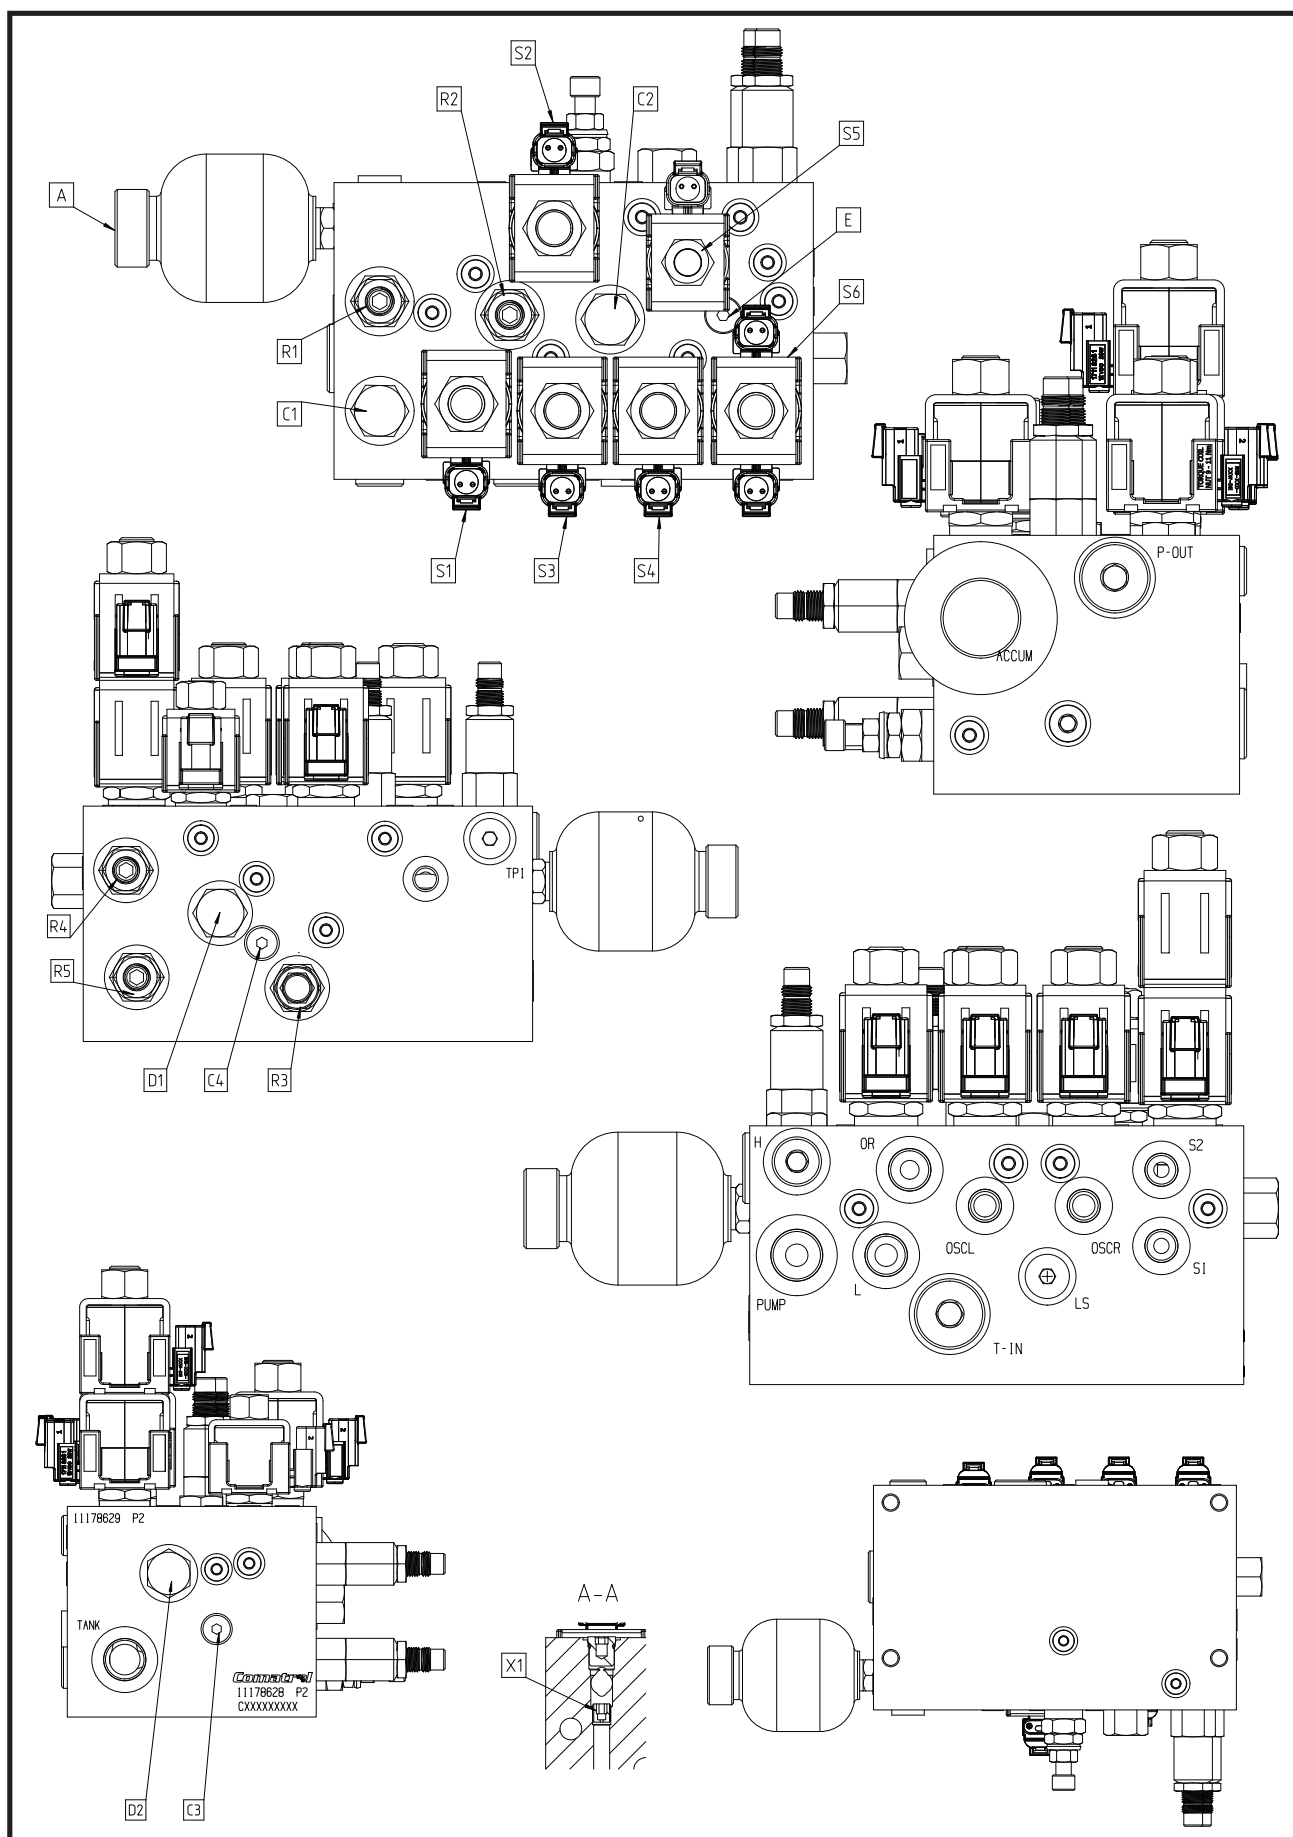

Identification	Description	Function.
C3	Check Valve	Provides single directional flow for Load Sense Port
C4	Check Valve	Provides single directional flow for Load Sense Port
E	Shuttle Valve	Provides single directional flow for Load Sense Port from Steer
C1	Check Valve	Prevents backflow to Pump
C2	Check Valve	Prevents flow loss from Accumulator
A	Accumulator	Provides reserve flow for Axle Circuit when pump is off
R1	Relief Valve	Main System Pressure Relief
R2	Relief Valve	Limits pressure to Lift Cylinder
R3	Relief Valve	Limits pressure to Axle Circuit
R4	Relief Valve	Limits pressure to Steer Left
R5	Relief Valve	Limits pressure to Steer Right
D1	Flow Regulator	Reduces flow to Axle Circuit
D2	Flow Regulator	Reduces flow to Steer Circuit
S1	Solenoid Valve	Provides flow to platform Lift Function
S2	Solenoid Valve	Connects accumulator to Axle Circuit when energized
S3	Solenoid Valve	Controls Axle Oscillation left
S4	Solenoid Valve	Controls Axle Oscillation right
S5	Solenoid Valve	Provided flow to Axle Circuit when required
S6	Solenoid Valve	Controls Steer direction

69ERT Hydraulic Schematic

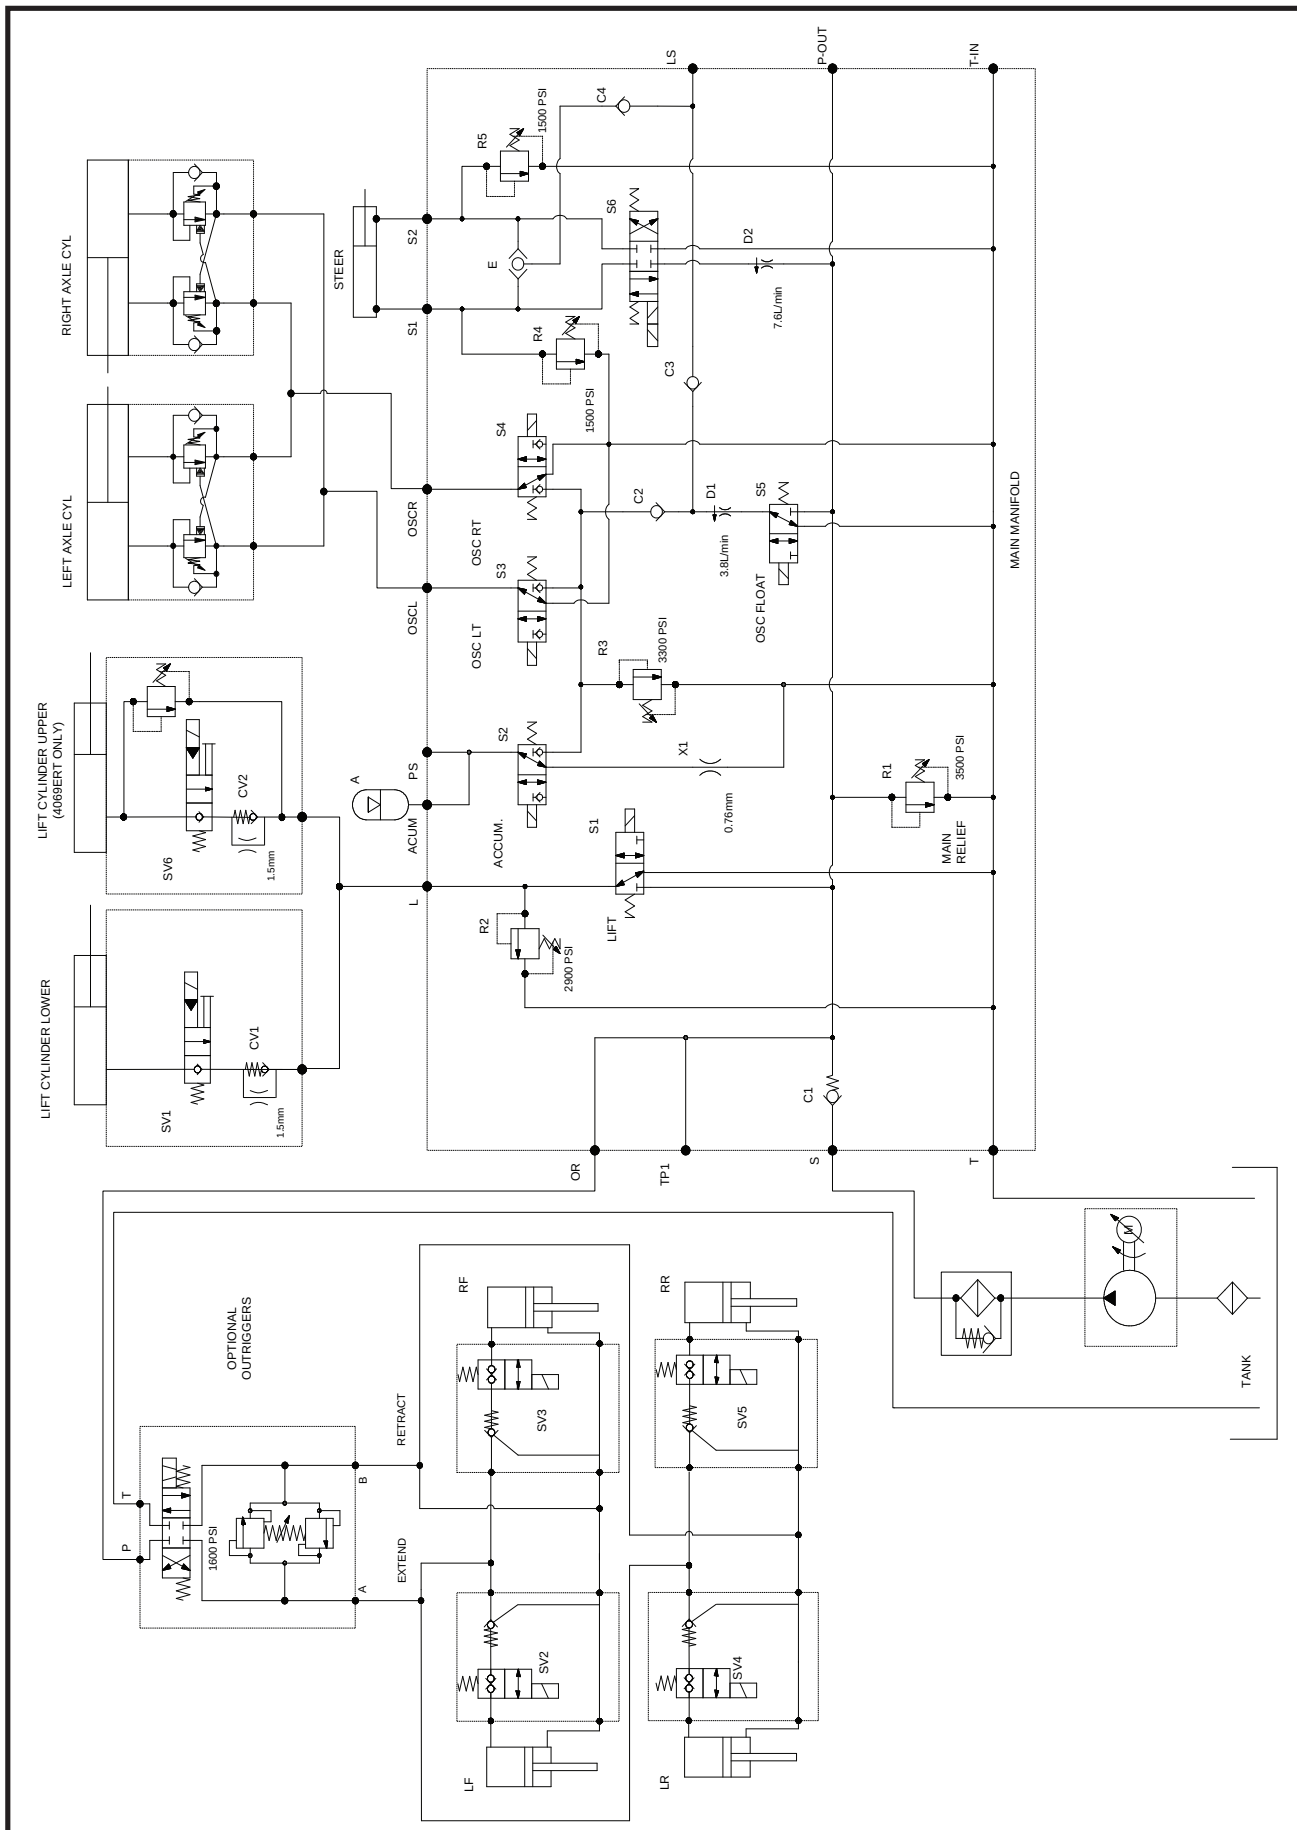

Notes

Parts Introduction

This Parts sections consists of illustrated parts sections and is designed to provide you, the customer, with illustrations and the list of associated parts needed to properly maintain the MEC self-propelled aerial work platform. When used in conjunction with the Service section in this manual and the Operator's Manual (provided separately), this manual will assist you in making necessary adjustments and repairs, and identifying and ordering the correct replacement parts.

All parts represented here are manufactured and supplied in accordance with MEC quality standards.

We recommend that you use genuine MEC parts to ensure proper operation and reliable performance.

To obtain maximum benefits from your MEC Aerial Work Platforms, always follow the proper operating and maintenance procedures. Only trained authorized personnel should be allowed to operate or service this machine. Service personnel should read and study the Operator's, and the Service and Parts Manuals in order to gain a thorough understanding of the unit prior to making any repairs.

Steer Axle Assembly Installation

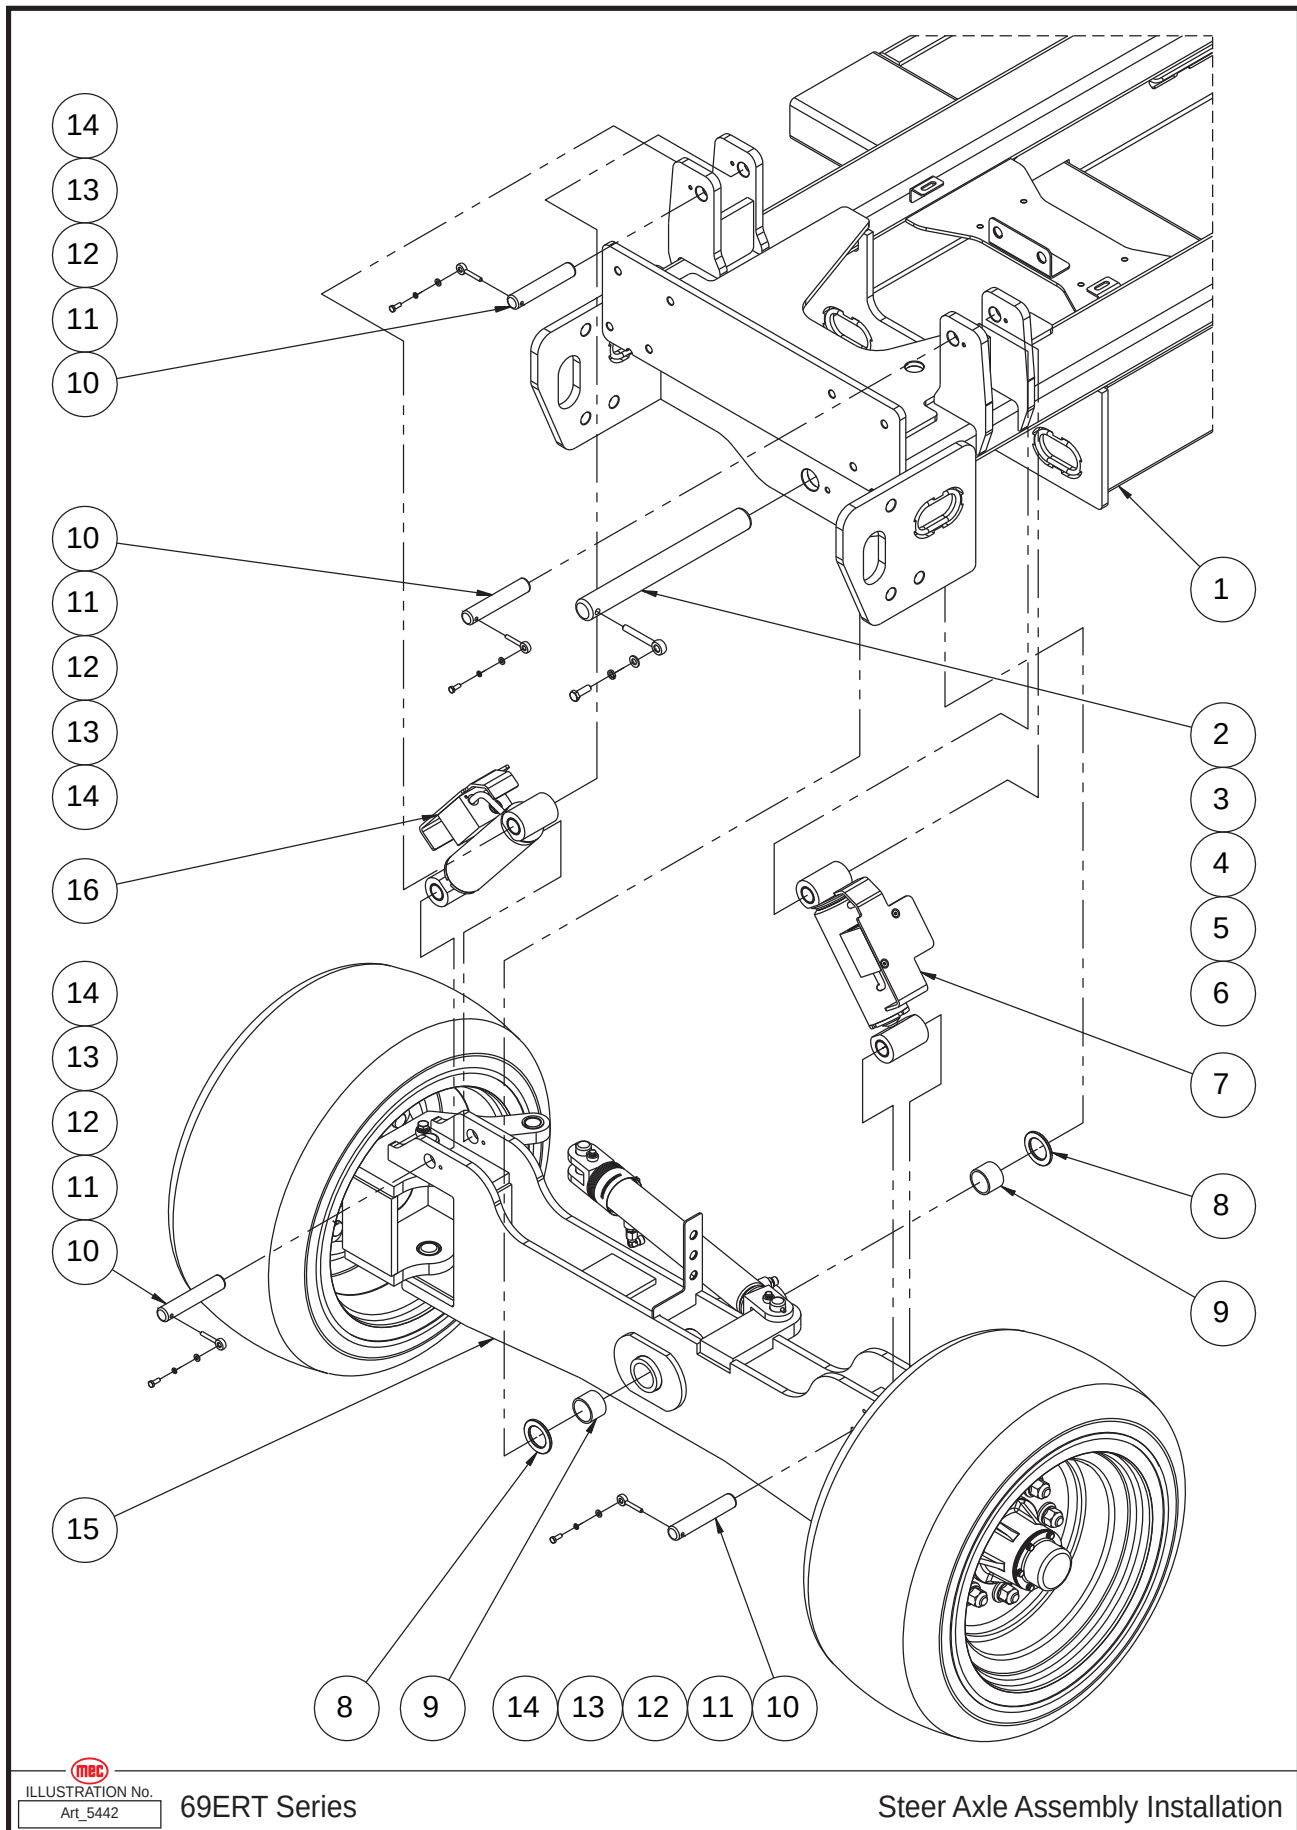


ILLUSTRATION No.
Art_5442


69ERT Series

Steer Axle Assembly Installation

Item	Part Number	Description	Qty.
1	43006	Frame Weldment	1
2	43007	Pin	1
3	41431	Pin	1
4	50002	WSHR M10 Standard Flat	1
5	53054	WSHR M10 Spring Washer	1
6	50034	HHCS M10 × 30	1
7	REF	Left Oscillate Cylinder Assembly (Refer To Page 113)	1
8	43008	Washer	2
9	41105	Bearing	2
10	43009	Pin	4
11	42449	Pin	6
12	50000	WSHR M6 Standard Flat	6
13	53046	WSHR M6 Spring Washer	6
14	50445	HHCS M6 × 16	6
15	REF	Steer Axle Assembly (Refer To Page 40)	1
16	REF	Right Oscillate Cylinder Assembly (Refer To Page 112)	1

REF - Reference

Steer Axle Assembly

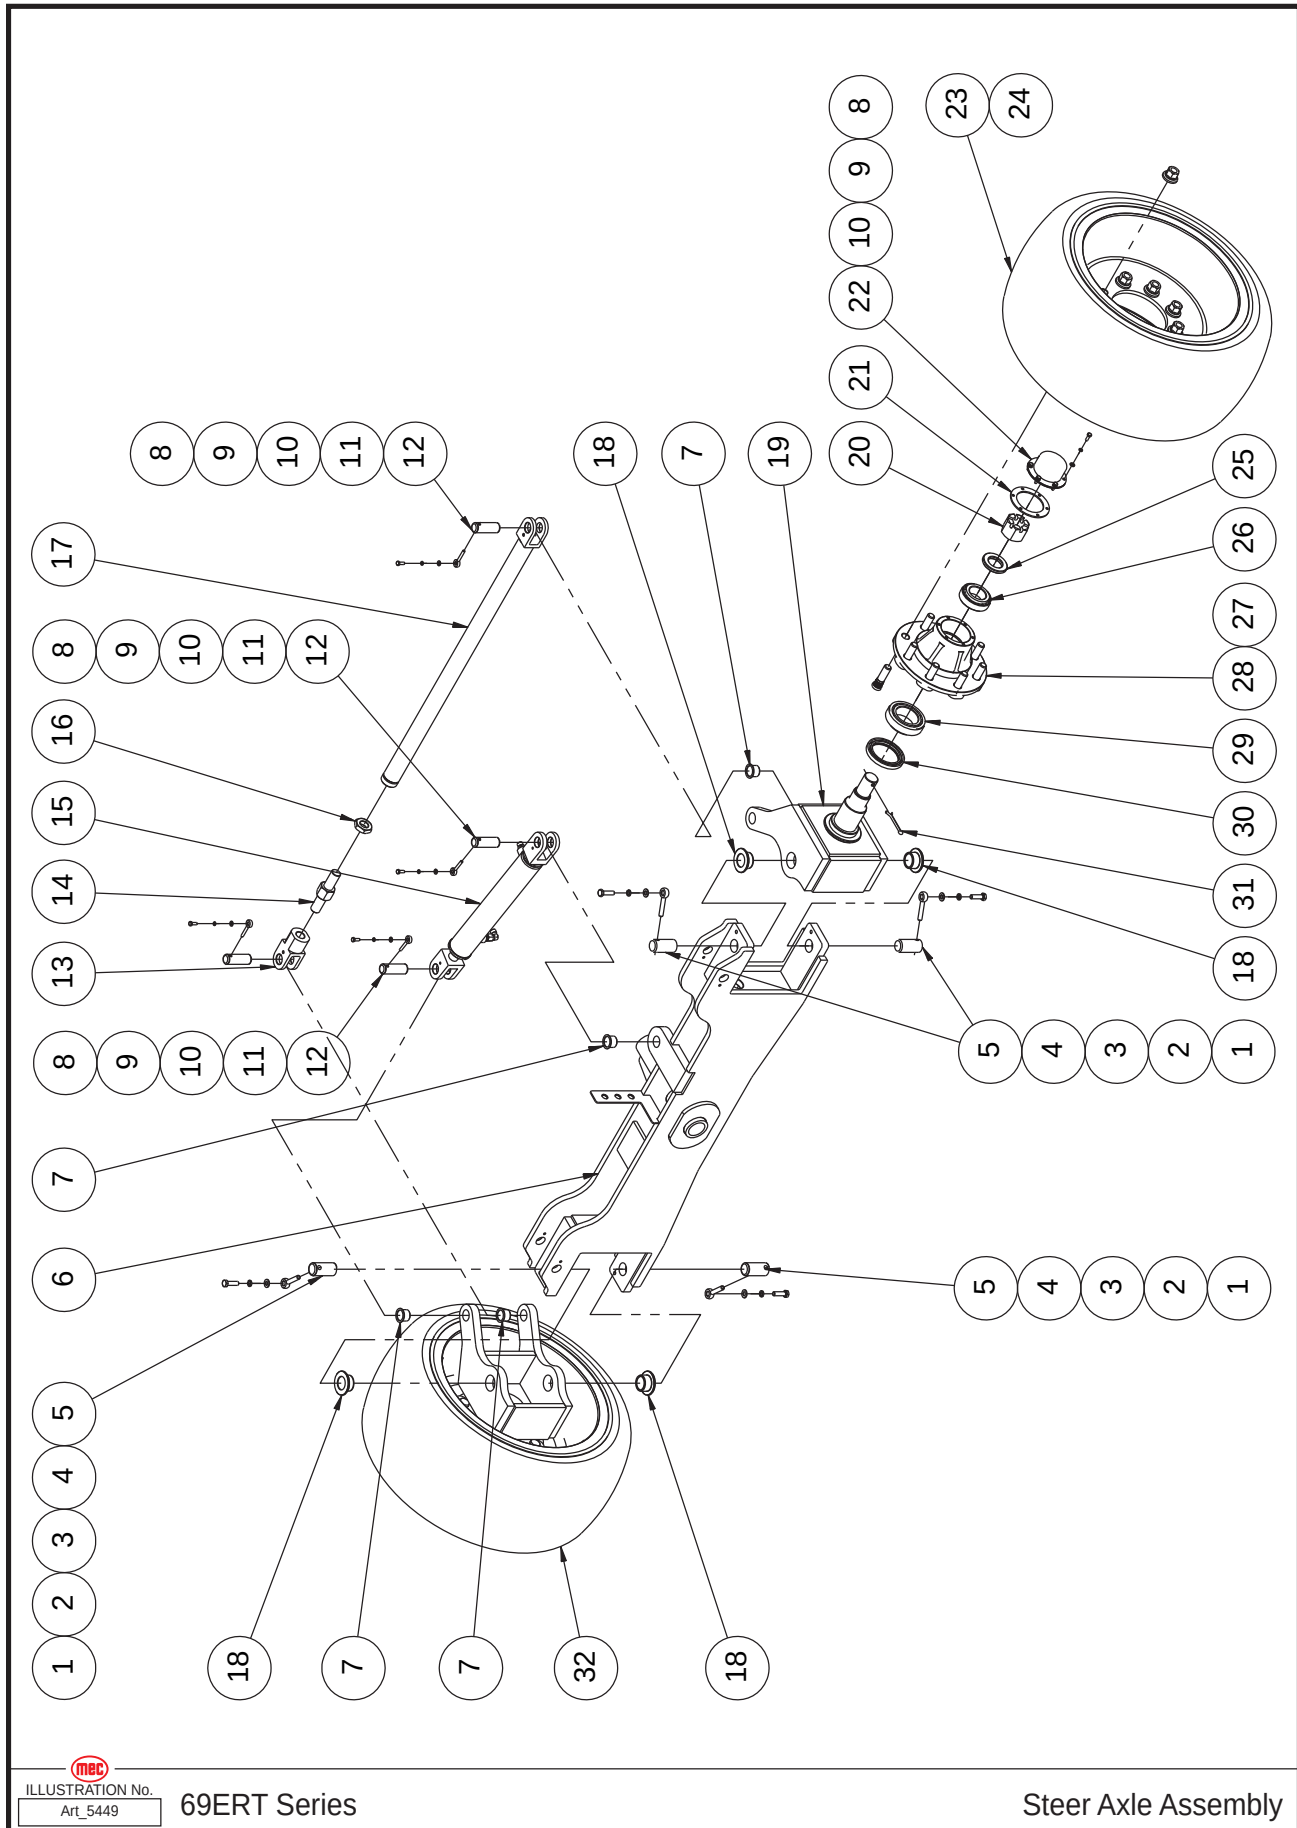

Item	Part Number	Description	Qty.
1	50332	HHCS M10 × 35	4
2	53054	WSHR M10 Spring Washer	4
3	50002	WSHR M10 Standard Flat	4
4	43024	Pin	4
5	43025	Pin	4
6	43026	Steer Axle Weldment	1
7	43017	Bearing	4
8	50445	HHCS M6 × 16	16
9	53046	WSHR M6 Spring Washer	16
10	50000	WSHR M6 Standard Flat	16
11	42449	Pin	4
12	43021	Pin	4
13	43018	Clevis Yoke	1
14	43019	Adjusting Screw	1
15	REF	Steer Cylinder Assembly (Refer To Page 114)	1
16	53169	NHEX M24 × 40	1
17	43020	Tie Rod Weldment	1
18	43016	Bearing	4
19	43062	Steer Yoke Weldment	2
20	53250	Castle Nut M36 × 4mm	2
21	43063	Seal Washer	2
22	43064	Cap	2
23	43022	Right Front Non-Marking Wheel	1
	43833	Tire/Wheel, Black, Right Front	1
24	53213	NNYL Flange M18 × 1.5	16
25	43527	Washer	2
26	43483	Bearing	2
27	43013	Bolt	16
28	43484	Hub	2
29	43485	Bearing	2
30	43486	Seal	2
31	43487	Cotter Pin	2
32	43010	Left Front Non-Marking Wheel	1
	43832	Tire/Wheel, Black, Left Front	1

REF - Reference

Rear Axle Assembly Installation

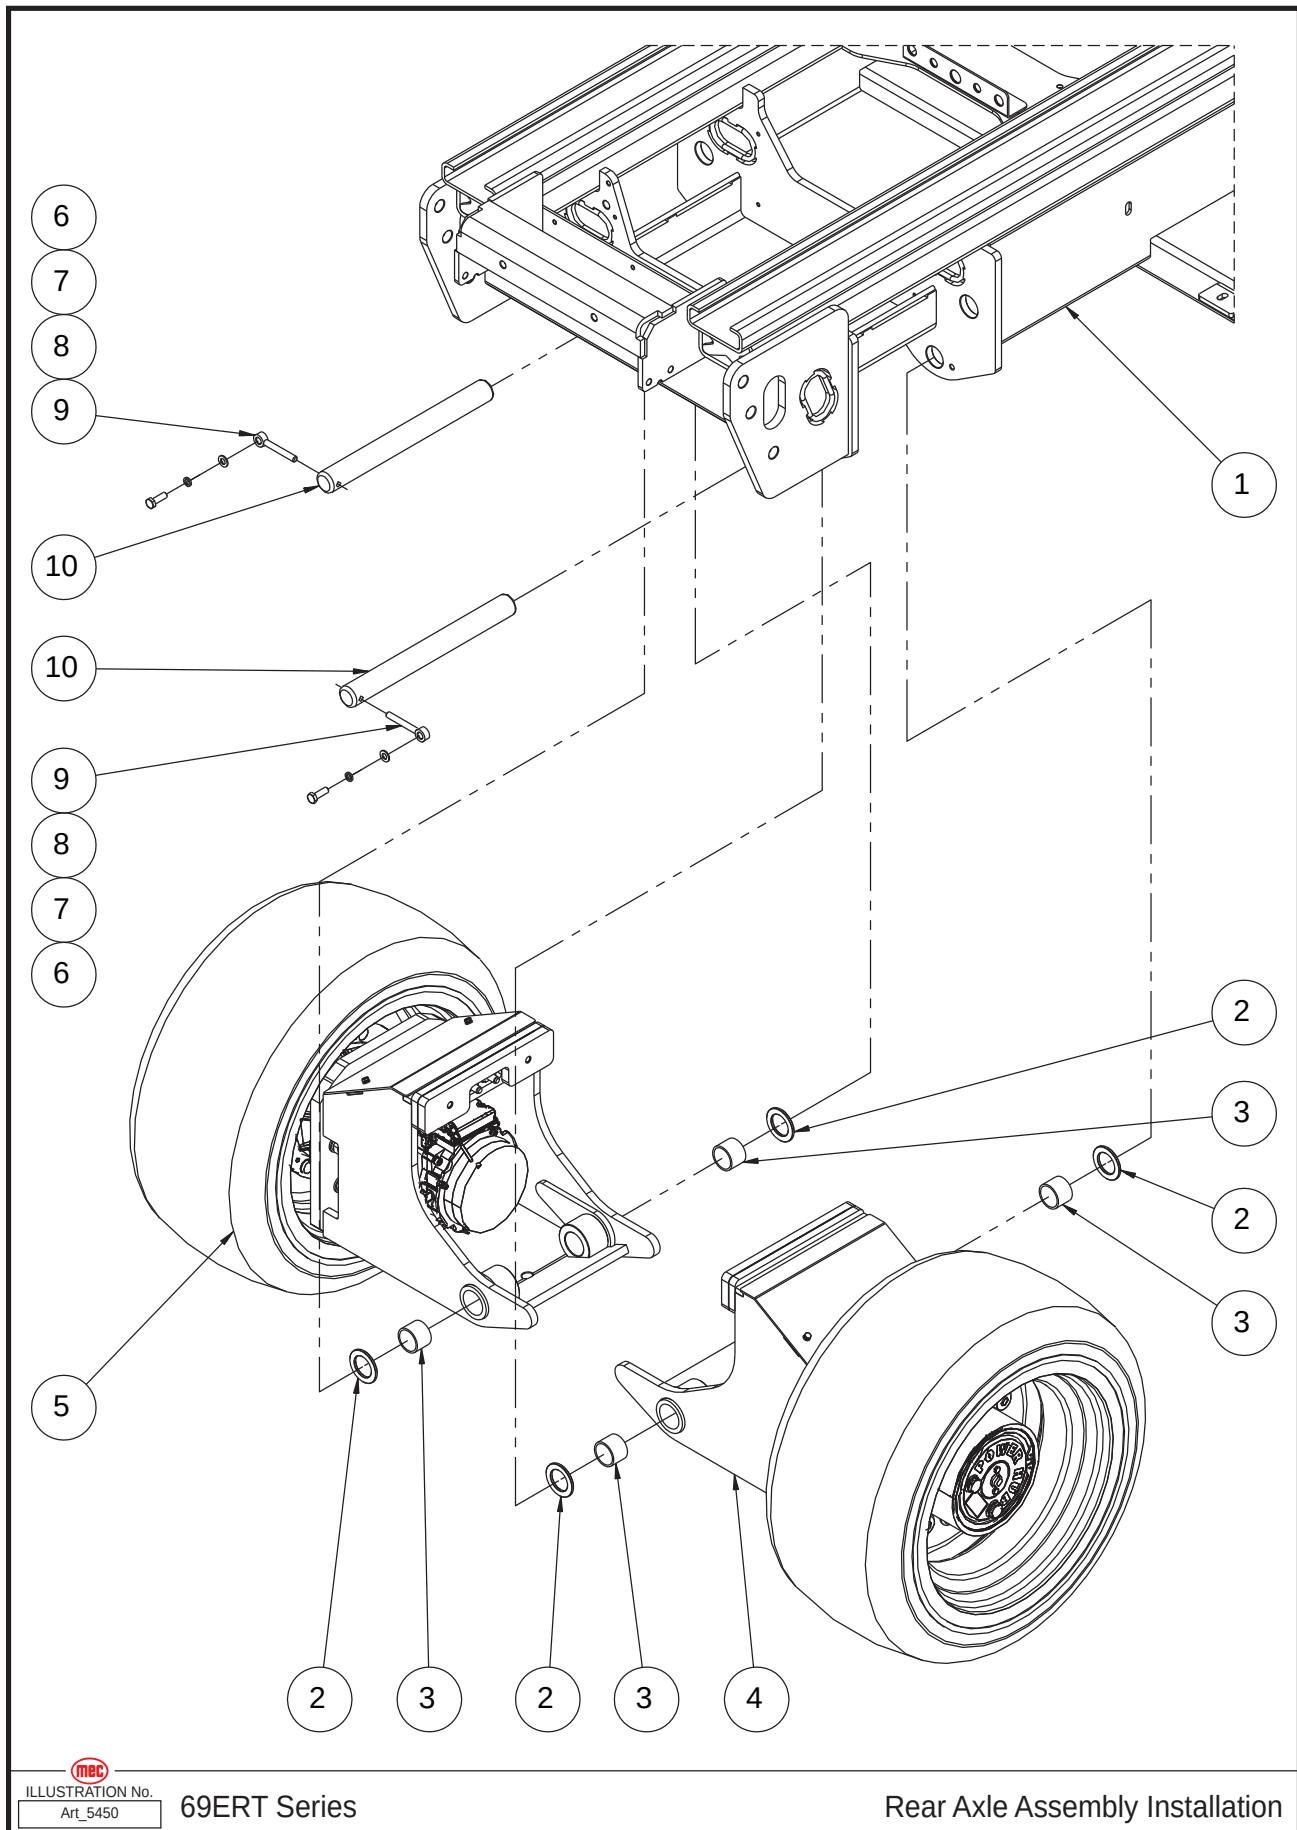


ILLUSTRATION No.
Art_5450

69ERT Series

Rear Axle Assembly Installation

Item	Part Number	Description	Qty.
1	43006	Frame Weldment	1
2	43008	Washer	4
3	41105	Bearing	4
4	REF	Right Rear Wheel Assembly (Refer To Page 44)	2
5	REF	Left Rear Wheel Assembly (Refer To Page 46)	1
6	50034	HHCS M10 × 30	2
7	53054	WSHR M10 Spring Washer	2
8	50002	WSHR M10 Standard Flat	2
9	41431	Pin	2
10	43027	Pin	2

REF - Reference

Right Rear Wheel Assembly

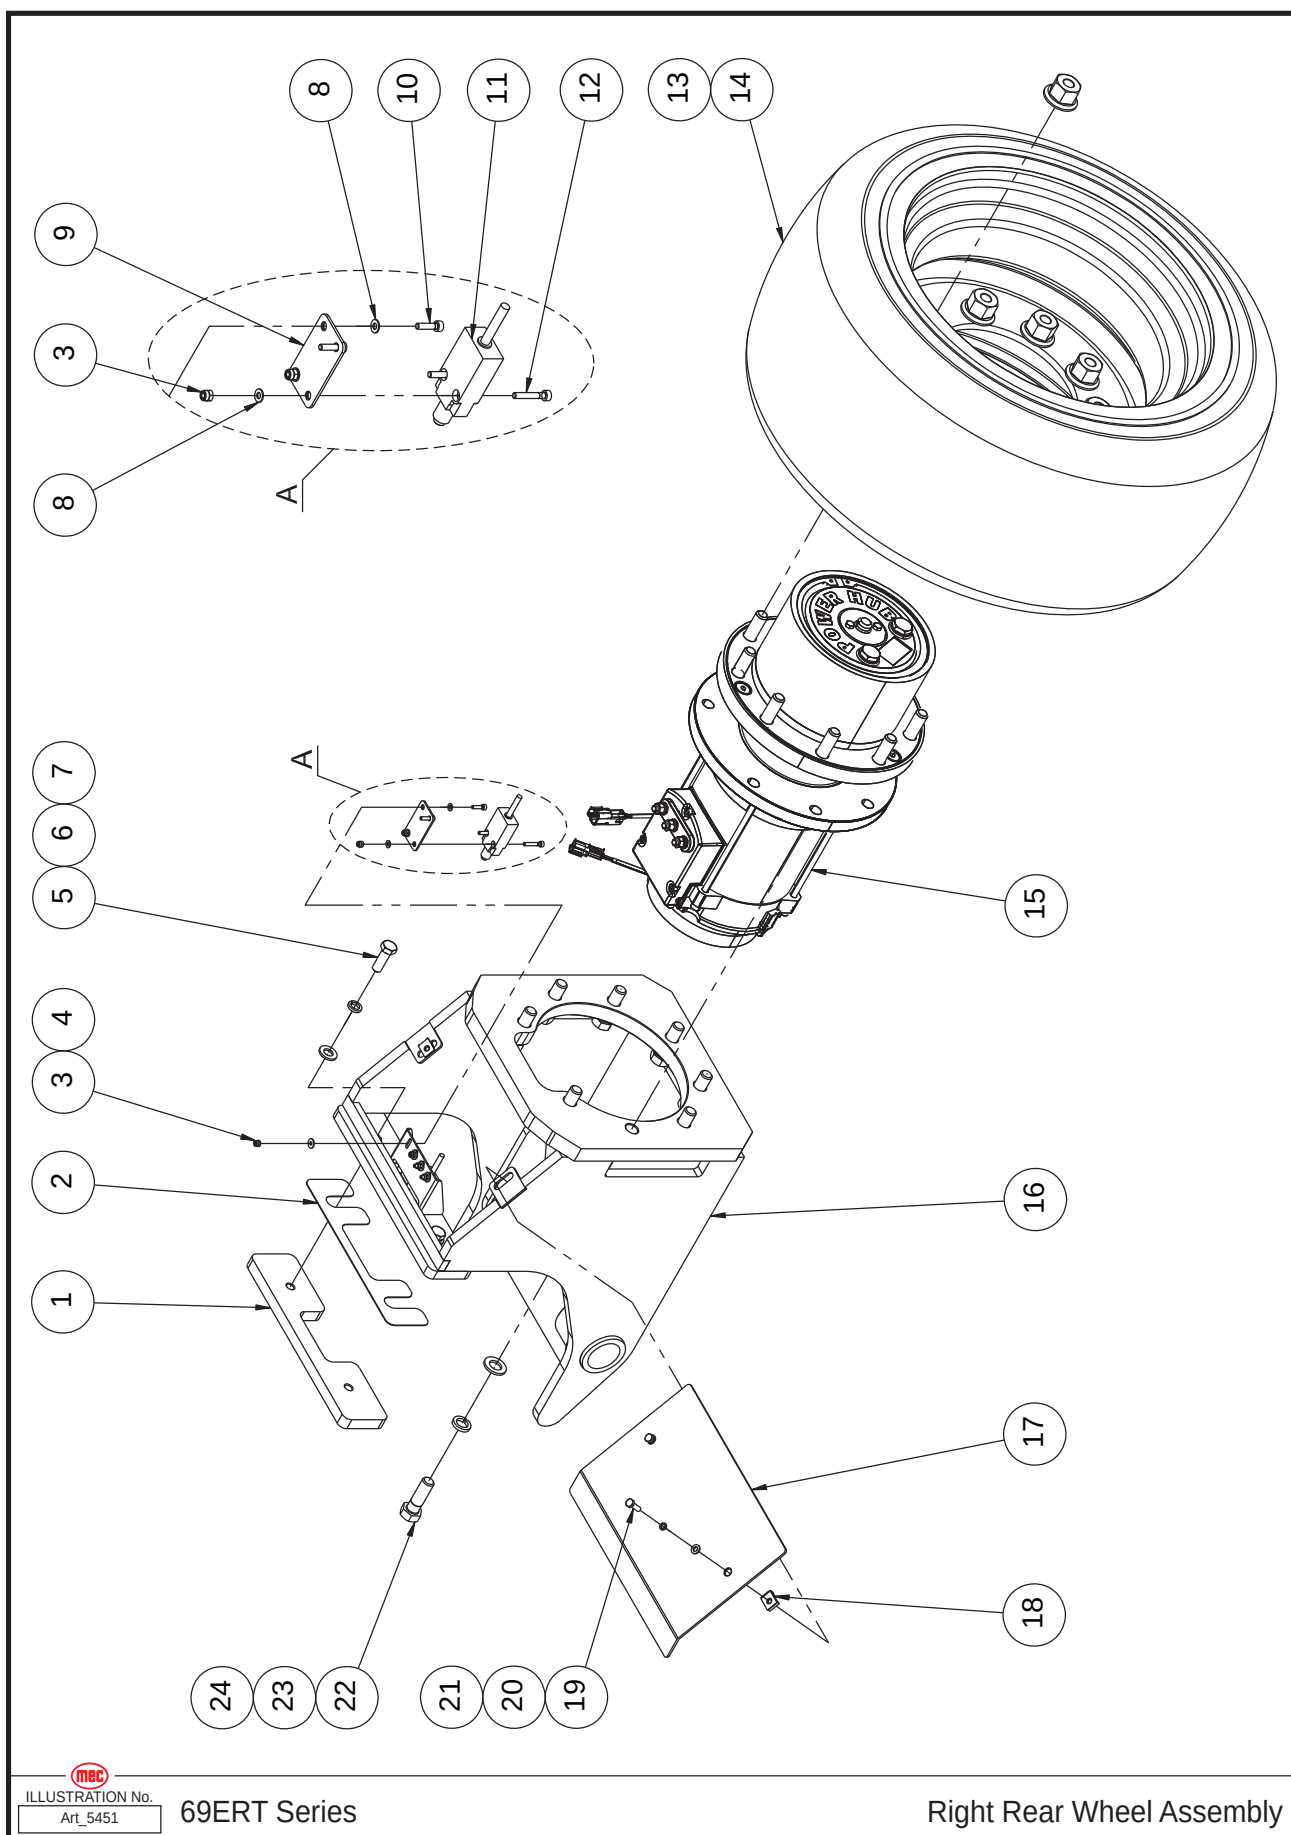


ILLUSTRATION No.
Art_5451

69ERT Series

Right Rear Wheel Assembly

Item	Part Number	Description	Qty.
1	43488	Bumper	1
2	43032	Adjusting Plate	1
3	50285	NNYL M4	8
4	50284	WSHR M4 Standard Flat	4
5	50040	HHCS M12 × 35	2
6	53148	WSHR M12 Spring Washer	2
7	50003	WSHR M12 Standard Flat	2
8	50284	WSHR M4 Standard Flat	8
9	43030	Switch Plate	2
10	53113	SHCS M4 × 16	4
11	43031	Limit Switch	2
12	53115	SHCS M4 × 25	4
13	50266	NLUG 5/8-18	9
14	43038	Right Rear Non-Marking Wheel	1
	43830	Tire/Wheel, Black, Right Rear	1
15	43489	Motor	1
16	43490	Rear Motor Housing Weldment	1
17	43491	Cover	1
18	43037	Nut	2
19	50028	HHCS M6 × 20	2
20	53046	WSHR M6 Spring Washer	2
21	50000	WSHR M6 Standard Flat	2
22	50478	HHCS 5/8-11 × 2	8
23	53149	WSHR M16 Spring Washer	8
24	50004	WSHR M16 Standard Flat	8

Left Rear Wheel Assembly

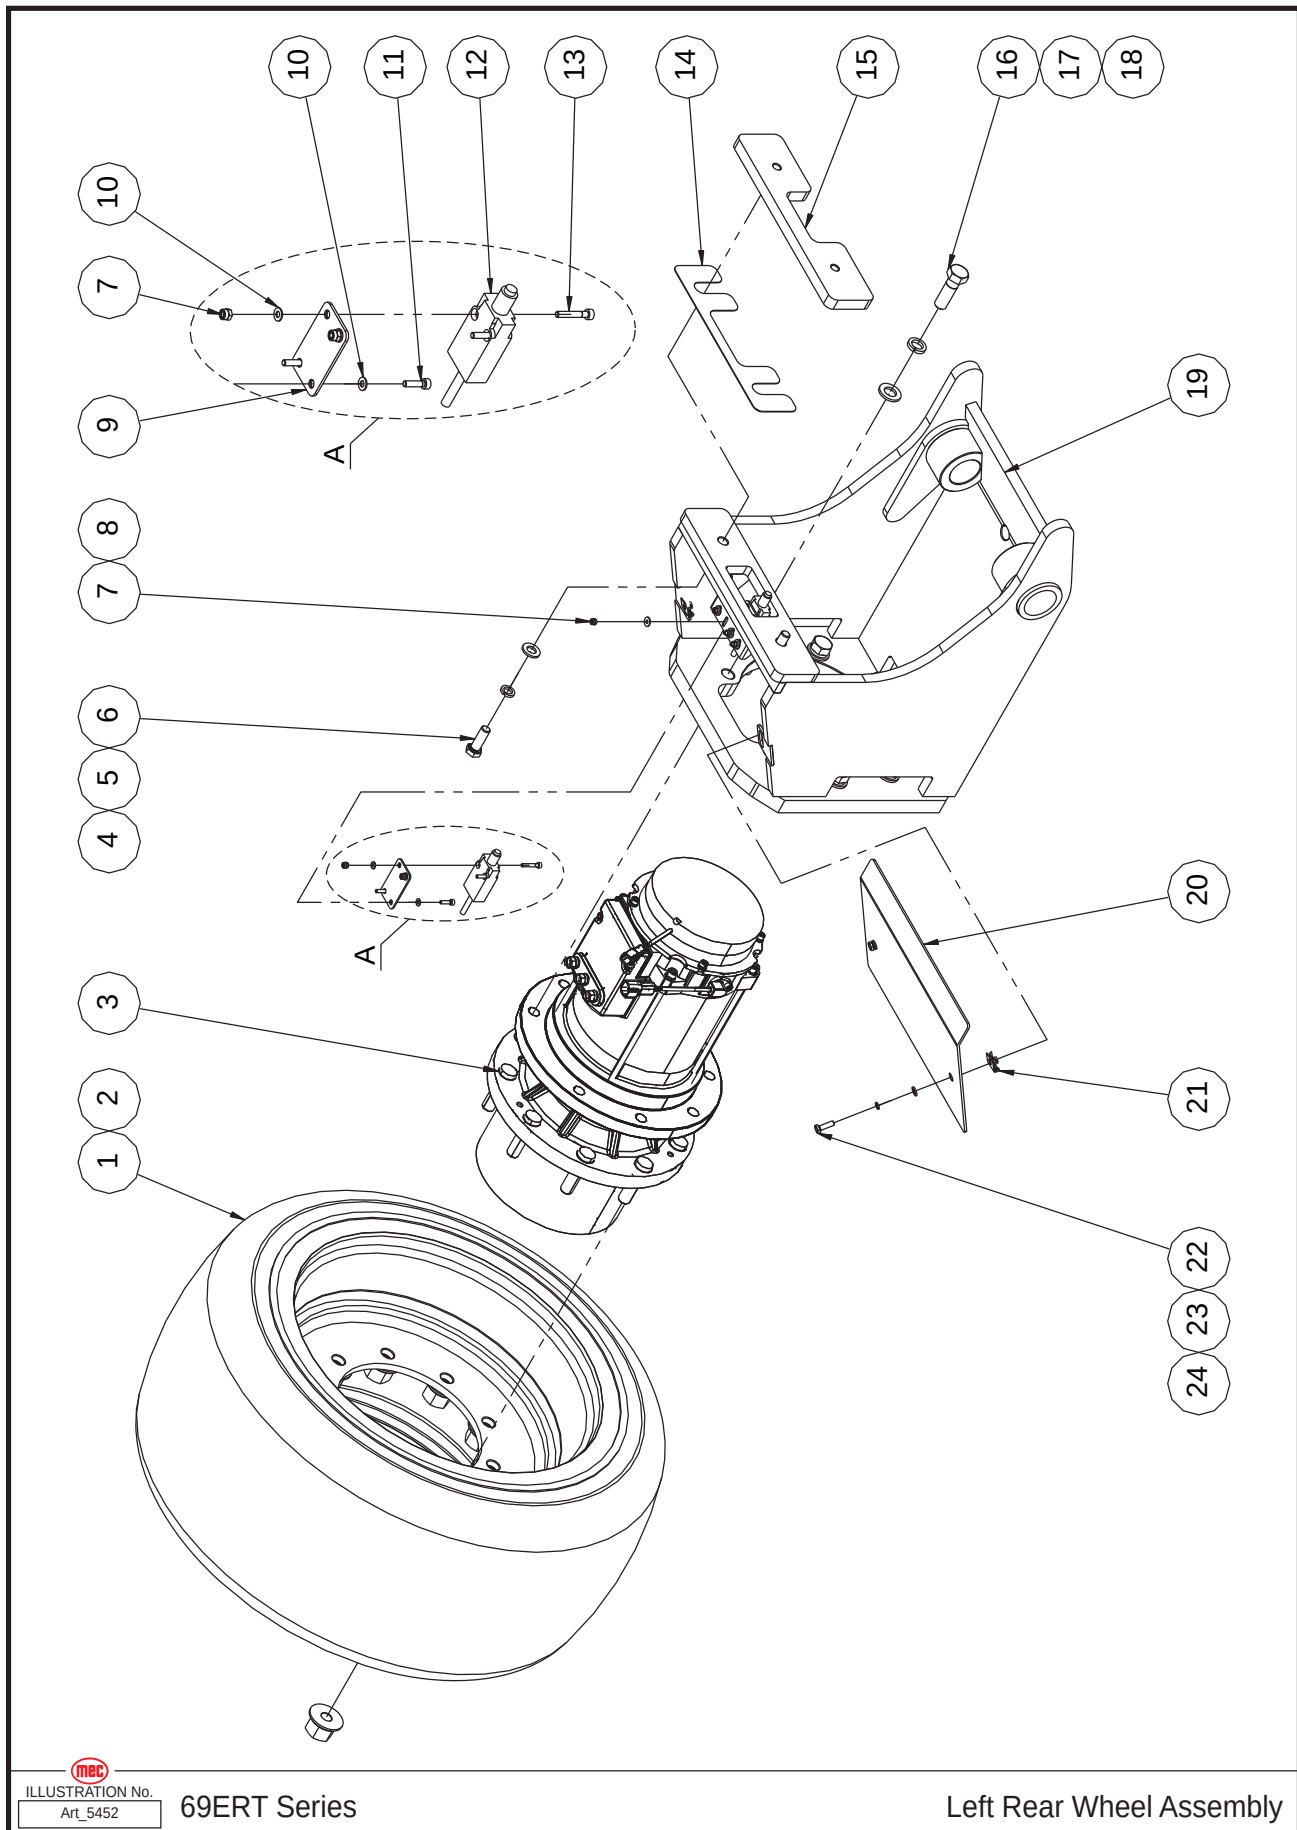


ILLUSTRATION No.
Art_5452


69ERT Series

Left Rear Wheel Assembly

Item	Part Number	Description	Qty.
1	43028	Left Rear Non-Marking Wheel	1
	43831	Tire/Wheel, Black, Left Rear	1
2	50266	NLUG 5/8-18	9
3	43489	Motor	1
4	50003	WSHR M12 Standard Flat	2
5	53148	WSHR M12 Spring Washer	2
6	50040	HHCS M12 × 35	2
7	50285	NNYL M4	8
8	50284	WSHR M4 Standard Flat	4
9	43030	Switch Plate	2
10	50284	WSHR M4 Standard Flat	8
11	53113	SHCS M4 × 16	4
12	43031	Limit Switch	2
13	53115	SHCS M4 × 25	4
14	43032	Adjusting Plate	1
15	43488	Bumper	1
16	50478	HHCS 5/8-11 × 2	8
17	50004	WSHR M16 Standard Flat	8
18	53149	WSHR M16 Spring Washer	8
19	43490	Rear Motor Housing Weldment	1
20	43491	Cover	1
21	43037	Nut	2
22	50028	HHCS M6 × 20	2
23	53046	WSHR M6 Spring Washer	2
24	50000	WSHR M6 Standard Flat	2

Item	Part Number	Description	Qty.
1	43492	Hydraulic Module Weldment	1
2	50003	WSHR M12 Standard Flat	6
3	50050	NNYL M12	4
4	43006	Frame Weldment	1
5	50000	WSHR M6 Standard Flat	4
6	50047	NNYL M6	2
7	43048	Lock	1
8	50214	HHCS M6 × 30	2
9	50003	WSHR M12 Standard Flat	2
10	50040	HHCS M12 × 35	4


Hydraulic Module Door Installation

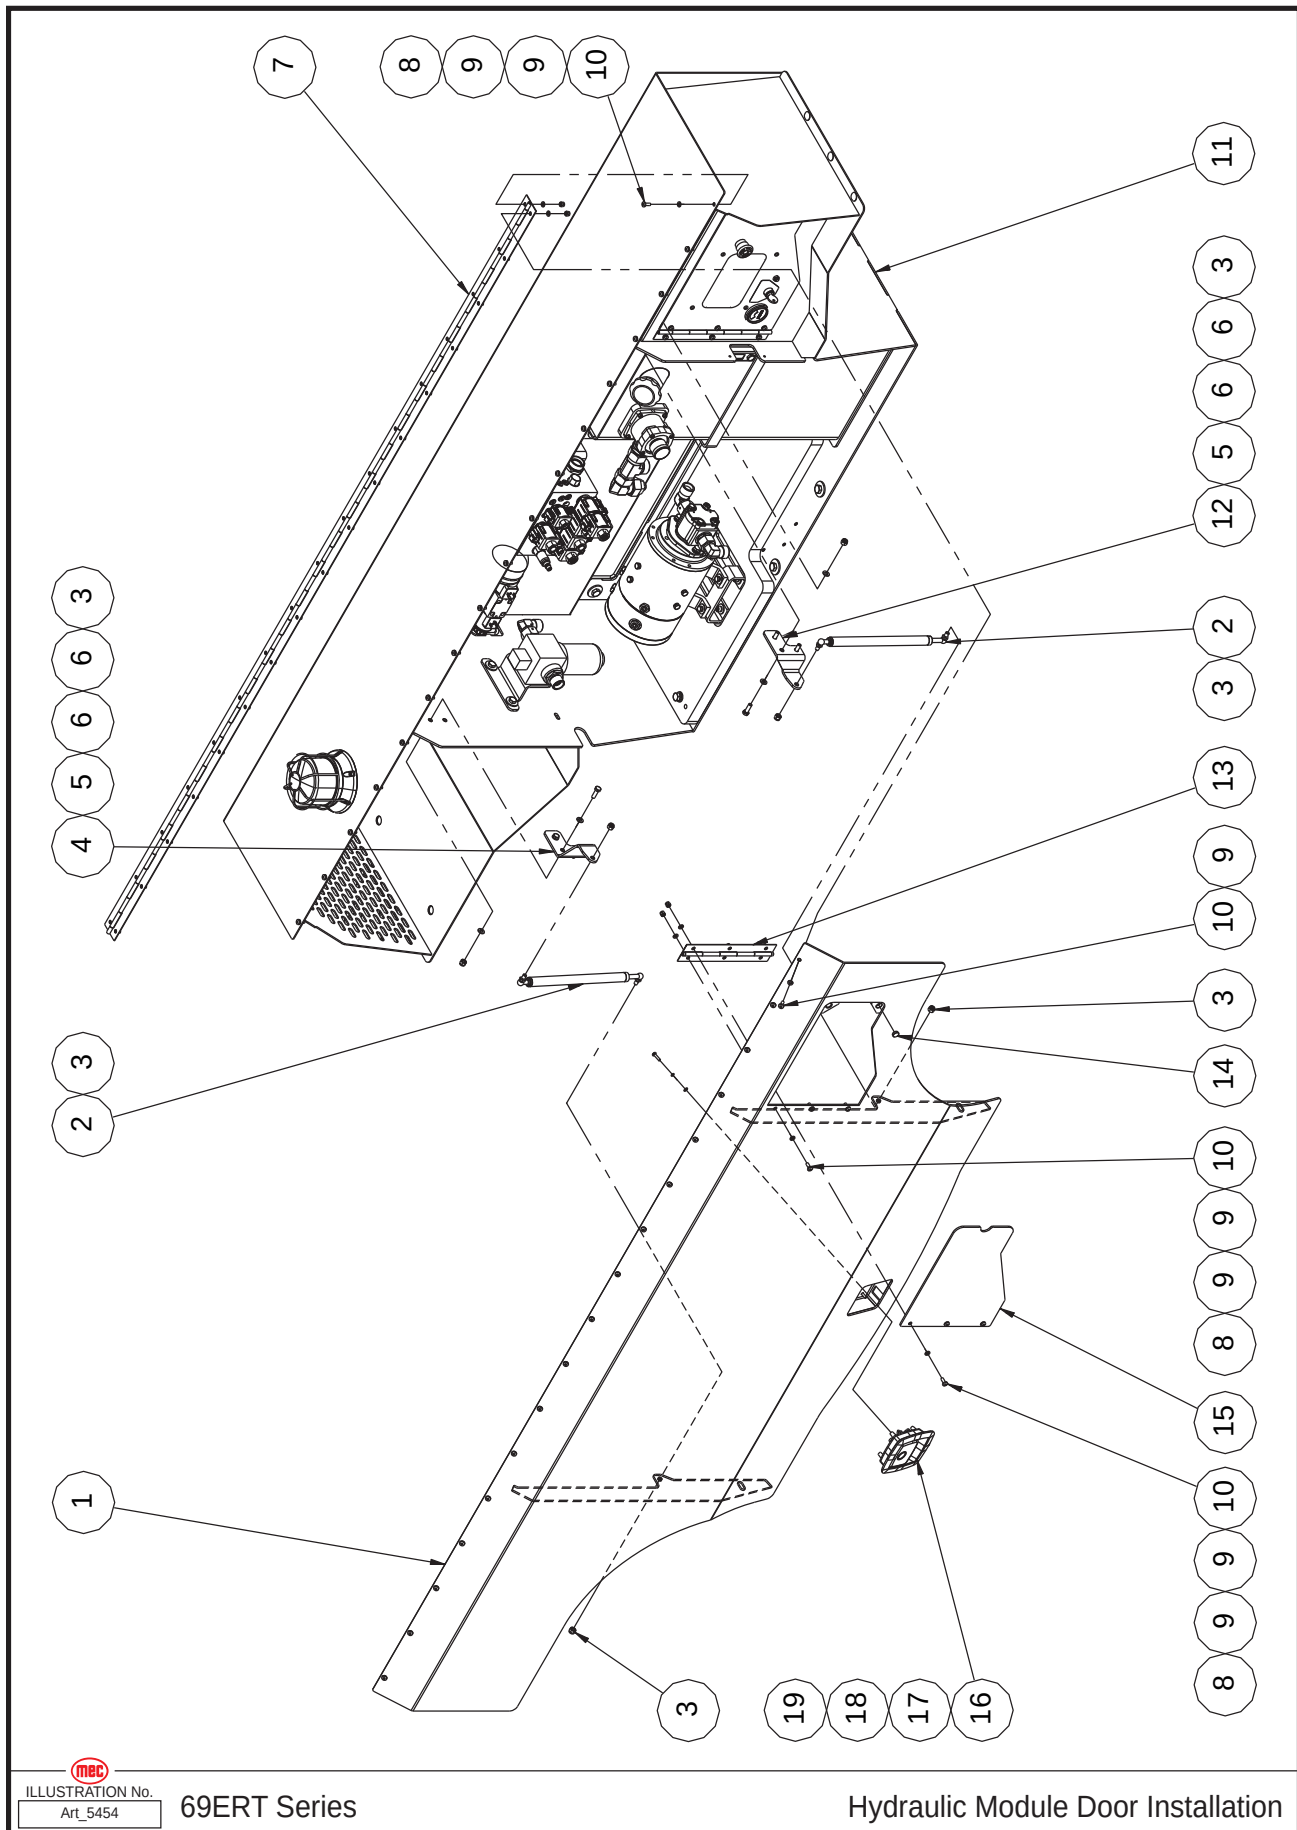

Item	Part Number	Description	Qty.
1	43493	Left Door	1
2	43057	Gas Shock	2
3	50048	NNYL M8	8
4	43058	Gas Shock Bracket	1
5	50031	HHCS M8 × 25	4
6	50001	WSHR M8 Standard Flat	8
7	43135	Hinge	1
8	50047	NNYL M6	40
9	50000	WSHR M6 Standard Flat	80
10	53231	PHMS M6 × 16	40
11	REF	Hydraulic Module Assembly (Refer To Page 52)	1
12	43056	Gas Shock Bracket	1
13	43054	Hinge	1
14	43053	Magnet	2
15	43052	Control Door Plate	1
16	43050	Latch	1
17	53038	WSHR M5 Standard Flat	4
18	53043	WSHR M5 Spring Washer	4
19	53219	THMS M5 × 20	4

REF - Reference

Hydraulic Module Assembly

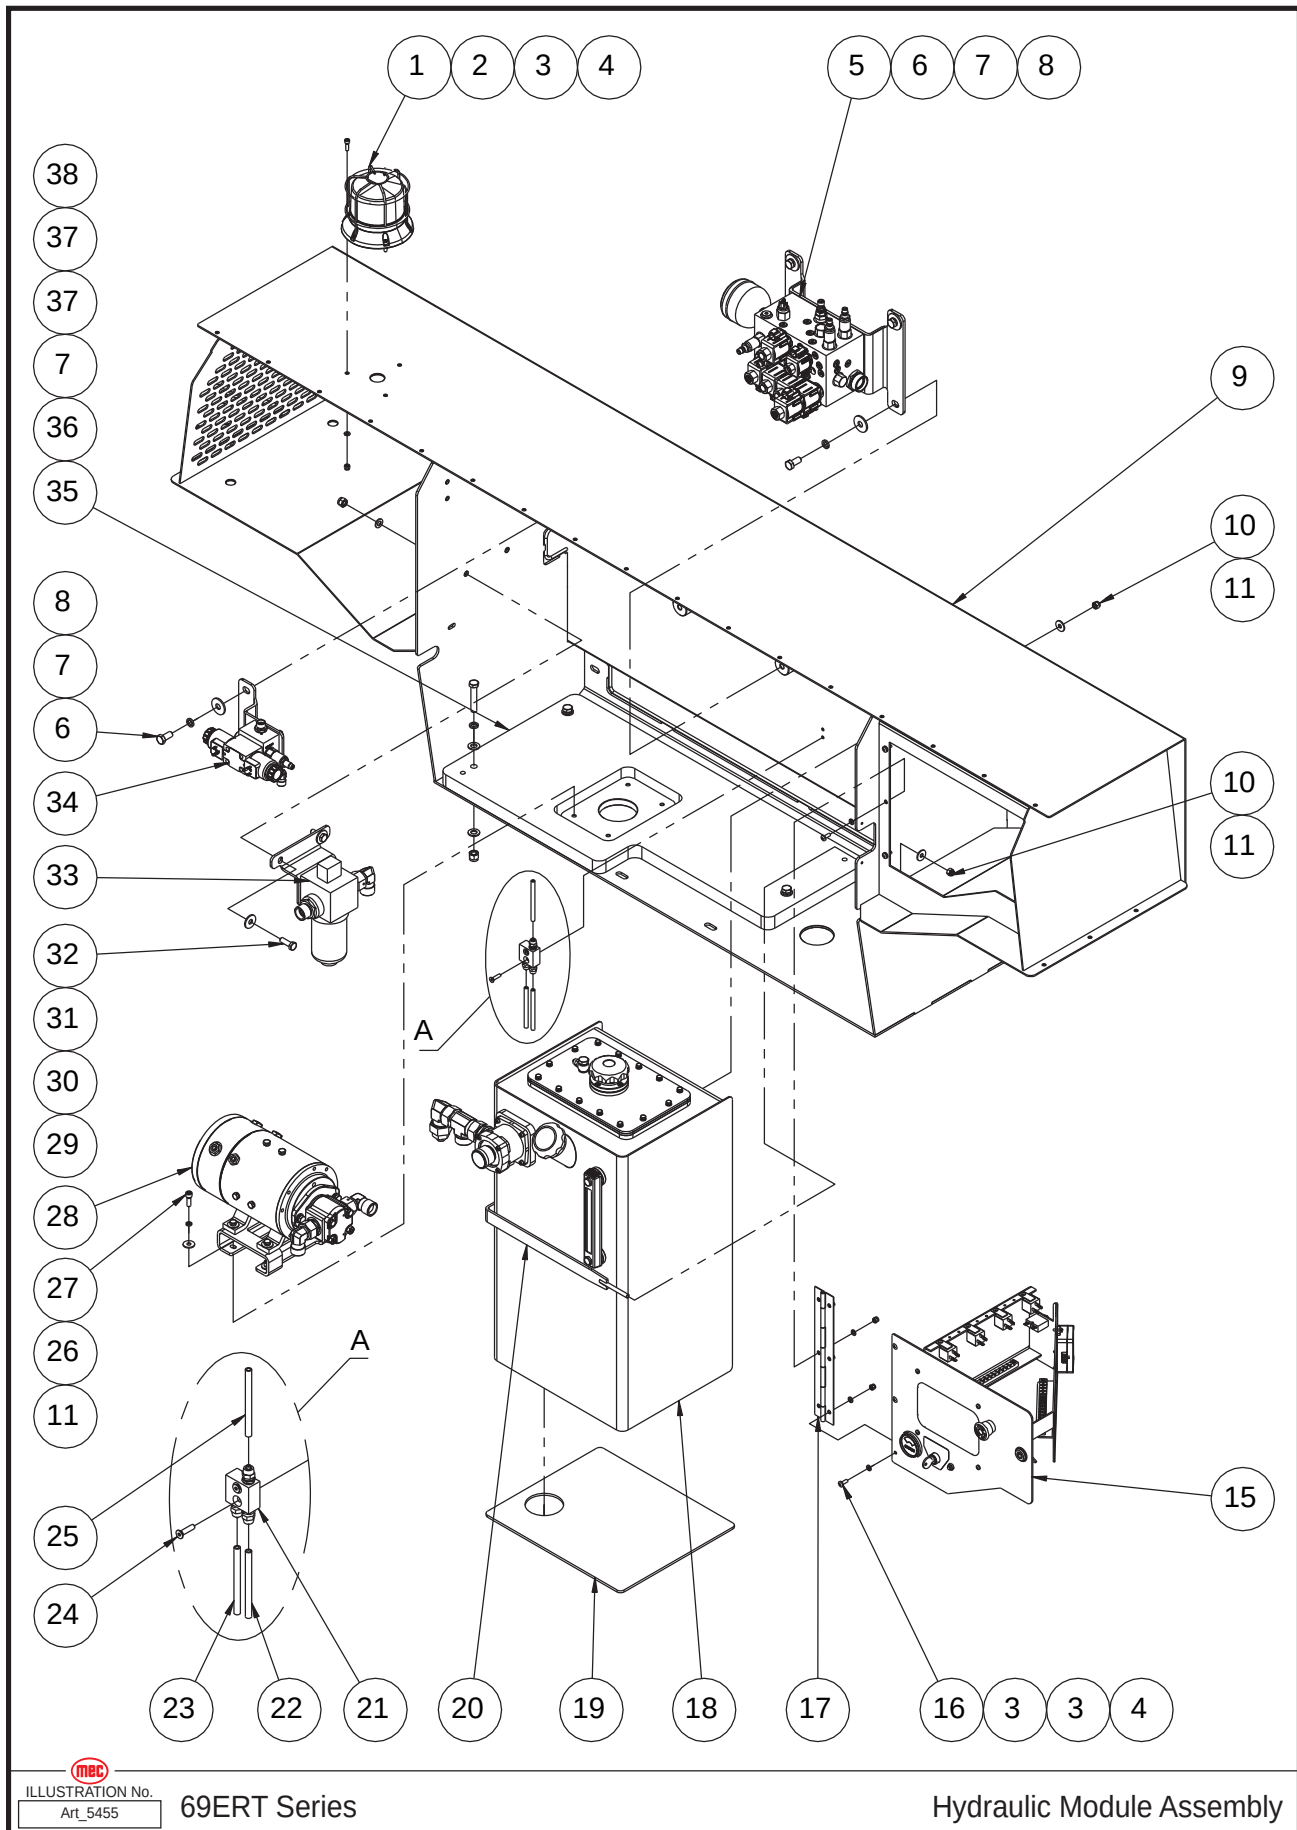

Item	Part Number	Description	Qty.
1	43442	Beacon	1
2	53124	SHCS M6 × 20	3
3	50000	WSHR M6 Standard Flat	15
4	50047	NNYL M6	15
5	REF	Function Manifold Assembly (Refer To Page 54)	1
6	50038	HHCS M12 × 25	6
7	53148	WSHR M12 Spring Washer	9
8	50003	WSHR M12 Standard Flat	6
9	43492	Hydraulic Module Weldment	1
10	50048	NNYL M8	2
11	50001	WSHR M8 Standard Flat	6
12	--	--	--
13	--	--	--
14	--	--	--
15	REF	Ground Control Box Assembly (Refer To Page 60)	1
16	53231	PHMS M6 × 16	6
17	43069	Hinge	1
18	REF	Hydraulic Tank Assembly (Refer To Page 62)	1
19	43070	Rubber Pad	1
20	43071	Tank Strap	1
21	41112	Hydraulic Hoses Manifolds	1
22	43068	Hose (4069) (To Lower Lift Cylinder)	1
23	43067	Hose (4069) (To Upper Lift Cylinder)	1
24	50386	CSCS M6 × 25 4069ERT	2
25	43066	Hose (4069) (To Hydraulic Tank)	1
26	53055	WSHR M8 Spring Washer	4
27	53210	SHCS M8 × 25	4
28	REF	Pump Assembly (Refer To Page 64)	1
29	50049	NNYL M10	2
30	50002	WSHR M10 Standard Flat	2
31	50002	WSHR M10 Standard Flat	2
32	50034	HHCS M10 × 30	2
33	REF	Filter Assembly (Refer To Page 66)	1
34	REF	Outtrigger Manifold Assembly (Option) (Refer To Page 58)	1
35	43494	Counterweight	1
36	53108	HHCS M12 × 65	3
37	50003	WSHR M12 Standard Flat	6
38	50050	NNYL M12	3

REF - Reference

Function Manifold Assembly

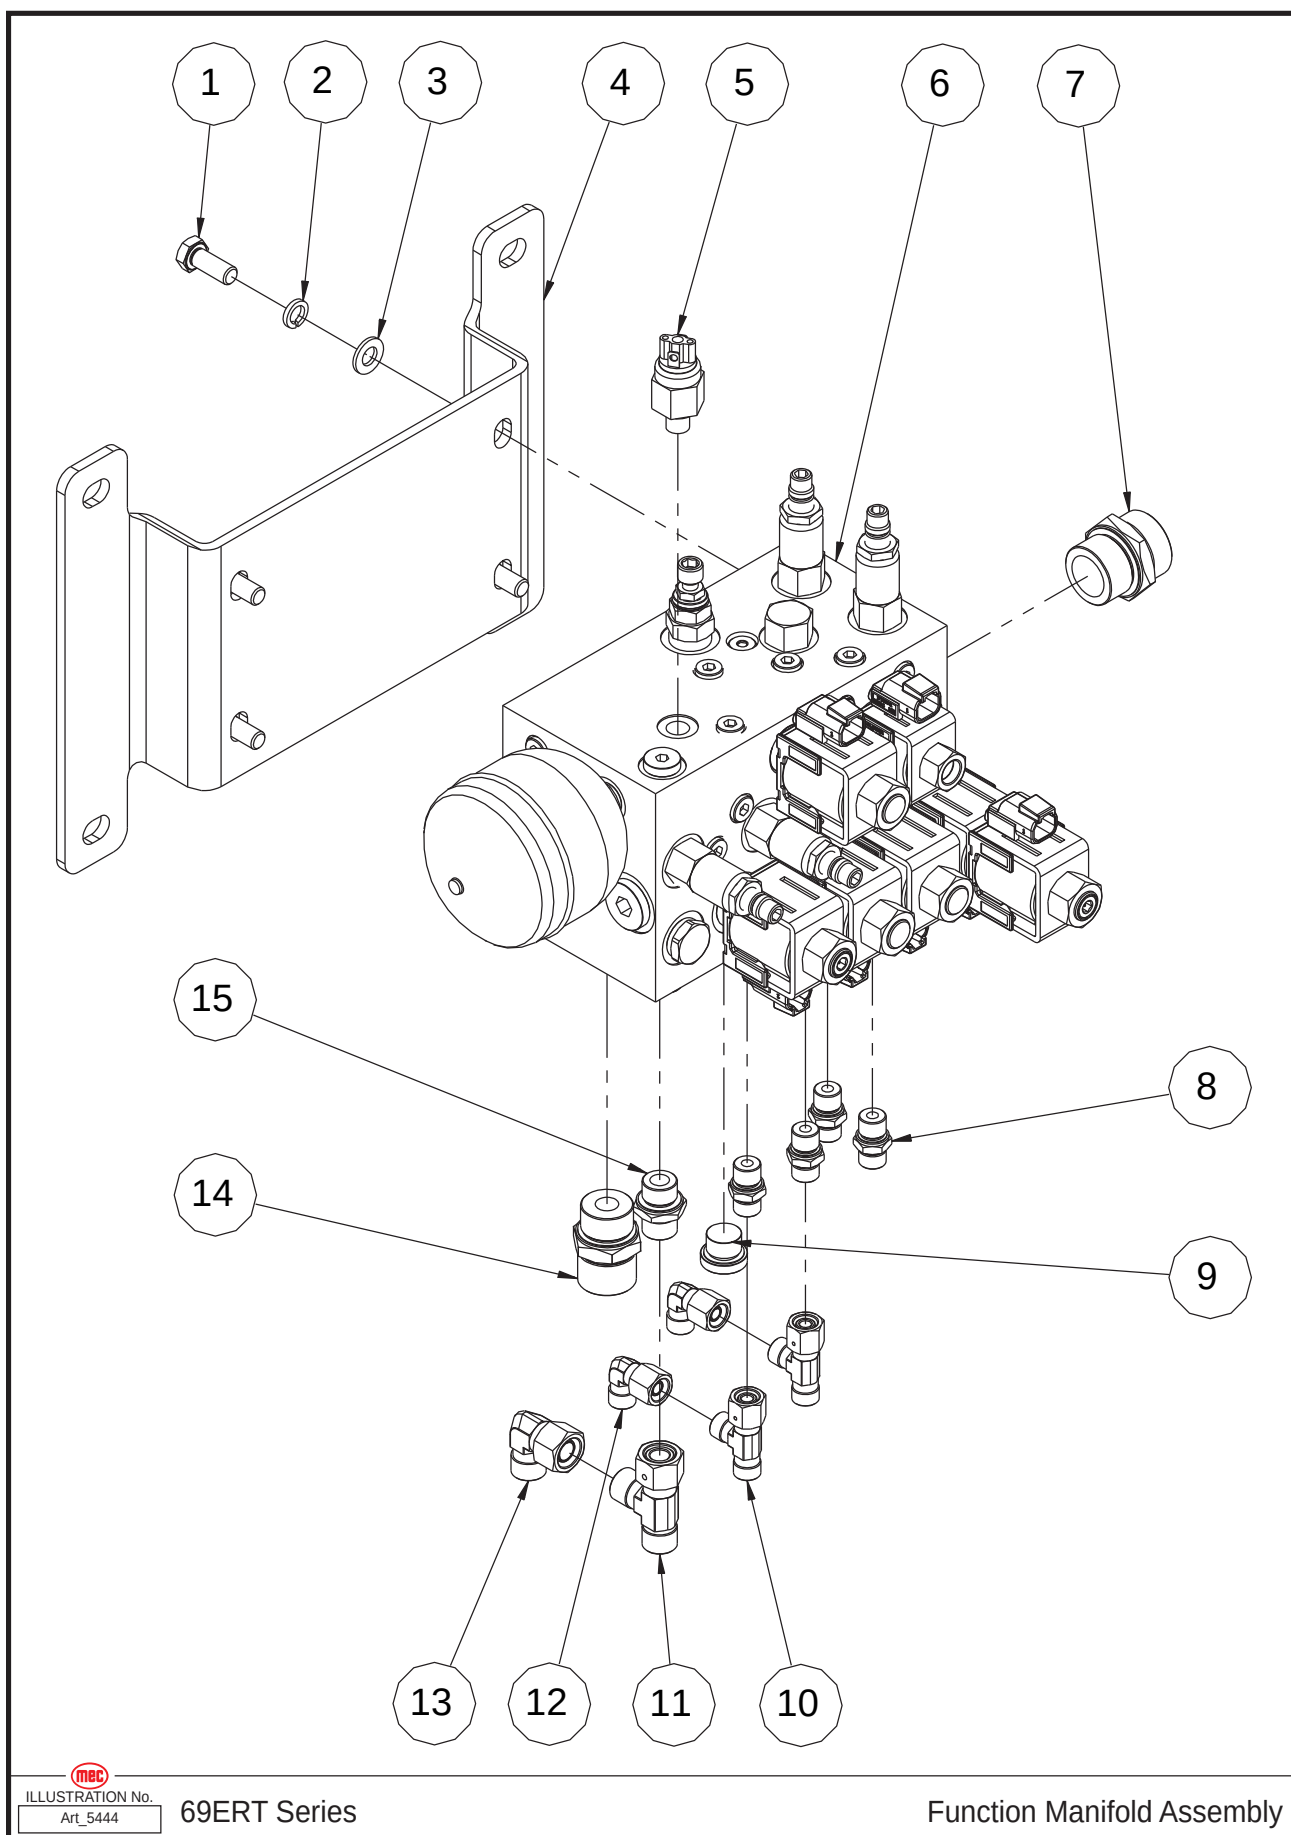


ILLUSTRATION No.
Art_5444

69ERT Series

Function Manifold Assembly

Item	Part Number	Description	Qty.
1	50033	HHCS M10 × 25	4
2	53054	WSHR M10 Spring Washer	4
3	50002	WSHR M10 Standard Flat	4
4	43044	Function Manifold Bracket	1
5	43045	Pressure Switch	1
6	43545	Function Manifold (Refer To Page 56)	1
7	43085	Straight Fitting	1
8	43076	Straight Fitting	4
9	43124	Plug (Model Without Outriggers)	1
10	43078	Tee Fitting	2
11	43081	Tee Fitting	1
12	43077	Elbow	2
13	43082	Elbow	1
14	43267	Straight Fitting	1
15	43083	Straight Fitting (Model Without Outriggers)	1
		Straight Fitting (Model With Outriggers)	2

Function Manifold - ERT Models

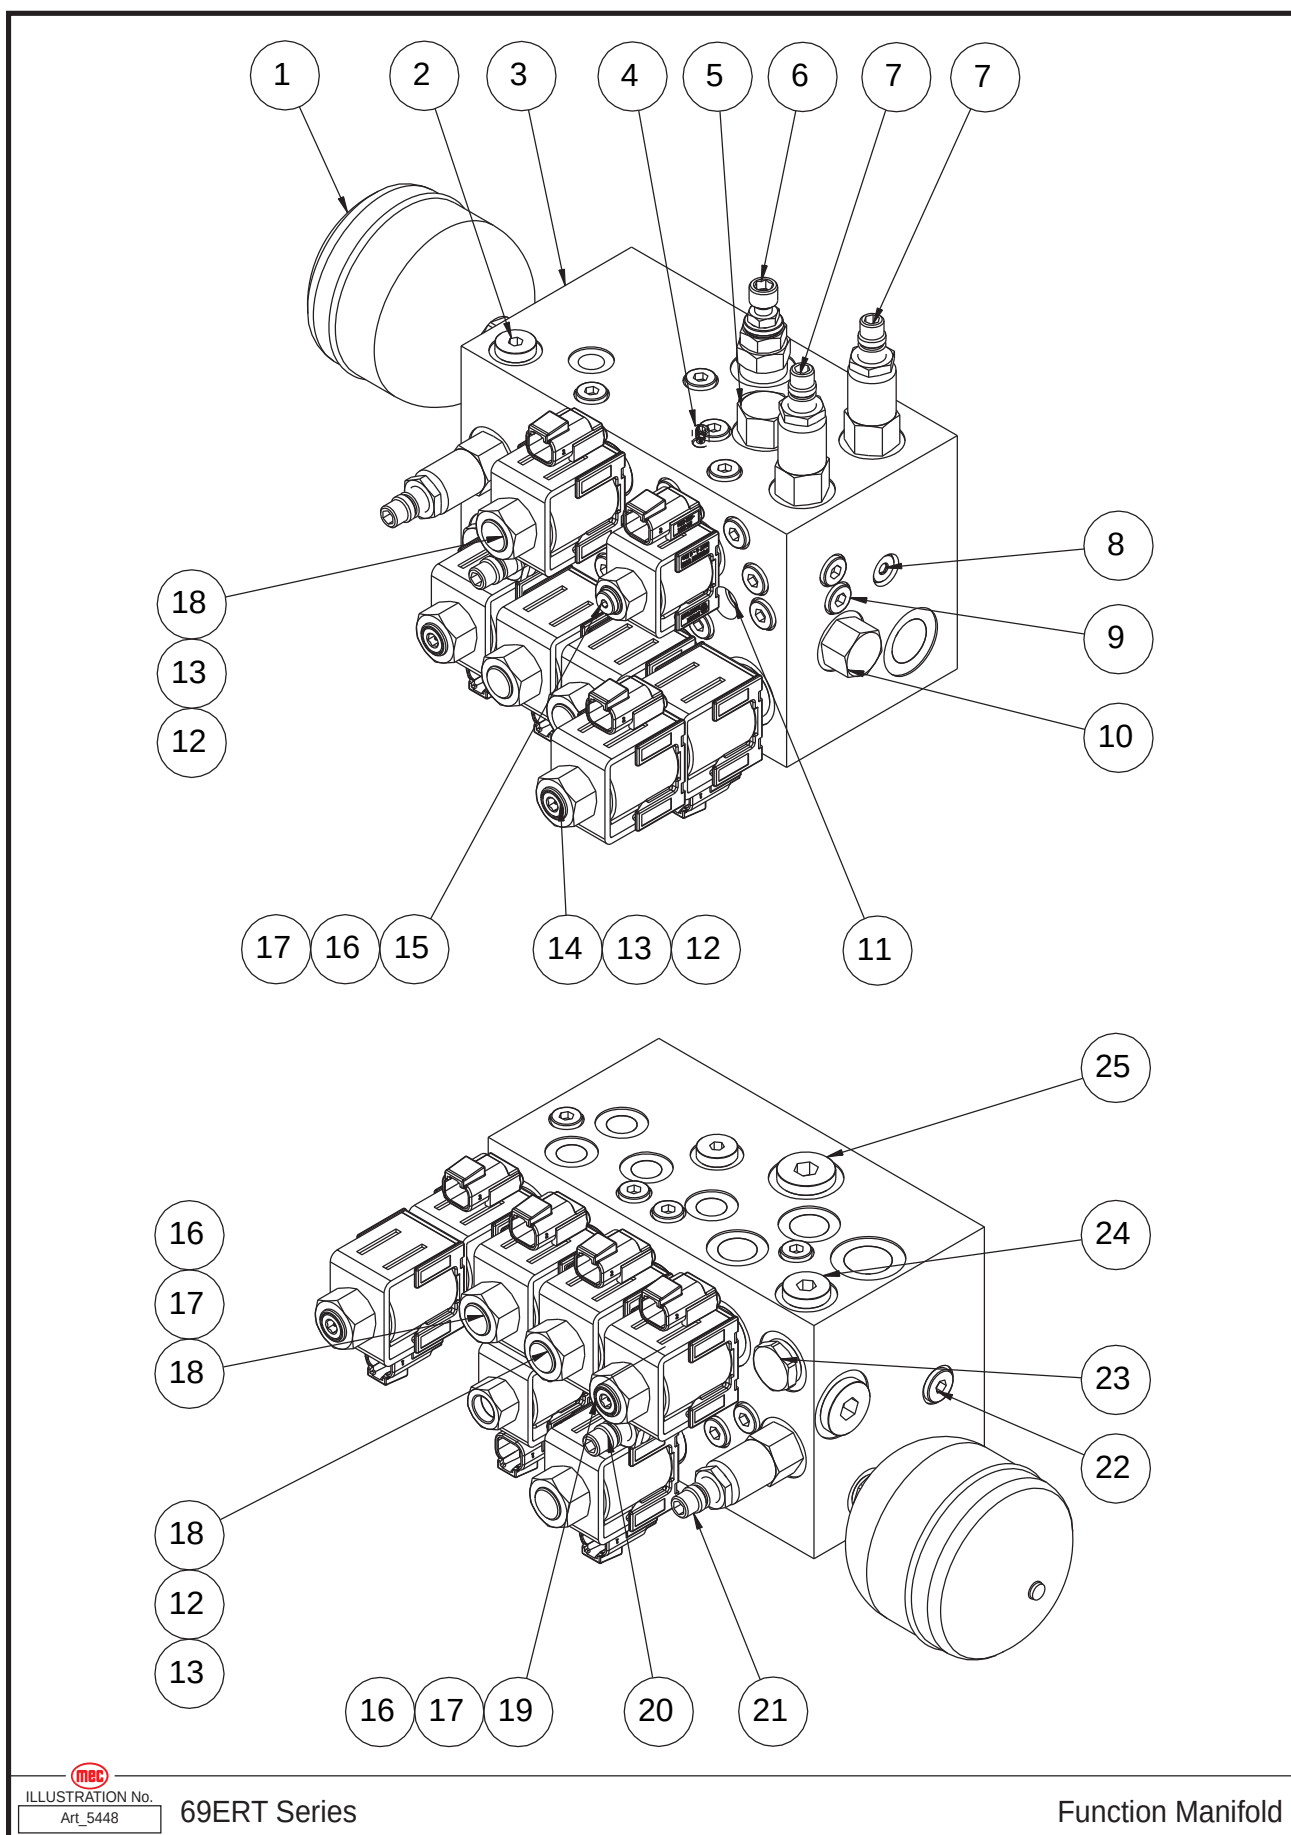


ILLUSTRATION No.
Art_5448


69ERT Series

Function Manifold




Item	Part Number	Description	Qty.
1	43469	Accumulator (A)	1
2	42480	Plug	2
3	43470	Valve Body	1
4	43429	Orifice	1
5	43471	Flow Control Valve (D1)	1
6	43472	Relief Valve (R3)	1
7	43473	Relief Valve (R4 R5)	2
8	43418	Check Valve (C3 C4)	2
9	42821	Plug	21
10	43402	Flow Control Valve (D2)	1
11	43419	Shuttle Valve (E)	1
12	43474	Nut	5
13	43475	Coil	6
14	43420	Solenoid Valve Spool (S6)	1
15	43407	Solenoid Valve Spool (S5)	1
16	43476	Coil	1
17	43477	Nut	1
18	43478	Solenoid Valve Spool (S2 S3 S4)	3
19	43479	Solenoid Valve Spool (S1)	1
20	43397	Relief Valve (R2)	1
21	43480	Relief Valve (R1)	1
22	43434	Plug	1
23	43439	Check Valve (C1 C2)	2
24	43119	Plug	1
25	43079	Plug	2

Outrigger Manifold Assembly

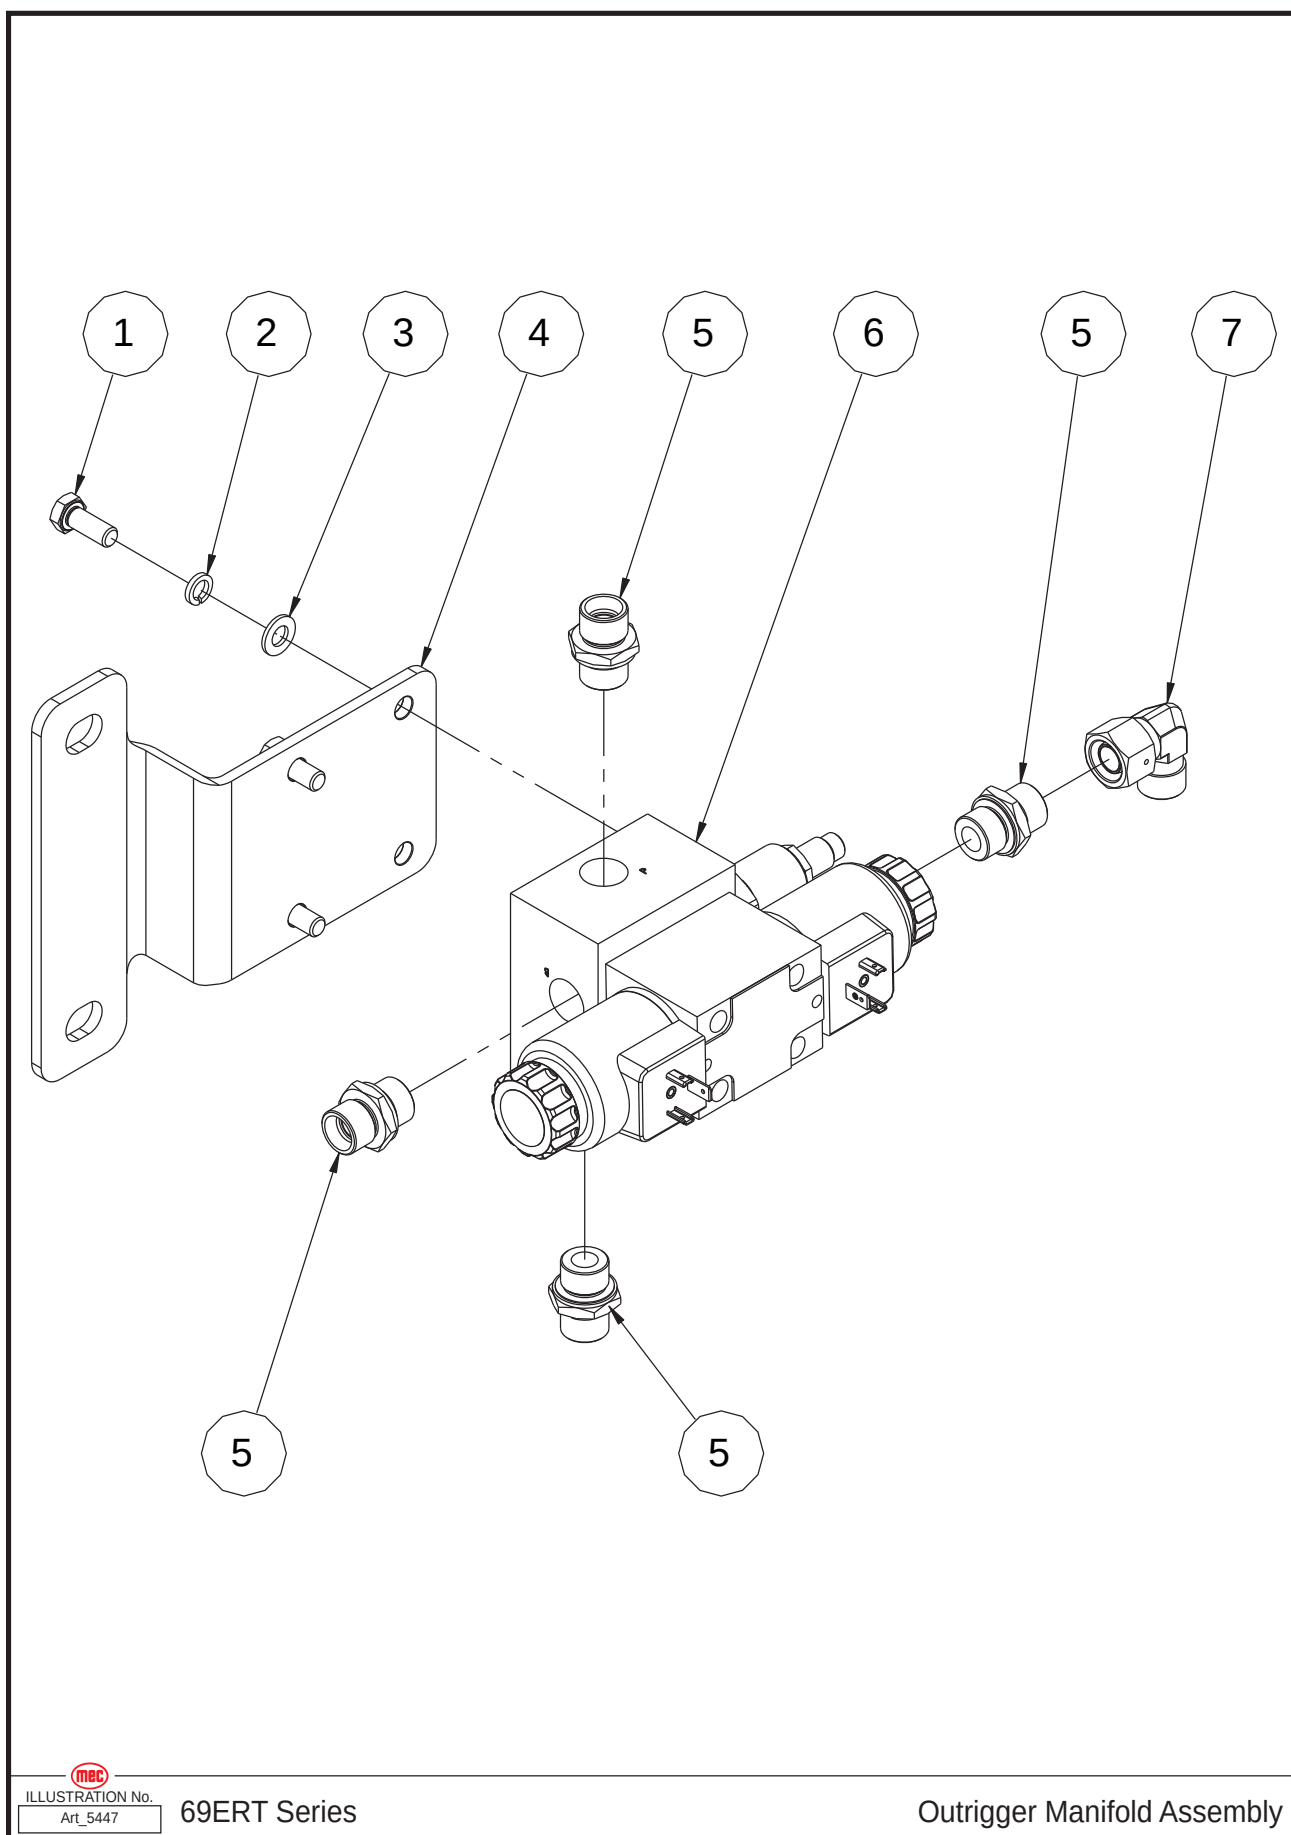

Item	Part Number	Description	Qty.
1	50030	HHCS M8 × 20	3
2	53055	WSHR M8 Spring Washer	3
3	50001	WSHR M8 Standard Flat	3
4	43461	Outrigger Manifold Bracket	1
5	43083	Straight Fitting	4
6	43462	Outrigger Manifold	1
--	43463	Solenoid Valve	1
--	43464	Relief Valve	1
--	43465	Plug	1
7	43082	Elbow	1

Ground Control Box Assembly

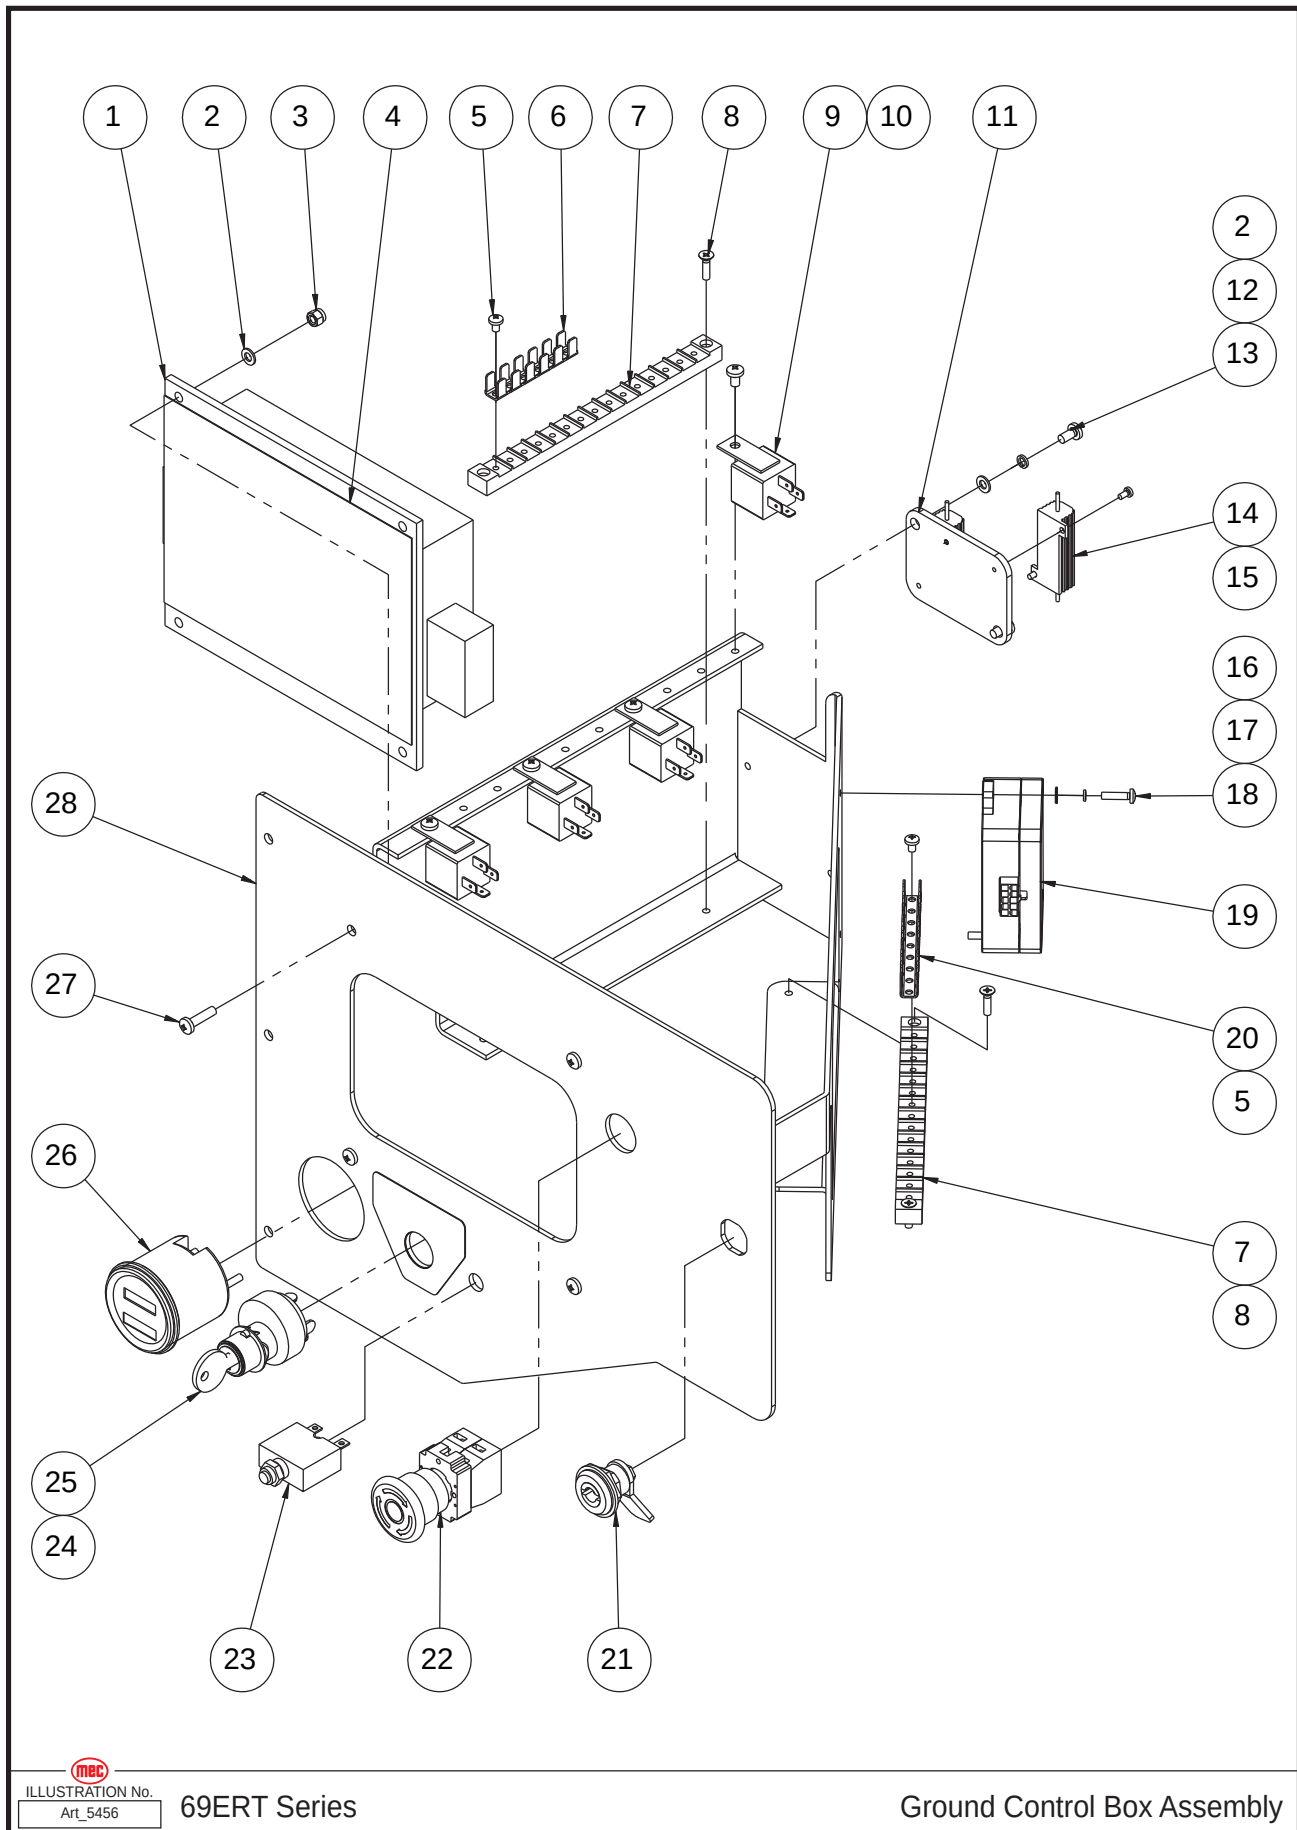

Item	Part Number	Description	Qty.
1	43087	Controller ECU	1
2	53038	WSHR M5 Standard Flat	6
3	50524	NNYL M5	4
4	43524	Decal, Ground Control Panel	1
5	53220	PHMS M4 × 6	4
6	43088	Terminal Strip 6	1
7	43093	Terminal Strip Base	2
8	53221	CSCS M4 × 16	4
9	41334	Relay	4
10	53222	PHMS M5 × 8	4
11	43496	Resistor Bracket	1
12	53043	WSHR M5 Spring Washer	2
13	53044	SHMS M5 × 10	2
14	43497	Resistor	2
15	53076	PHMS M3 × 6	4
16	50284	WSHR M4 Standard Flat	2
17	53062	WSHR M4 Spring Washer	2
18	53241	BHCS M4 × 16	2
19	43498	PWM Convertor Module	1
20	43092	Terminal Strip 9	1
21	42352	Latch, Column	1
22	43499	Emergency Stop Switch	1
--	43096	NC Contact	1
--	43097	Base With 1 NC Contact	1
--	43098	Red Mushroom Head	1
23	43500	Circuit Breaker	1
24	43102	Decal, Key Switch Panel	1
25	41418	Key Switch	1
--	43100	Key	1
26	43501	Curtis Display	1
27	53219	THMS M5 × 20	4
28	43502	Ground Control Box Weldment	1

This exploded view diagram illustrates the components of a Hydraulic Tank Assembly. The central component is the main tank body (30). Above it is a top plate (11) with a central flange (12). The top plate is secured by a central cap (5) and several bolts (1, 2, 3, 4, 6, 7, 8, 9, 10). A side panel (13) is attached to the tank body with a bracket (14) and a bolt (15). A side panel (16) is also shown. A side panel (17) is attached to the tank body with a bracket (18) and a bolt (19). A side panel (20) is attached to the tank body with a bracket (21) and a bolt (22). A side panel (23) is attached to the tank body with a bracket (24) and a bolt (25). A side panel (26) is attached to the tank body with a bracket (27) and a bolt (28). A side panel (29) is attached to the tank body with a bracket (30) and a bolt (31). A side panel (32) is attached to the tank body with a bracket (33) and a bolt (34). A side panel (35) is attached to the tank body with a bracket (36) and a bolt (37). A side panel (38) is attached to the tank body with a bracket (39) and a bolt (40). A side panel (41) is attached to the tank body with a bracket (42) and a bolt (43). A side panel (44) is attached to the tank body with a bracket (45) and a bolt (46). A side panel (47) is attached to the tank body with a bracket (48) and a bolt (49). A side panel (50) is attached to the tank body with a bracket (51) and a bolt (52). A side panel (53) is attached to the tank body with a bracket (54) and a bolt (55). A side panel (56) is attached to the tank body with a bracket (57) and a bolt (58). A side panel (59) is attached to the tank body with a bracket (60) and a bolt (61). A side panel (62) is attached to the tank body with a bracket (63) and a bolt (64). A side panel (65) is attached to the tank body with a bracket (66) and a bolt (67). A side panel (68) is attached to the tank body with a bracket (69) and a bolt (70). A side panel (71) is attached to the tank body with a bracket (72) and a bolt (73). A side panel (74) is attached to the tank body with a bracket (75) and a bolt (76). A side panel (77) is attached to the tank body with a bracket (78) and a bolt (79). A side panel (80) is attached to the tank body with a bracket (81) and a bolt (82). A side panel (83) is attached to the tank body with a bracket (84) and a bolt (85). A side panel (86) is attached to the tank body with a bracket (87) and a bolt (88). A side panel (89) is attached to the tank body with a bracket (90) and a bolt (91). A side panel (92) is attached to the tank body with a bracket (93) and a bolt (94). A side panel (95) is attached to the tank body with a bracket (96) and a bolt (97). A side panel (98) is attached to the tank body with a bracket (99) and a bolt (100).

Item	Part Number	Description	Qty.
1	41413	Nut	1
2	41167	Fitting	1
3	53215	WSHR M13 Standard Flat	2
4	41166	Fitting	1
5	42055	Air Cleaner	1
6	50359	SHCS M5 × 16	8
7	53043	WSHR M5 Spring Washer	8
8	50028	HHCS M6 × 20	20
9	53046	WSHR M6 Spring Washer	20
10	50000	WSHR M6 Standard Flat	20
11	43107	Cover Weldment	1
12	43108	Gasket	1
13	43109	Filler Cap	1
14	43110	Filter Web	1
15	43111	Level Gauge	1
16	43112	Elbow	2
17	43085	Straight Fitting	2
18	43113	Return Filter	1
--	42837	Filter Element	1
19	53038	WSHR M5 Standard Flat	4
20	43115	Tee Fitting (Model With Outriggers)	1
21	43114	Pipe	1
22	43268	Straight Fitting (Model With Outriggers)	1
23	43119	Plug	2
24	43120	Plug	1
25	43331	Straight Fitting	1
26	43121	Flange	1
27	43122	O-Ring	1
28	43123	Strainer	1
29	43124	Plug	1
30	43125	Hydraulic Tank Weldment	1

Pump Assembly

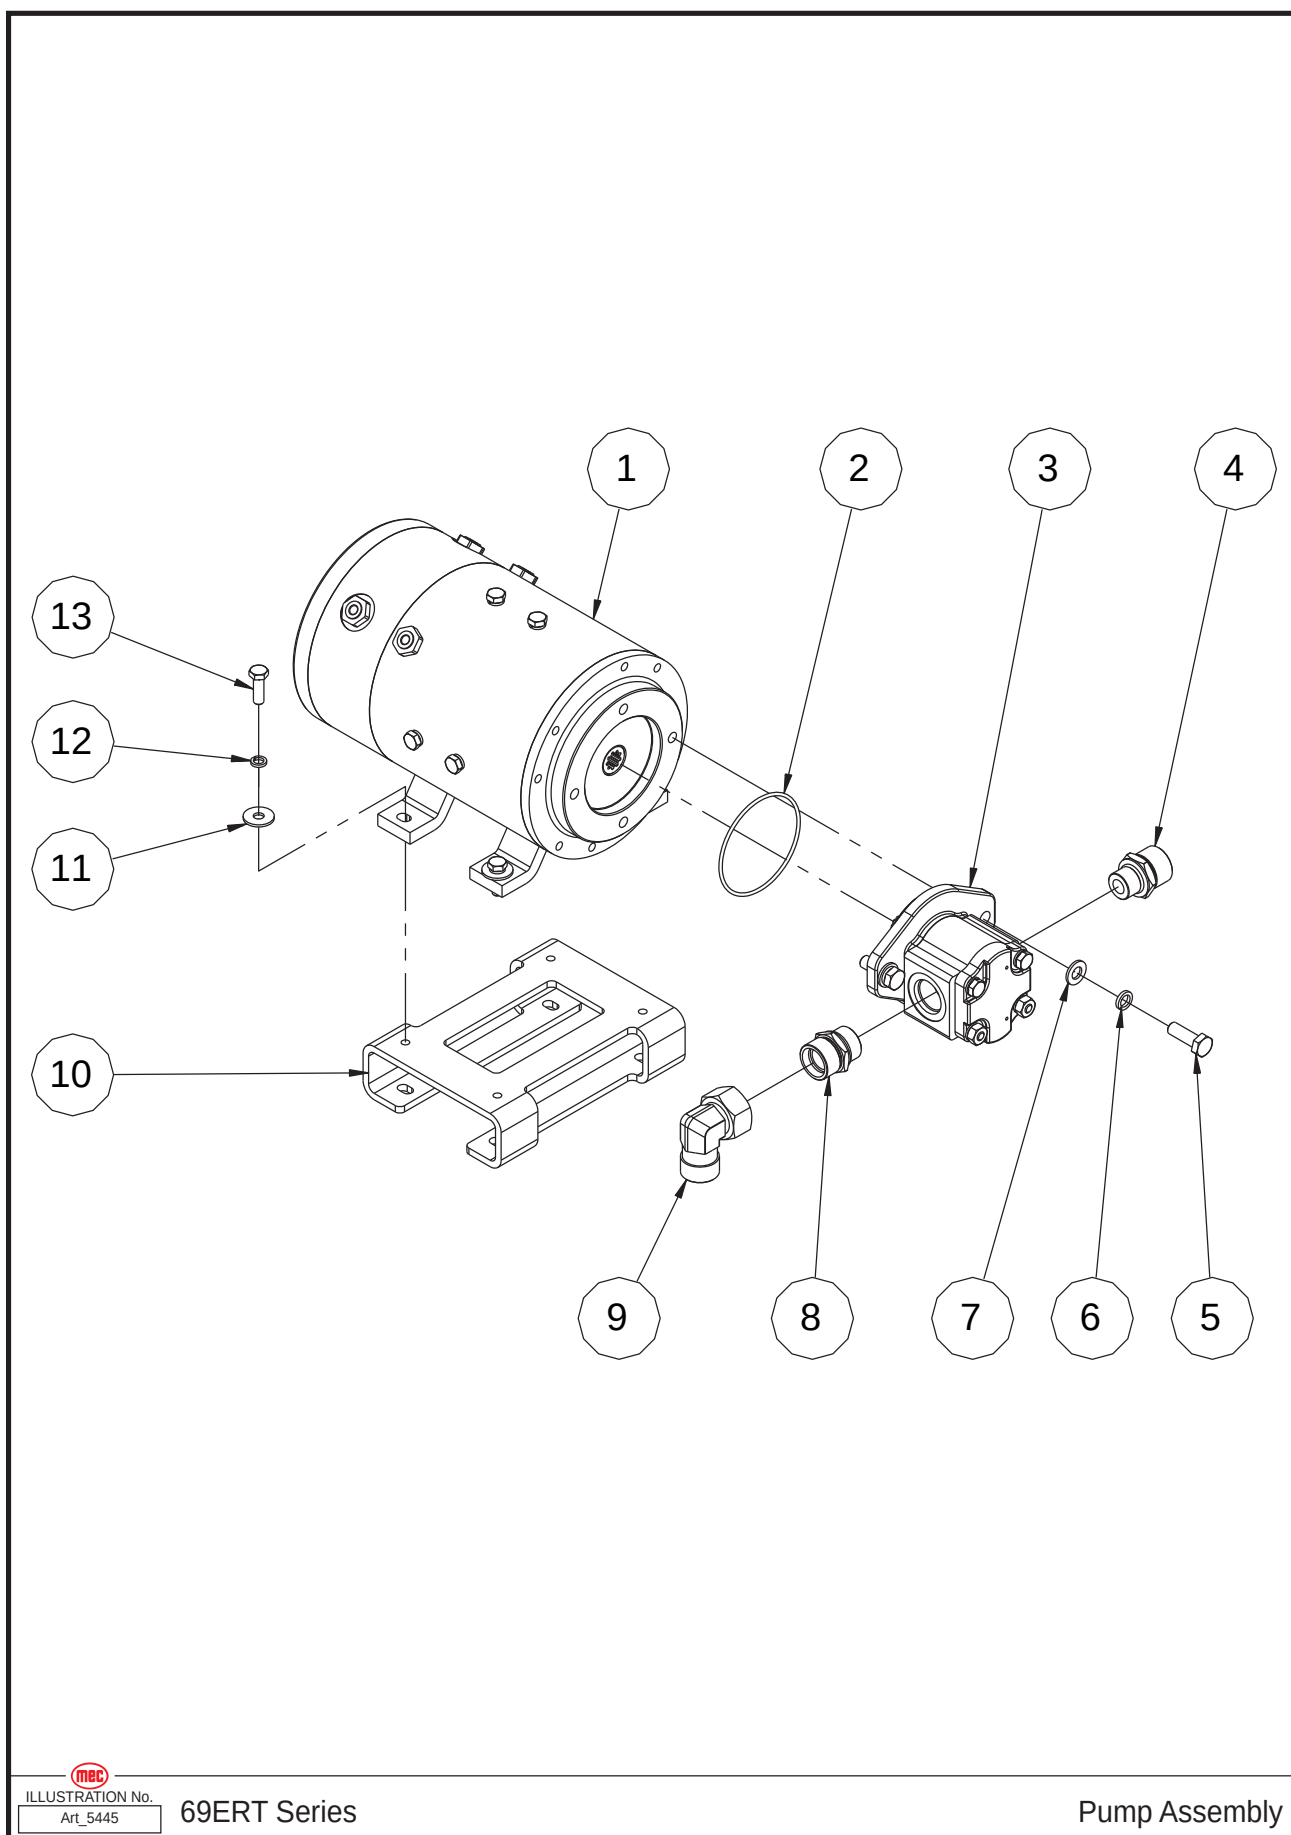


ILLUSTRATION No.
Art_5445

69ERT Series

Pump Assembly



Item	Part Number	Description	Qty.
1	43346	Motor	1
2	43122	O-Ring	1
3	43354	Gear Pump	1
4	43451	Straight Fitting	1
5	50034	HHCS M10 × 30	2
6	53054	WSHR M10 Spring Washer	2
7	50002	WSHR M10 Standard Flat	2
8	43455	Straight Fitting	1
9	43456	Elbow	1
10	43457	Motor Bracket	1
11	50001	WSHR M8 Standard Flat	4
12	53055	WSHR M8 Spring Washer	4
13	50031	HHCS M8 × 25	4

Filter Assembly

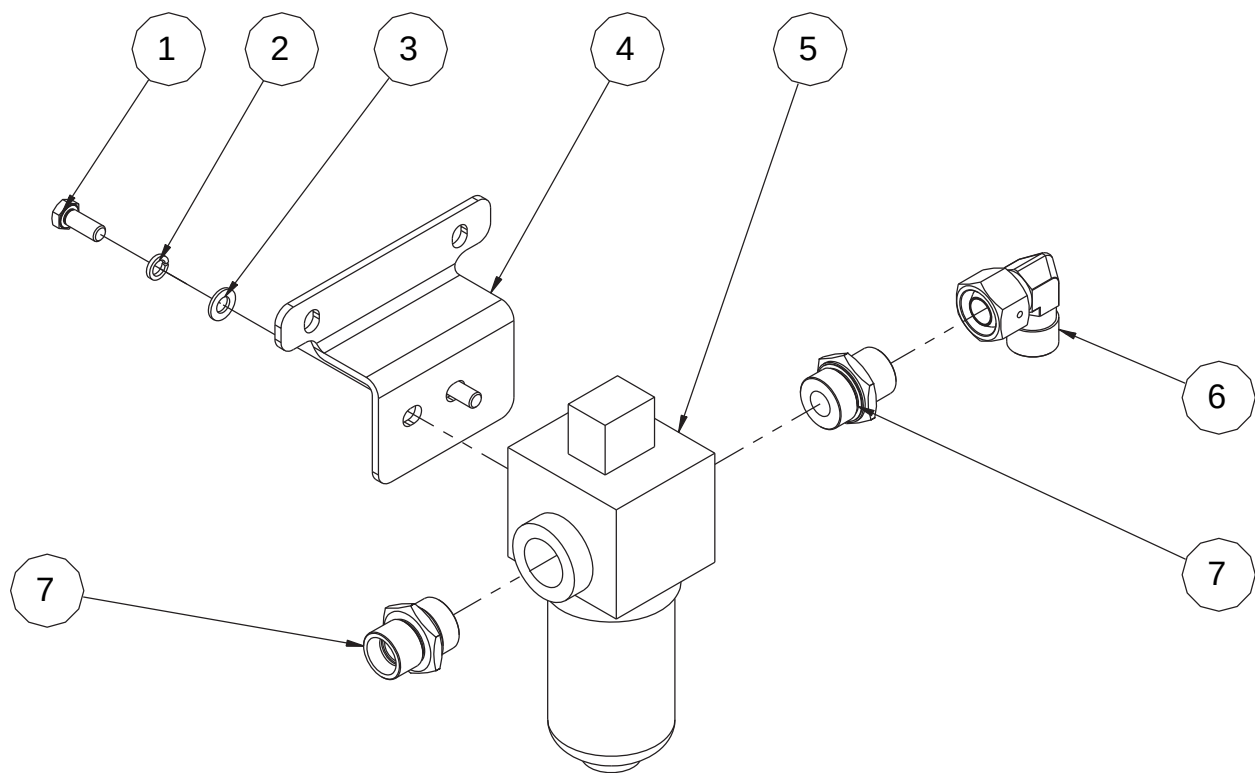


ILLUSTRATION No.
Art_5446

69ERT Series

Filter Assembly



Item	Part Number	Description	Qty.
1	50033	HHCS M10 × 25	2
2	53054	WSHR M10 Spring Washer	2
3	50002	WSHR M10 Standard Flat	2
4	43458	Filter Bracket	1
5	43454	High Pressure Line Filter	1
6	43459	Elbow	1
7	43460	Straight Fitting	2

Battery Module Installation

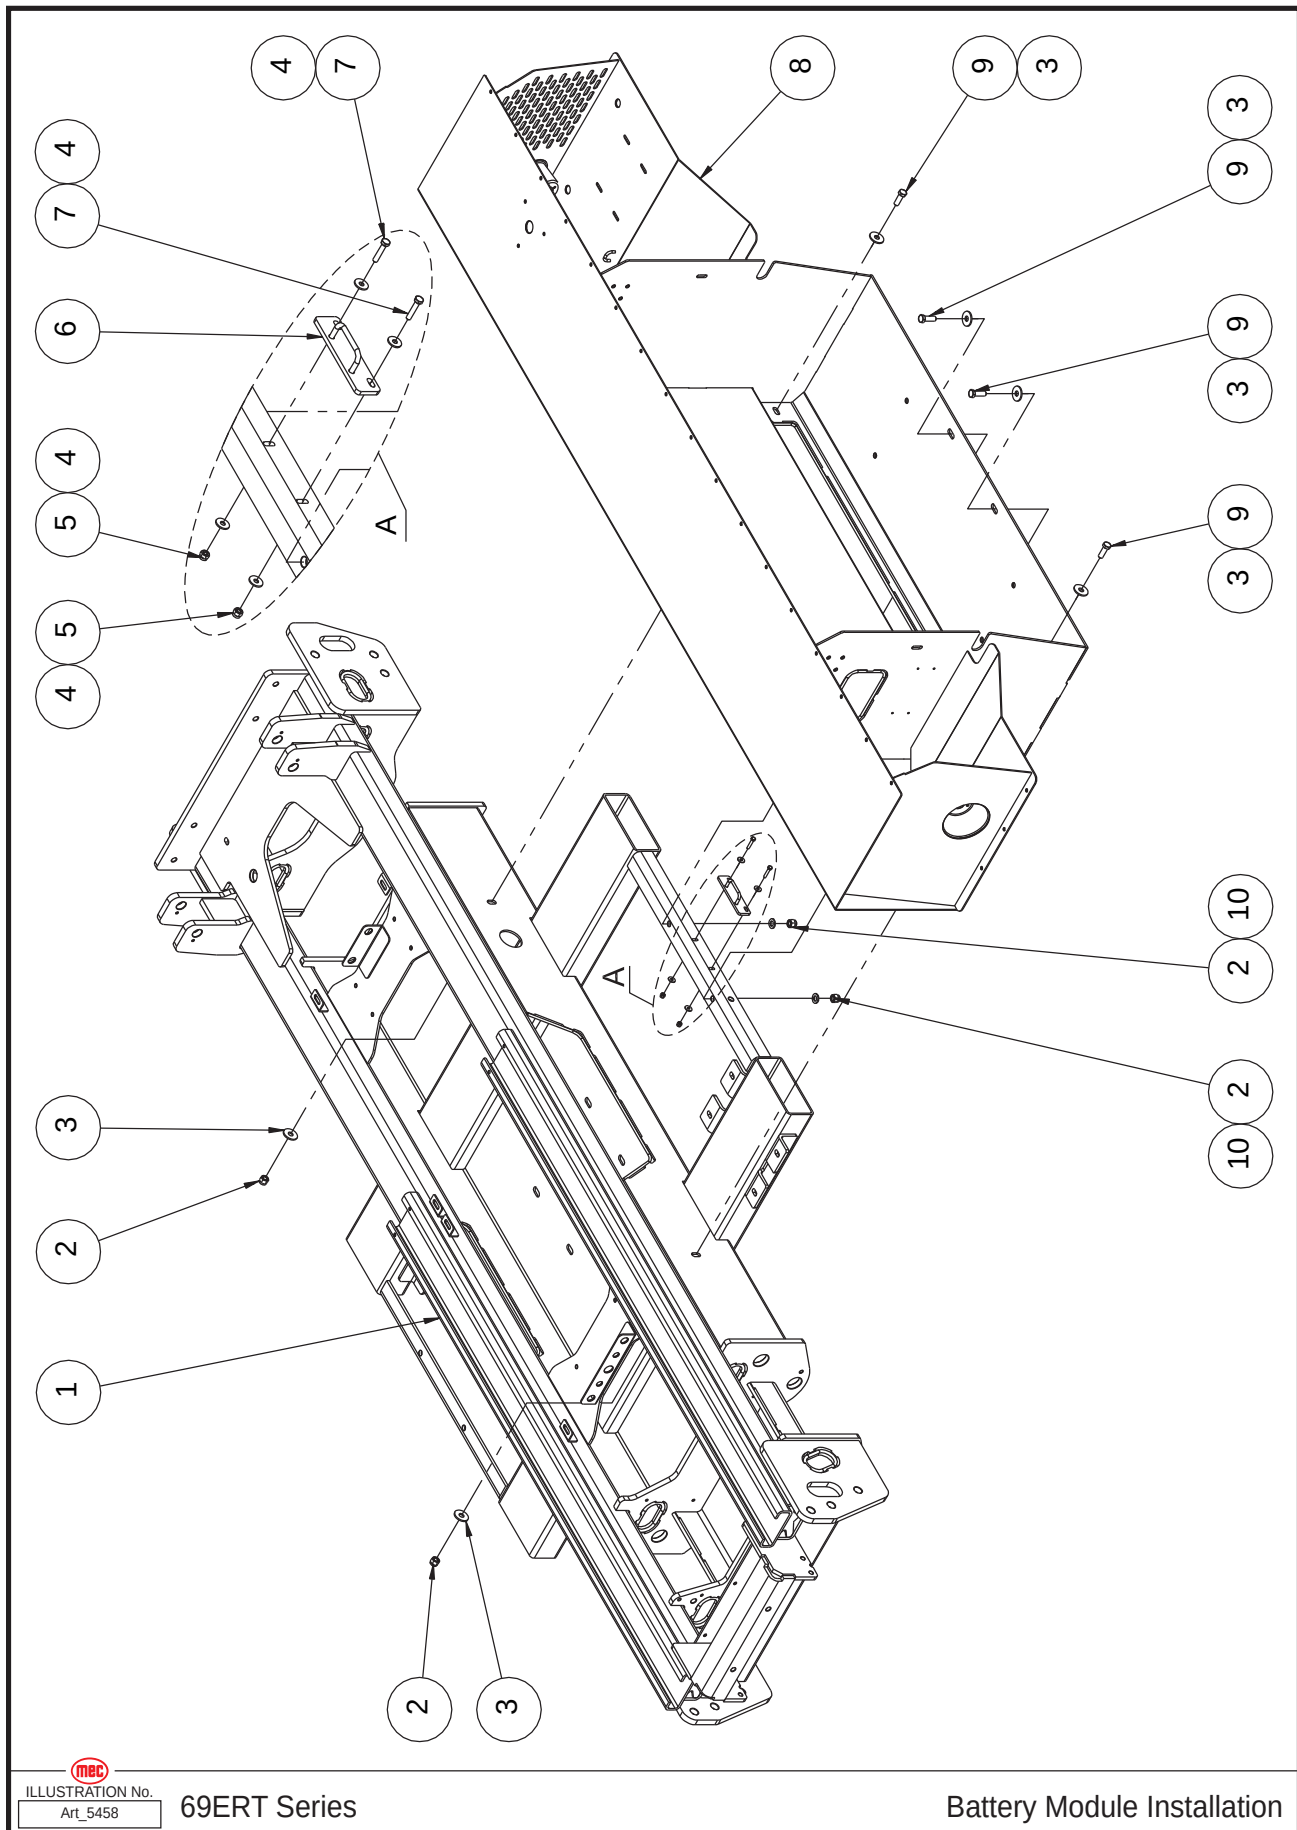


ILLUSTRATION No.
Art_5458

69ERT Series

Battery Module Installation

Item	Part Number	Description	Qty.
1	43006	Frame Weldment	1
2	50050	NNYL M12	4
3	50003	WSHR M12 Standard Flat	6
4	50000	WSHR M6 Standard Flat	4
5	50047	NNYL M6	2
6	43048	Lock	1
7	50214	HHCS M6 × 30	2
8	43503	Battery Module Weldment	1
9	50040	HHCS M12 × 35	4
10	50003	WSHR M12 Standard Flat	2

Battery Module Door Installation

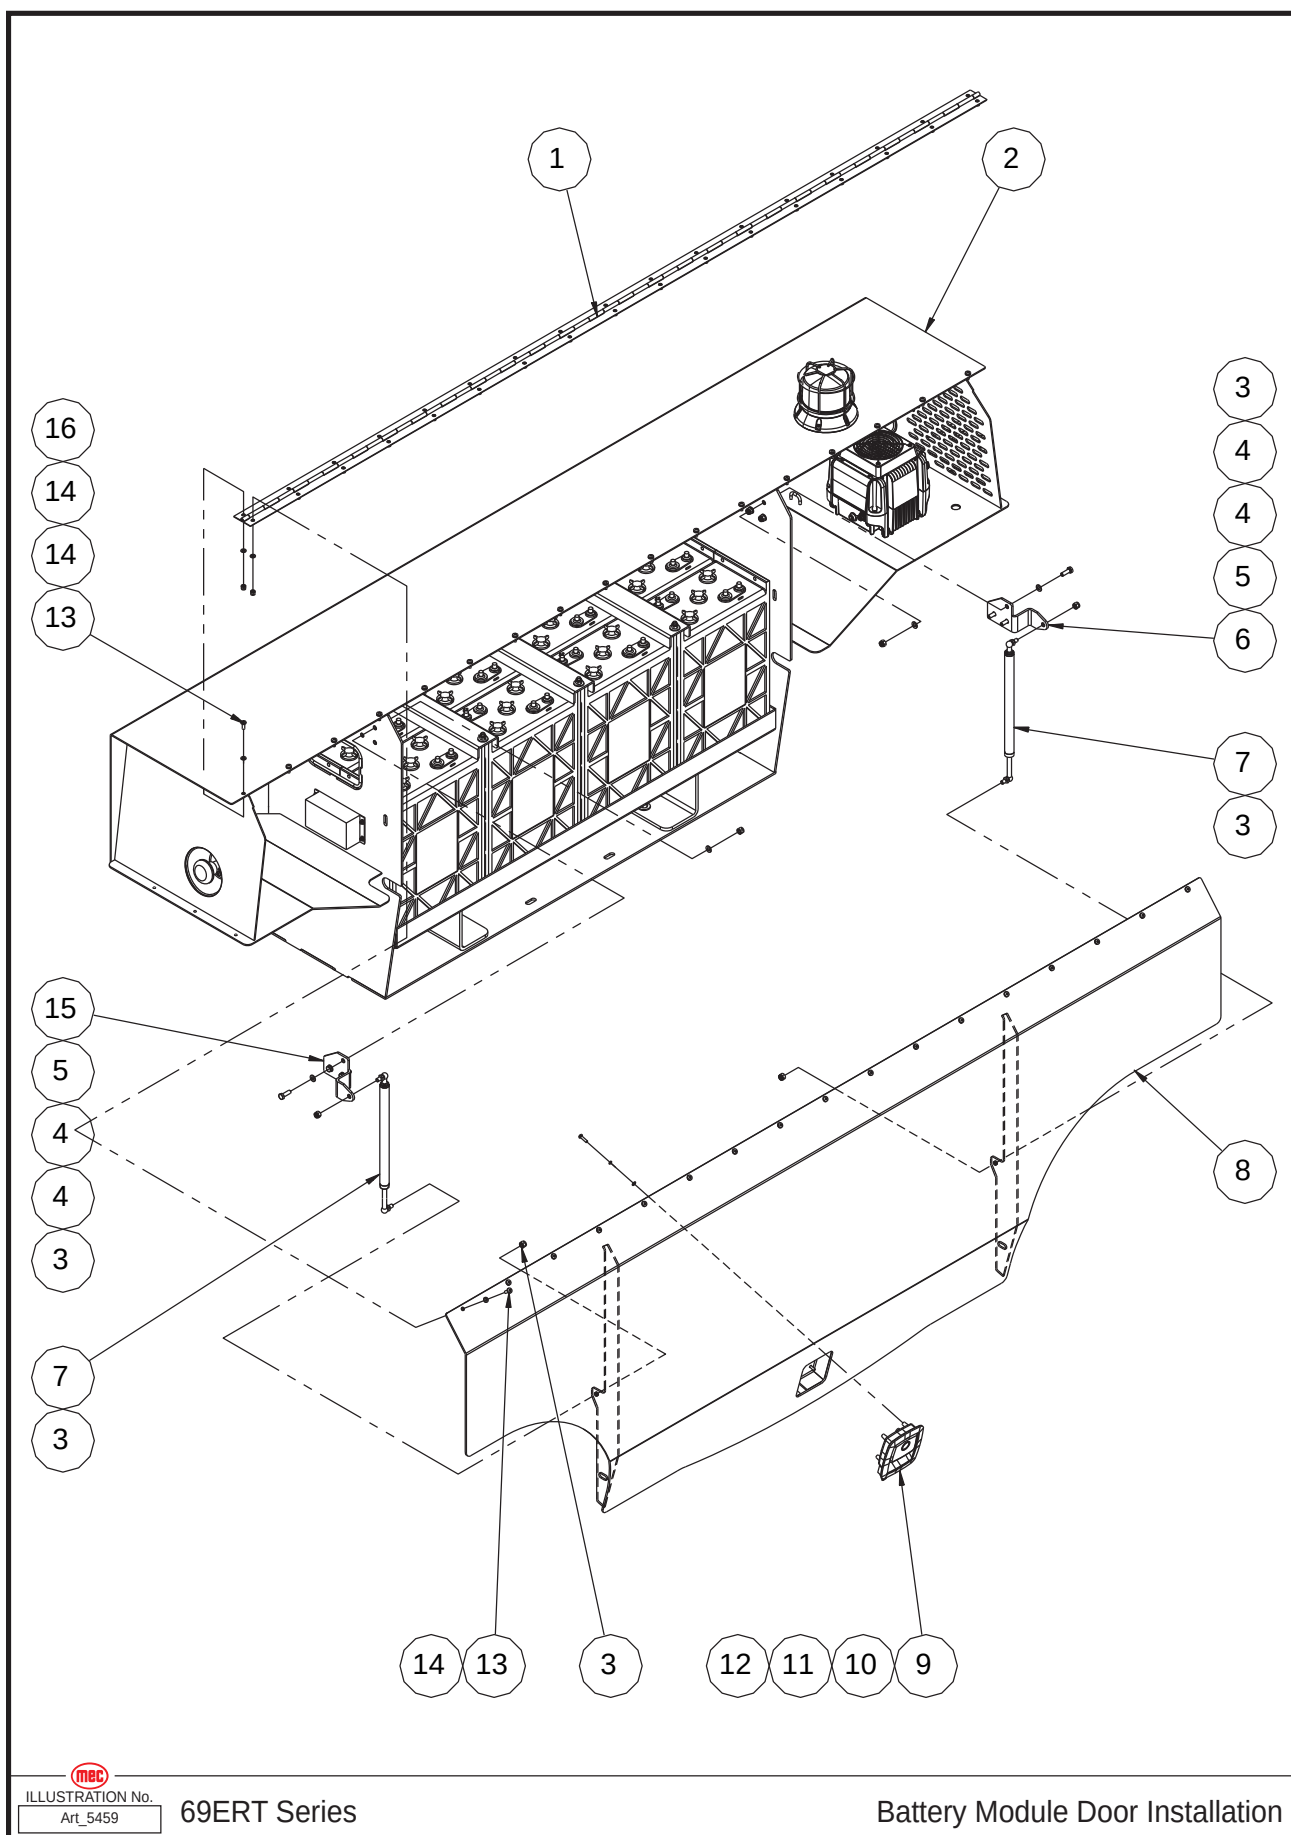


ILLUSTRATION No.
Art_5459

69ERT Series

Battery Module Door Installation



Item	Part Number	Description	Qty.
1	43135	Hinge	1
2	REF	Battery Module Assembly (Refer To Page 72)	1
3	50048	NNYL M8	10
4	50001	WSHR M8 Standard Flat	12
5	50031	HHCS M8 × 25	6
6	43133	Gas Shock Bracket	1
7	43057	Gas Shock	2
8	43132	Right Door	1
9	43050	Latch	1
10	53219	THMS M5 × 20	4
11	53043	WSHR M5 Spring Washer	4
12	53038	WSHR M5 Standard Flat	4
13	53231	PHMS M6 × 16	34
14	50000	WSHR M6 Standard Flat	68
15	43134	Gas Shock Bracket	1
16	50047	NNYL M6	34

REF - Reference

Battery Module Assembly

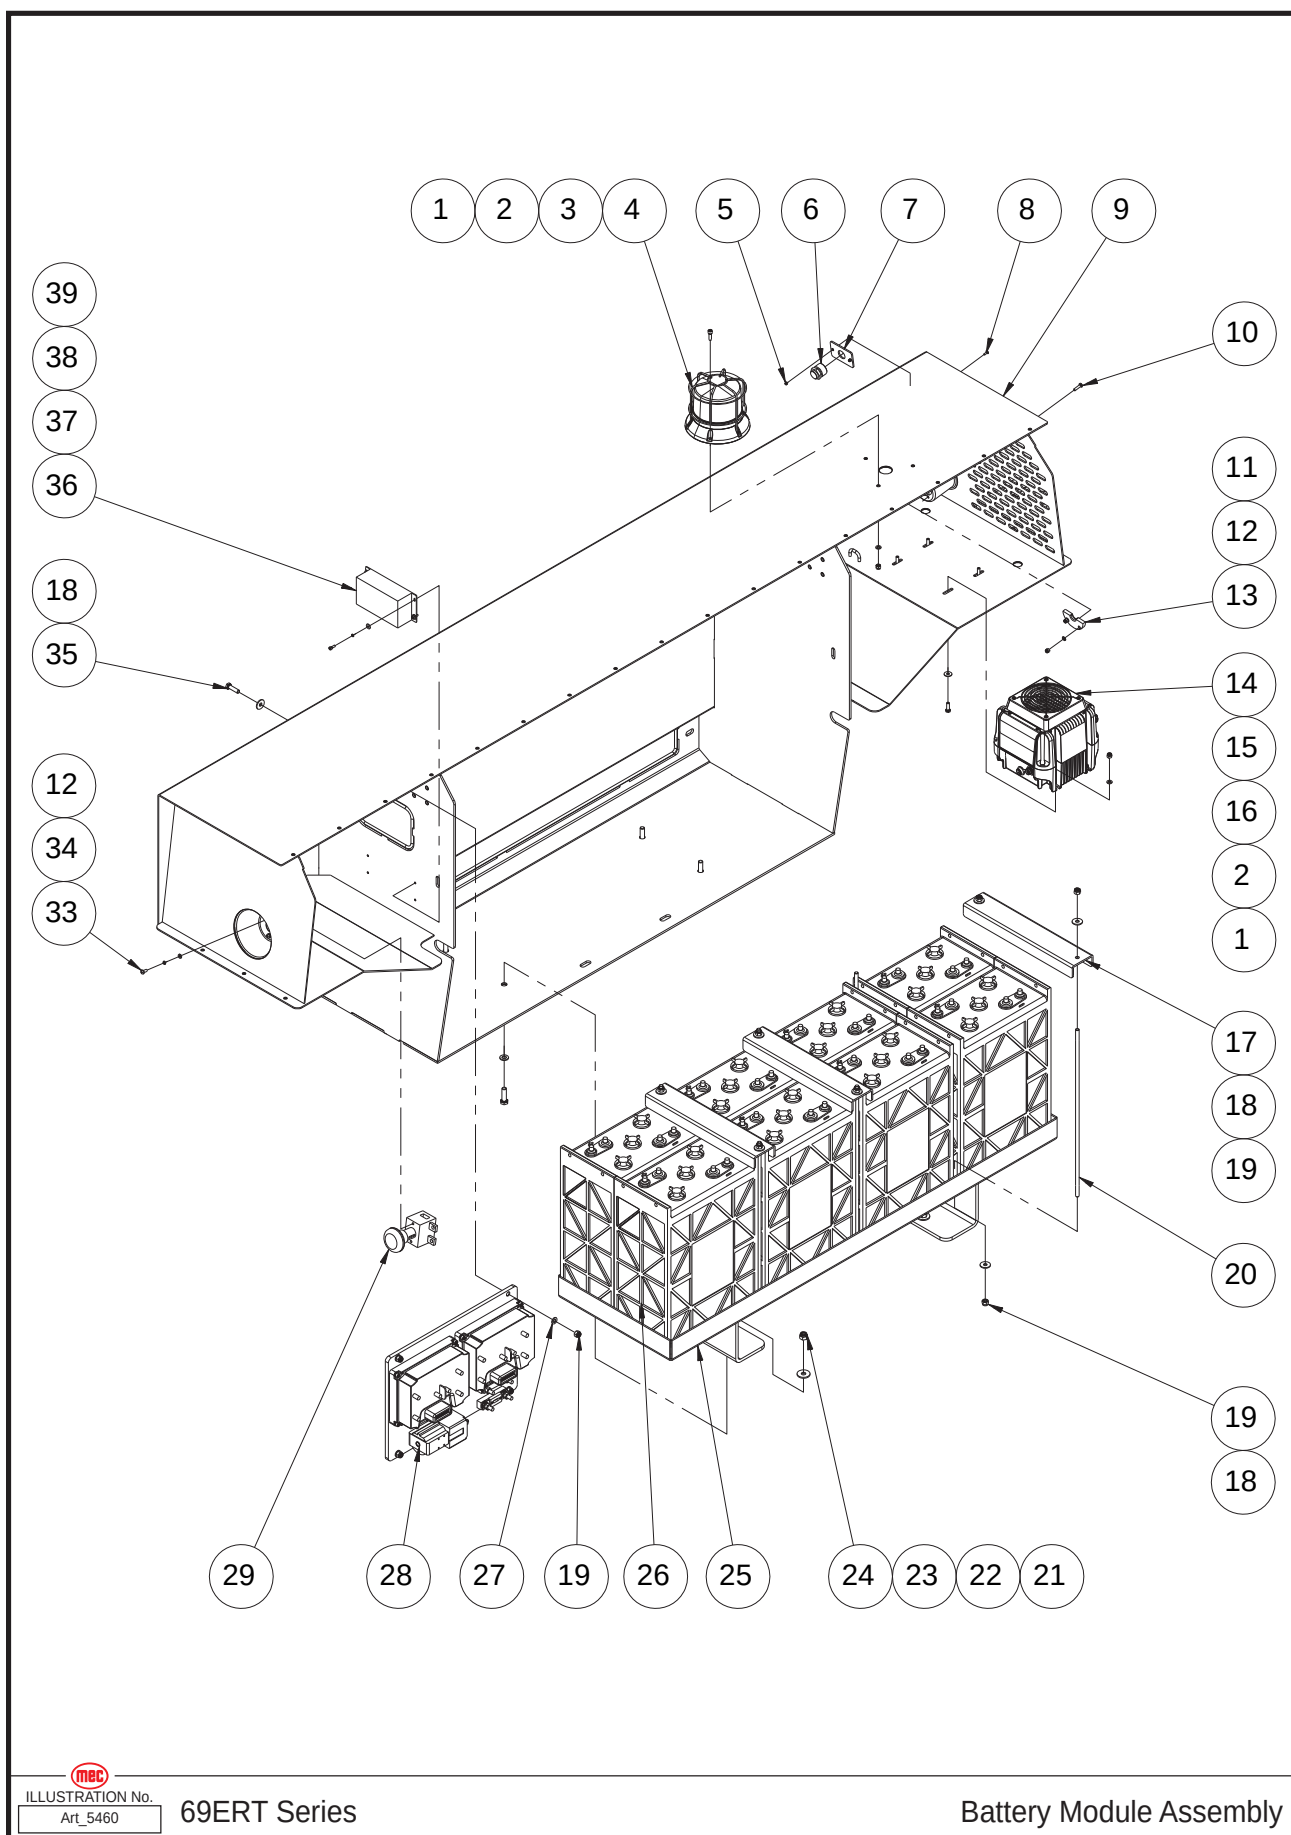


ILLUSTRATION No.
Art_5460

69ERT Series


Battery Module Assembly



Item	Part Number	Description	Qty.
1	50047	NNYL M6	13
2	50000	WSHR M6 Standard Flat	13
3	53124	SHCS M6 × 20	3
4	43442	Beacon	1
5	53092	NNYL M3	2
6	43504	Charger Display	1
7	43505	Display Bracket	1
8	53214	THMS M3 × 10	2
9	43503	Battery Module Weldment	1
10	53219	THMS M5 × 20	8
11	50524	NNYL M5	8
12	53038	WSHR M5 Standard Flat	10
13	43141	Half-Round Batten	4
14	43506	Charger	1
15	50028	HHCS M6 × 20	4
16	50000	WSHR M6 Standard Flat	4
17	43507	Battery Keeper Plate	3
18	50001	WSHR M8 Standard Flat	16
19	50048	NNYL M8	16
20	43508	Threaded Rod	6
21	50332	HHCS M10 × 35	4
22	50002	WSHR M10 Standard Flat	4
23	50002	WSHR M10 Standard Flat	4
24	50049	NNYL M10	4
25	43509	Battery Box Weldment	1
26	43510	Battery	8
27	50001	WSHR M8 Standard Flat	4
28	REF	Motor Controller Assembly (Refer To Page 74)	1
29	42071	Switch, Emergency	1
30	--	--	--
31	--	--	--
32	--	--	--
33	53224	THMS M5 × 12	2
34	53043	WSHR M5 Spring Washer	2
35	50032	HHCS M8 × 30	4
36	43511	DC Power Supply	1
37	50576	SHCS M4 × 12	4
38	53062	WSHR M4 Spring Washer	4
39	50284	WSHR M4 Standard Flat	4

REF - Reference

Motor Controller Assembly

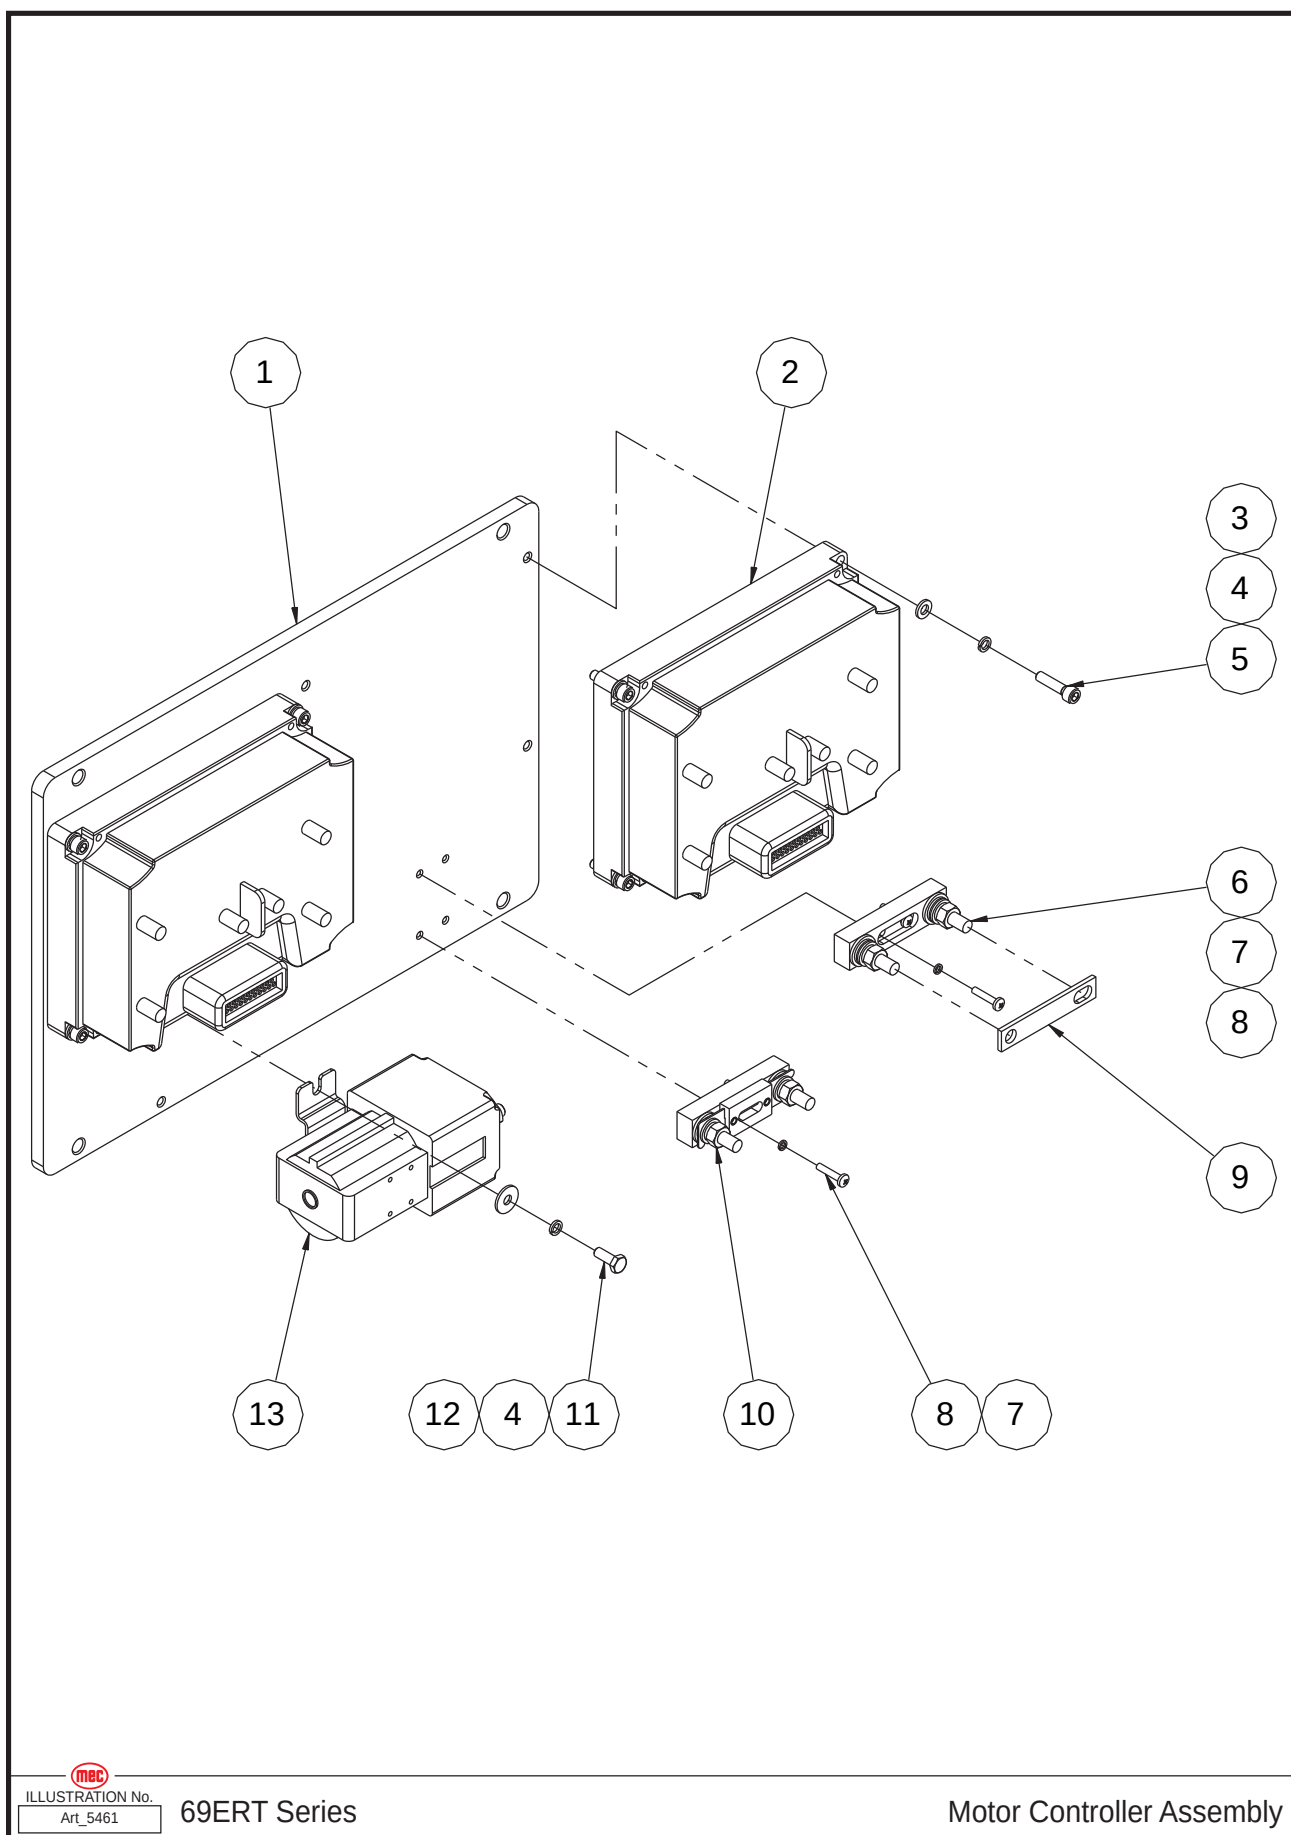

Item	Part Number	Description	Qty.
1	43512	Mounting Plate	1
2	43513	Motor Controller	2
3	50000	WSHR M6 Standard Flat	8
4	53046	WSHR M6 Spring Washer	10
5	53197	SHCS M6 × 25	8
6	41092	Fuse Seat	1
7	53062	WSHR M4 Spring Washer	4
8	53185	PHMS M4 × 20	4
9	43515	Copper Bar 3	1
10	43516	350A Fuse Assembly	1
--	43517	350A Fuse	1
11	50445	HHCS M6 × 16	2
12	50000	WSHR M6 Standard Flat	2
13	43518	DC Contactor	1

Outriggers and Ladder Installation

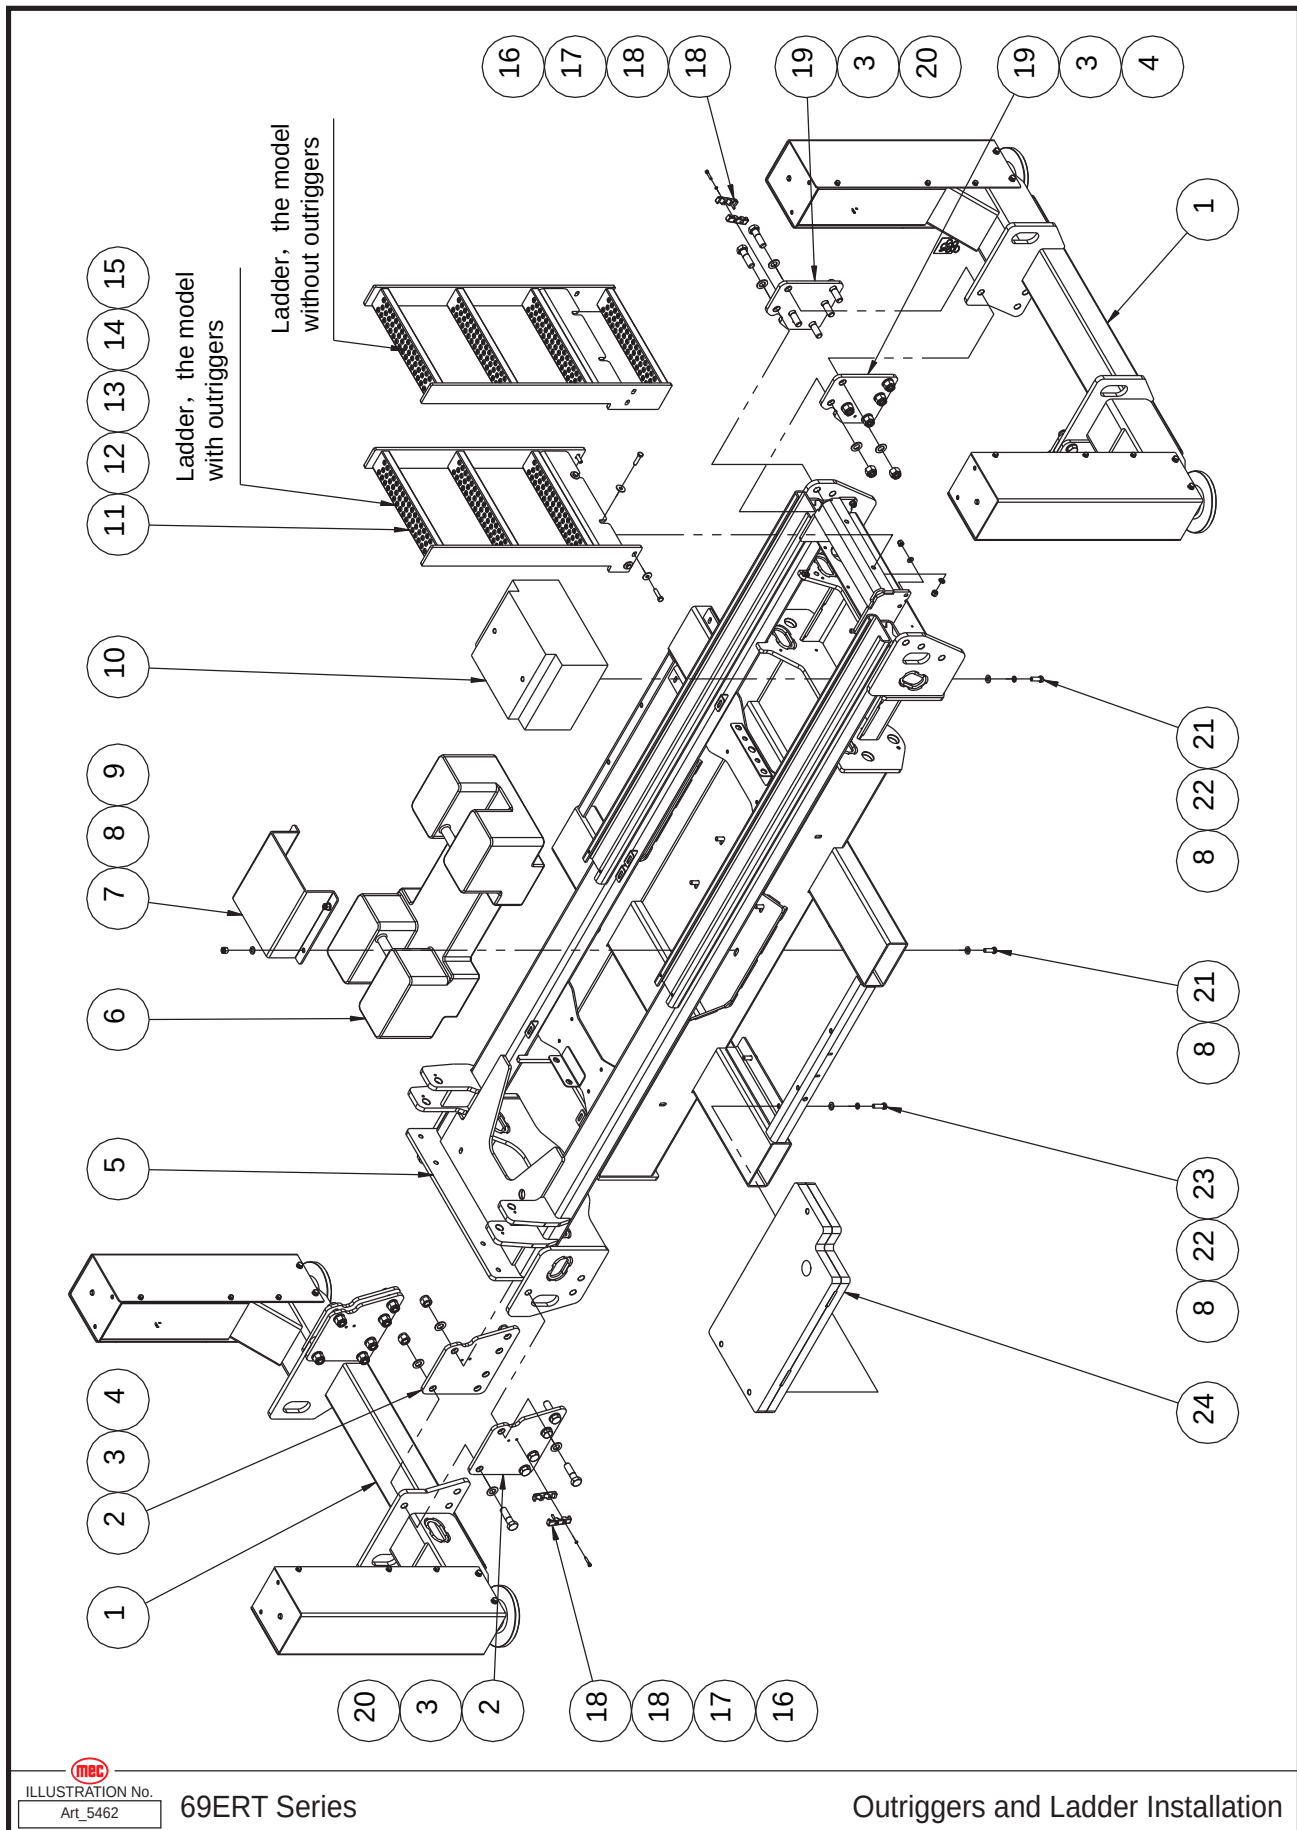


ILLUSTRATION No.
Art_5462

69ERT Series

Outriggers and Ladder Installation

Item	Part Number	Description	Qty.
1	REF	Outrigger Assembly (Option) (Refer To Page 78)	2
2	43222	Outrigger Mount Plate	4
3	50005	WSHR M20 Standard Flat	48
4	50052	NNYL M20	24
5	43006	Frame Weldment	1
6	43219	Counterweight (4069ERT Without Outriggers)	1
7	43220	Cover (4069ERT Without Outriggers)	1
8	50003	WSHR M12 Standard Flat	13
9	50050	NNYL M12	4
10	43218	Counterweight	1
11	43214	Ladder (3369 With Outriggers)	1
	43215	Ladder (3369 Without Outriggers)	1
	43216	Ladder (4069 With Outriggers)	1
	43217	Ladder (4069 Without Outriggers)	1
12	50035	HHCS M10 × 40	6
13	50002	WSHR M10 Standard Flat	6
14	50002	WSHR M10 Standard Flat	6
15	50049	NNYL M10	6
16	53207	SHCS M6 × 30	8
17	53046	WSHR M6 Spring Washer	8
18	43221	Hose Clamp	8
19	43223	Outrigger Mount Plate	4
20	50488	HHCS M20 × 70	24
21	50040	HHCS M12 × 35	2
22	53148	WSHR M12 Spring Washer	5
23	53247	HHCS M12 x 40	3
24	43519	Counterweight	1

REF - Reference

Outrigger Assembly (Option)

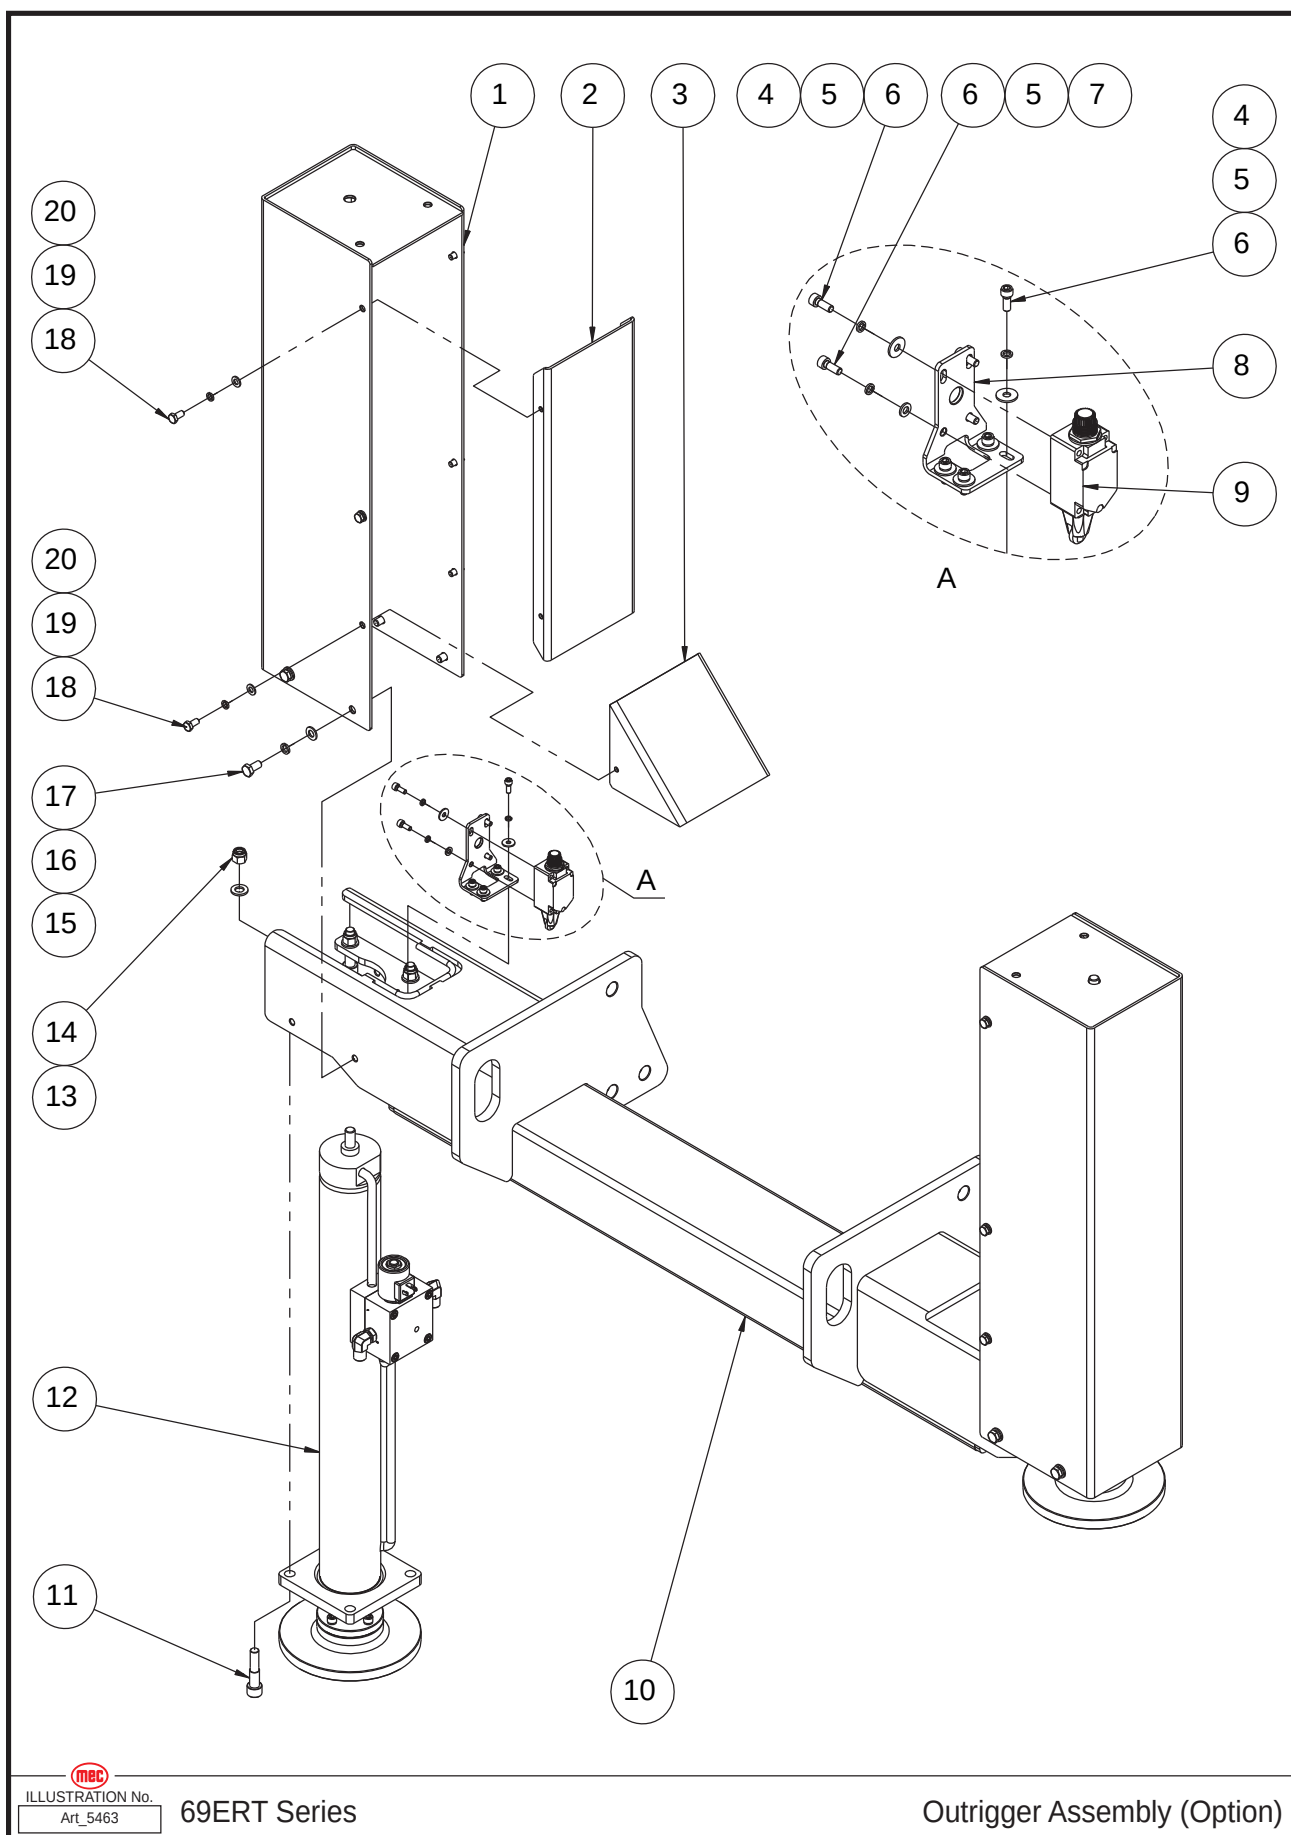


ILLUSTRATION No.
Art_5463


69ERT Series

Outrigger Assembly (Option)

Item	Part Number	Description	Qty.
1	43224	Outrigger Housing	2
2	43225	Cover	2
3	43226	Cover	2
4	50000	WSHR M6 Standard Flat	12
5	53046	WSHR M6 Spring Washer	16
6	53138	SHCS M6 × 16	16
7	50000	WSHR M6 Standard Flat	4
8	43227	Switch Bracket	2
9	43228	Limit Switch	2
10	43233	Outrigger Yoke	1
11	43234	Screw	8
12	REF	Outrigger Cylinder Assembly (Refer To Page 116)	2
13	50003	WSHR M12 Standard Flat	8
14	50050	NNYL M12	8
15	50002	WSHR M10 Standard Flat	8
16	53054	WSHR M10 Spring Washer	8
17	50215	HHCS M10 × 20	8
18	53154	HHCS M8 × 16	12
19	53055	WSHR M8 Spring Washer	12
20	50001	WSHR M8 Standard Flat	12

REF - Reference


Chassis Accessory Installation

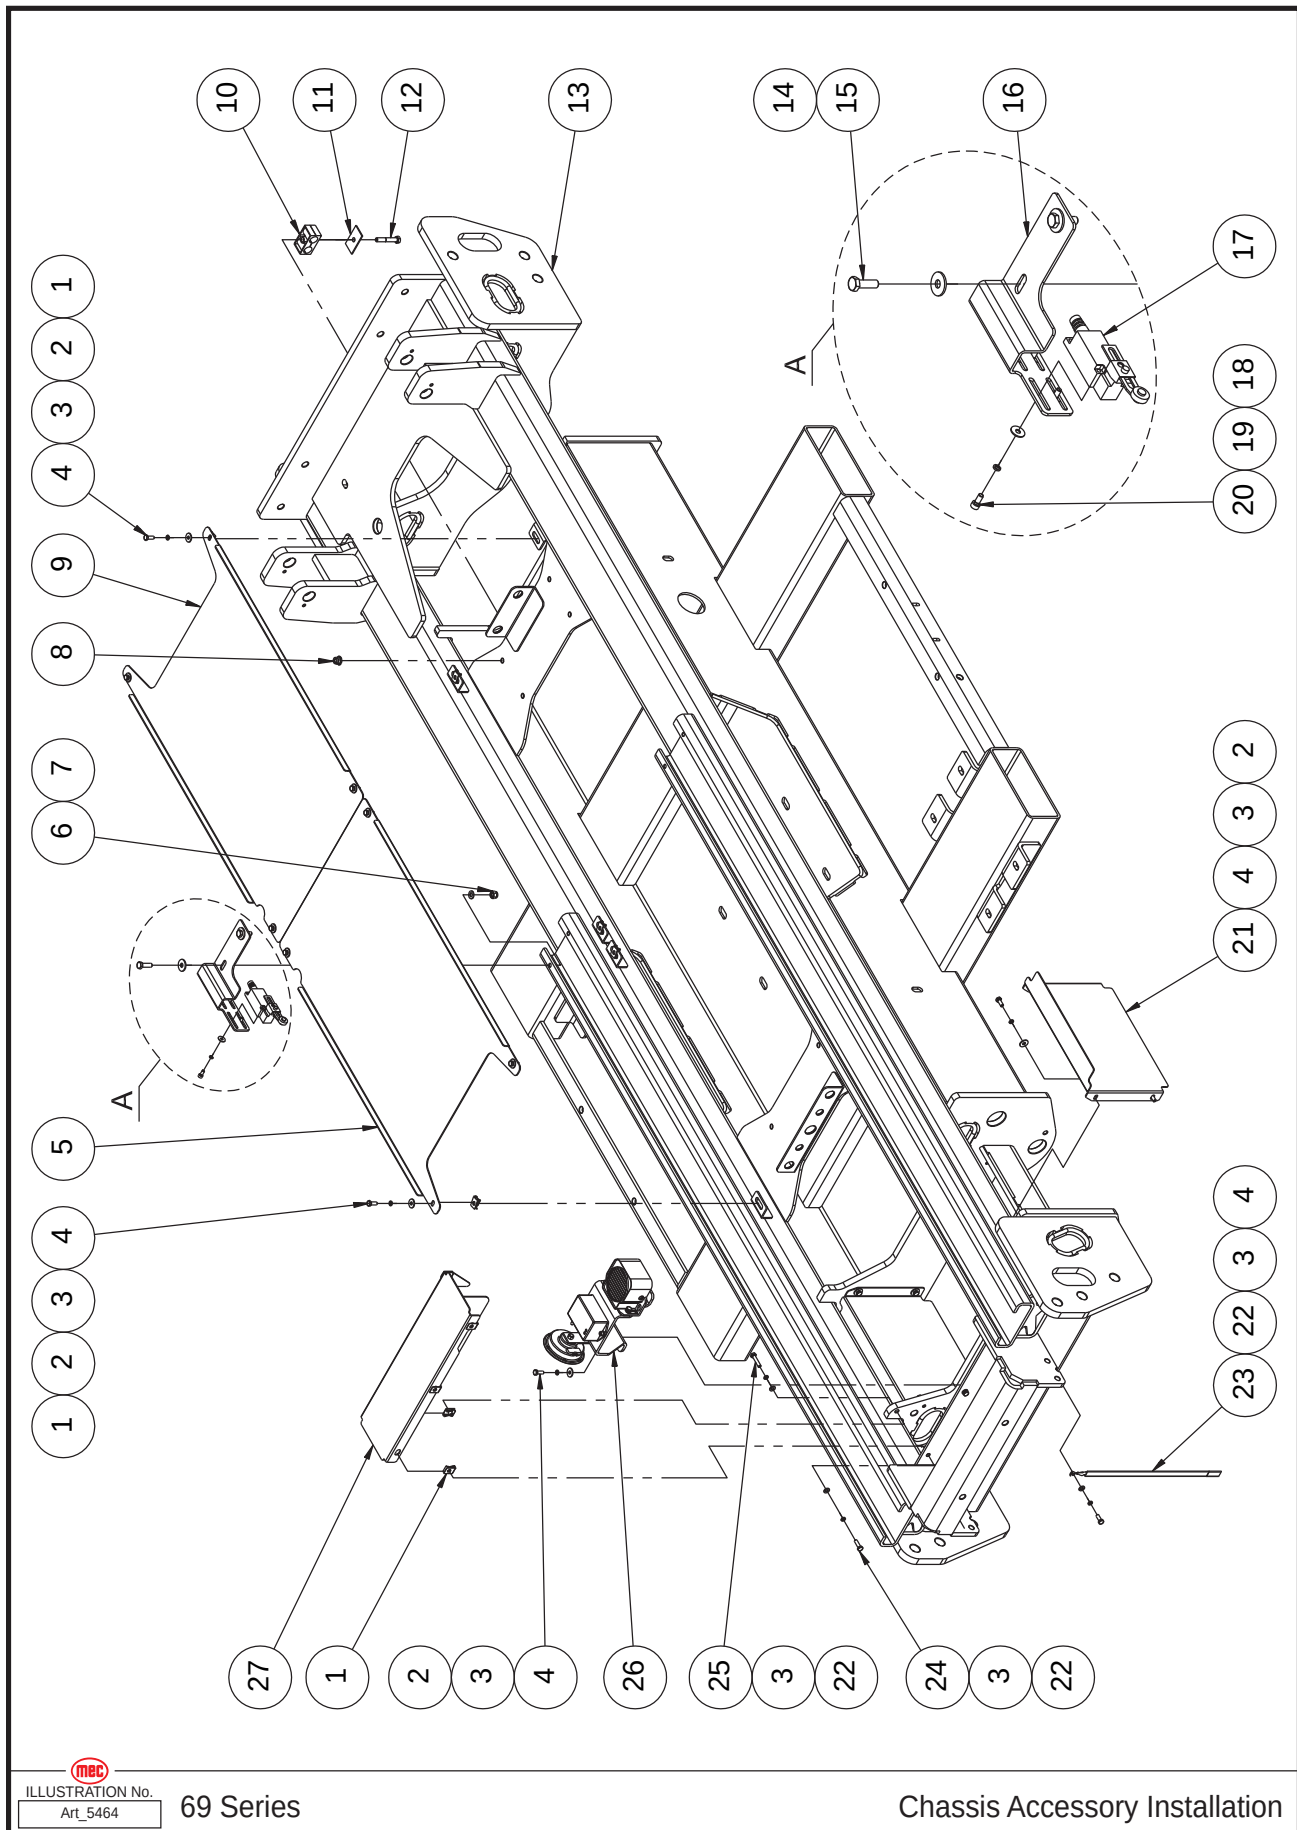

Item	Part Number	Description	Qty.
1	43037	Nut	13
2	50000	WSHR M6 Standard Flat	18
3	53046	WSHR M6 Spring Washer	27
4	50445	HHCS M6 × 16	22
5	43235	Cover	1
6	50048	NNYL M8	2
7	50001	WSHR M8 Standard Flat	2
8	50048	NNYL M8	1
9	43236	Cover	1
10	43520	Hose Clamp	1
11	41415	Base Plate	1
12	50015	HHCS M8 × 50	1
13	43006	Frame Weldment	1
14	50001	WSHR M8 Standard Flat	2
15	50031	HHCS M8 × 25	2
16	43238	Switch Bracket	1
17	42402	Limit Switch	1
18	53038	WSHR M5 Standard Flat	4
19	53043	WSHR M5 Spring Washer	6
20	53116	SHCS M5 × 12	6
21	43522	Cover	2
22	50000	WSHR M6 Standard Flat	9
23	43239	Ground Strap	1
24	50028	HHCS M6 × 20	3
25	50214	HHCS M6 × 30	2
26	REF	Electrical Accessory Assembly (Refer To Page 82)	1
27	43240	Cover	1

REF - Reference

Electrical Accessory Assembly

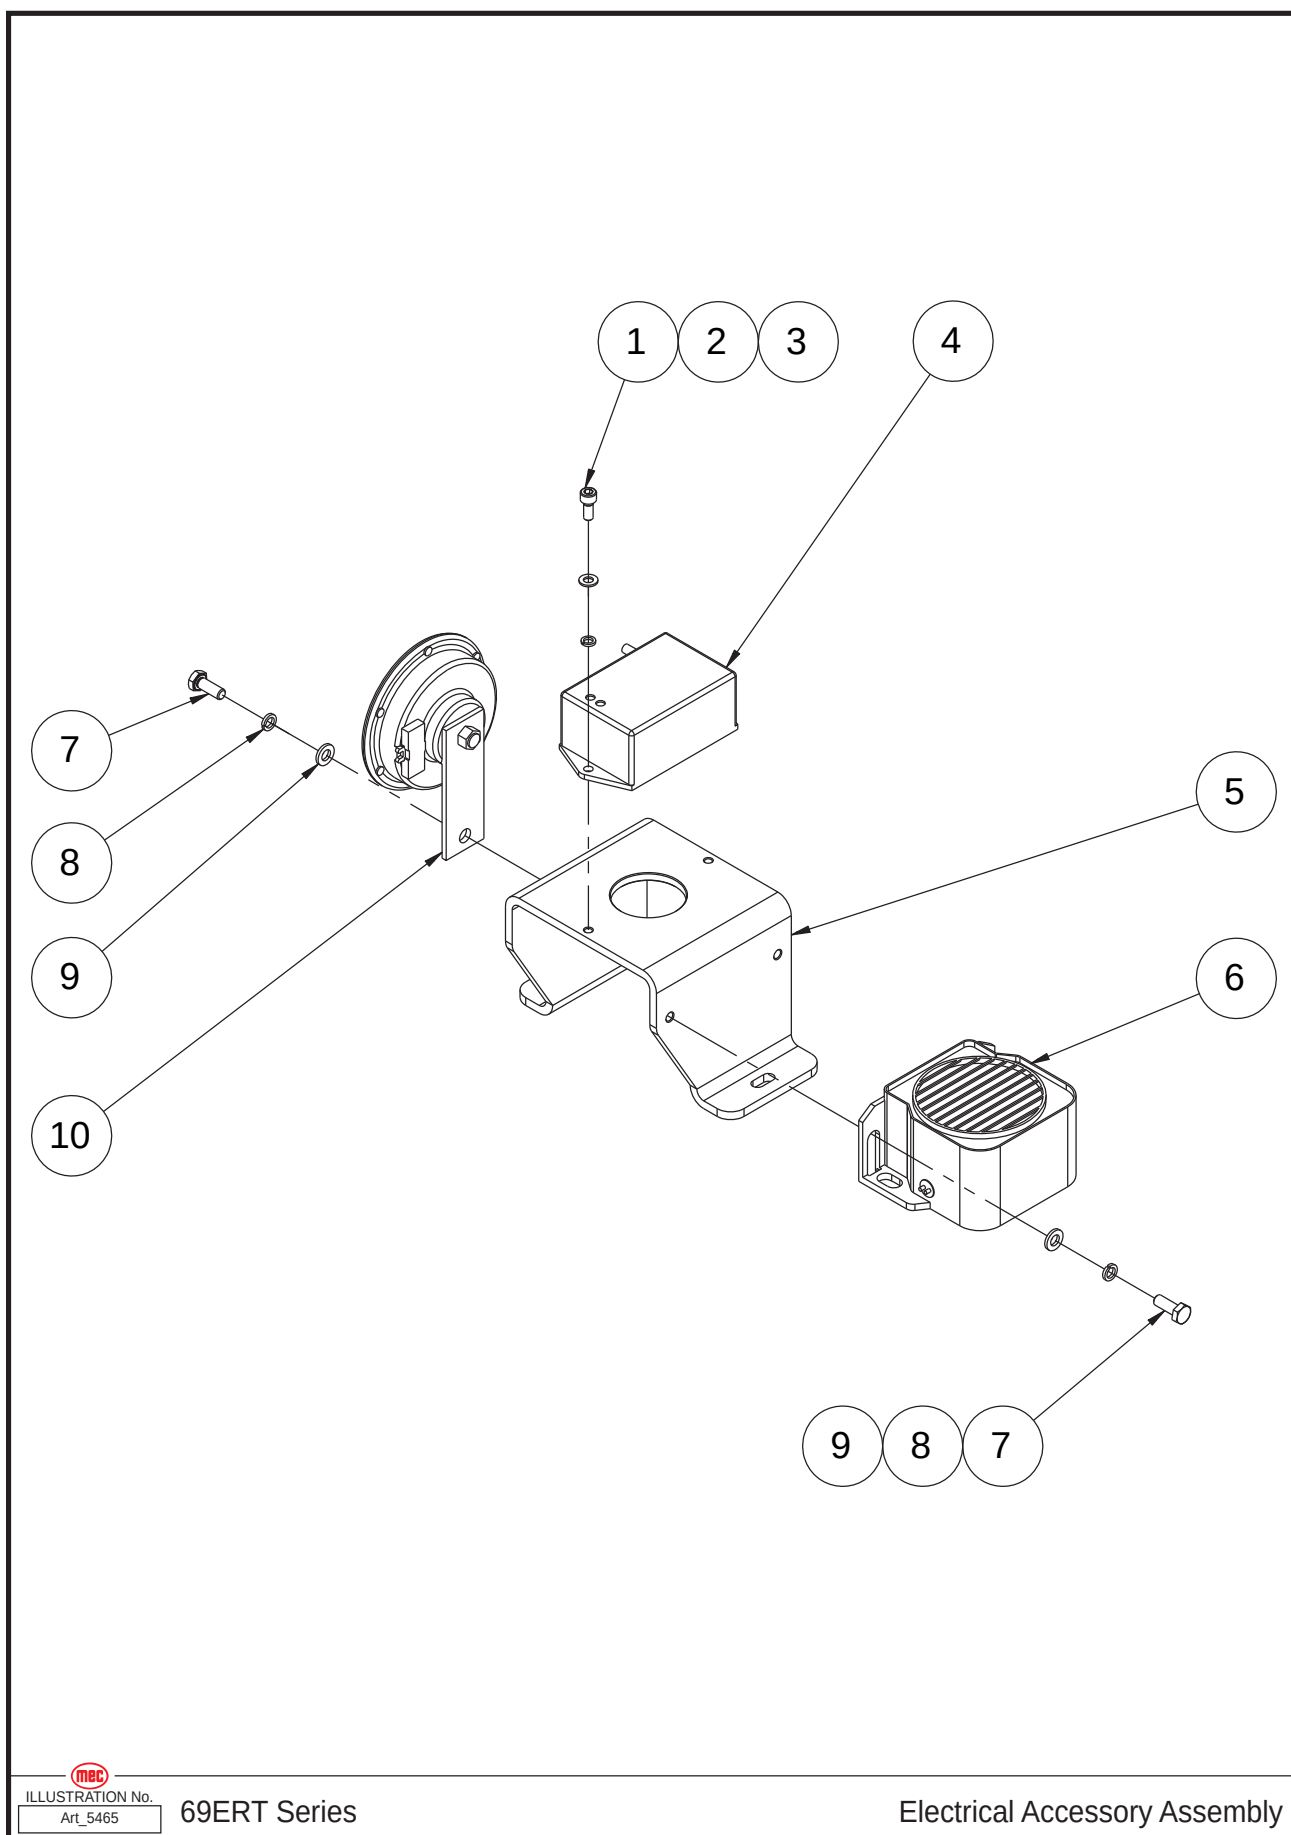

Item	Part Number	Description	Qty.
1	53116	SHCS M5 × 12	2
2	53038	WSHR M5 Standard Flat	2
3	53043	WSHR M5 Spring Washer	2
4	43241	Tilt Sensor	1
5	43242	Mounting Plate	1
6	42882	Alarm	1
7	50445	HHCS M6 × 16	3
8	53046	WSHR M6 Spring Washer	3
9	50000	WSHR M6 Standard Flat	3
10	41075	Horn	1

Scissor Assembly - 3369

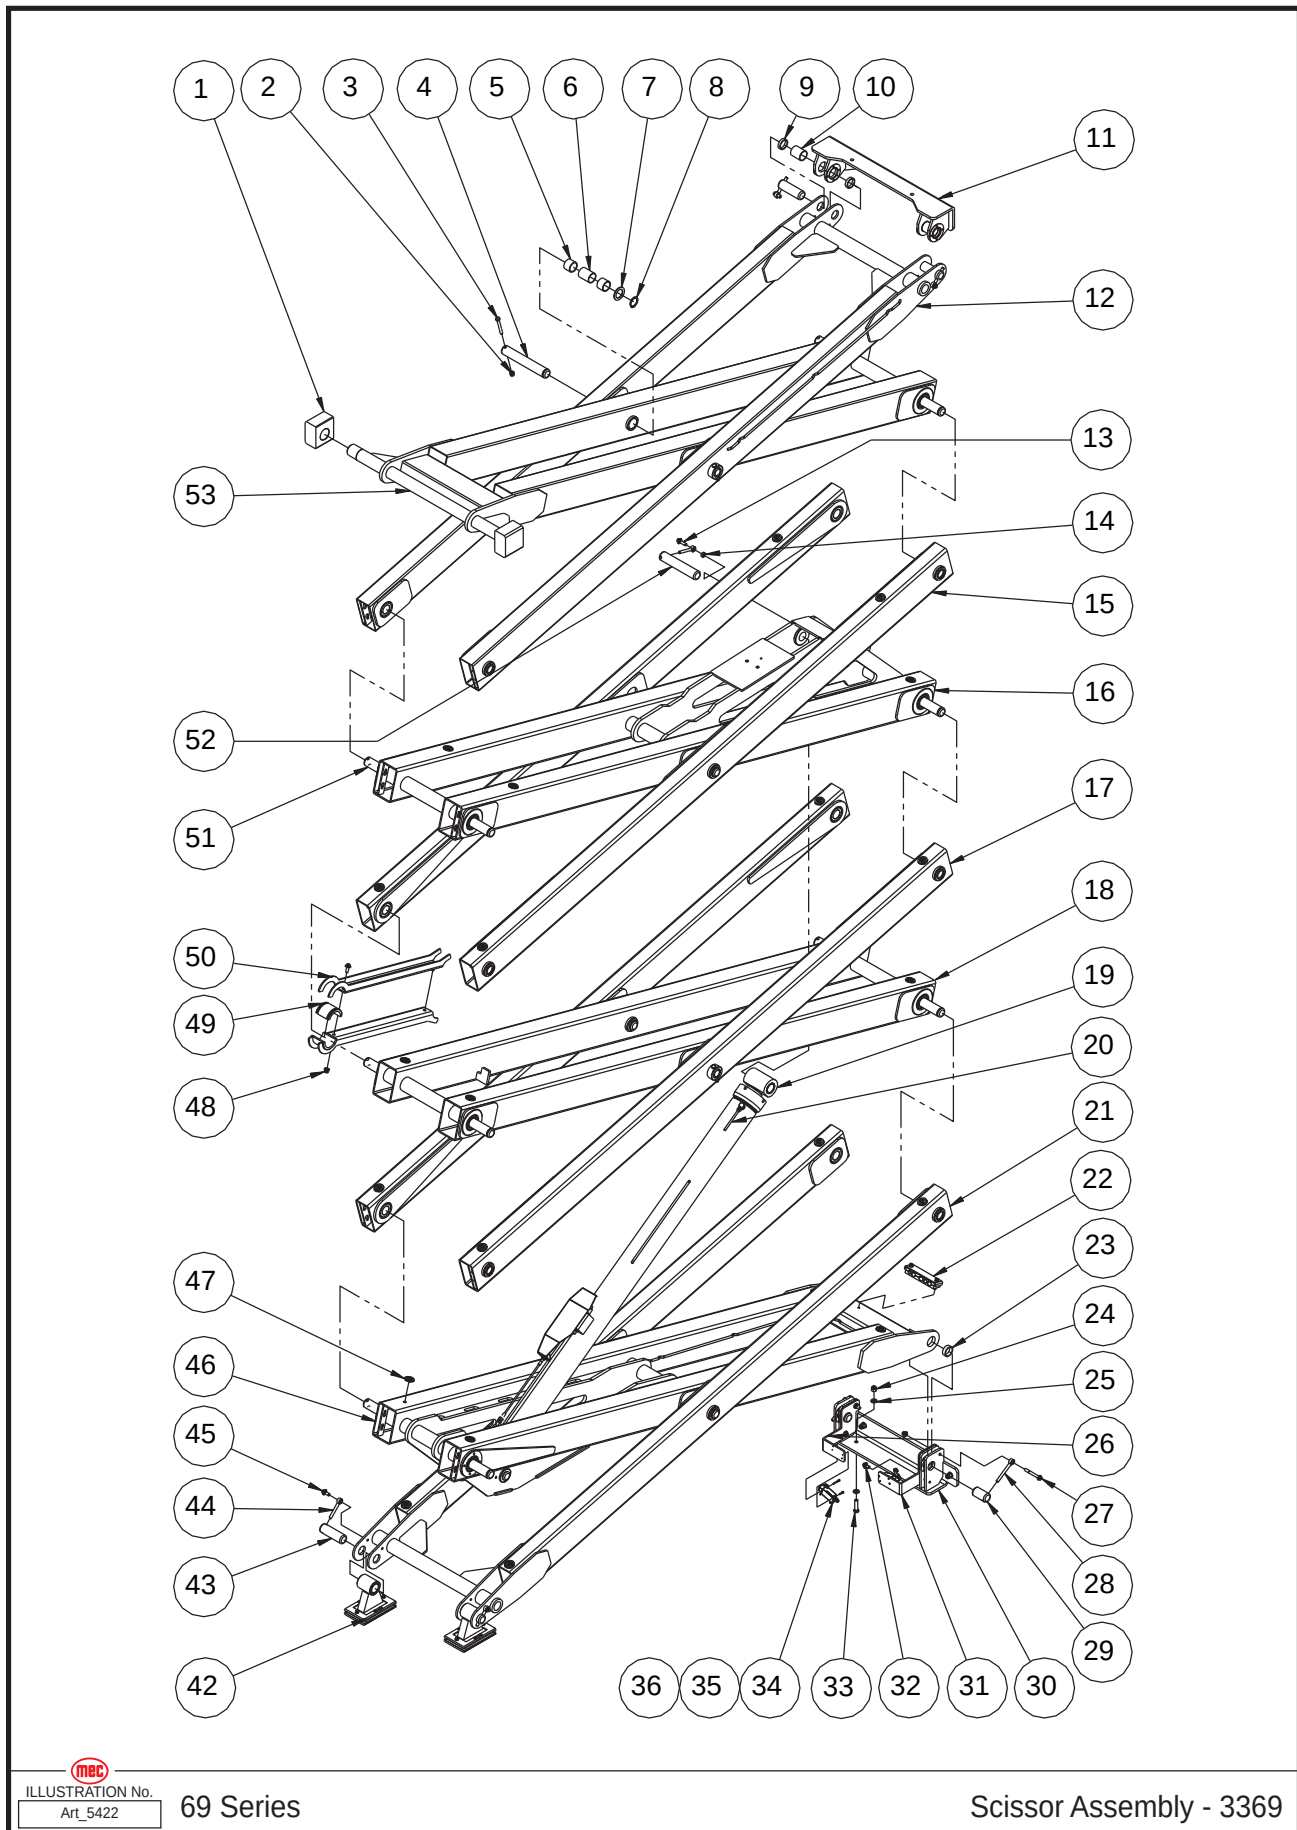


ILLUSTRATION No.
Art_5422

69 Series

Scissor Assembly - 3369



Item	Part Number	Description	Qty.
1	43244	Platform Slider	2
2	50049	NNYL M10	12
3	50352	HHCS M10 × 80	12
4	43245	Pin	4
5	41105	Bearing	24
6	43246	Spacer Sleeve 2	4
7	43247	Washer	12
8	43248	Circlips	12
9	43249	Bearing	4
10	43250	Spacer Sleeve 1	2
11	43251	Platform Pivot Weldment	1
12	43252	Outer Arm 4	1
13	50332	HHCS M10 × 35	2
14	43253	Washer	2
15	43254	Outer Arm 3	1
16	43255	Inner Arm 3	1
17	43256	Outer Arm 2	1
18	43257	Inner Arm 2	1
19	REF	Lower Lift Cylinder Assembly (Refer To Page 108)	1
20	43258	Hose	1
21	43259	Outer Arm 1	1
22	43546	Hose Clamp Assembly (Refer To Page 90)	1
23	43260	Bearing	2
24	50050	NNYL M12	6
25	50003	WSHR M12 Standard Flat	12
26	43261	Switch Bracket	1
27	50352	HHCS M10 × 80	2
28	43262	Pin	2
29	43263	Pin	2
30	43264	Chassis Link Pivot Weldment	1
31	43265	Switch Bracket	1
32	50215	HHCS M10 × 20	2
33	50023	HHCS M12 × 50	6
34	42074	Limit Switch	2
35	53065	SHCS M4 × 30	4
36	53113	SHCS M4 × 16	4
42	REF	Slider Assembly (Refer To Page 89)	2
43	43269	Pin	4
44	41431	Pin	6
45	50033	HHCS M10 × 25	6
46	43270	Inner Arm 1	1
47	41114	Block	24
48	50049	NNYL M10	4
49	43272	Safety Arm Bushing	2
50	43273	Safety Arm	2
51	43274	Pin	8
52	43275	Pin	2
53	43276	Inner Arm 4	1

REF - Reference

Scissor Assembly - 4069

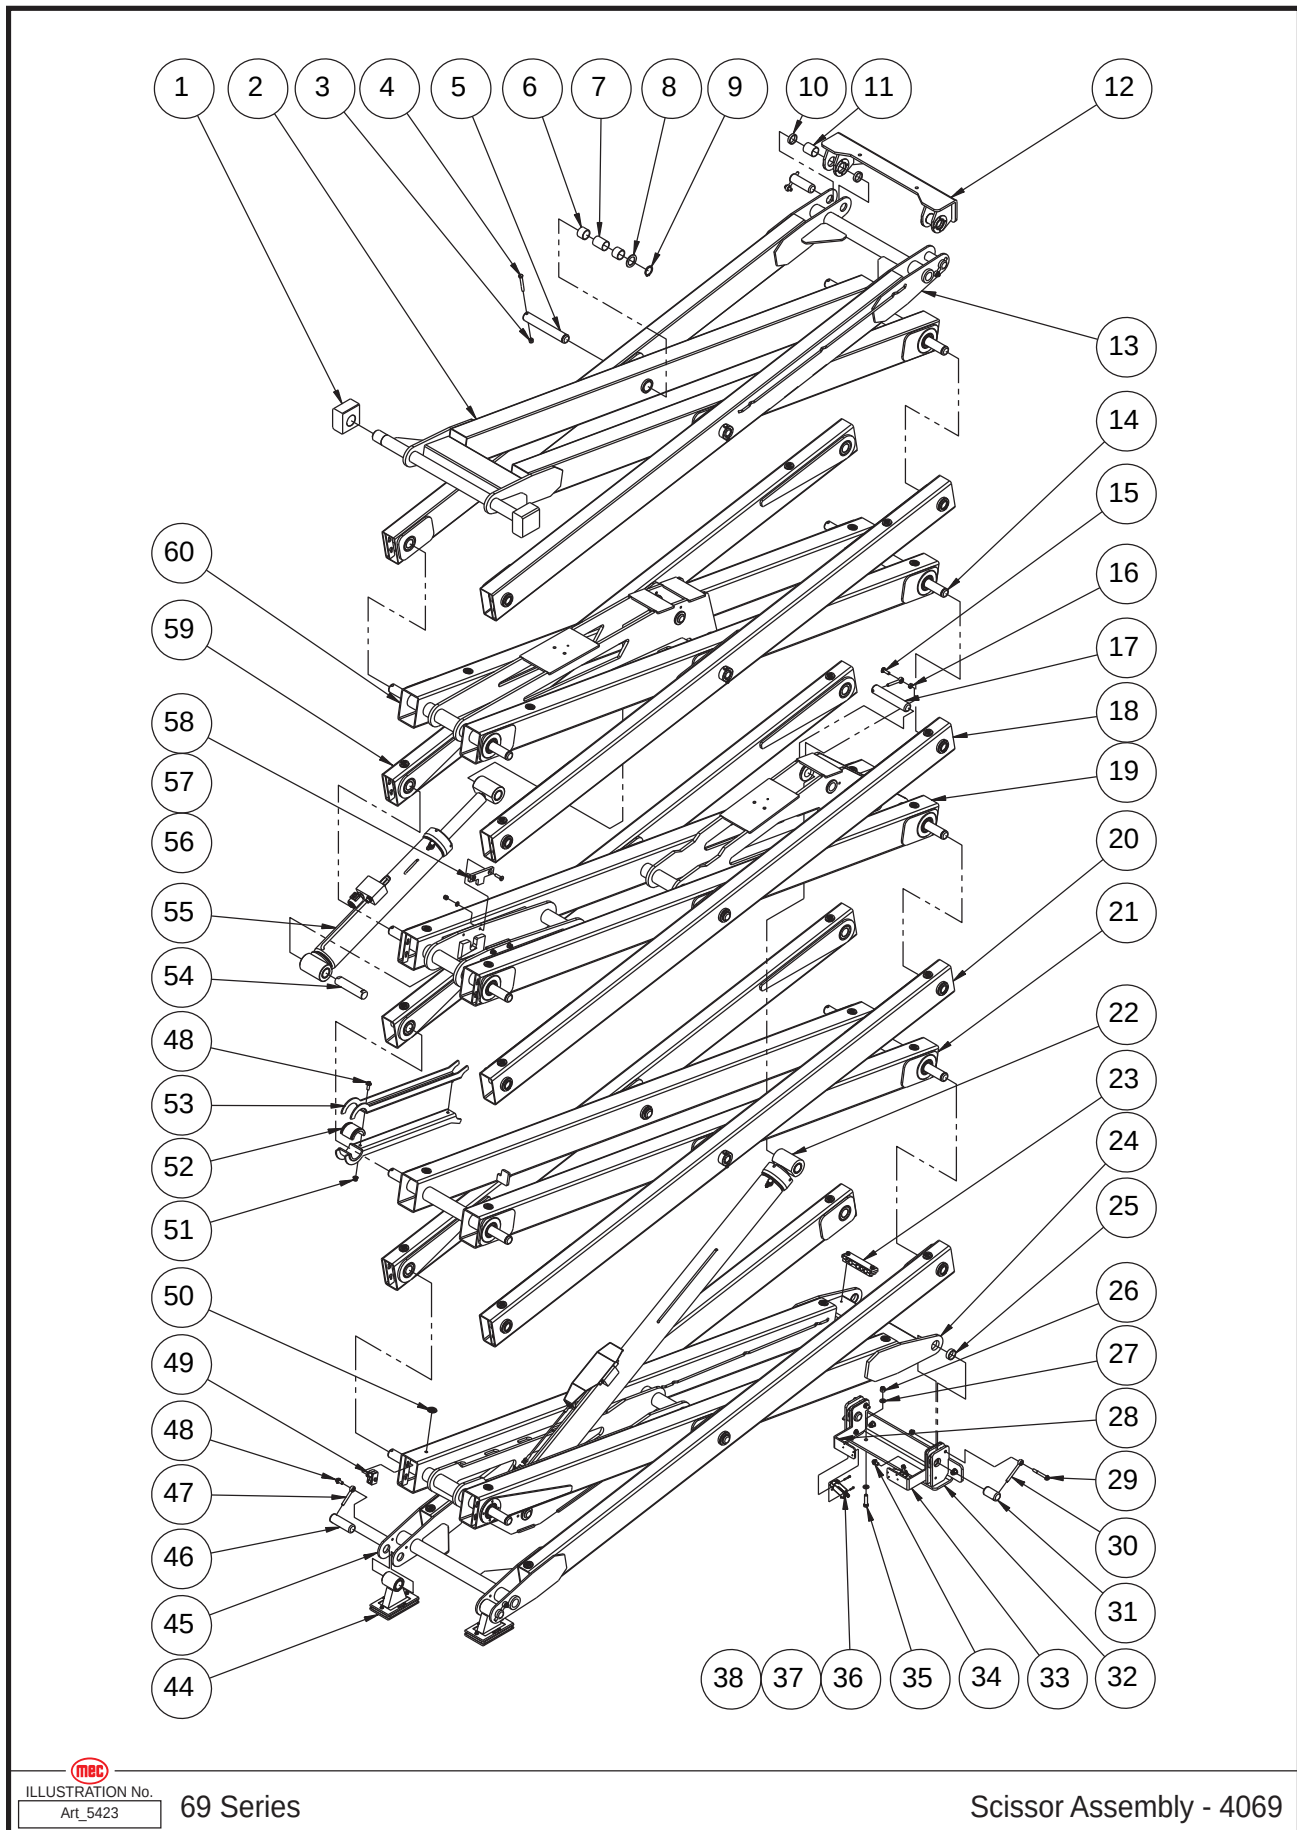


ILLUSTRATION No.
Art_5423

69 Series


Scissor Assembly - 4069

Item	Part Number	Description	Qty.
1	43244	Platform Slider	2
2	43276	Inner Arm 4	1
3	50049	NNYL M10	20
4	50352	HHCS M10 × 80	16
5	43245	Pin	6
6	41105	Bearing	32
7	43246	Spacer Sleeve 2	6
8	43247	Washer	16
9	43248	Circlips	16
10	43249	Bearing	4
11	43250	Spacer Sleeve 1	2
12	43251	Platform Pivot Weldment	1
13	43252	Outer Arm 4	1
14	43274	Pin	10
15	50332	HHCS M10 × 35	3
16	43253	Washer	3
17	43275	Pin	3
18	43277	Outer Arm 3	1
19	43278	Inner Arm 3	1
20	43256	Outer Arm 2	1
21	43257	Inner Arm 2	1
22	REF	Lower Lift Cylinder Assembly (Refer To Page 108)	1
23	43546	Hose Clamp Assembly (Refer To Page 90)	1
24	43270	Inner Arm 1	1
25	43260	Bearing	2
26	50050	NNYL M12	6
27	50003	WSHR M12 Standard Flat	12
28	43261	Switch Bracket	1
29	50352	HHCS M10 × 80	2
30	43262	Pin	2
31	43263	Pin	2
32	43264	Chassis Link Pivot Weldment	1
33	43265	Switch Bracket	1
34	50215	HHCS M10 × 20	2
35	50023	HHCS M12 × 50	6
36	42074	Limit Switch	2
37	53065	SHCS M4 × 30	4
38	53113	SHCS M4 × 16	4
39	--	--	--
40	--	--	--
41	--	--	--
42	--	--	--
43	--	--	--
44	REF	Slider Assembly (Refer To Page 89)	2
45	43259	Outer Arm 1	1

46	43269	Pin	4
47	41431	Pin	7
48	50033	HHCS M10 × 25	6
49	43547	Hose Clamp Assembly - 4069 (Refer To Page 91)	2
50	41114	Block	32
51	50049	NNYL M10	4
52	43272	Safety Arm Bushing	2
53	43273	Safety Arm	2
54	43279	Pin	1
55	REF	Upper Lift Cylinder Assembly (Refer To Page 110)	1
56	50002	WSHR M10 Standard Flat	4
57	53230	CSCS M10 × 40	4
58	43280	Pin Fixing Plate	2
59	43281	Outer Arm 4	1
60	43282	Inner Arm 4	1


REF - Reference

Slider Assembly

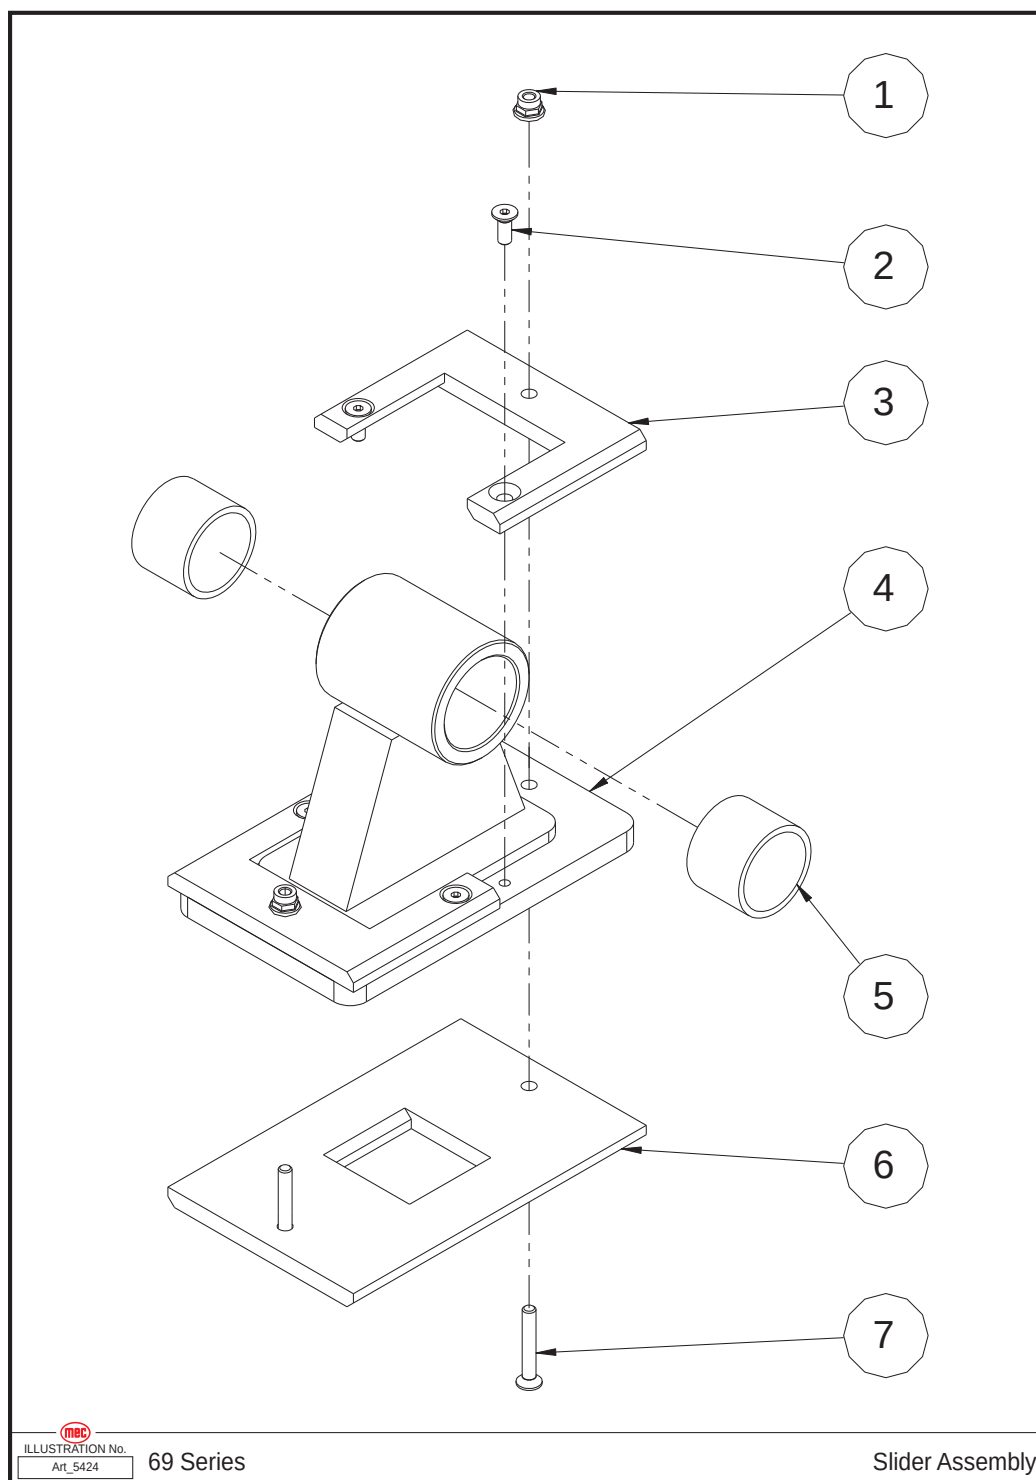

Item	Part Number	Description	Qty.
1	50047	NNYL M6	2
2	53226	CSCS M6 × 16	4
3	43283	Upper Slider	2
4	43284	Slider Foot Weldment	1
5	41105	Bearing	2
6	43285	Lower Slider	1
7	50289	HHCS M6 × 40	2


Hose Clamp Assembly

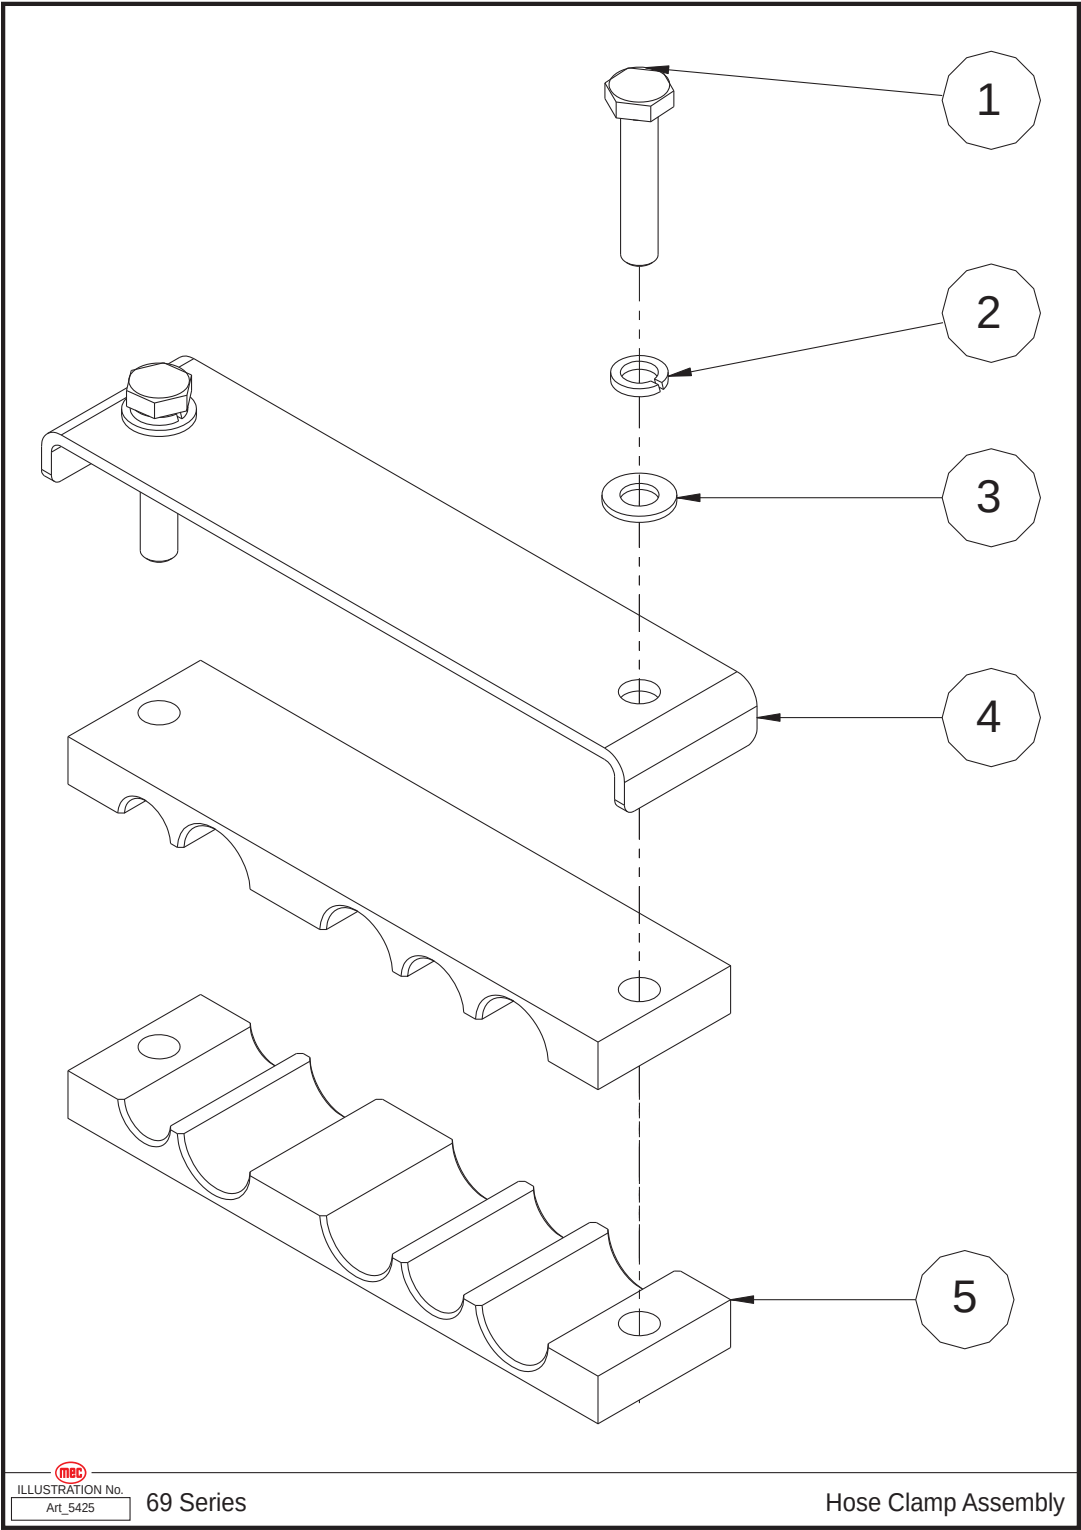

Item	Part Number	Description	Qty.
1	50014	HHCS M8 × 40	2
2	53055	WSHR M8 Spring Washer	2
3	50001	WSHR M8 Standard Flat	2
4	43286	Base Plate	1
5	43287	Hose Clamp	2



Hose Clamp Assembly - 4069

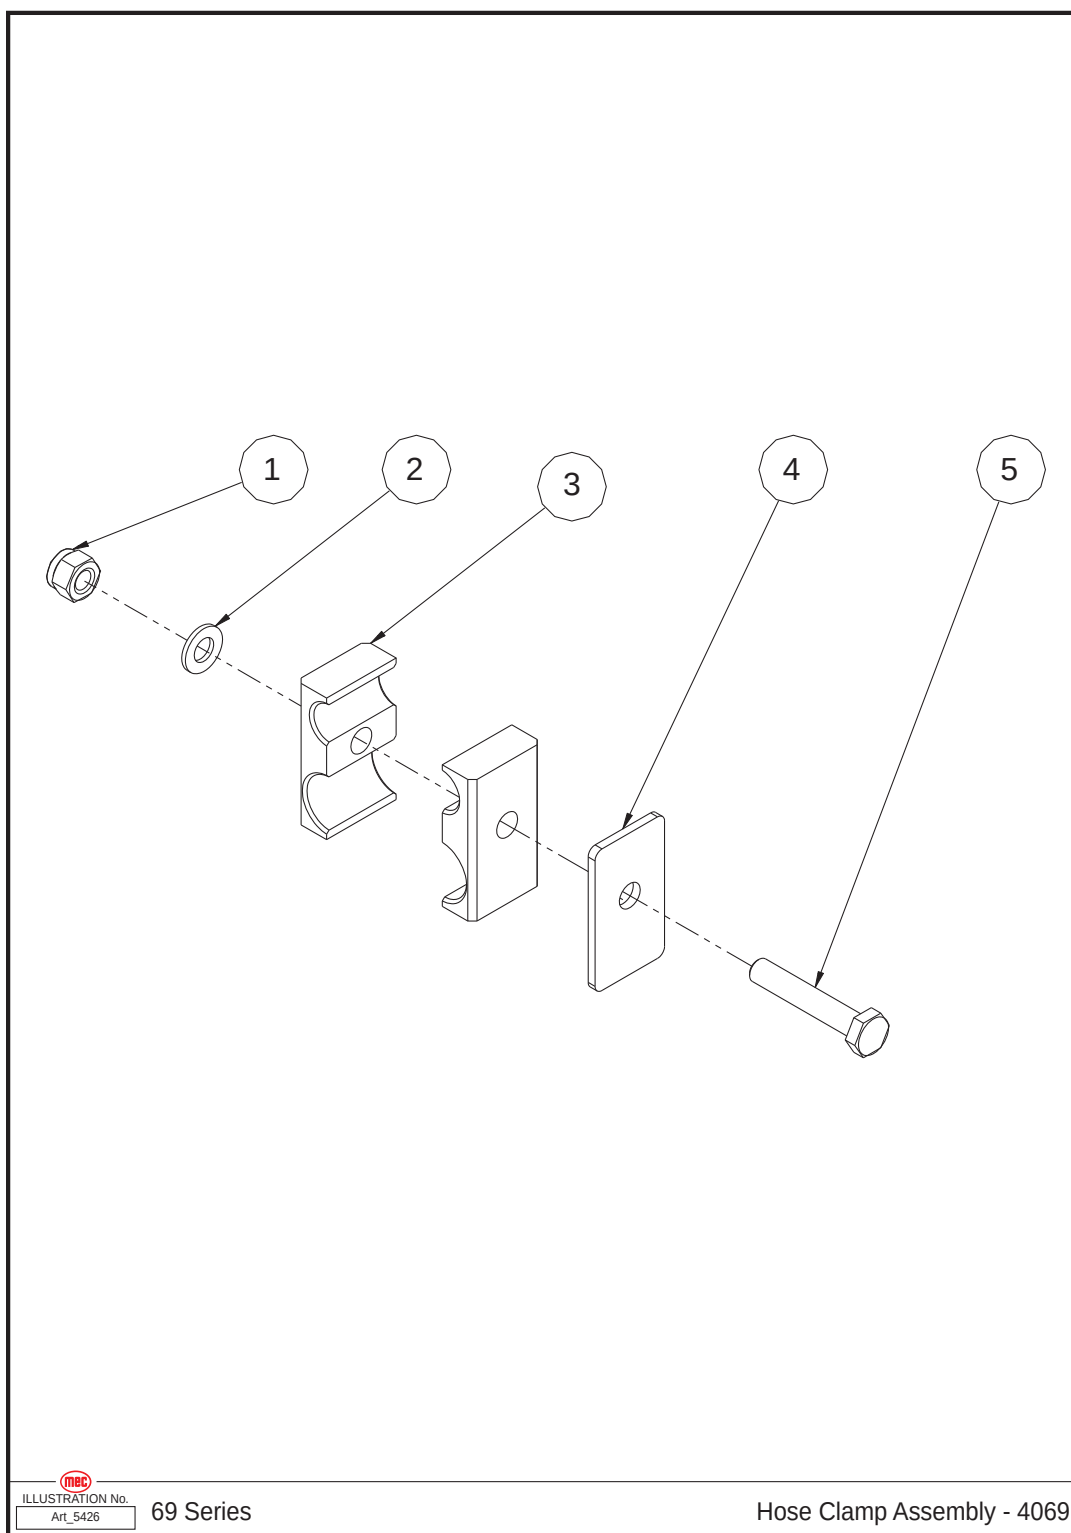

Item	Part Number	Description	Qty.
1	50048	NNYL M8	1
2	50001	WSHR M8 Standard Flat	1
3	43288	Hose Clamp	2
4	43289	Base Plate	1
5	50057	HHCS M8 × 45	1

Main Platform Assembly

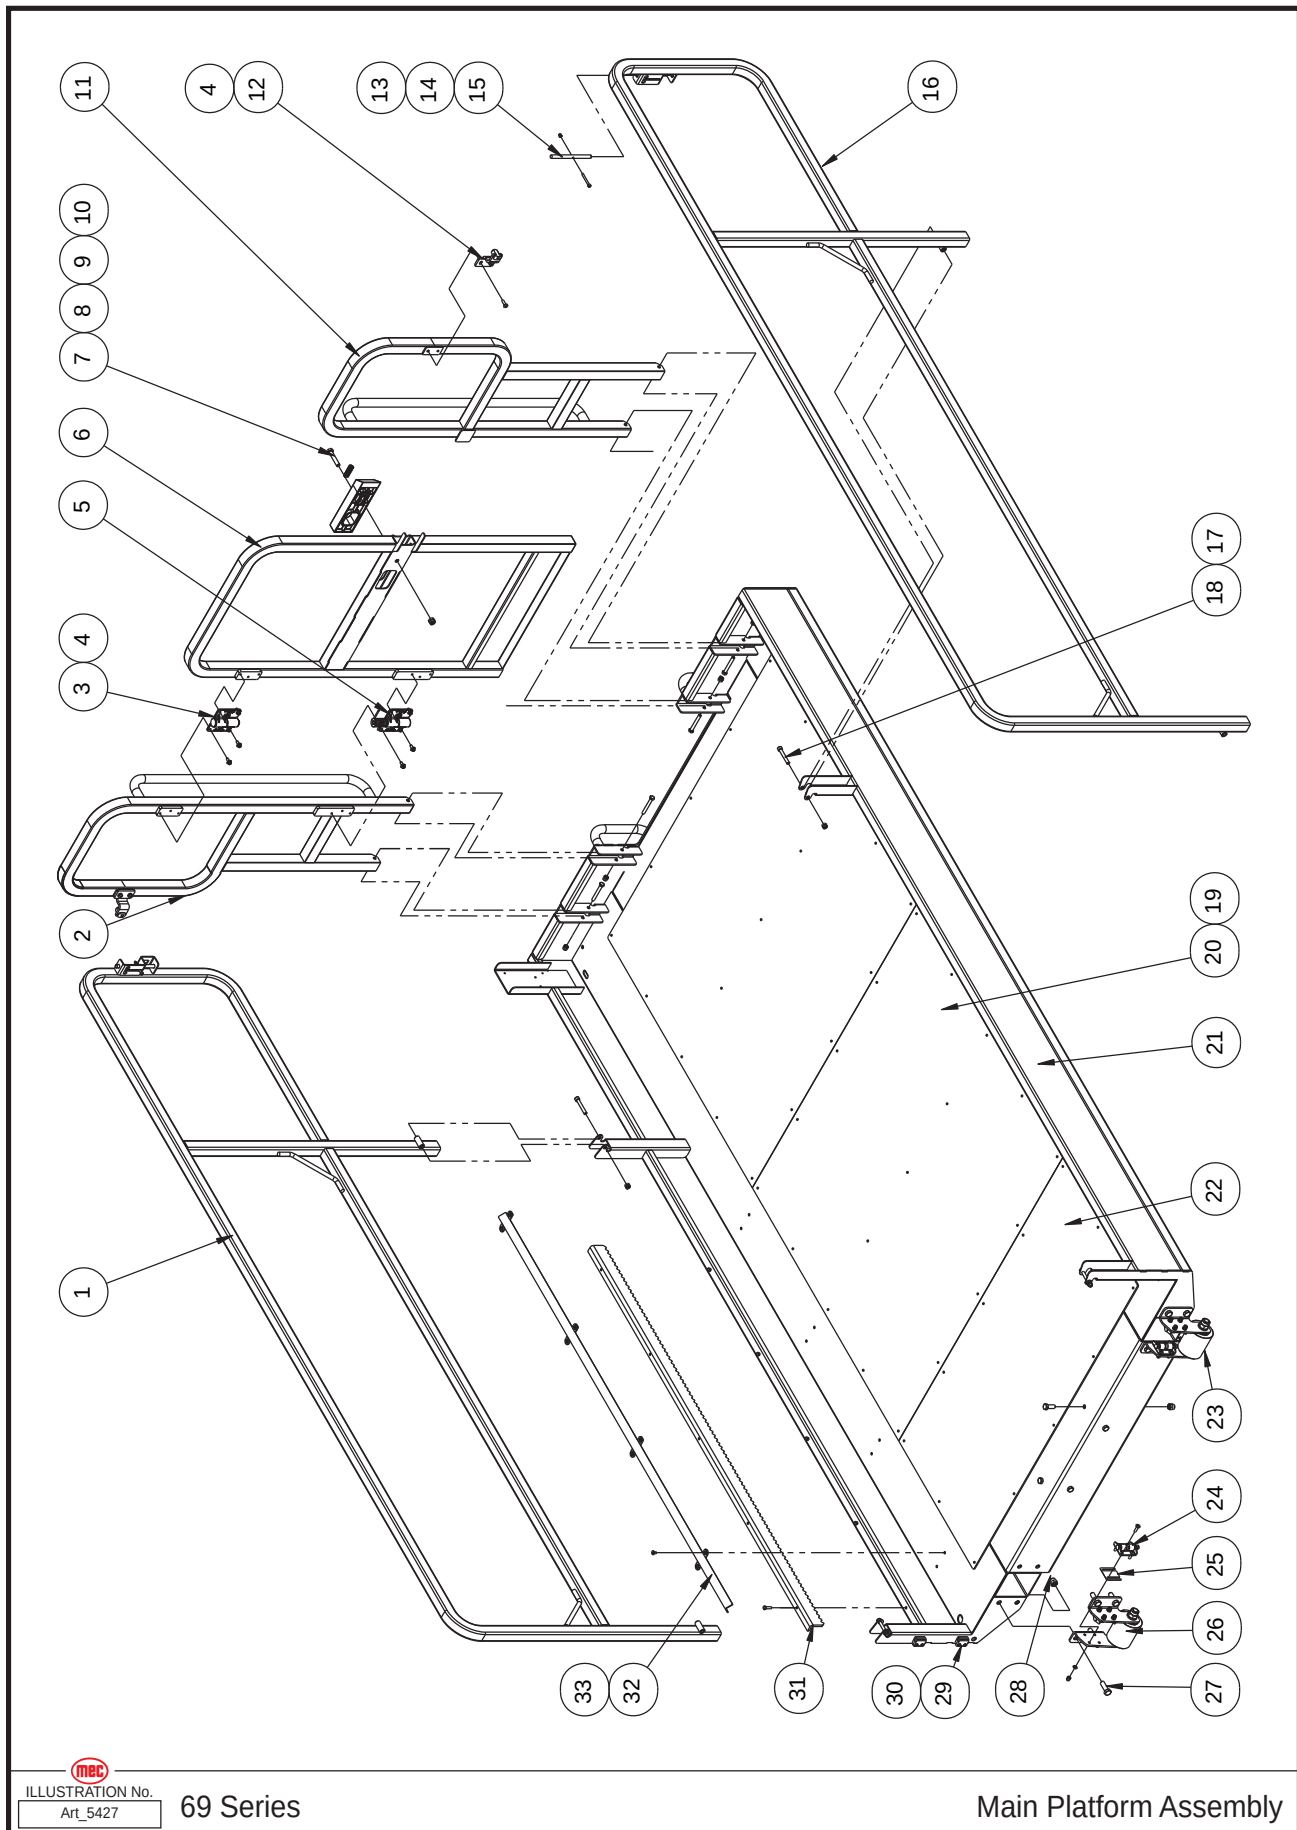


ILLUSTRATION No.
Art_5427

69 Series

Main Platform Assembly

Item	Part Number	Description	Qty.
1	43290	Right Main Rail	1
2	43291	Right Door Rail	1
3	41127	Hinge A	1
4	53227	HHCS M6 × 14	21
5	41128	Hinge B	1
6	43294	Entry Gate	1
7	50021	HHCS M10 × 55	1
8	41125	Spring	1
9	41124	Latch Handle	1
10	50049	NNYL M10	1
11	43297	Left Door Rail	1
12	43298	Lock Pin	2
13	53067	SHCS M5 × 40	2
14	50524	NNYL M5	2
15	43299	Inserted Pin Rod	2
16	43300	Left Main Rail	1
17	53129	SHCS M8 × 60	8
18	50048	NNYL M8	8
19	43301	Rivet	50
20	43302	Main Platform Deck Plate 1	2
21	43303	Main Deck Weldment	1
22	43304	Main Platform Deck Plate 2	1
23	REF	Support Roller Assembly (Refer To Page 94)	1
24	REF	Side Roller Assembly (Refer To Page 96)	4
25	43305	Adjusting Plate	4
26	REF	Support Roller Assembly (Refer To Page 94)	1
27	50040	HHCS M12 × 35	10
28	50050	NNYL M12	12
29	41059	Wire Clip	4
30	53113	SHCS M4 × 16	4
31	43307	Extension Deck Lock Tooth	1
32	43308	Roller Track	2
33	53228	BHCS M6 × 10	16

REF - Reference

Support Roller Assembly

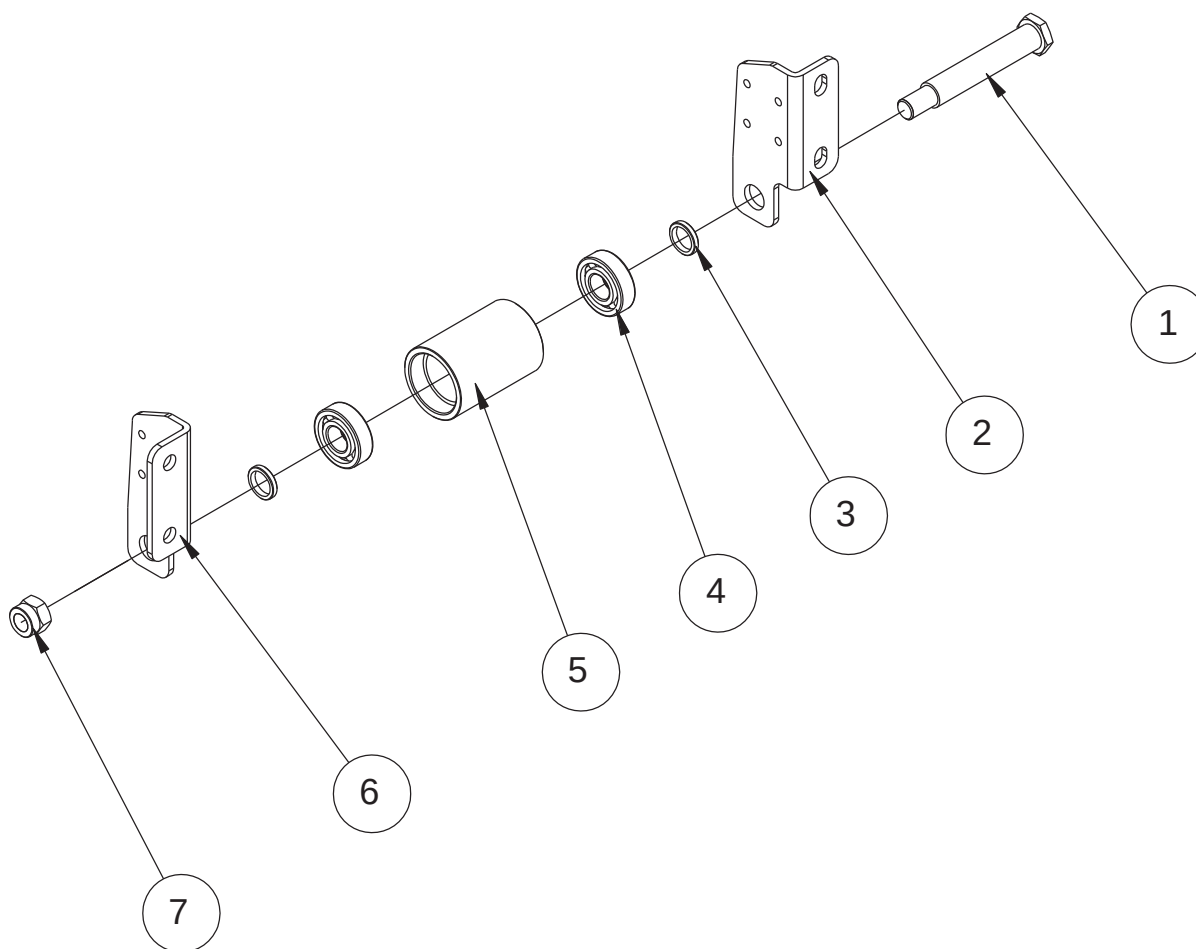


ILLUSTRATION No.
Art_5428

69 Series

Support Roller Assembly

Item	Part Number	Description	Qty.
1	43309	Pin	1
2	43310	Roller Bracket 2	1
3	43311	Shim	2
4	41131	Bearing	2
5	43312	Roller	1
6	43313	Roller Bracket	1
7	50051	NNYL M16	1

Side Roller Assembly

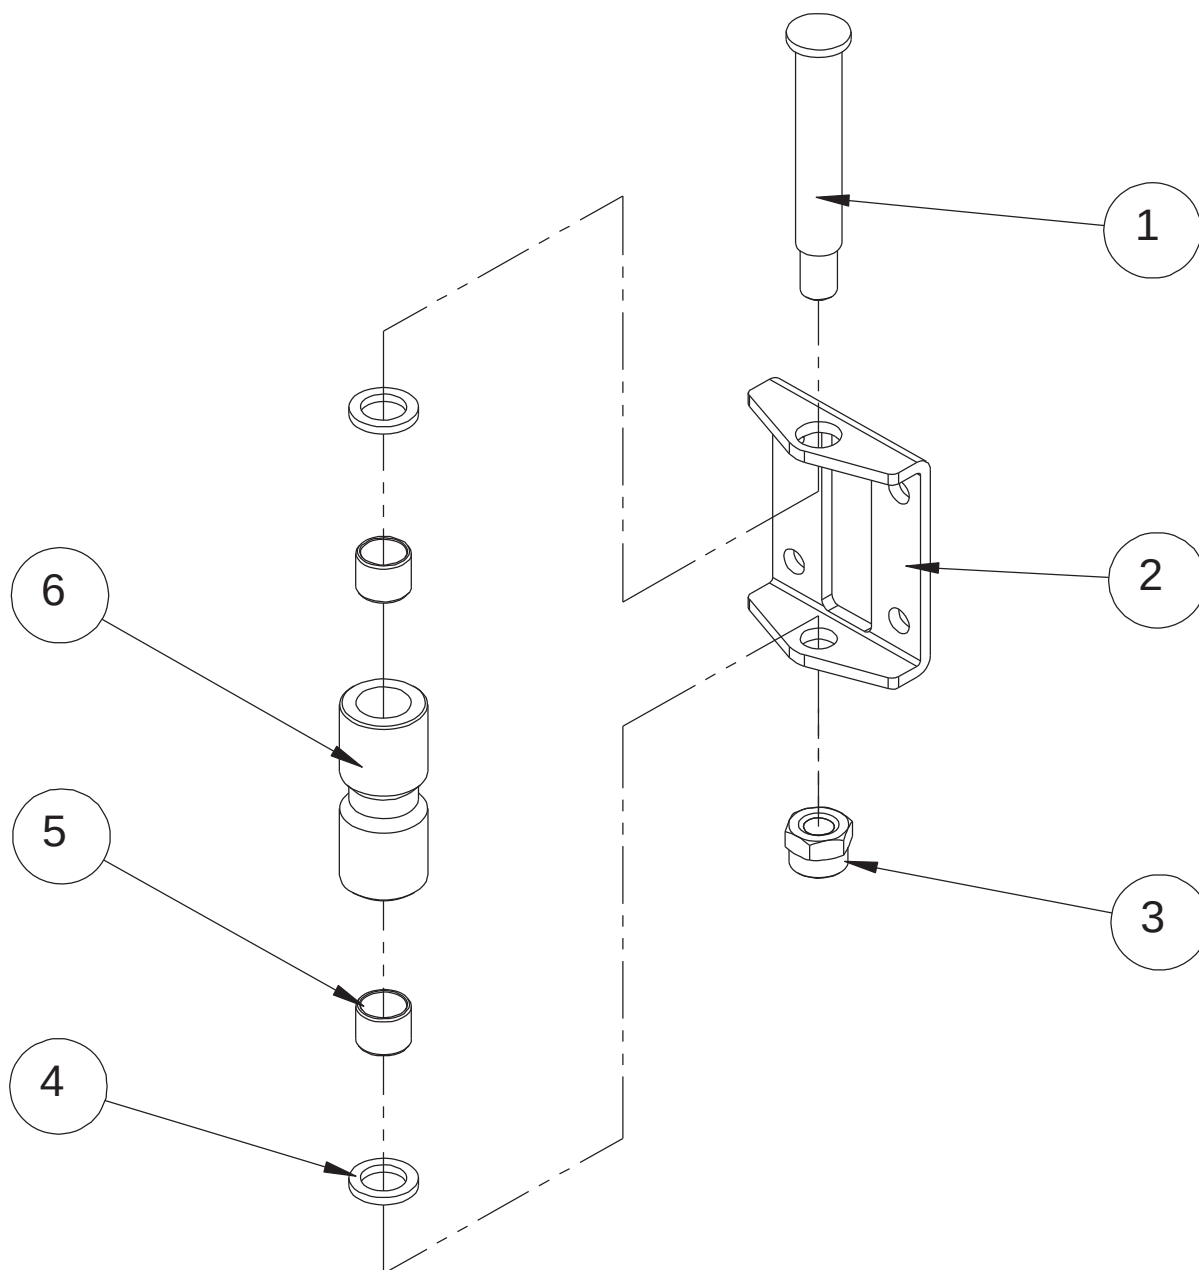


ILLUSTRATION No.
Art_5429

69 Series

Side Roller Assembly



Item	Part Number	Description	Qty.
1	43314	Pin	1
2	43315	Roller Bracket	1
3	50048	NNYL M8	1
4	50002	WSHR M10 Standard Flat	2
5	43316	Bearing	2
6	43317	Roller	1

Platform Extension Assembly

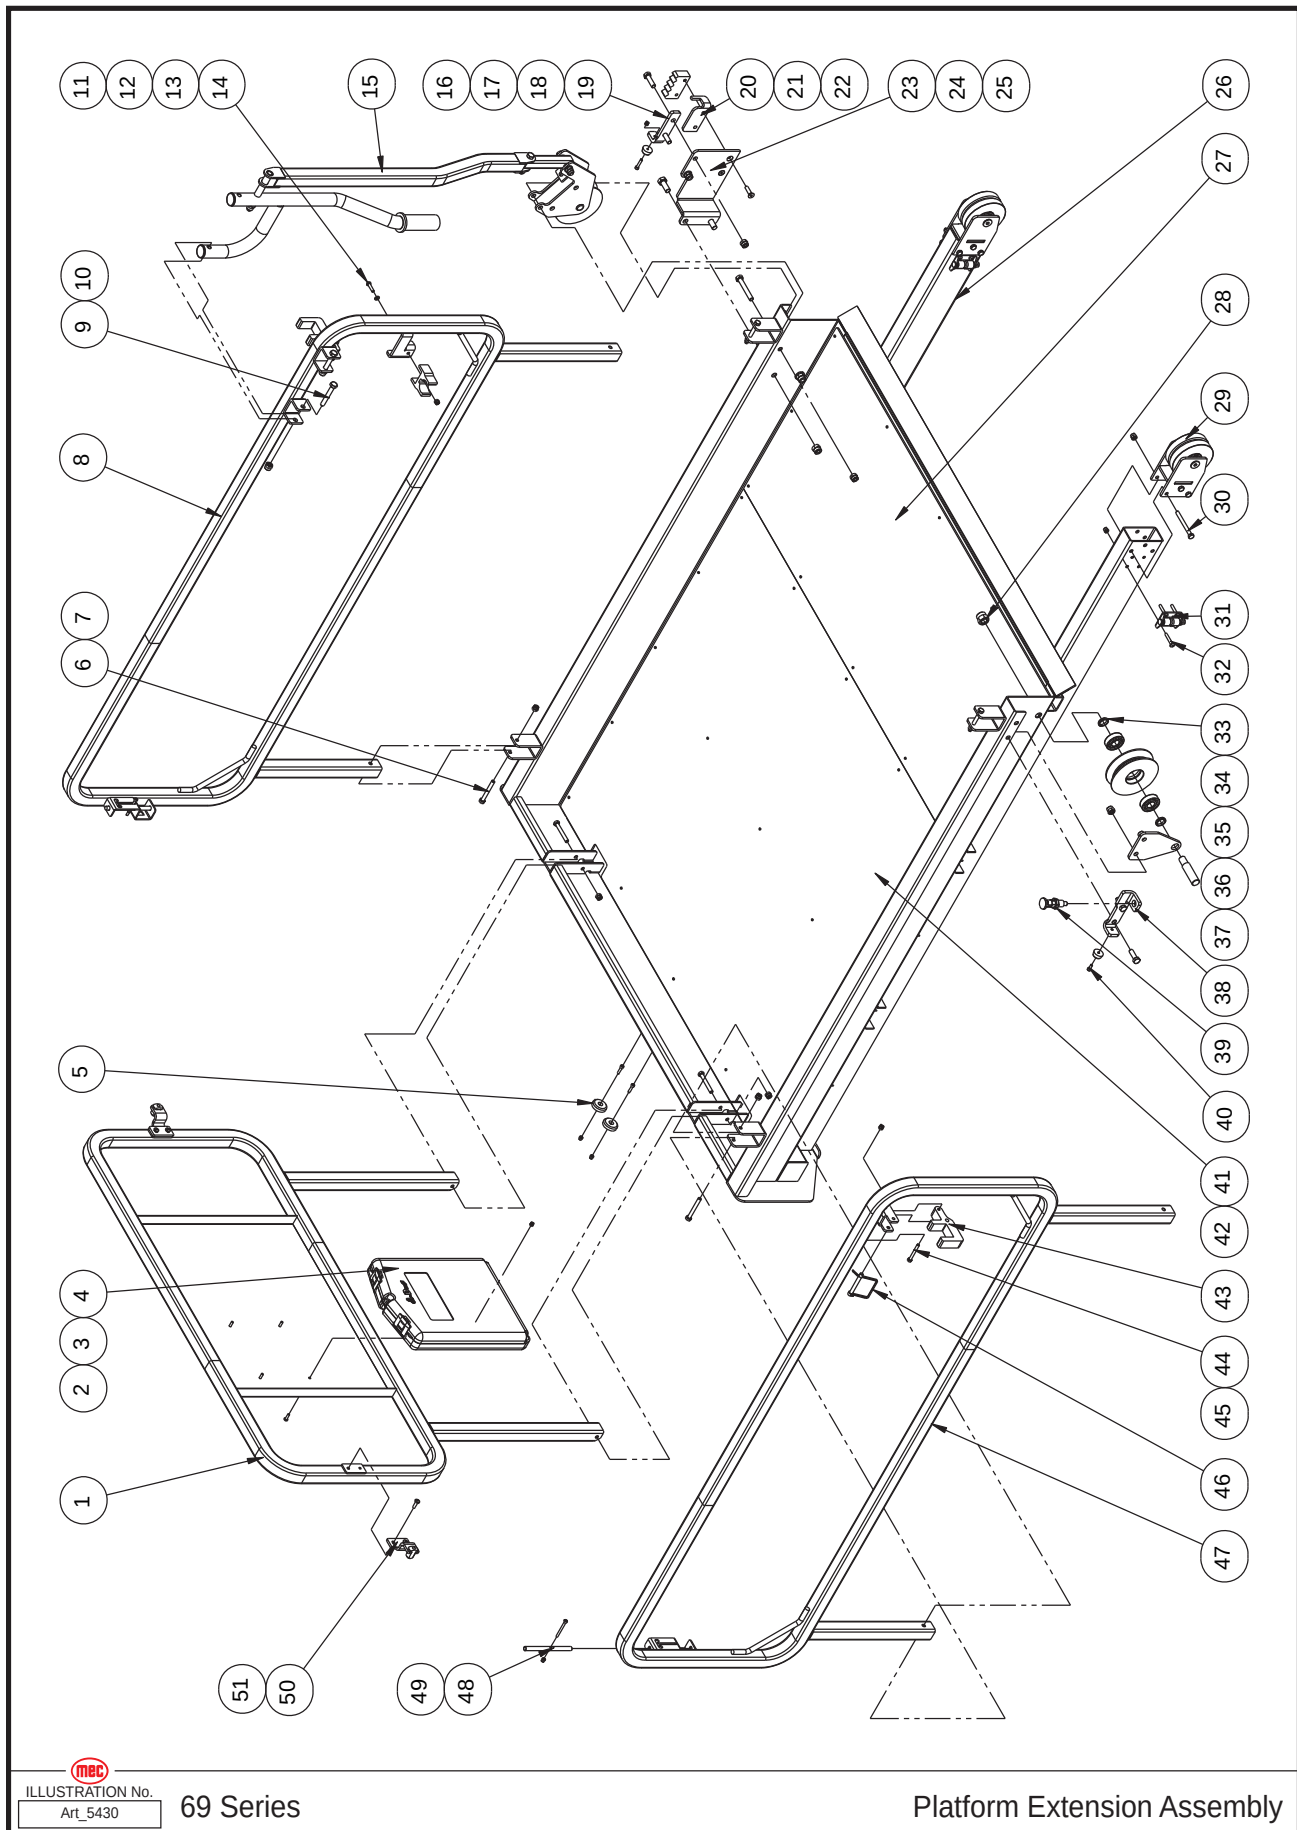


ILLUSTRATION No.
Art_5430

69 Series


Platform Extension Assembly

Item	Part Number	Description	Qty.
1	43318	Front Rail	1
2	53223	THMS M5 × 16	4
3	50524	NNYL M5	9
4	43319	Manual Box	1
5	43320	Bumper	2
6	53129	SHCS M8 × 60	6
7	50048	NNYL M8	12
8	43322	Right Extension Rail	1
9	50383	HHCS M10 × 70	4
10	50049	NNYL M10	10
11	50047	NNYL M6	9
12	43323	Catch Clip	1
13	50000	WSHR M6 Standard Flat	1
14	50117	HHCS M6 × 25	1
15	REF	Platform Locking Device Assembly (Refer To Page 101)	1
16	41120	Bumper	2
17	53179	HHCS M5 × 20	3
18	50332	HHCS M10 × 35	4
19	43325	Locating Plate 1	1
20	43326	Lock Tooth Seat	1
21	43327	Lock Tooth	1
22	50031	HHCS M8 × 25	2
23	43328	Lock Seat	1
24	50039	HHCS M12 × 30	2
25	50050	NNYL M12	2
26	43329	Extension Deck Weldment	1
27	43330	Platform Extension Deck Plate 1	1
28	50051	NNYL M16	1
29	REF	Roller Assembly (Refer To Page 102)	2
30	50018	HHCS M8 × 80	6
31	REF	Side Roller Assembly (Refer To Page 96)	4
32	50226	BHCS M6 × 65	8
33	43332	Washer	2
34	41131	Bearing	4
35	43333	Roller	2
36	43334	Roller Bracket	1
37	43335	Pin	1
38	43336	Locating Plate 2	1
39	43337	Lock Pin	1
40	53224	THMS M5 × 12	1
41	43338	Platform Extension Deck Plate 2	1
42	43301	Rivet	47
43	43339	Rail Spacer	2
44	50294	HHCS M6 × 45	2
45	50047	NNYL M6	10

46	43340	Inserted Pin	2
47	43341	Left Extension Rail	1
48	43299	Inserted Pin Rod	2
49	53067	SHCS M5 × 40	2
50	43298	Lock Pin	2
51	53227	HHCS M6 × 14	4


REF - Reference

Platform Locking Device Assembly

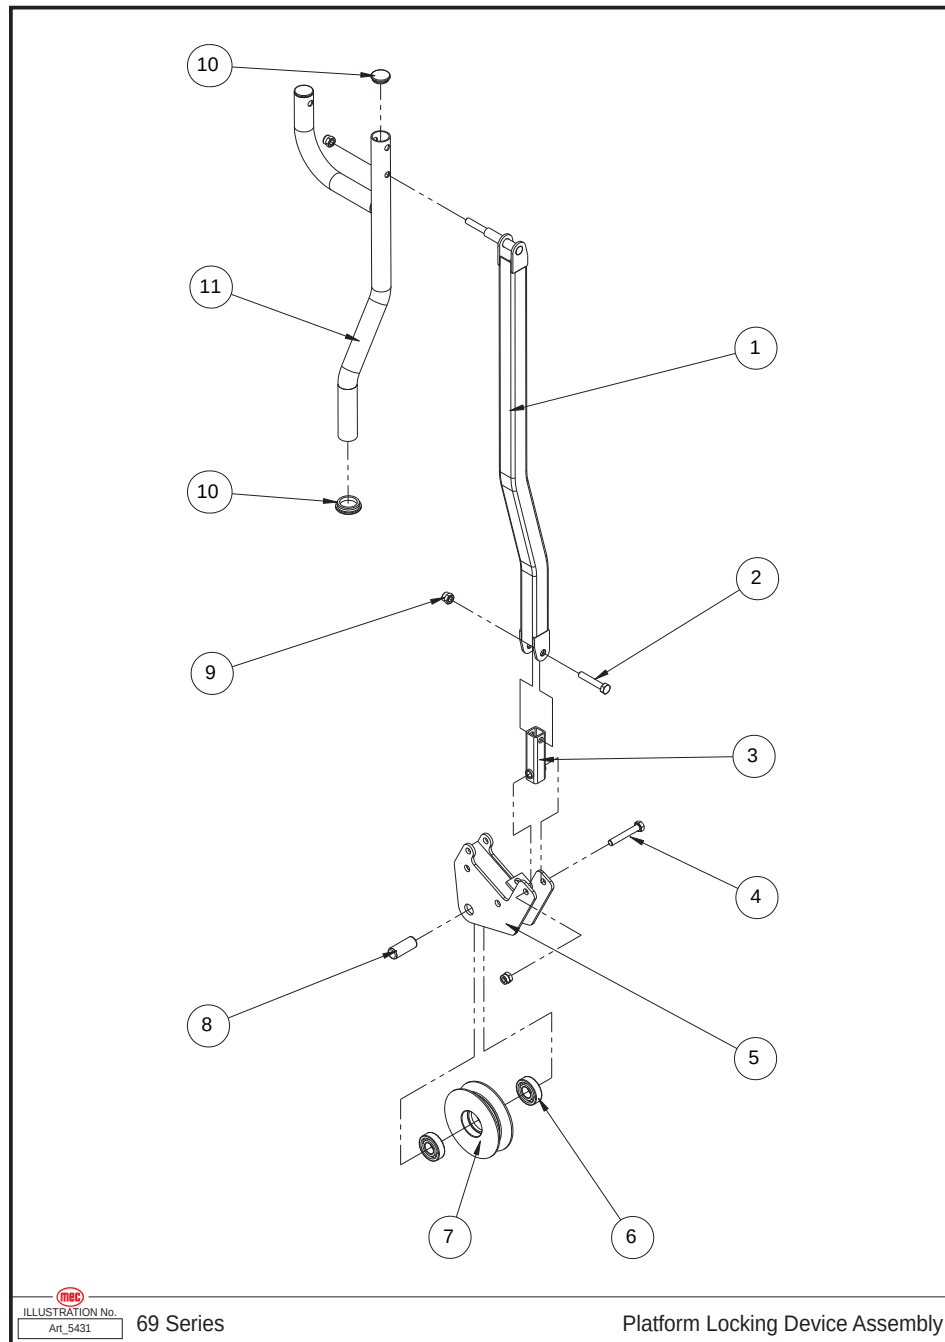


Item	Part Number	Description	Qty.
1	43342	Tie Rod Weldment	1
2	50021	HHCS M10 × 55	1
3	43343	Connection Rod	1
4	50383	HHCS M10 × 70	4
5	43344	Roller Bracket	1
6	41131	Bearing	2
7	43333	Roller	1
8	43345	Pin	1
9	50049	NNYL M10	2
10	43348	Cover	3
11	43347	Handle	1

Roller Assembly

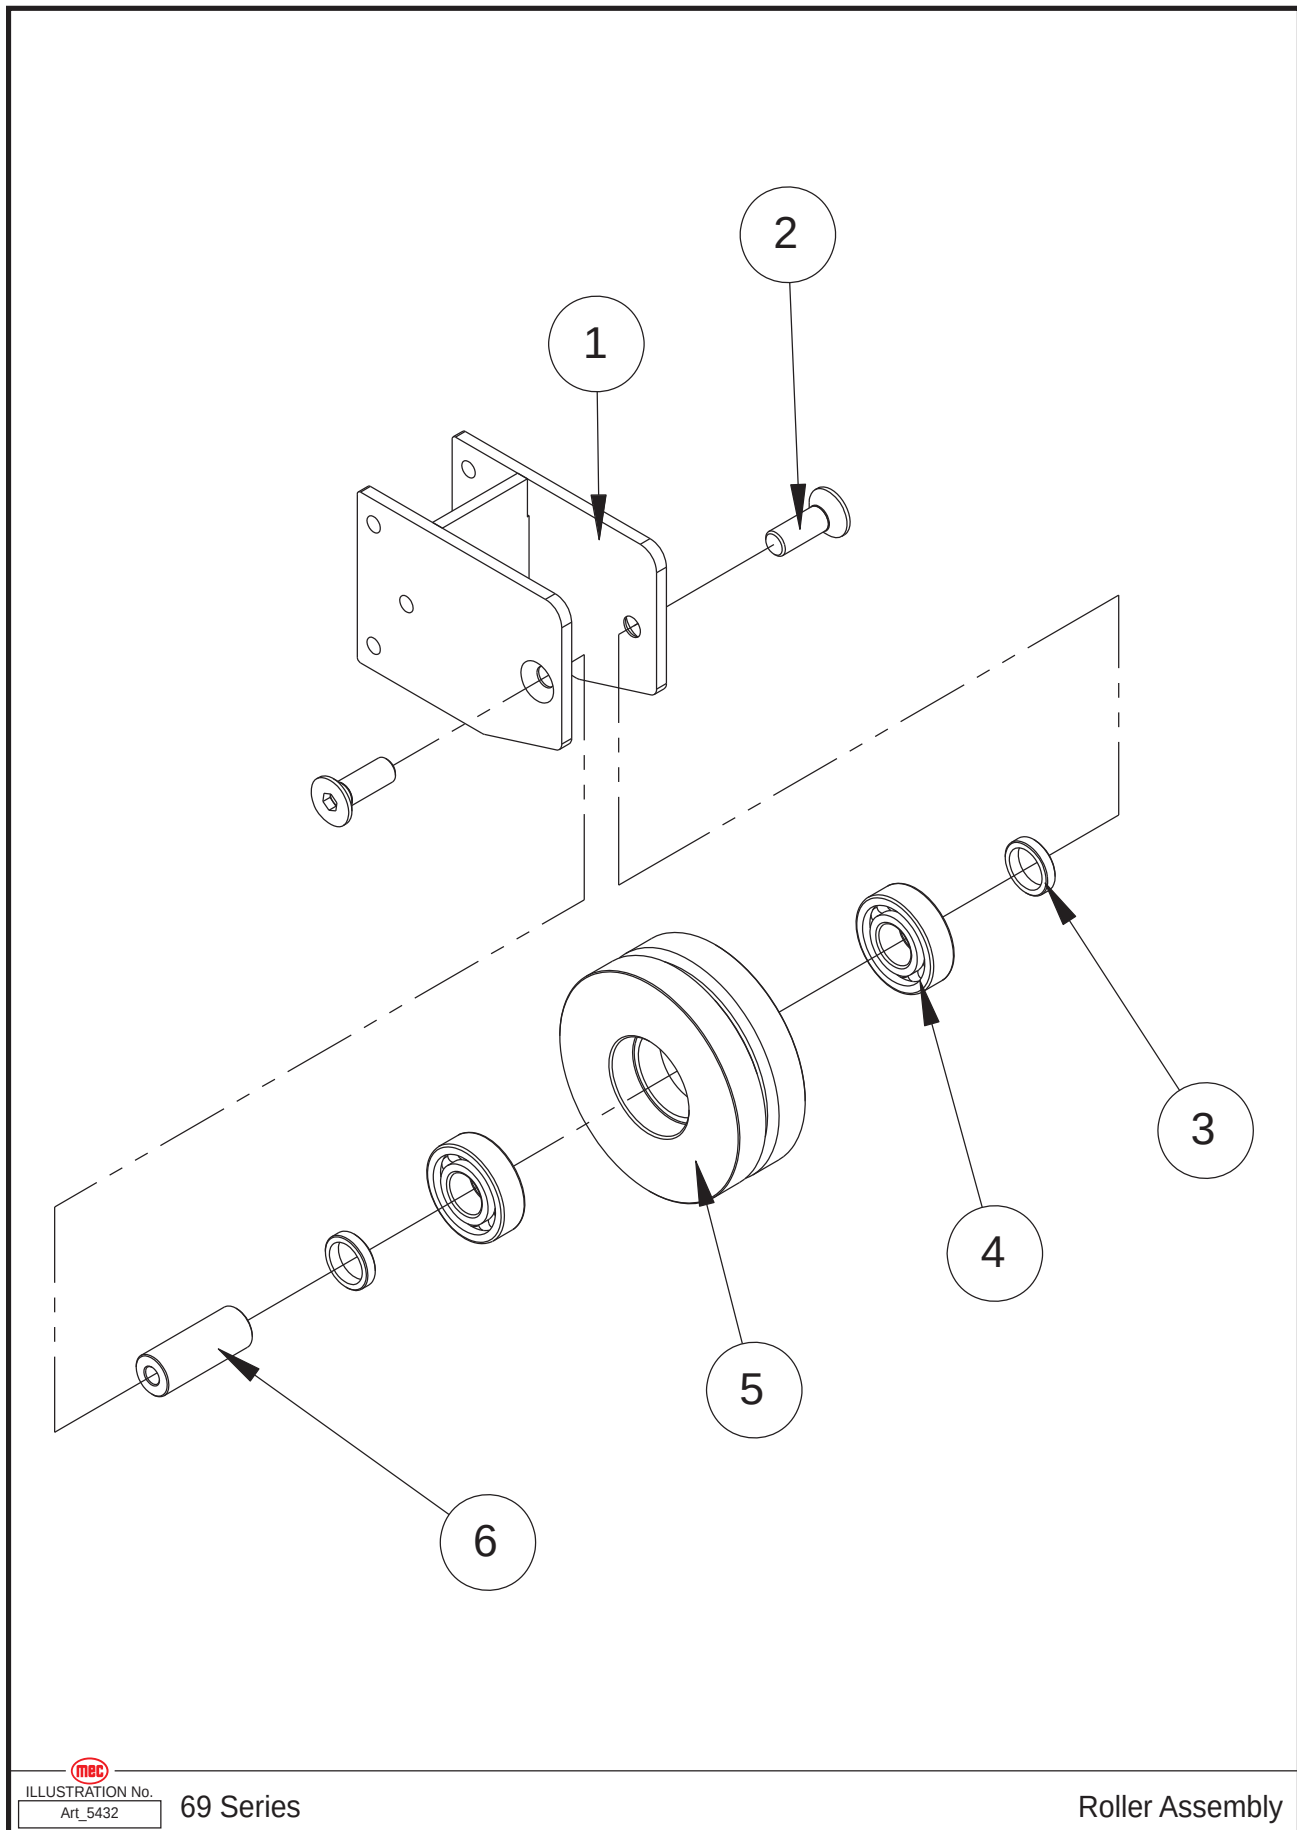

Item	Part Number	Description	Qty.
1	43349	Roller Bracket	1
2	50297	BHCS M10 × 25	2
3	43350	Washer	2
4	41131	Bearing	2
5	43351	Roller	1
6	43352	Pin	1

Platform Control and Sheet Material Tray

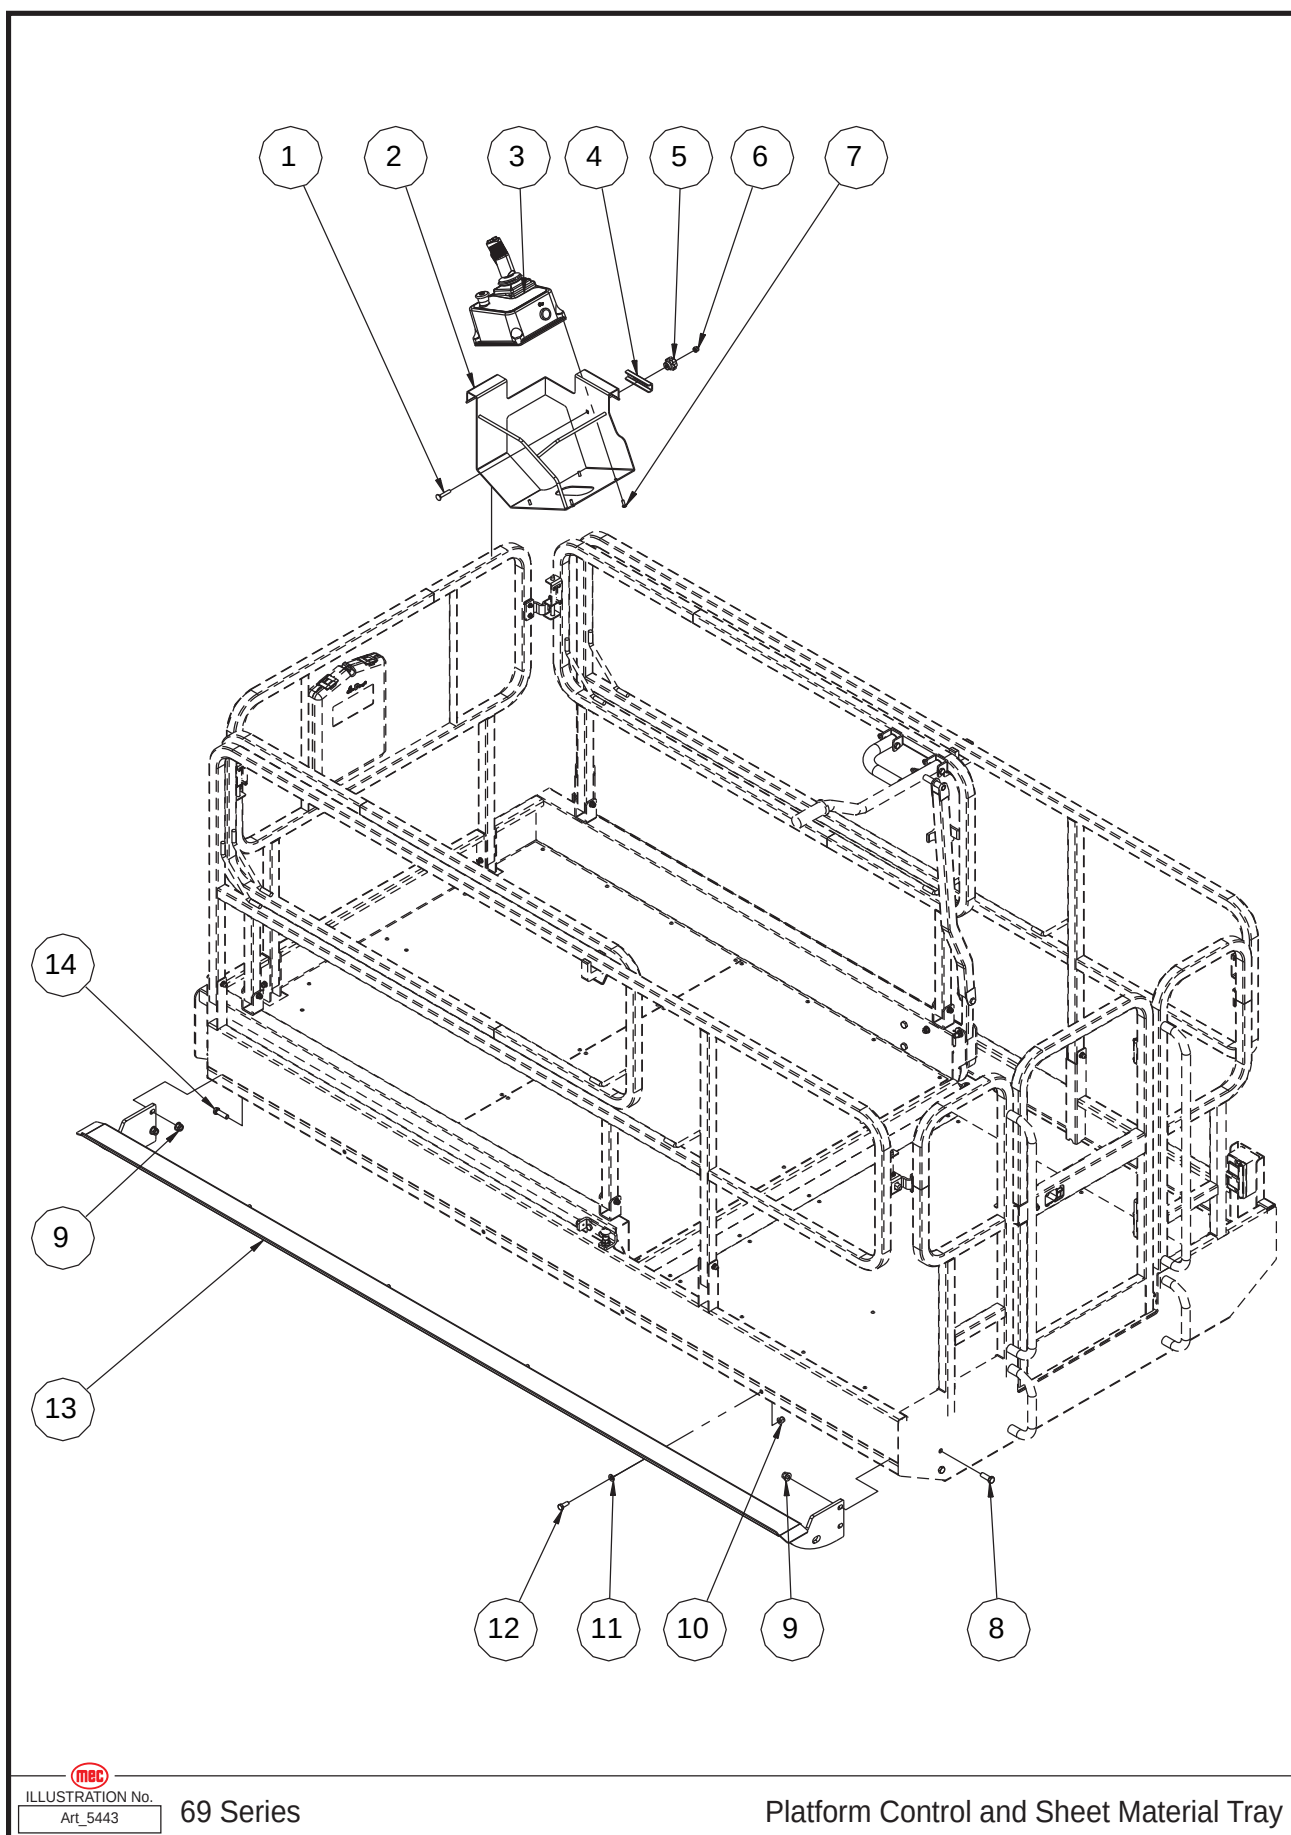

Item	Part Number	Description	Qty.
1	53248	CARB M8 × 45	1
2	43321	Platform Control Box Mount Bracket	1
3	43548	Platform Control Box Assembly (Refer To Page 106)	1
4	42500	Locating Plate	1
5	43453	Handle	1
6	50048	NNYL M8	1
7	53231	PHMS M6 × 16	4
8	50040	HHCS M12 × 35	2
9	50050	NNYL M12	4
10	50049	NNYL M10	4
11	50002	WSHR M10 Standard Flat	4
12	50033	HHCS M10 × 25	4
13	42880	Sheet Material Tray	1
14	53247	HHCS M12 x 40	2

Platform Control Box Assembly

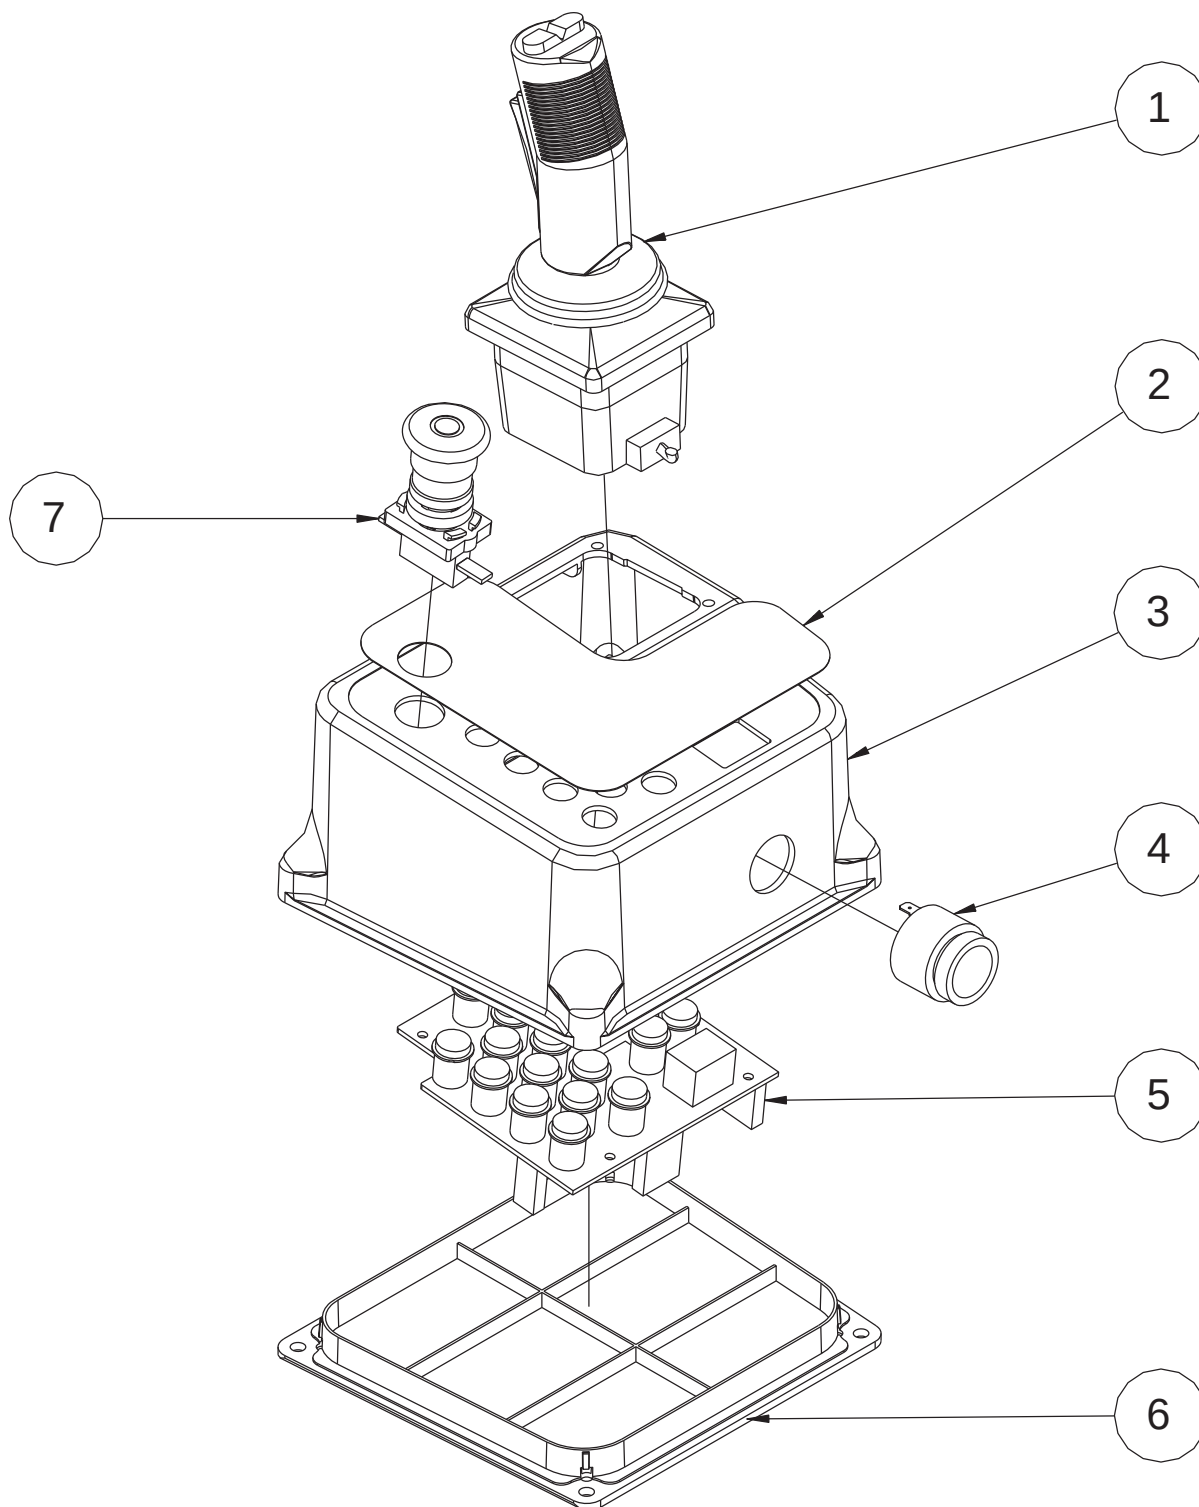


ILLUSTRATION No.
Art_5433

69 Series

Platform Control Box Assembly



Item	Part Number	Description	Qty.
1	43353	Joystick	1
2	43525	Decal, Platform Control Panel	1
3	43355	Enclosure	1
4	41568	Alarm	1
5	43357	Main Board	1
6	43358	Cover Bottom	1
7	41157	Emergency Stop Switch	1

Lower Lift Cylinder Assembly

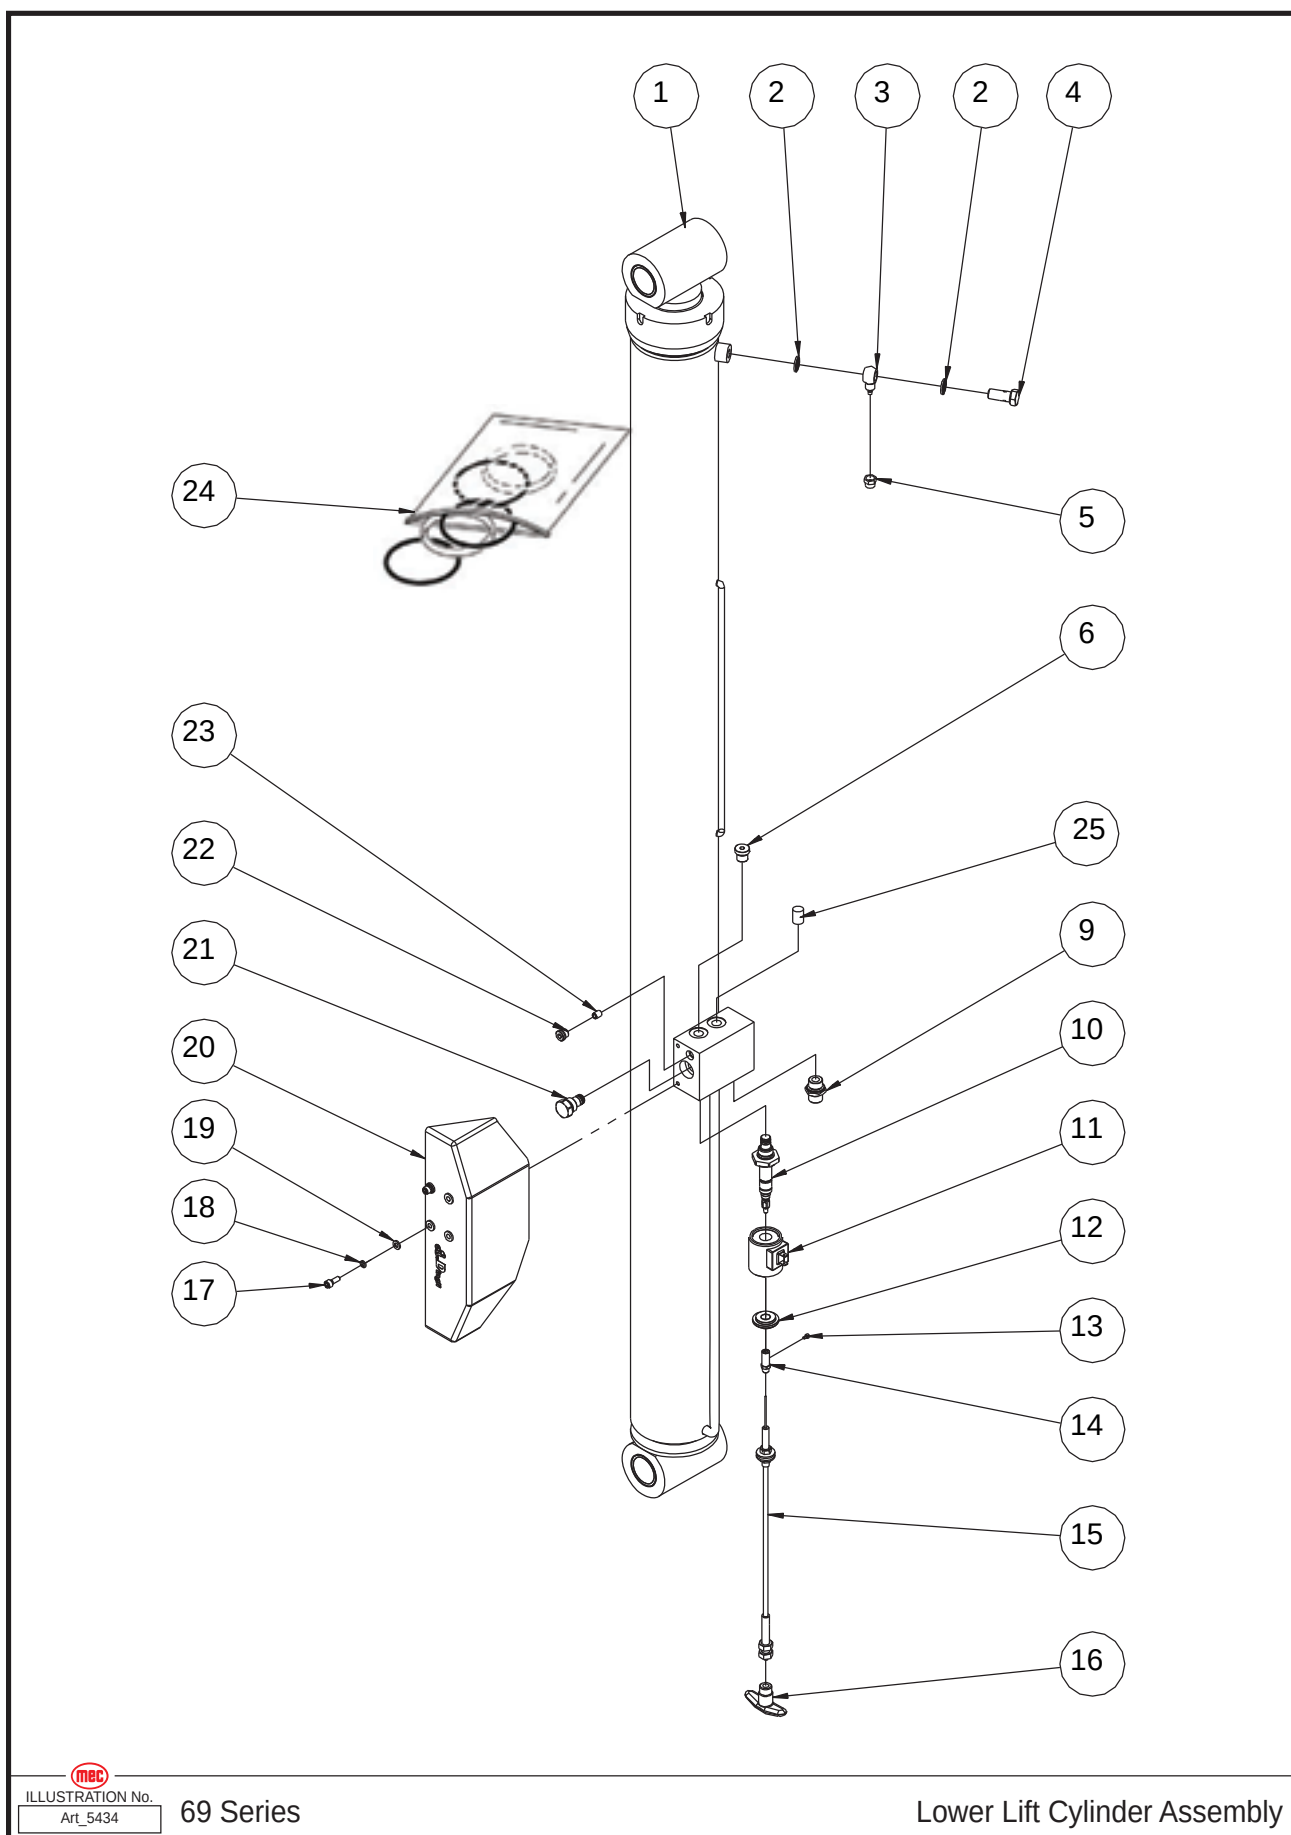


ILLUSTRATION No.
Art_5434

69 Series

Lower Lift Cylinder Assembly

Item	Part Number	Description	Qty.
1	43360	Lower Lift Cylinder	1
2	43361	Washer	2
3	41167	Fitting	1
4	41166	Fitting	1
5	41413	Nut	1
6	42480	Plug	2
7	--	--	--
8	--	--	--
9	43083	Straight Fitting	1
10	41363	Solenoid Valve Spool	1
11	43466	Coil - ERT Models Only	1
12	43364	Nut	1
13	50576	SHCS M4 × 12	1
14	43365	Cable Connector	1
15	43366	Emergency Down Cable Assembly	1
16	41162	Lowering Knob	1
17	53138	SHCS M6 × 16	2
18	53046	WSHR M6 Spring Washer	2
19	50000	WSHR M6 Standard Flat	2
20	41164	Valve Cover	1
21	43369	Check Valve	1
22	42821	Plug	1
23	43370	Orifice	1
24	43371	Seal Kit	1

Upper Lift Cylinder Assembly

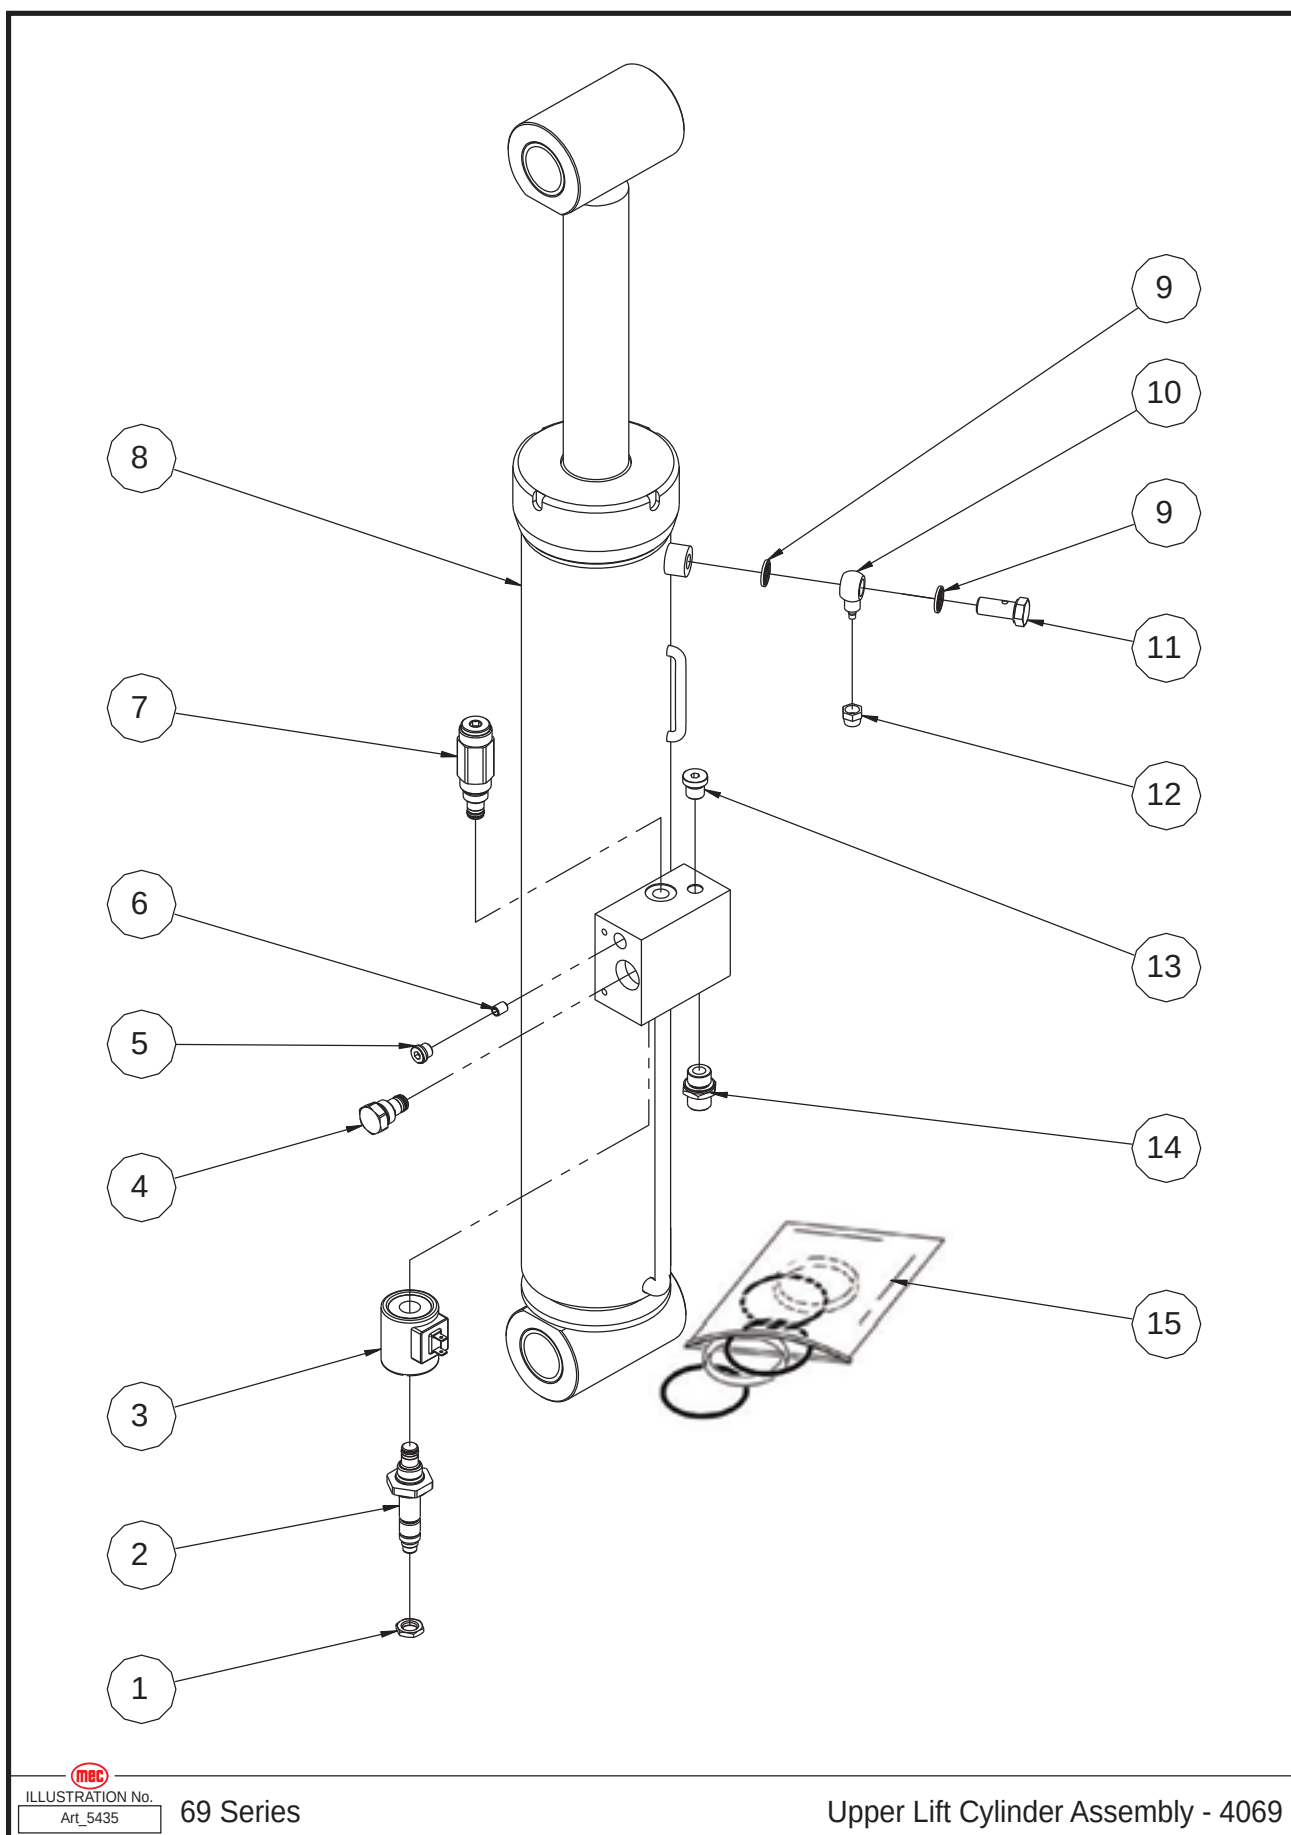



ILLUSTRATION No.
Art_5435

69 Series

Upper Lift Cylinder Assembly - 4069


Item	Part Number	Description	Qty.
1	42795	Nut	1
2	43372	Solenoid Valve Spool	1
3	43467	Coil - ERT Models Only	1
4	43369	Check Valve	1
5	42821	Plug	1
6	43374	Orifice	1
7	41169	Relief Valve	1
8	43376	Upper Lift Cylinder	1
9	43361	Washer	2
10	41167	Fitting	1
11	41166	Fitting	1
12	41413	Nut	1
13	42480	Plug	1
14	43083	Straight Fitting	1
15	43377	Seal Kit	1

Right Oscillate Cylinder Assembly

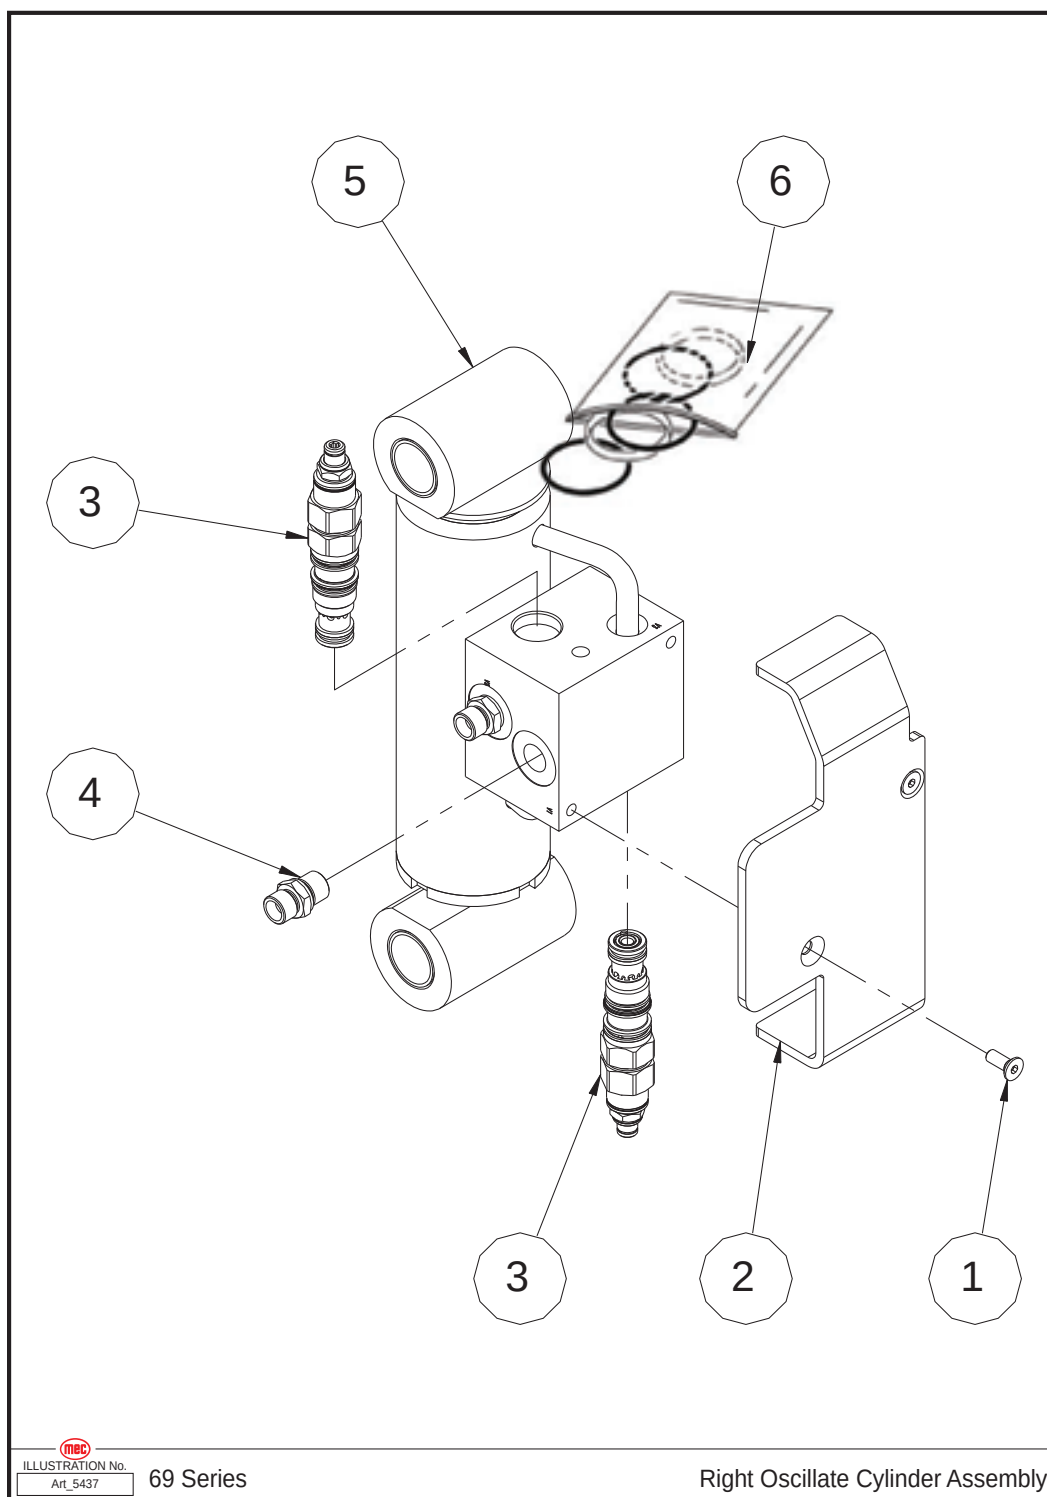


Item	Part Number	Description	Qty.
1	53226	CSCS M6 × 16	2
2	43382	Protect Cover	1
3	43378	Counterbalance Valve Spool	2
4	43076	Straight Fitting	2
5	43383	Right Oscillate Cylinder	1
6	43381	Seal Kit	1

Left Oscillate Cylinder Assembly

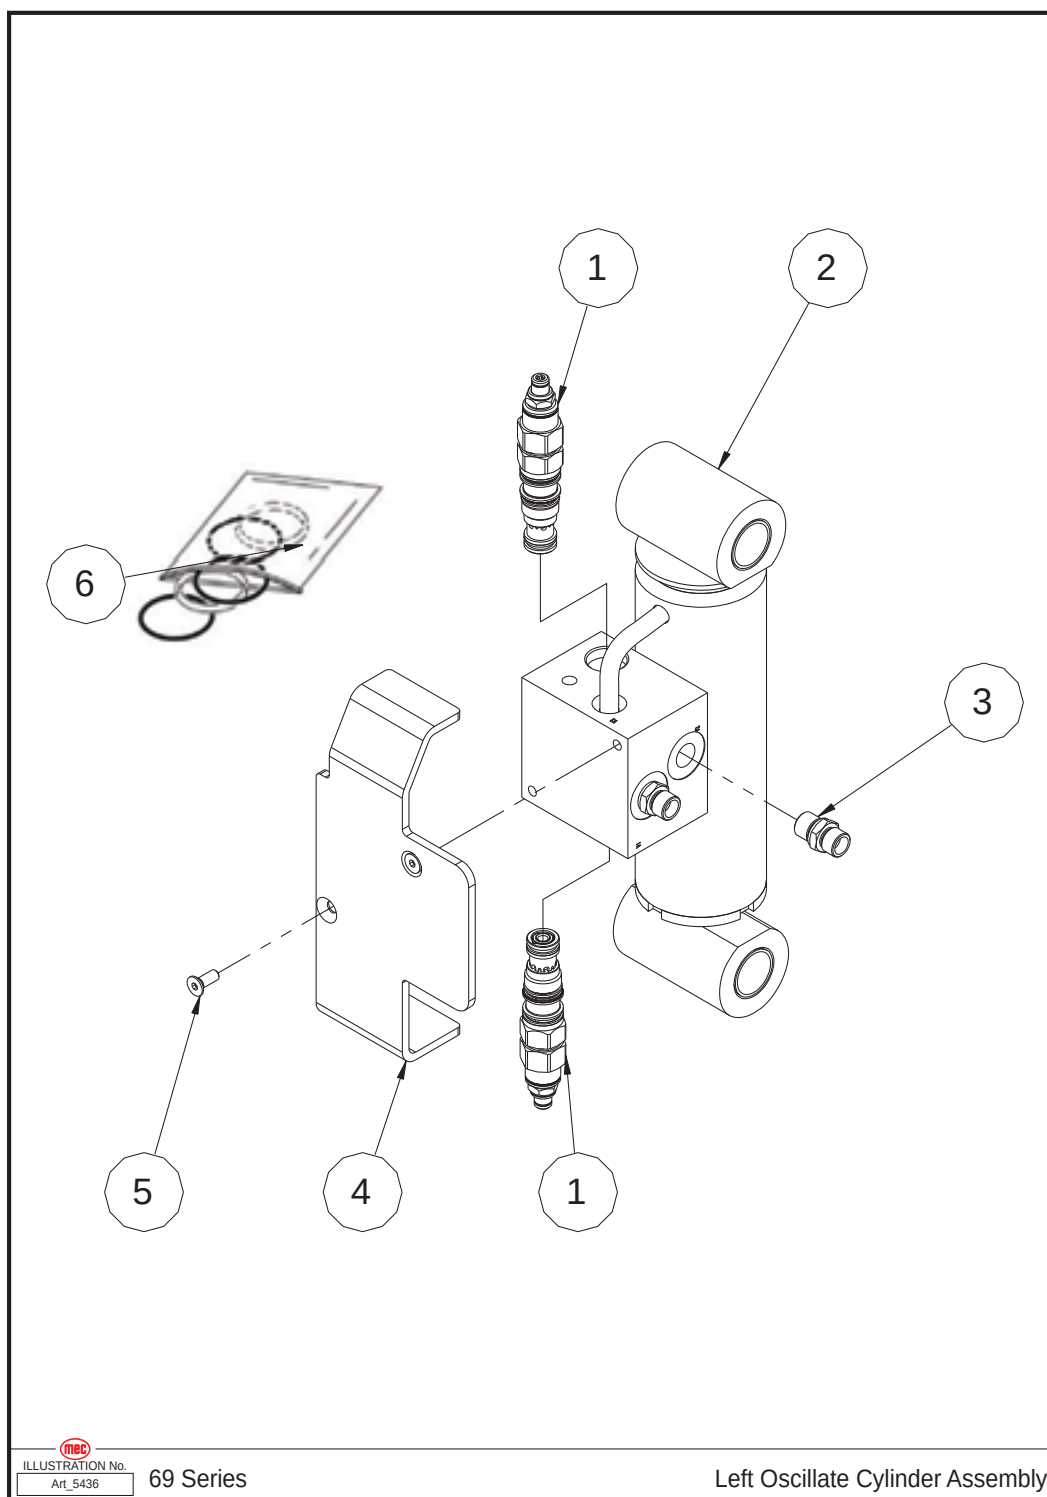

Item	Part Number	Description	Qty.
1	43378	Counterbalance Valve Spool	2
2	43379	Left Oscillate Cylinder	1
3	43076	Straight Fitting	2
4	43380	Protect Cover	1
5	53226	CSCS M6 × 16	2
6	43381	Seal Kit	1

Steer Cylinder Assembly

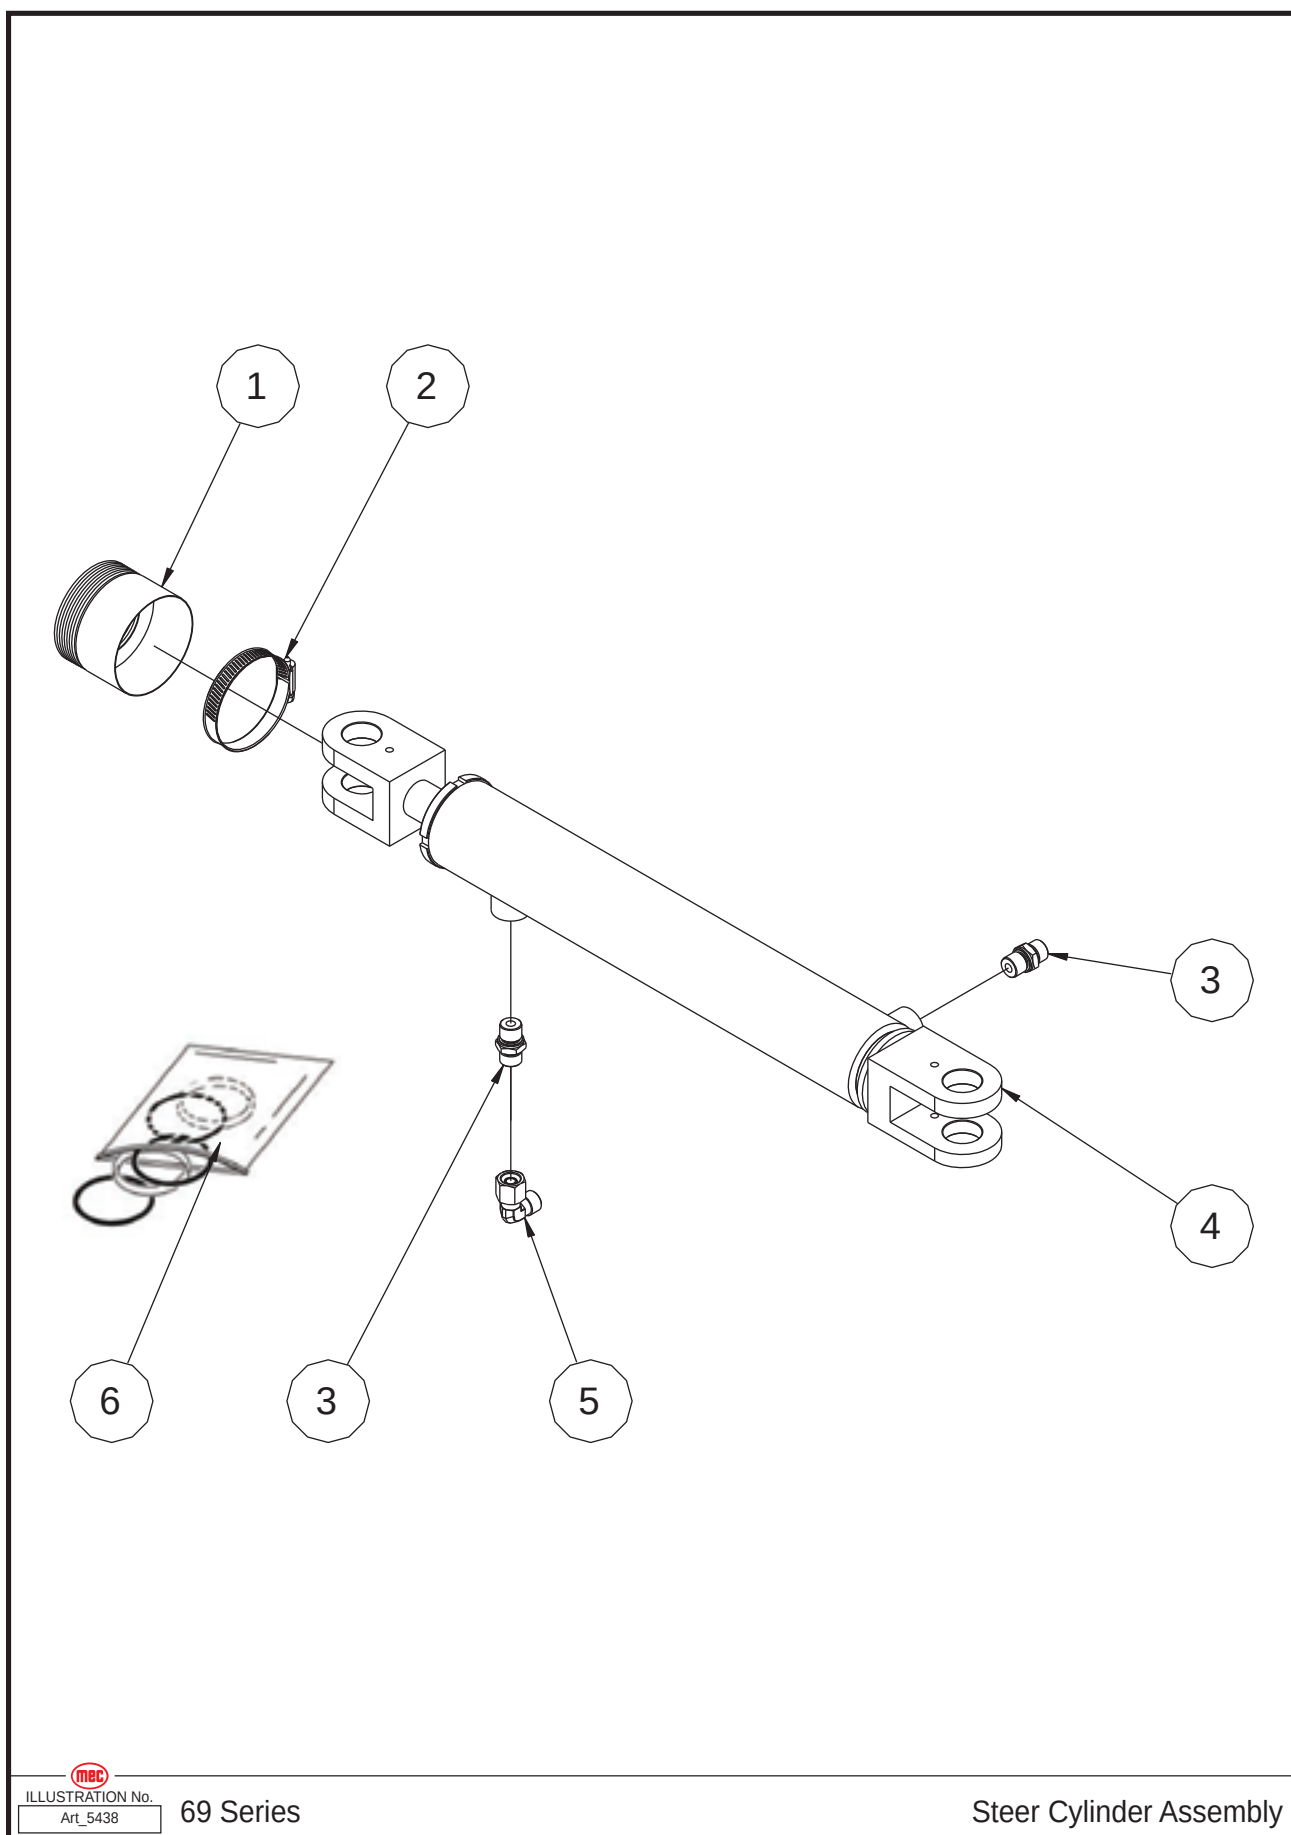

Item	Part Number	Description	Qty.
1	43384	Dustproof Sleeve	1
2	43385	Clamp	1
3	43076	Straight Fitting	2
4	43386	Steer Cylinder	1
5	43077	Elbow	1
6	43387	Seal Kit	1

Outrigger Cylinder Assembly (Option)

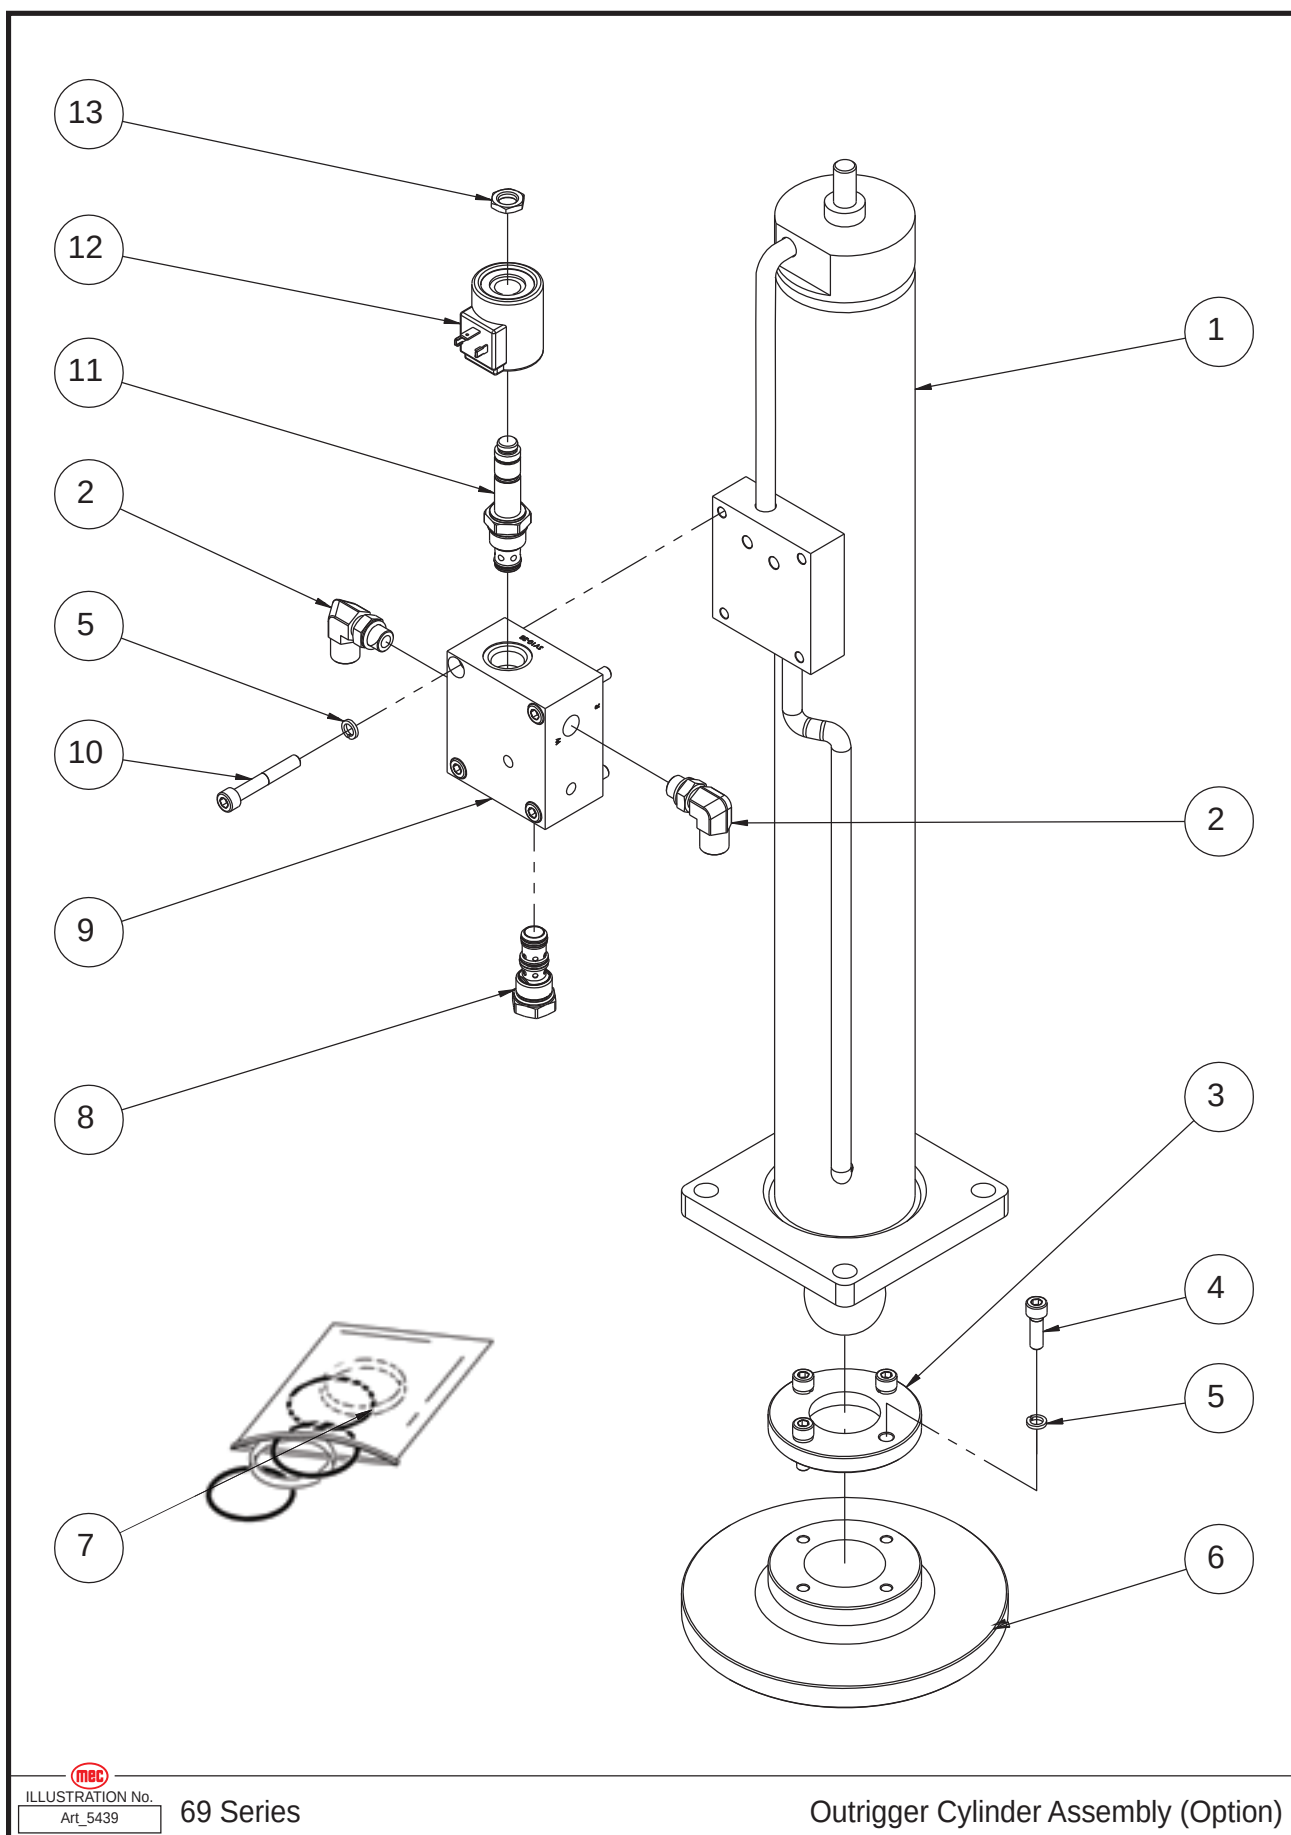


ILLUSTRATION No.
Art_5439

69 Series

Outrigger Cylinder Assembly (Option)

Item	Part Number	Description	Qty.
1	43388	Outrigger Cylinder	1
2	43389	Elbow	2
3	43390	Retainer	1
4	53210	SHCS M8 × 25	4
5	53055	WSHR M8 Spring Washer	8
6	43391	Outrigger Footpad	1
7	43392	Seal Kit	1
8	43393	Pilot-Operated Check Valve	1
9	43394	Valve Body	1
10	53211	SHCS M8 × 55	4
11	43395	Solenoid Valve Spool	1
12	43468	Coil - ERT Model	1
13	42795	Nut	1

Hydraulic Hoses and Fittings-Function (3369ERT)

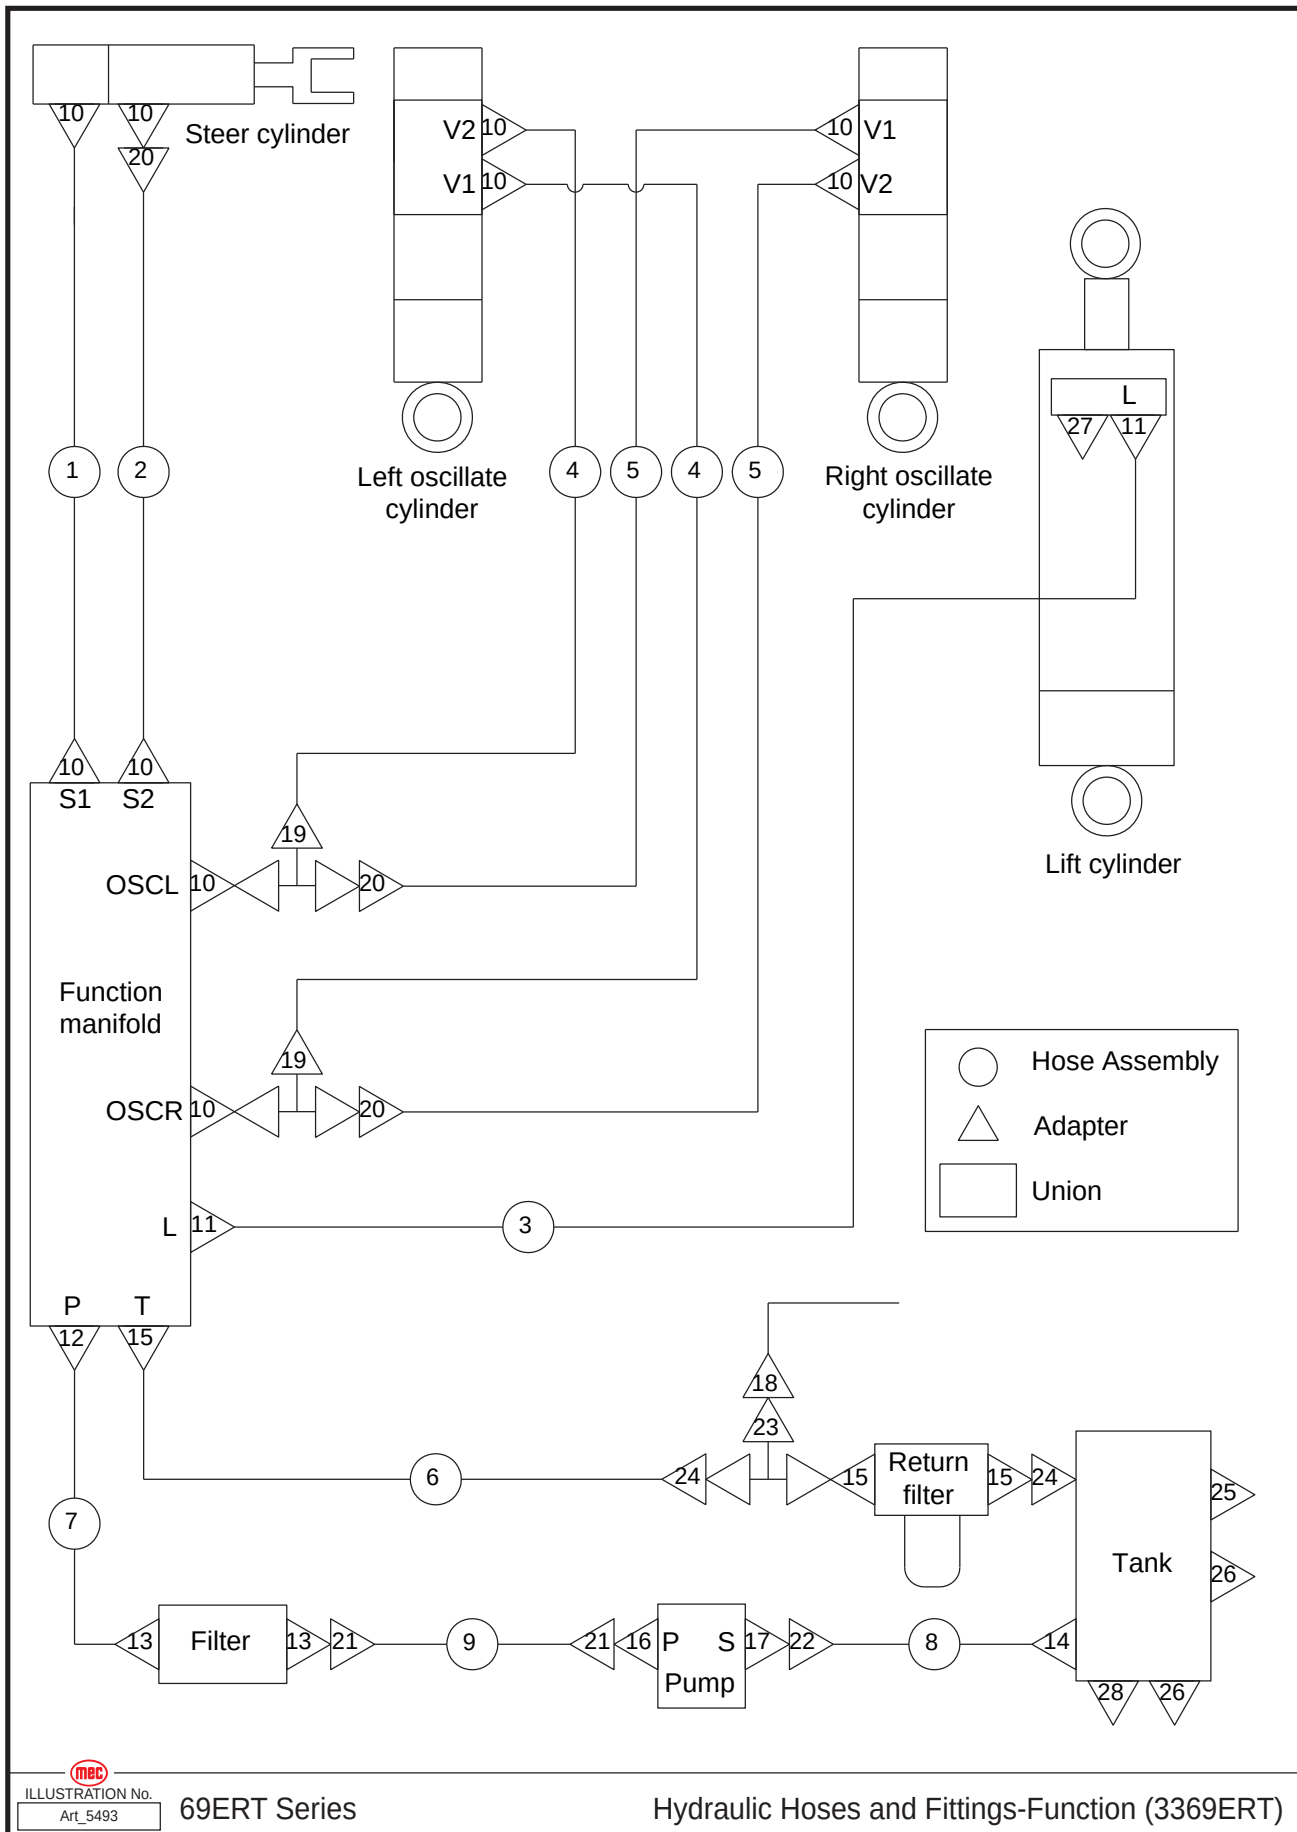



ILLUSTRATION No.
Art_5493

69ERT Series

Hydraulic Hoses and Fittings-Function (3369ERT)

Item	Part Number	Description	Qty.
1	43659	Hose Assembly	1
2	43695	Hose Assembly	1
3	43661	Hose Assembly	1
4	43662	Hose Assembly	2
5	43663	Hose Assembly	2
6	43696	Hose Assembly	1
7	43697	Hose Assembly	1
8	43698	Hose Assembly	1
9	43699	Hose Assembly	1
10	43076	Straight Fitting	10
11	43083	Straight Fitting	2
12	43267	Straight Fitting	1
13	43460	Straight Fitting	2
14	43331	Straight Fitting	1
15	43085	Straight Fitting	3
16	43451	Straight Fitting	1
17	43455	Straight Fitting	1
18	43268	Straight Fitting (Model With Outriggers)	1
19	43078	Tee Fitting	2
20	43077	Elbow	3
21	43459	Elbow	2
22	43456	Elbow	1
23	43115	Tee Fitting (Model With Outriggers)	1
24	43112	Elbow	2
25	43120	Plug	1
26	43119	Plug	2
27	42480	Plug	1
28	43124	Plug	1

Hydraulic Hoses and Fittings-Function (4069ERT)

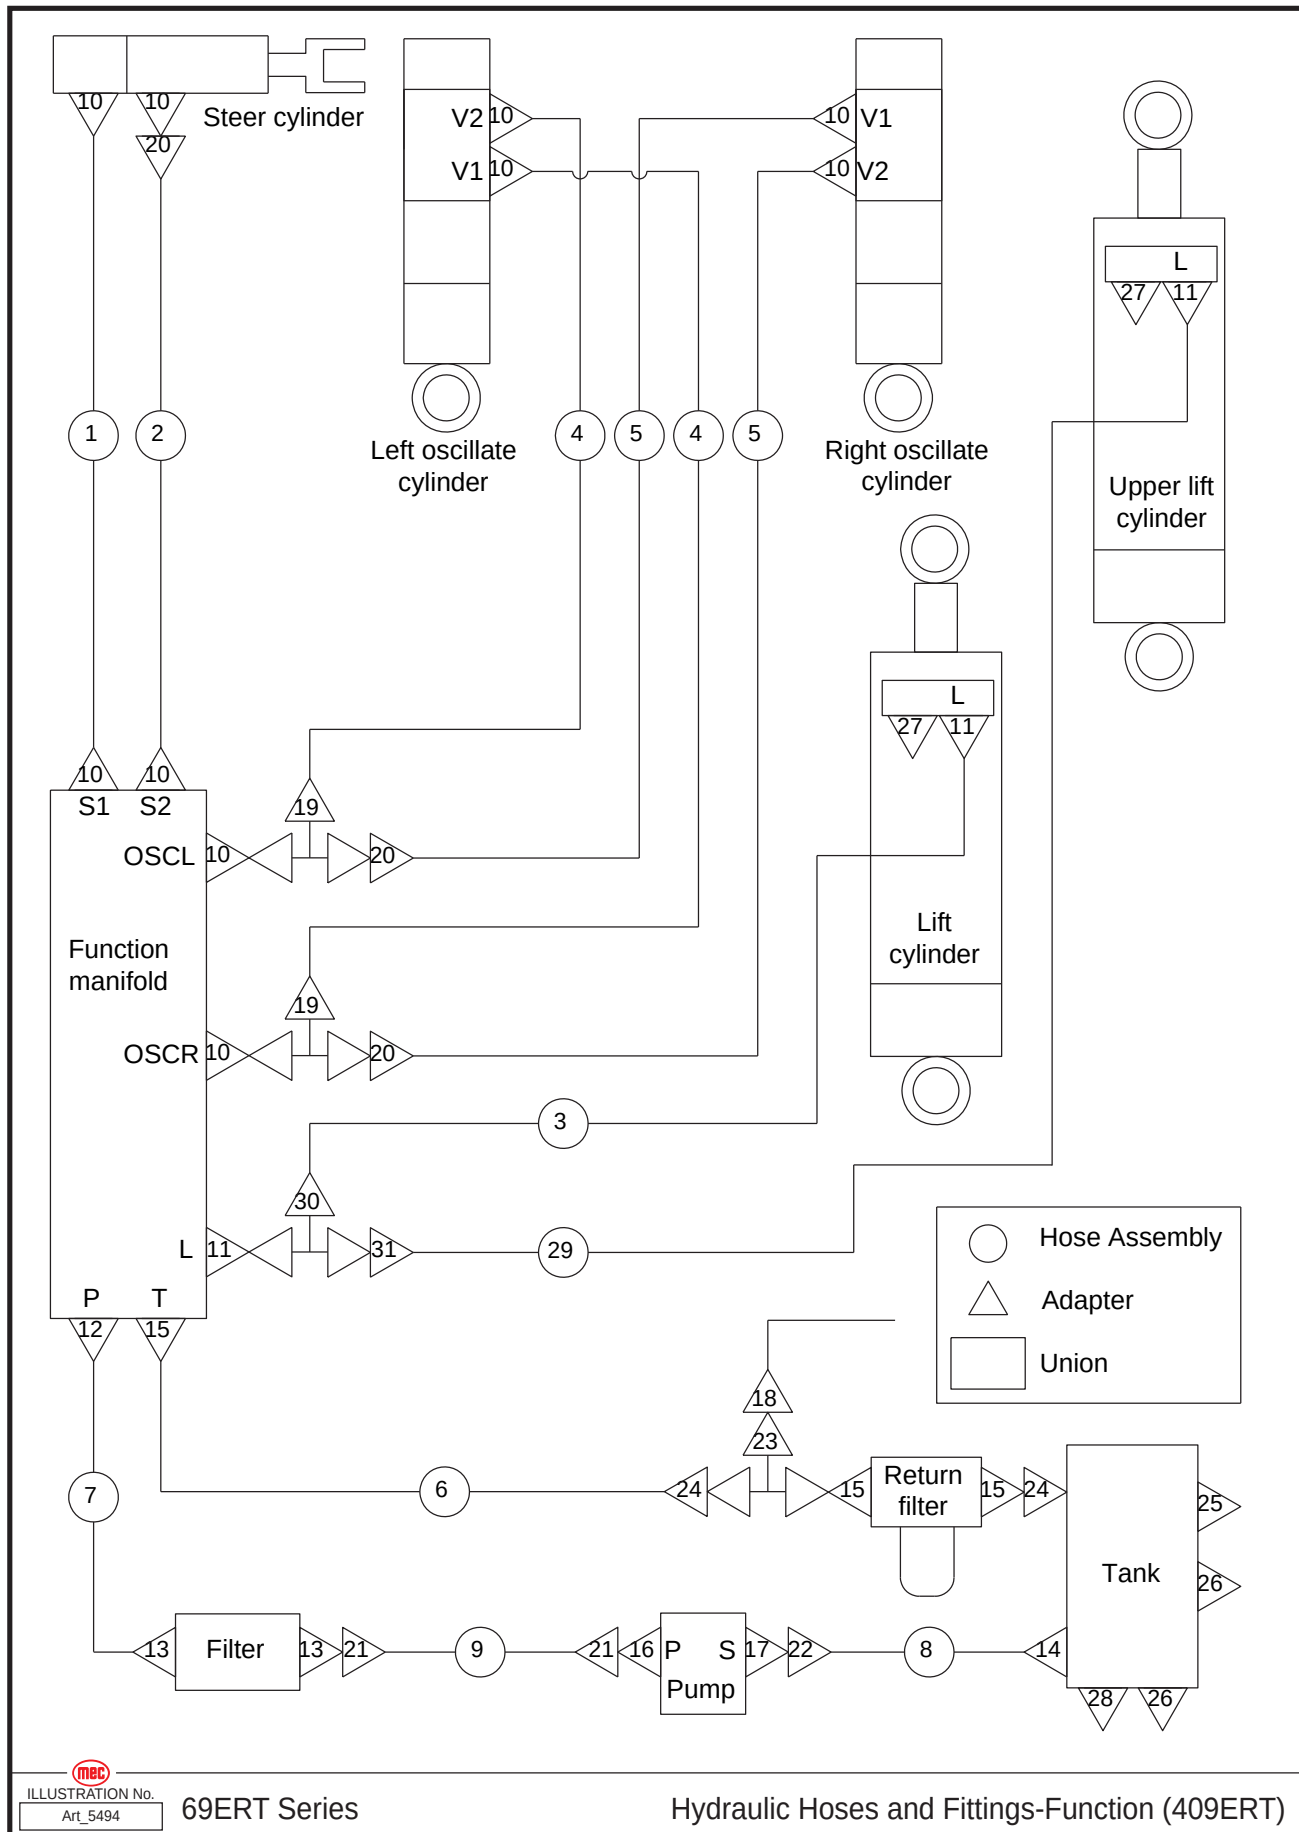

Item	Part Number	Description	Qty.
1	43659	Hose Assembly	1
2	43695	Hose Assembly	1
3	43661	Hose Assembly	1
4	43662	Hose Assembly	2
5	43663	Hose Assembly	2
6	43696	Hose Assembly	1
7	43697	Hose Assembly	1
8	43698	Hose Assembly	1
9	43699	Hose Assembly	1
10	43076	Straight Fitting	10
11	43083	Straight Fitting	3
12	43267	Straight Fitting	1
13	43460	Straight Fitting	2
14	43331	Straight Fitting	1
15	43085	Straight Fitting	3
16	43451	Straight Fitting	1
17	43455	Straight Fitting	1
18	43268	Straight Fitting (Model With Outriggers)	1
19	43078	Tee Fitting	2
20	43077	Elbow	3
21	43459	Elbow	2
22	43456	Elbow	1
23	43115	Tee Fitting (Model With Outriggers)	1
24	43112	Elbow	2
25	43120	Plug	1
26	43119	Plug	2
27	42480	Plug	2
28	43124	Plug	1
29	43670	Hose Assembly	1
30	43081	Tee Fitting	1
31	43082	Elbow	1

Hydraulic Hoses and Fittings-Outrigger (Option)

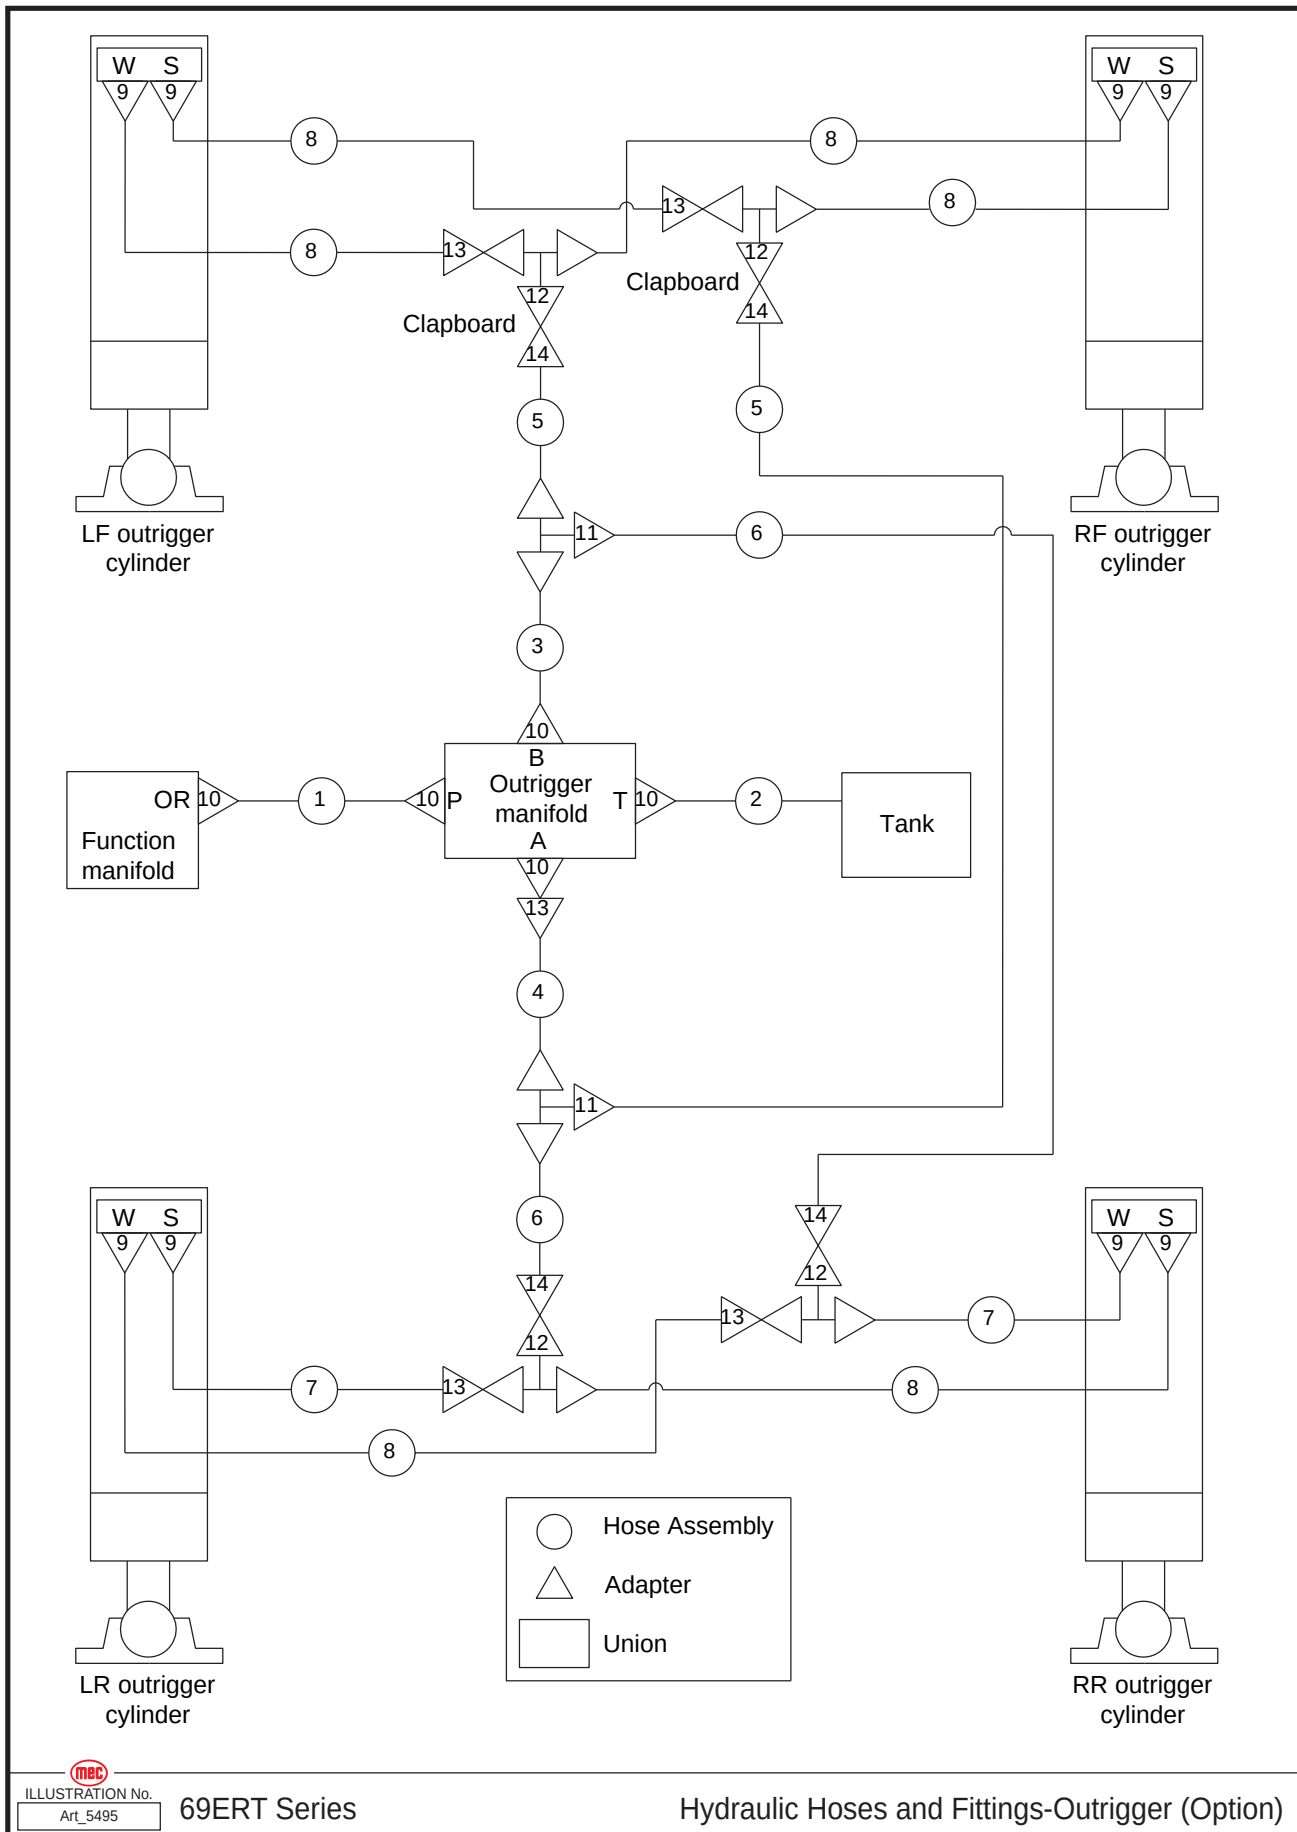


ILLUSTRATION No.
Art_5495

69ERT Series

Hydraulic Hoses and Fittings-Outrigger (Option)

Item	Part Number	Description	Qty.
1	43700	Hose Assembly	1
2	43701	Hose Assembly	1
3	43702	Hose Assembly	1
4	43703	Hose Assembly	1
5	43674	Hose Assembly	2
6	43675	Hose Assembly	2
7	43677	Hose Assembly	2
8	43678	Hose Assembly	6
9	43389	Elbow	8
10	43083	Straight Fitting	5
11	43679	Tee Fitting	2
12	43081	Tee Fitting	4
13	43082	Elbow	5
14	43680	Straight Fitting	4

Electrical Harness

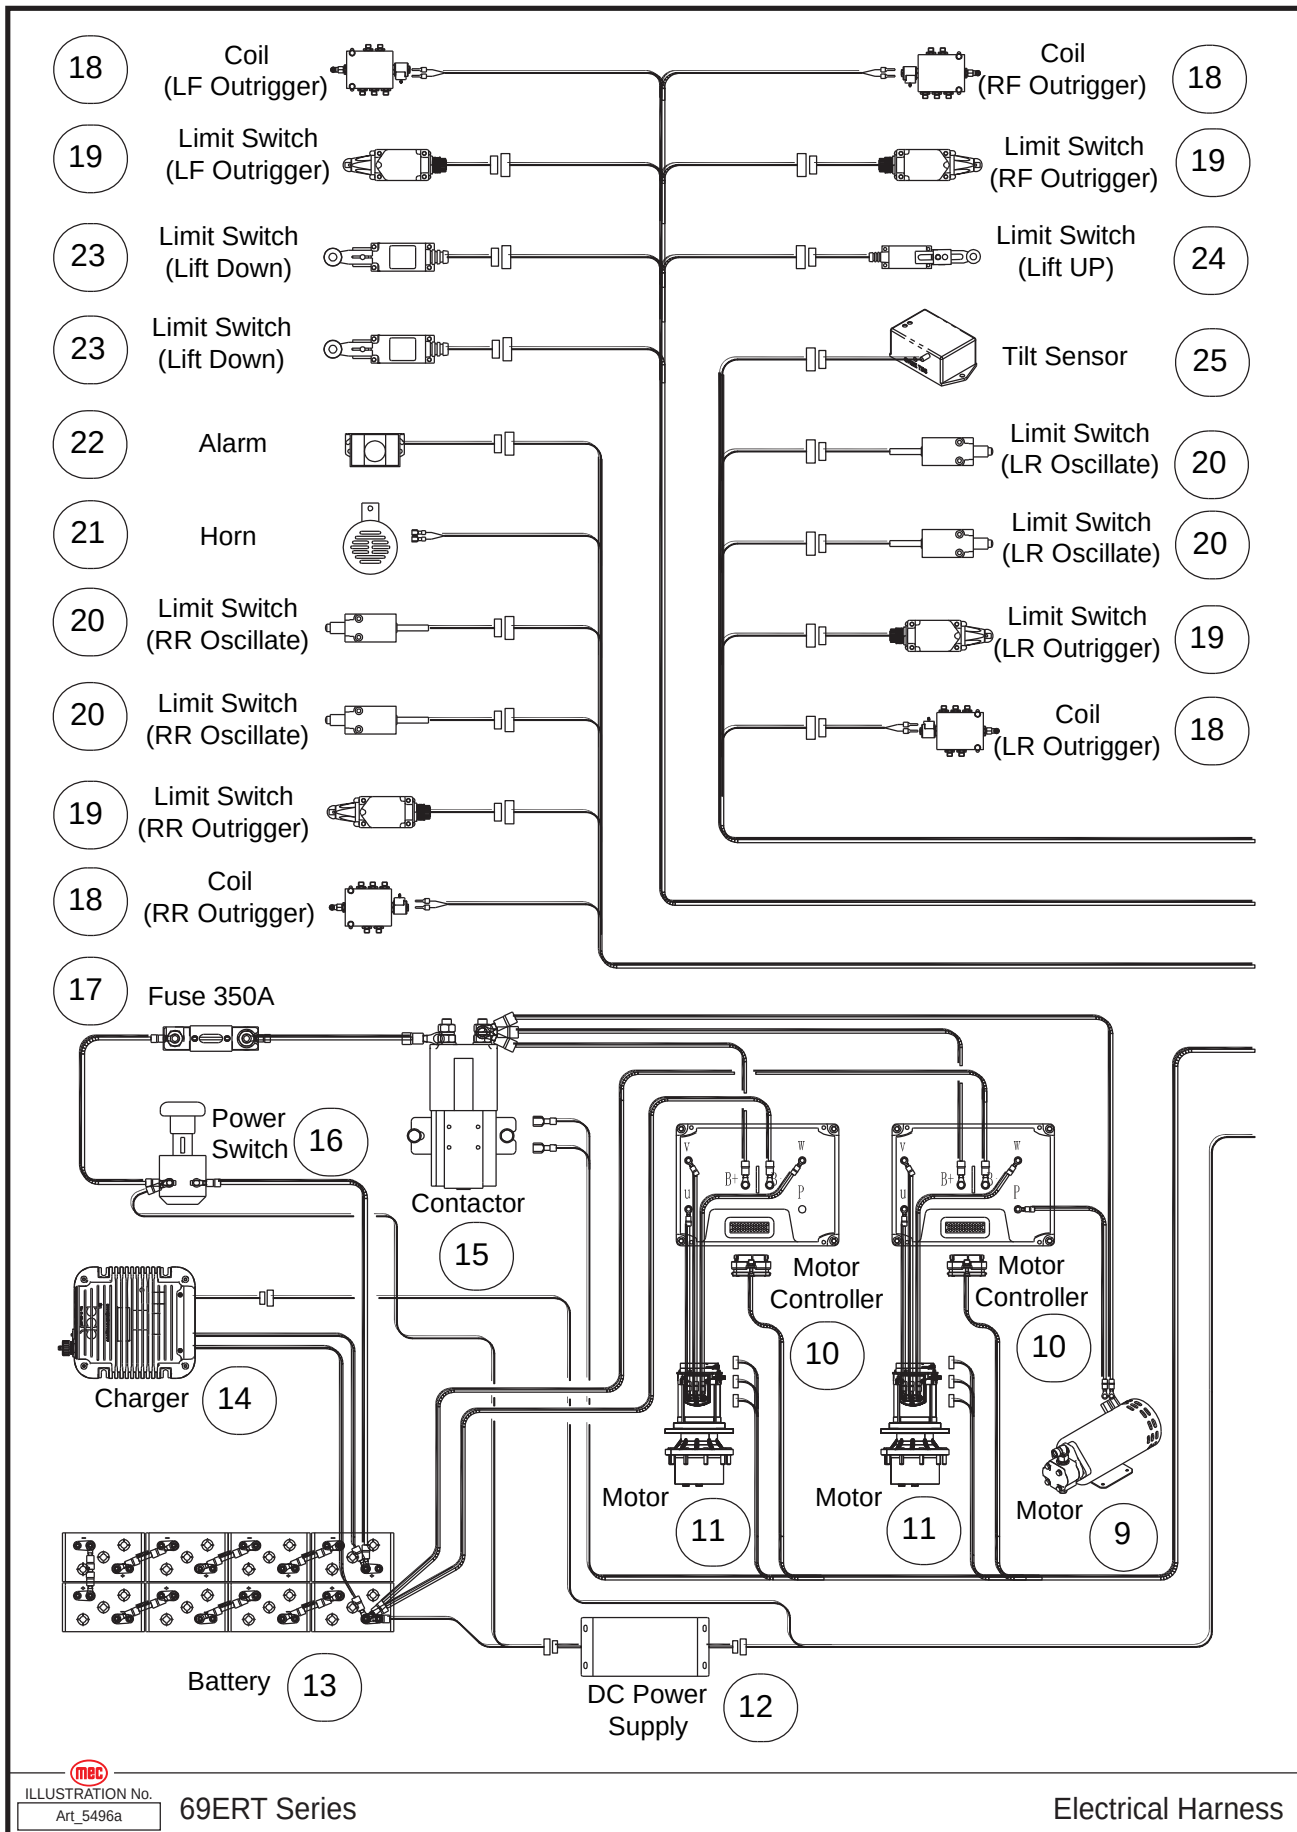


ILLUSTRATION No.
Art_5496a

69ERT Series

Electrical Harness

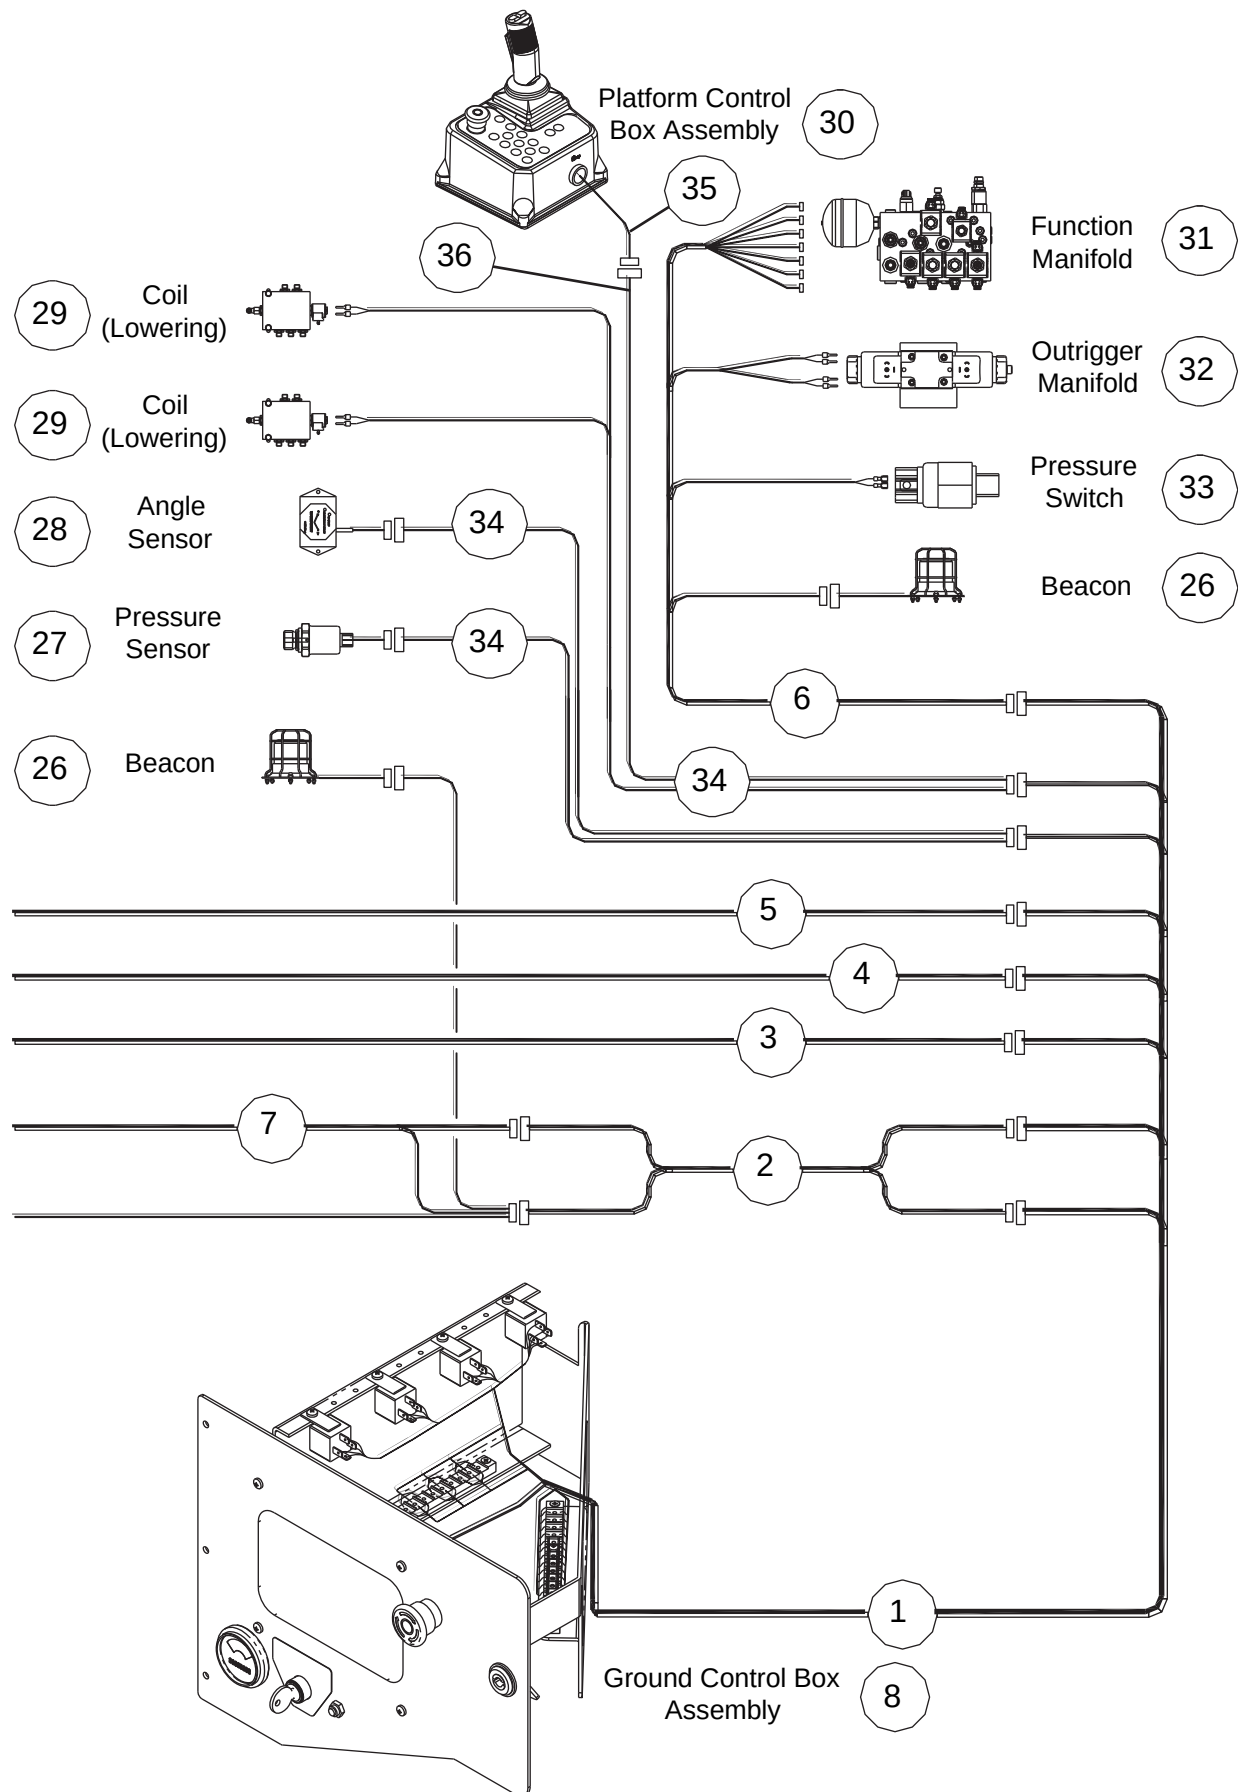


ILLUSTRATION No.
Art_5496b

69ERT Series


Electrical Harness



Item	Part Number	Description	Qty.
1	43704	Ground Control Box Harness	1
2	43705	Transit Harness	1
3	43682	Outrigger Harness 3	1
4	43685	Outrigger Harness 2	1
5	43683	Outrigger Harness 1	1
6	43706	EV Harness	1
7	43707	Motor Controller Harness	1
8	REF	Ground Control Box Assembly (Refer To Page 60)	1
9	REF	Motor (Refer To Page 64)	1
10	REF	Motor Controller (Refer To Page 74)	2
11	REF	Motor (Refer To Page 44, 46)	2
12	REF	DC Power Supply (Refer To Page 72)	1
13	REF	Battery (Refer To Page 72)	8
14	REF	Charger (Refer To Page 72)	1
15	REF	DC Contactor (Refer To Page 74)	1
16	REF	Power Switch (Refer To Page 72)	1
17	REF	350A Fuse Assembly (Refer To Page 74)	1
18	REF	Coil (Outrigger) (Refer To Page 116)	4
19	REF	Limit Switch (Outrigger) (Refer To Page 78)	4
20	REF	Limit Switch (Oscillate) (Refer To Page 44, 46)	4
21	REF	Horn (Refer To Page 82)	1
22	REF	Alarm (Refer To Page 82)	1
23	REF	Limit Switch (Lift Down) (Refer To Page 84)	2
24	REF	Limit Switch (Lift Up) (Refer To Page 80)	1
25	REF	Tilt Sensor (Refer To Page 82)	1
26	REF	Beacon (Refer To Page 52, 72)	2
27	--	--	--
28	--	--	--
29	REF	Coil (Lowering) (Refer To Page 108, 110)	2
30	REF	Platform Control Box Assembly (Refer To Page 104)	1
31	REF	Function Manifold (Refer To Page 56)	1
32	REF	Outrigger Manifold (Refer To Page 58)	1
33	REF	Pressure Switch (Refer To Page 54)	1
34	44487	Harness, Sensors, 3369RT/ERT	1
	44488	Harness, Sensors, 4069RT/ERT	1
35	41152	Coil Cord	1
36	44486	Harness, Comm Cable 3369RT/ERT	1
	44021	Harness, Comm Cable 4069ERT	1
--	44025	Harness, Lowering Valves 4069ERT	1


REF - Reference





Power to Platform

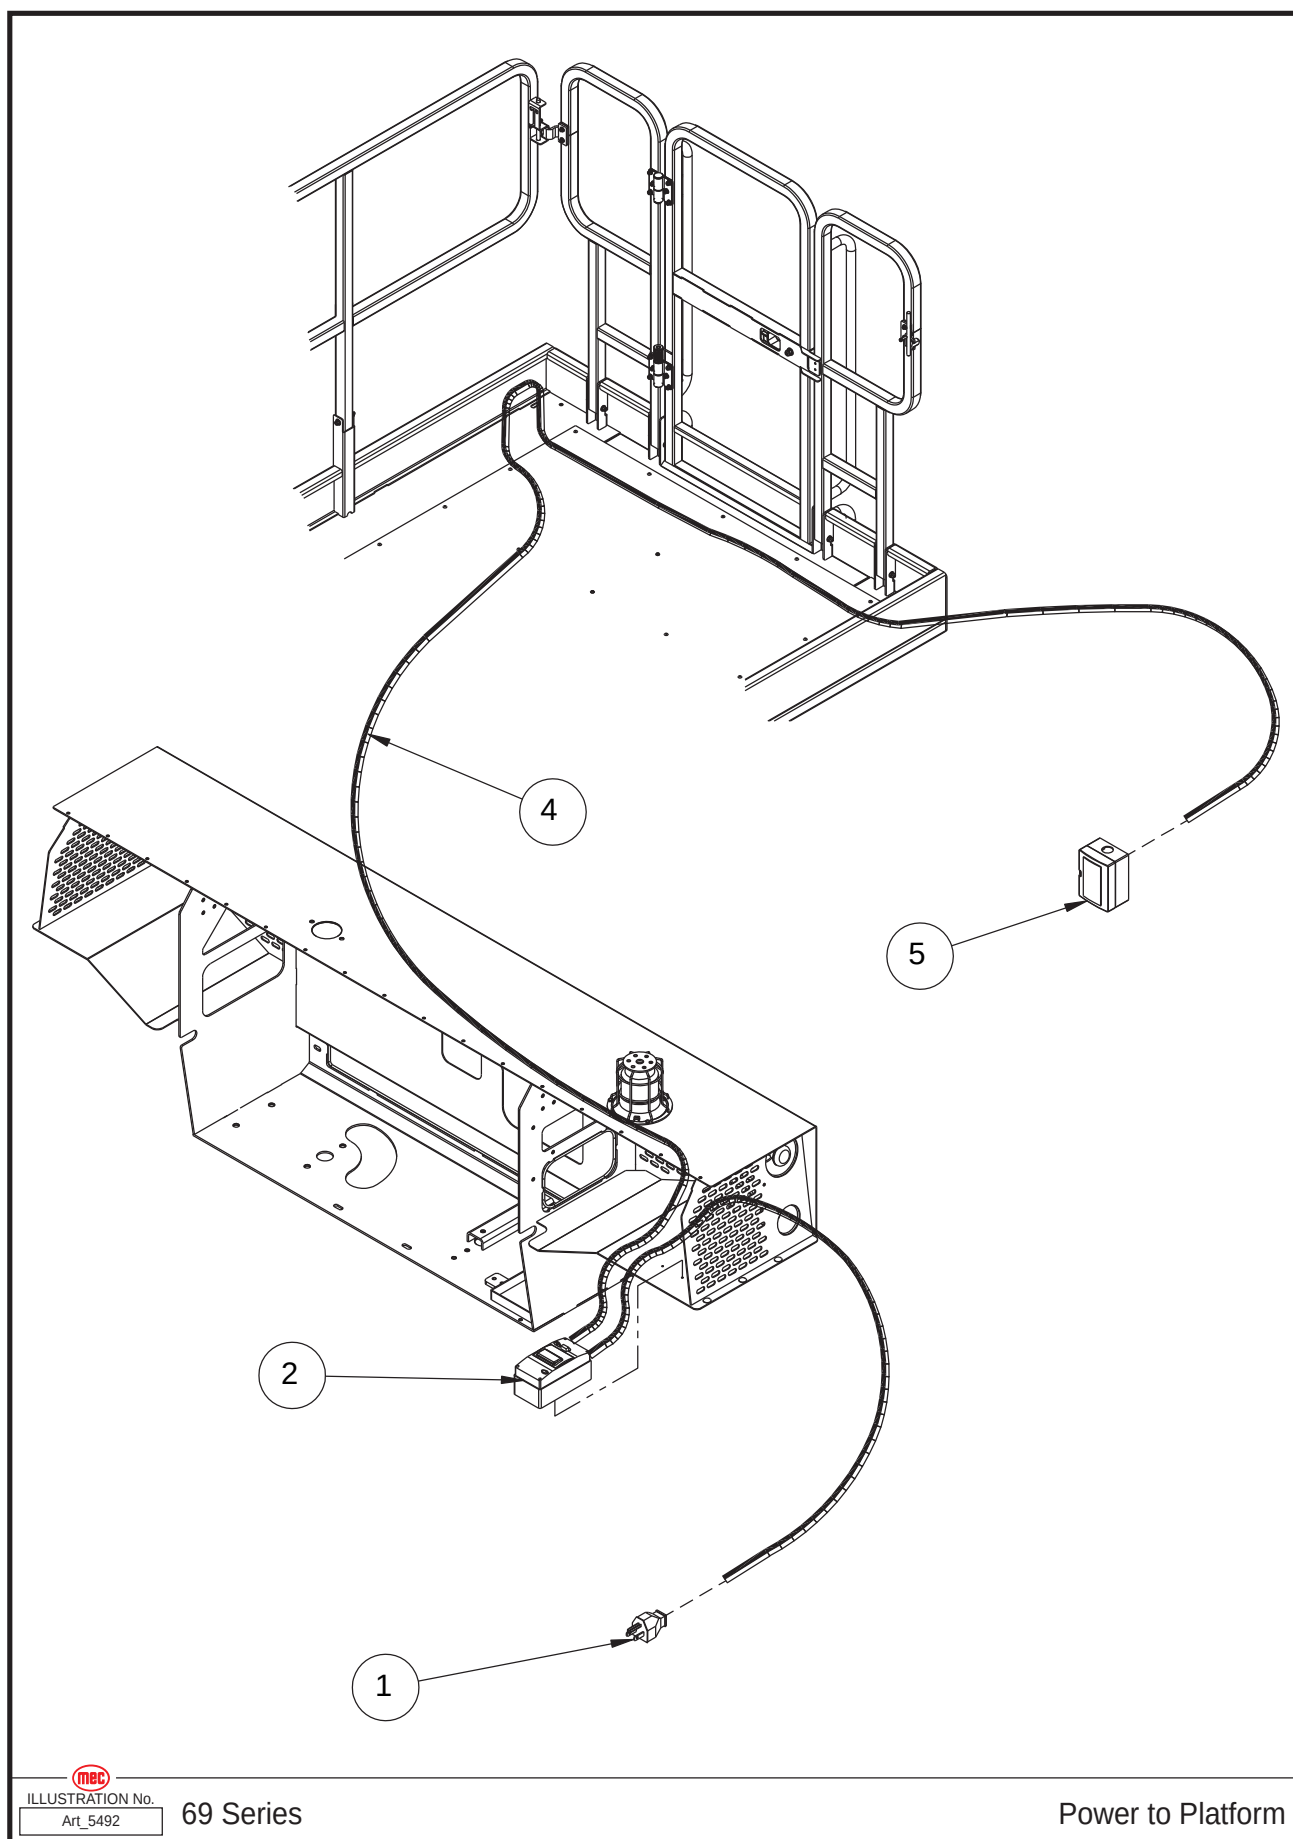

Item	Part Number	Description	Qty.
1	43690	AC Plug	1
2	43691	Circuit Breaker (Option)	1
4	43692	Wire Cable, Platform AC Power (3369RT)	1
	43693	Wire Cable, Platform AC Power (4069RT)	1
5	43694	AC Socket	1

  ERT Machine Decals

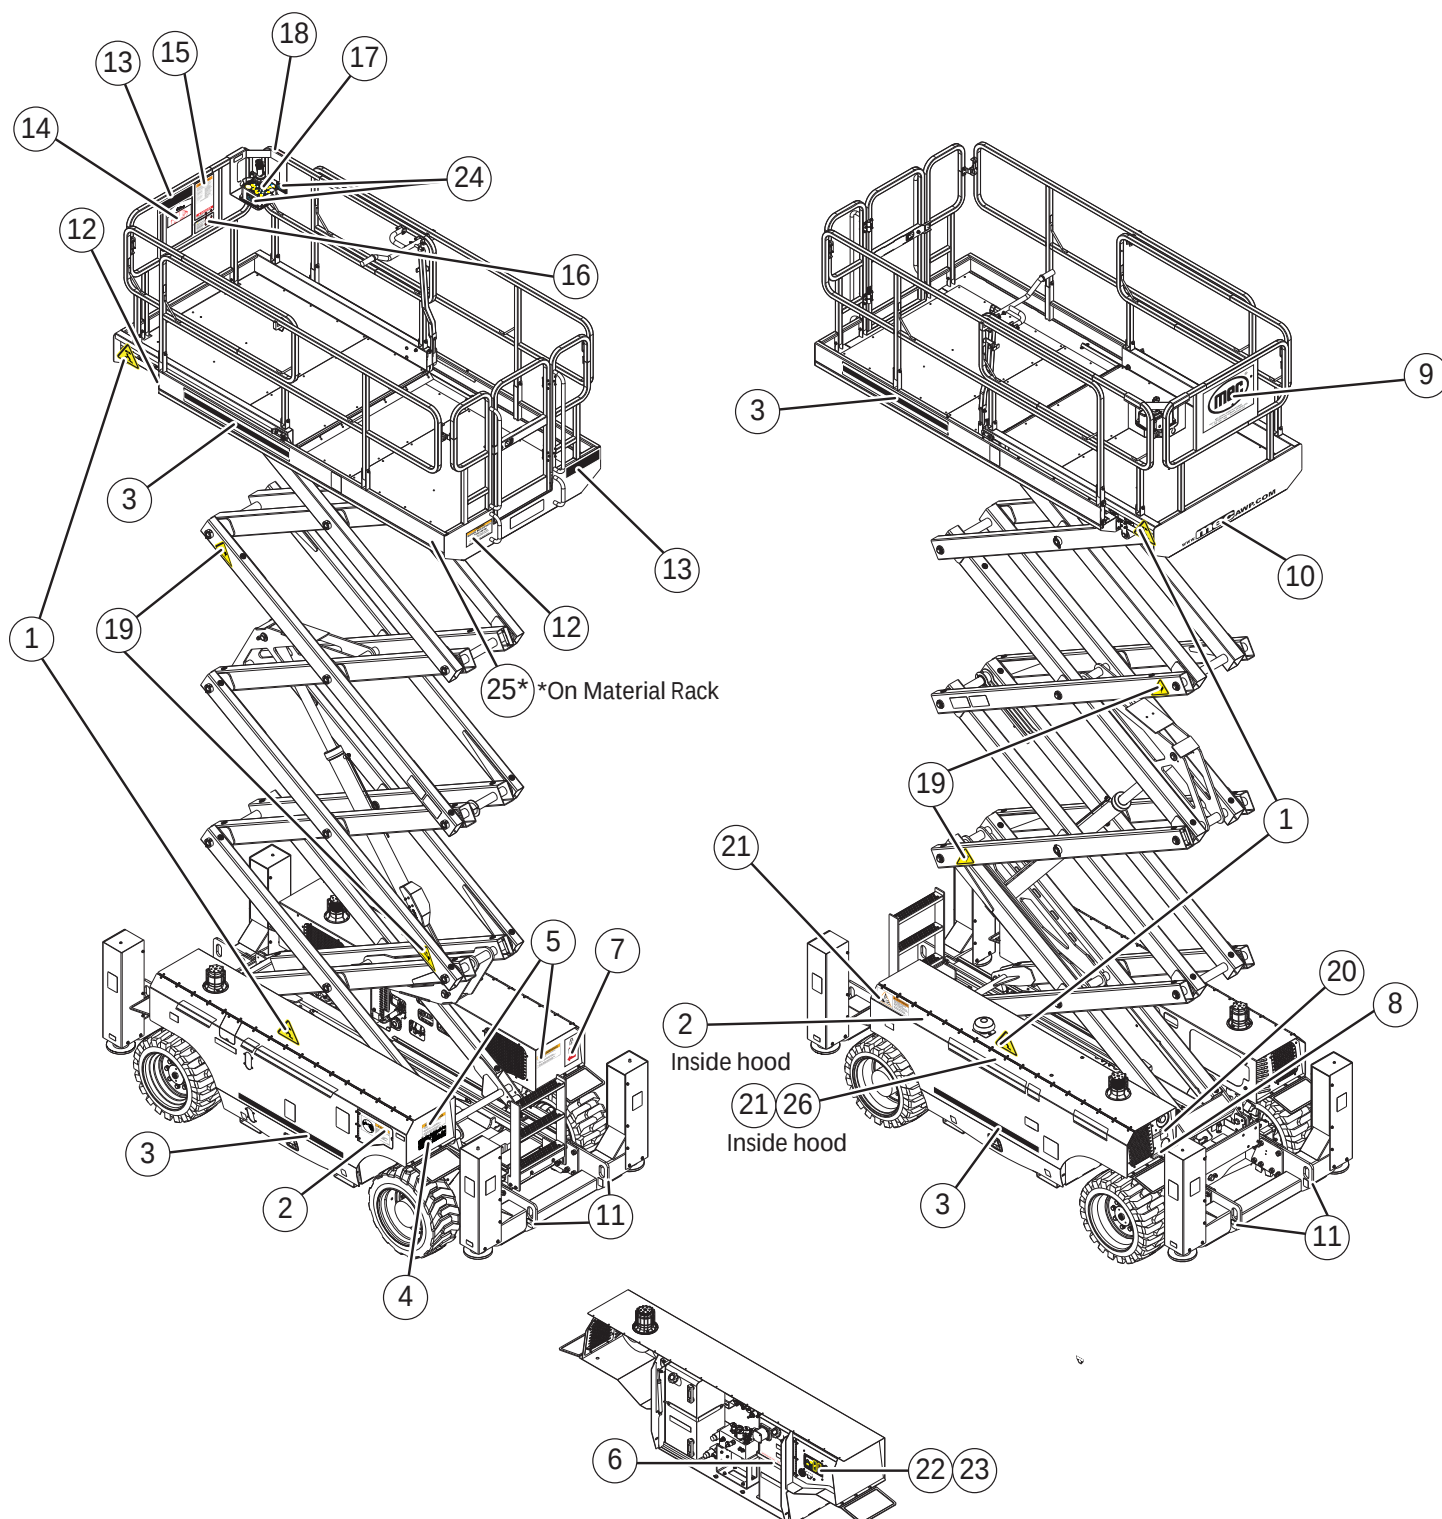

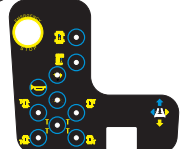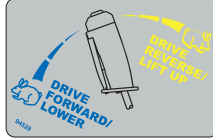1  91850 Qty - 4	2  90732 Qty - 2	3 mec 3369ERT 3369ERT (Only) 94856 Qty - 4	mec 4069ERT 4069ERT (Only) 93052 Qty - 4	4  91553 Qty - 1
5  90725 Qty - 2	6 HYDRAULIC OIL  6873 Qty - 1	7  9052 Qty - 1	8 POWER TO PLATFORM 90751 Qty - 1	9  90719 Qty - 1
10 www.mecAWP.COM 92416 Qty - 1	11  91973 Qty - 4	12  94872 Qty - 2	13  3369ERT (Only) 94868 Qty - 2	4069ERT (Only) 94870 Qty - 2
14  8911 Qty - 1	15  90722 Qty - 1	16  90721 Qty - 1	17  43525 Qty - 1	18 LOCATE CONTROL BOX HERE FOR NORMAL OPERATION OF THIS UNIT 7155 Qty - 1
19  9910 Qty - 4	20 BATTERY CHARGER 90750 Qty - 1	21  8779 Qty - 2	22  43524 Qty - 1	23  43102 Qty - 1
24  94120 Qty - 2	25  94528 Qty - 2	26 UHMV Strip 3" x 1/8" (80mm x 3mm) Length 9 ft (2.8m) 94899 Qty - 1	26  91744 Qty - 1	

Item	Part Number	Description	Qty.
1	91850	Decal, Caution Triangle Overhead Clearance	4
2	90732	Decal, Warning No Powerwash	2
3	94856	Decal, 3369ERT	4
	93052	Decal, 4069ERT	4
4	91553	Decal, Serial Plate, ANSI Slab	1
5	90725	Decal, Tire Replacement	2
6	6873	Decal, Hydraulic Oil	1
7	9052	Decal, Main Lockout Switch	1
8	90751	Decal, Power To Platform	1
9	90719	Decal, MEC Oval	1
10	92416	Decal, Website	1
11	91973	Decal, Tie Down	4
12	94872	Decal, Warning, Sheet Material Rack 300 LBS	2
13	94868	Decal, 1000 LBS Capacity - 3369 Models	2
	94870	Decal, 800 LBS Capacity - 4069 Models	2
14	8911	Decal, Manuals Inside Icon	1
15	90722	Decal, Warning Panel	1
16	90721	Decal, Danger Tip Over	1
17	43525	Platform Control Panel (69ERT)	1
18	7155	Decal, Locate Control Box Here	1
19	9910	Decal Hand Crush Hazard	4
20	90750	Decal, Battery Charger	1
21	8779	Decal, Warning Battery Explosive	2
22	43524	Ground Control Panel (69ERT)	1
23	43102	Decal, Key Switch Panel	1
24	94120	Decal, Drive/Lift Side for Slabs (Black)	2
	94528	Decal, Drive/Lift Side for Slabs (Gray)	2
25	94899	UHMW Strip 3" x 1/8" (80mm x 3mm), length 9 ft (2.8m)	1
26	91744	Battery Indicator 48V	1

Notes

Notes



MEC Parts Order Form

Phone: 559-842-1523

Fax: 559-400-6723

Email: Parts@mecawp.com

Please fill out completely

Date: _____

Ordered By: _____

Account: _____

Your Fax No.: _____

Bill to: _____

Ship to: _____

Purchase Order Number _____

Ship VIA _____

** All orders MUST have a Purchase Order Number

**Fed Ex shipments require Fed Ex account number

Part Number	Description	Quantity	Price

All back-ordered parts will be shipped when available via the same ship method as original order unless noted below:

- ☐ Ship complete order only - No Backorders
- ☐ Ship all available parts and contact customer on disposition of back-ordered parts
- ☐ Other (Please specify)



Limited Owner Warranty

MEC Aerial Platform Sales Corp. warrants its equipment to the original purchaser against defects in material and/or workmanship under normal use and service for one (1) year from date of registered sale or date the unit left the factory if not registered. MEC Aerial Platform Sales Corp. further warrants the structural weldments of the main frame and scissor arms to be free from defects in material or workmanship for five (5) years from date of registered sale or date unit left the factory if not registered. Excluded from such warranty is the battery(s) which carries a ninety (90) day warranty from described purchase date. Warranty claims within such warranty period shall be limited to repair or replacement, MEC Aerial Platform Sales Corp's option, of the defective part in question and labor to perform the necessary repair or replacement based on MEC Aerial Platform Sales Corp's then current flat rate, provided the defective part in question is shipped prepaid to MEC Aerial Platform Sales Corp. and is found upon inspection by MEC Aerial Platform Sales Corp. to be defective in material and/or workmanship. MEC Aerial Platform Sales Corp. shall not be liable for any consequential, incidental or contingent damages whatsoever. Use of other than factory authorized parts; misuse, improper maintenance, or modification of the equipment voids this warranty. The foregoing warranty is exclusive and in lieu of all other warranties, express or implied. All such other warranties, including implied warranties of merchantability and of fitness for a particular purpose, are hereby excluded. No Dealer, Sales Representative, or other person purporting to act on behalf of MEC Aerial Platform Sales Corp. is authorized to alter the terms of this warranty, or in any manner assume on behalf of MEC Aerial Platform Sales Corp. any liability or obligation which exceeds MEC Aerial Platform Sales Corp's obligations under this warranty.



MEC Aerial Work Platforms

1401 S. Madera Avenue, Kerman, CA 93630 USA

Toll Free: 1 - 877 - 632 - 5438

Phone: 1 - 559 - 842 - 1500

Fax: 1 - 559 - 842 - 1520

info@MECawp.com

www.MECawp.com