

MEWP Familiarization: MEC Micro 19


Micro 19 Familiarization

(ANSI A92.22 6.2.5)

- 6.2.5.1 Prior to user's authorization of an operator to use a specific model of MEWP, the user must ensure the operator is familiarized on the following, and as specified by the manufacturer.
- Do not operate your MEWP until you have read and understood the Manufacturer's Operator Manual, have performed the workplace inspection, pre-start inspection, routine maintenance, and have completed all the test operations detailed in the operating instructions section of your manual.
- **Manual location is in manual enclosure on the inside of the front guardrail.**
- **Confirm that the required manual(s) as specified by the manufacturer are with the MEC Micro 19.**




Lower Controls

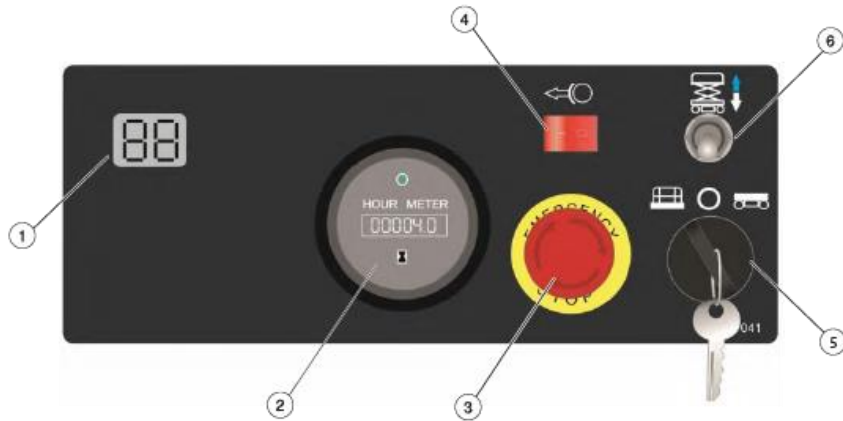

Control	Description						
1 LED	Displays diagnostic codes when necessary						
2 Hour Meter							
3 Emergency Stop Switch	<p>Press the EMERGENCY STOP switch at any time to stop all machine functions.</p> <p>Turn button clockwise to the ON position to operate the machine.</p> <ol style="list-style-type: none"> 1. Chock the wheels. 2. Turn Key Switch to OFF position. 3. Ensure both upper and lower E-Stops are on. 						
4 Brake Release Switch	<p>4. Press and hold Brake Rocker Switch (4) and Lift/Lower Switch (6) down, turn the Key Switch to the Ground position.</p> <p>5. Hold Brake Rocker Switch (4) and Lift/Lower Switch (6) until a continuous alarm sounds, confirming brakes are released.</p>						
5 Key Switch	<table border="1"> <tbody> <tr> <td>Platform</td> <td>Select to operate from the platform control panel</td> </tr> <tr> <td>Base</td> <td>Select to operate from the base control panel.</td> </tr> <tr> <td>Off</td> <td>Select to stop operation from either control panel.</td> </tr> </tbody> </table>	Platform	Select to operate from the platform control panel	Base	Select to operate from the base control panel.	Off	Select to stop operation from either control panel.
Platform	Select to operate from the platform control panel						
Base	Select to operate from the base control panel.						
Off	Select to stop operation from either control panel.						
6 Platform Lift/Lower Switch	With the Key Switch in the BASE position, move this switch up to lift the platform or down to lower the platform.						

Platform Controls

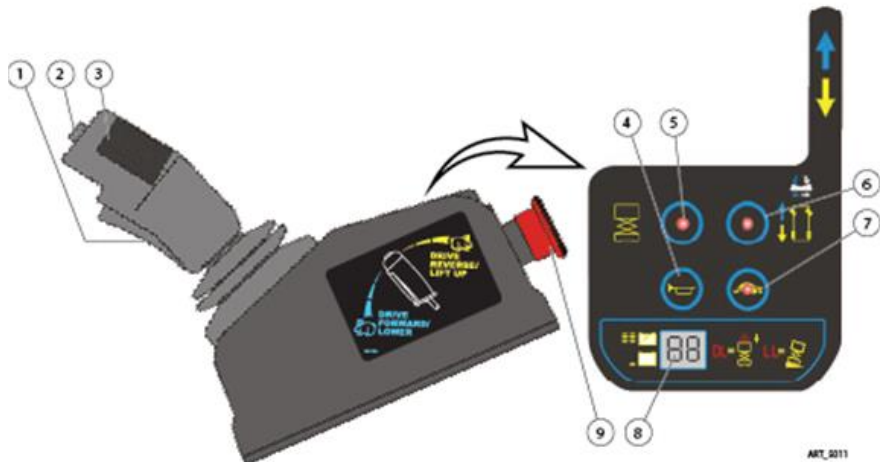

Control	Description
1 Function Enable Switch	Squeeze to enable DRIVE, STEER, and LIFT functions from the Control Handle.
2 Steer Switch	Using your thumb, press and hold the rocker switch to steer Left or Right.
3 Control Handle	DRIVE Proportionally controls Forward and Reverse travel. LIFT Proportionally controls Lift and Lower Functions
4 Horn Button	Press to sound warning horn.
5 Lift Select	Press this button to enable the Lift function. <ul style="list-style-type: none"> Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Lift will time-out. Release then press the Function Enable Switch to reactivate selected function.
6 Drive Select	Press this button to enable the Drive function. <ul style="list-style-type: none"> Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Drive will time-out. Release then press the Function Enable Switch to reactivate selected function.
7 Drive Speed Select	Light ON indicates Low Speed Drive is selected. Light OFF indicates High Speed Drive is selected.
8 LED Display	Indicates the state of battery charge and displays diagnostic codes when necessary.
9 Emergency Stop Switch	Press the EMERGENCY STOP switch at any time to stop all machine functions. Turn switch clockwise to reset.

Additional Emergency Controls, Features & Limitations



Emergency Battery Disconnect

Emergency Lowering

- **Max. Platform Height:** 18 ft. 4 in.
- **Max. Platform Capacity:** 500 lbs., 2 person
- **Deck Extension Capacity:** 250 lbs.
- **Max. Chassis Inclination:** 1.5° side, 3° inline
- **Max. Wind Speed:** 28 mph (45 kph) outdoors
- **ELECTROCUTION HAZARD! THIS MACHINE IS NOT INSULATED!**
- See operator's manual for additional information and instructions for safe use.

Operating Characteristics

Features:

- Direct electric drive for longer duty cycle
- 24” rollout deck extension
- Charger and power to platform connect to single outlet on chassis

Options:

- 110v Inverter
- Tool Tray
- Proactive Platform Safety System[®] (PPSS) senses overhead obstructions
- Leak Containment System[®] (LCS)

*See operator’s manual for specific options and feature characteristics.

For More Information

Contact your local Dealer, Rental Provider or MEC Aerial Work Platforms.

MEC Aerial Work Platforms

- +1 (877) 632-5438
- +1 (559) 842-1500
- info@MECawp.com

MEC Parts

- +1 (559) 842-1523
- parts@MECawp.com

MEC Product Support

- +1 (559) 842-1537
- service@MECawp.com

MEC Address & Website

- 1401 S Madera Ave,
Kerman, Ca 93630
- www.MECawp.com

This information is provided as product familiarization as called for by ANSI A92.22. and CSA B 354. It is not intended to take the place of information provided by the MEC Operators manual or instruction provided by your equipment supplier. Further, all operators are to be trained before operating this equipment. Please contact MEC Aerial Work Platforms if you require additional information.