


# MEWP Familiarization: MEC® 135-RJ Boom

# MME30-RJ Familiarization (ANSI A92.22 6.2.5)

---


- 6.2.5.1 Prior to user's authorization of an operator to use a specific model of MEWP, the user must ensure the operator is familiarized on the following, and as specified by the manufacturer.
- Do not operate your MEWP until you have read and understood the Manufacturer's Operator Manual, have performed the workplace inspection, pre-start inspection, routine maintenance, and have completed all the test operations detailed in the operating instructions section of your manual.
- Manual location is in manual enclosure on the inside of the front guardrail.
- Confirm that the required manual(s) as specified by the manufacturer are with the MEC 135-RJ Boom.

# Base Control Panel

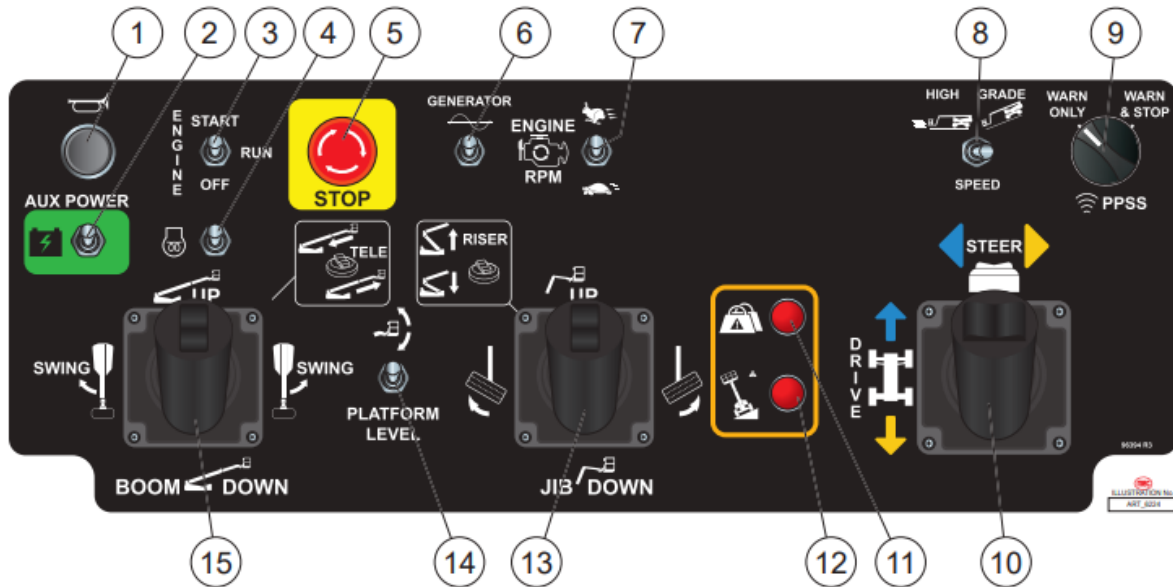

#	Controls	Description
1	Horn Button	Press to sound warning horn.
2	Auxiliary Power	If normal power fails, press and hold while using Boom Retract and Boom Lower functions.
3	Engine Start/Stop Switch	Push this switch up to start engine. Push this switch down to stop engine.
4	Glow Switch	Push this switch up to activate glow plugs prior to cold starting the engine.
5	Emergency Stop Switch	Press the Emergency Stop switch at any time to stop all machine functions. Turn the switch clockwise to reset it and resume machine operation.
6	Generator Switch (Optional)	Push this switch up to activate the optional AC generator. Generator switches off when any other function is enabled.
7	Engine Speed Select Switch	Use this switch to set the engine speed when functions are enabled. Setting this switch to low idle speed allows the operator to move the machine slowly and precisely. Push this switch up for high idle speed and fast function speed. Push this switch down for low idle speed and slow function speed.
8	Speed/Torque Switch	Push this switch to the left for high speed drive. Push this switch to the right for high torque drive.

# Upper Controls

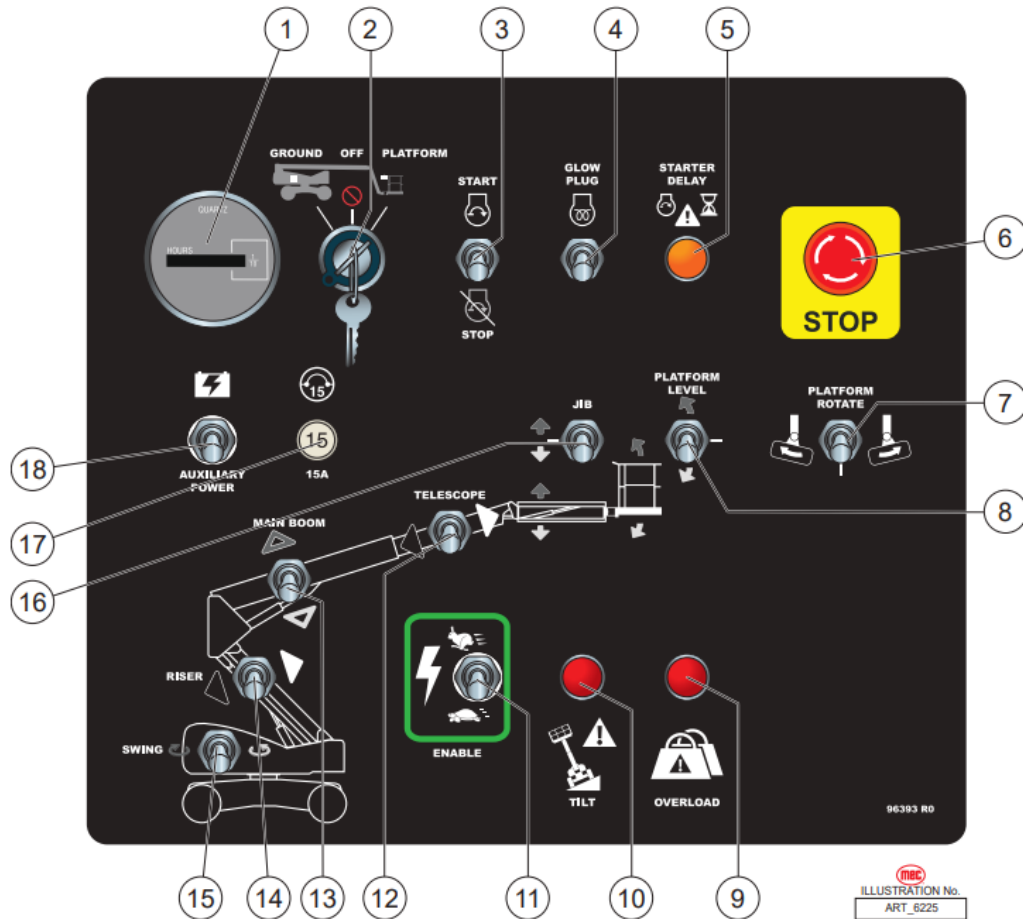

#	Controls	Description	
1	Hour Meter	Indicates total elapsed time of machine operation.	
2	Selector Switch	Platform	Select to operate from the platform control panel.
		Base	Select to operate from the base control panel.
		Off	Select to stop operation from either control panel.
3	Engine Start/Stop Switch	Push this switch up to start engine. Push this switch down to stop engine.	
4	Glow Switch	Push this switch up to activate glow plugs prior to starting.	



# Operating Characteristics

## Features:

- 141 ft. (43 m) Working Height with Standard 8 ft. (2.4 m) Jib
- Dual Capacity – 600 lbs. (272 kg) Unrestricted, 900 lbs. (408 kg) Restricted
- 80 ft. (24.4 m) of Outreach
- Set in place Axle Extension – No Need for Forward or Reverse Travel or Jacks

## Options:

- Platform Control Box Cover
- Cold Start Package
- Second Year Extended Warranty

\*See operator's manual for specific options and feature characteristics.

# For More Information

---

Contact your local Dealer, Rental Provider or MEC Aerial Work Platforms.

## MEC Aerial Work Platforms

- +1 (877) 632-5438
- +1 (559) 842-1500
- [info@MECawp.com](mailto:info@MECawp.com)

## MEC Parts

- +1 (559) 842-1523
- [parts@MECawp.com](mailto:parts@MECawp.com)

## MEC Product Support

- +1 (559) 842-1537
- [service@MECawp.com](mailto:service@MECawp.com)

## MEC Address & Website

- 1401 S Madera Ave,  
Kerman, Ca 93630
- [www.MECawp.com](http://www.MECawp.com)

*This information is provided as product familiarization as called for by ANSI A92.22. and CSA B 354. It is not intended to take the place of information provided by the MEC Operators manual or instruction provided by your equipment supplier. Further, all operators are to be trained before operating this equipment. Please contact MEC Aerial Work Platforms if you require additional information.*