



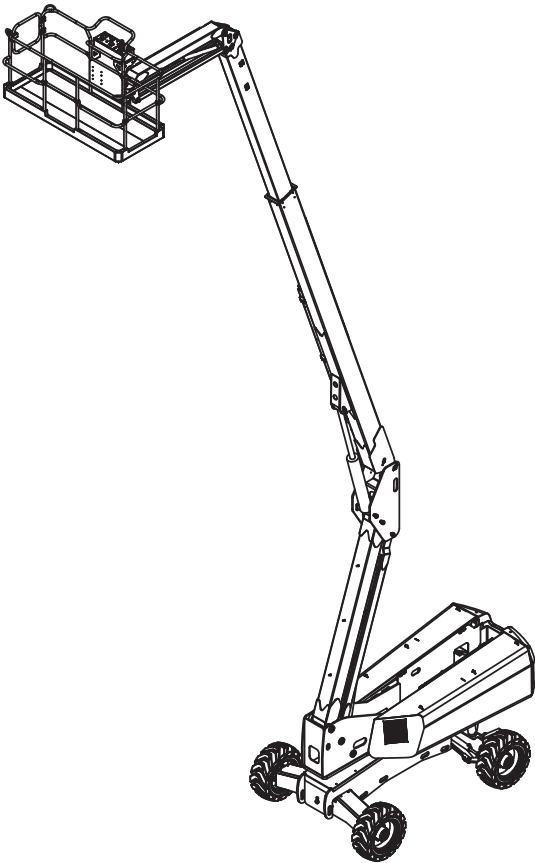

Operator's Manual

CE/Australian Specifications

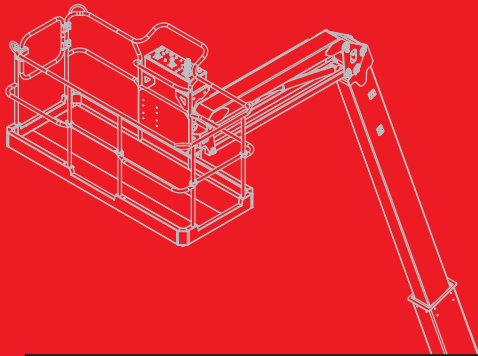

60-J Diesel Boom Lift


Serial # 14400001 - Up

93924
September 2015

Specifications	inside cover
Introduction	1
Safety.....	2
Safety Alert Symbols & Safety Signal Words	3
Electrocution Hazard.....	4
Tip-over Hazards.....	6
Fall Hazards.....	7
Collision Hazards	7
Additional Safety Hazards	8
Battery Safety.....	8
Controls & Components	9
Component Locations	9
Platform Controls	10
Base Controls	12
Workplace Inspection	14
Operating Instructions & Pre-Operation Function Tests	15
Prestart.....	15
Starting Engine from Base Controls	16
Starting Engine from Platform Controls	17
Base Controls Operation & Pre-Operation Functions Test.....	18
Platform Control Operation & Pre-Operation Functions Test.....	22
Engine Speed Select	28
High Capacity Switch (Optional).....	29
Shutdown Procedure	29
Auxiliary Power System & Test.....	30
Machine Inspections and Maintenance	31
Supporting The Boom Assembly	32
Pre-Start Inspection Checklist	33
Frequent Inspection Checklist.....	34
Annual Inspection Report	35
Routine Maintenance	35
Frequent and Annual Maintenance	36
Lubrication	37
Troubleshooting	38
Warning and Instructional Decals.....	39
Transport Instructions	43
Loading	43
Driving or Winching onto or off of a Transport Vehicle	44
Securing to Truck or Trailer for Transport	45

—Specifications—

60-J Diesel		
Working Height*		20 m
Platform Height		18 m
Maximum Drive Height		18 m
Maximum Outreach		13 m
Turntable Swing		Continuous
Jib Range Of Motion		135°
Platform Rotation		180° (90° each side)
Machine Weight** (Unloaded)		8,410 kg
Lift Capacity		
Unrestricted Standard		227 kg
Restricted Option		340 kg
Maximum Occupants		2
Stowed Height		2.54 m
Overall Length		9.3 m
Overall Width		2.44 m
Tailswing		1.19 m
Wheel Base		2.56 m
Platform Details	Width	2.44 m
	Depth	1 m
	Entry	1 End Swing Gate, 2 Slide Bar Entries
Turning Radius, Inside		2 m
Ground Clearance		34 cm
Lift Speed		50 sec
Extend Speed		20 sec
Jib Lift Speed		15 sec
Drive Speed (Proportional)	Stowed	0-6.4 km/h
	Raised or extended	0-.8 km/h
Gradeability	Stowed, downhill	45%/24.2°
	Stowed, uphill	45%/24.2°
Breakover Angle		40%/22°
Axle Oscillation		10° (5° each side)
Maximum Allowable Operating Wind Speed		12.5 m/sec (45 km/h)
Engine		Kubota V1505T 44 hp Diesel
Fuel Type		Diesel
Fuel Capacity		120 liter
Hydraulic Fluid Capacity		150 liter
Maximum Vibration		does not exceed 2.5 m/sec ² at operator's position
Ambient Operating Range		-30° C minimum; 50° C maximum
Wheel Lug Nut Torque		203 Nm
Meets applicable requirements of EN280:2013. Allowable ambient temperature for operation outside of this range. *Working Height adds 2 m to platform height.		
This machine and its sub components have sufficient immunity to electromagnetic interference at about 5 m when exposed to a high source of disturbance.		

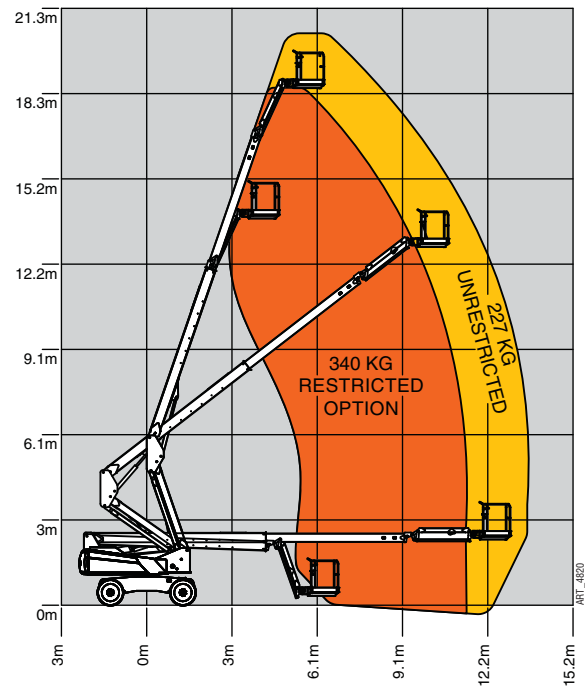

Sound Pressure At Workstation	80 dB(A)
Sound Power Level	86 dB @ 1m
Ground Pressure/Wheel (Maximum)	2662 kg
Maximum Wheel Load	4.86 kg/cm ²

Meets applicable requirements of EN280:2013. Allowable ambient temperature range: -30° C to 50°C. Consult with MEC for operation outside of this range. *Working Height adds 2 m to platform height. **Weight may increase with certain options.

This machine and its sub components have sufficient immunity to electrical magnetic disturbances with a limiting range of about 5 m when exposed to a high source of disturbance.

Introduction

This Operator's Manual has been designed to provide you, the owner, user or operator, with the instructions and operating procedures essential to properly and safely operate your MEC Aerial Work Platform for positioning personnel, along with their necessary tools and materials, to overhead work locations.



This Operator's Manual and other manuals provided by MEC on the machine must be read and understood prior to operating your MEC Aerial Work Platform. The operator should not accept operating responsibility until he/she has read and understands the operator's manual as well as having operated the MEC Aerial Work Platform under supervision of an authorized, trained and qualified operator.

It is essential that the operator of the aerial work platform is not alone at the workplace during operation.

Modifications of this machine from the original design and specifications without written permission from MEC are strictly forbidden. A modification may compromise the safety of the machine, subjecting the platform occupants and personal around the machine to serious injury or death.

Your MEC Aerial Work Platform has been designed, built, and tested to provide safe, dependable service. Only authorized, trained and qualified personnel shall be allowed to operate or service the machine.

MEC, as manufacturer, has no direct control over machine application and operation. Proper safety practices are the responsibility of the owner, user and operator.

If there is a question on application and/or operation contact:



MEC Aerial Platform Sales Corp.

1401 S. Madera Avenue, Kerman, CA 93630 USA

Toll Free: 1 - 877 - 632 - 5438

Phone: 1 - 559 - 842 - 1500

Fax: 1 - 559 - 842 - 1520

info@MECawp.com

www.MECawp.com

Safety

DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.

Failure to read, understand and follow all safety rules, warnings, and instructions could result in serious injury or death. For your safety and the safety of those around you, you must operate your machine as instructed in this manual.

MEC designs aerial work platforms to safely and reliably position personnel, along with their necessary tools and materials, at overhead work locations. The owner/user/operator of the machine should not accept responsibility for the operation of the machine unless properly trained.

Never perform service on the machine with the platform elevated without first supporting the boom assembly (see *Supporting The Boom Assembly* on page 32).

Safety Alert Symbols & Safety Signal Words

MEC manuals and decals use symbols, colors and signal words to help you recognize important safety, operation and maintenance information.



This is the Safety Alert Symbol. It is intended to alert operators, users and owners to potential personal injury hazards. Always obey all messages that follow this symbol.



RED and the word DANGER– Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



ORANGE and the word WARNING– Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



YELLOW with alert symbol and the word CAUTION– Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.




YELLOW without alert symbol and the word CAUTION– Indicates a potentially hazardous situation which, if not avoided, may result in property damage.



GREEN and the word NOTICE– Indicates operation or maintenance information.

Fall Protection

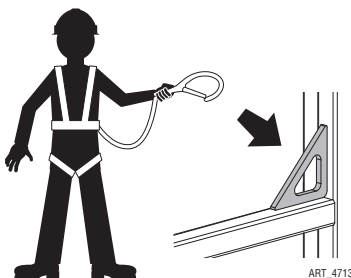

Personal fall protection equipment (PFPE) is required when operating this machine.

All PFPE must comply with employer and job site rules and applicable governmental regulations, and must be inspected and used in accordance with the PFPE manufacturer's instructions.

ALWAYS wear approved fall protection, properly attached to a designated anchor point, when operating the machine. Adjust the lanyard length to keep it as short as possible with respect to the work task being performed.

DO NOT attach more than one lanyard per anchor point.

Electrocution Hazard




ELECTROCUTION HAZARD!!! THIS MACHINE IS NOT INSULATED!

DEATH OR SERIOUS INJURY will result from contact with or inadequate clearance from any electrically charged conductor.

You must maintain a CLEARANCE OF AT LEAST 10 FEET (3.05 m) between any part of the machine, or its load, and any electrical line or apparatus carrying over 300 Volts up to 50,000 Volts. One foot (30.5 cm) additional clearance is required for every additional 30,000 Volts.

Observe Minimum Safe Approach Distance.

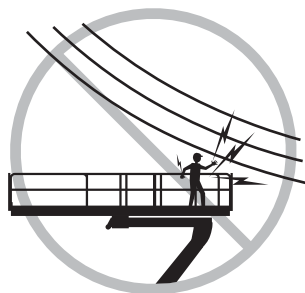

DO NOT work in close proximity to, or in contact with, energized power lines and electrical equipment. This machine is not insulated and WILL NOT protect the operator from injury or the machine from damage.

Refer to the following diagram and all applicable governmental regulations for the minimum safe distances from energized power lines and electrical equipment.

DO NOT touch the machine if it contacts energized power lines.

Personnel in the platform:

- Move away from the platform rails,
- DO NOT attempt to operate the machine, and
- DO NOT touch any part of the machine until energized power lines are shut off.


Personnel on the ground:

- DO NOT approach the machine and
- DO NOT touch or attempt to operate the machine until energized power lines are turned off.


Do not operate the machine during electrical storms or lightning.

DO NOT use the machine as a ground for welding unless properly equipped with a weld line to platform option.

Minimum Safe Approach Distance

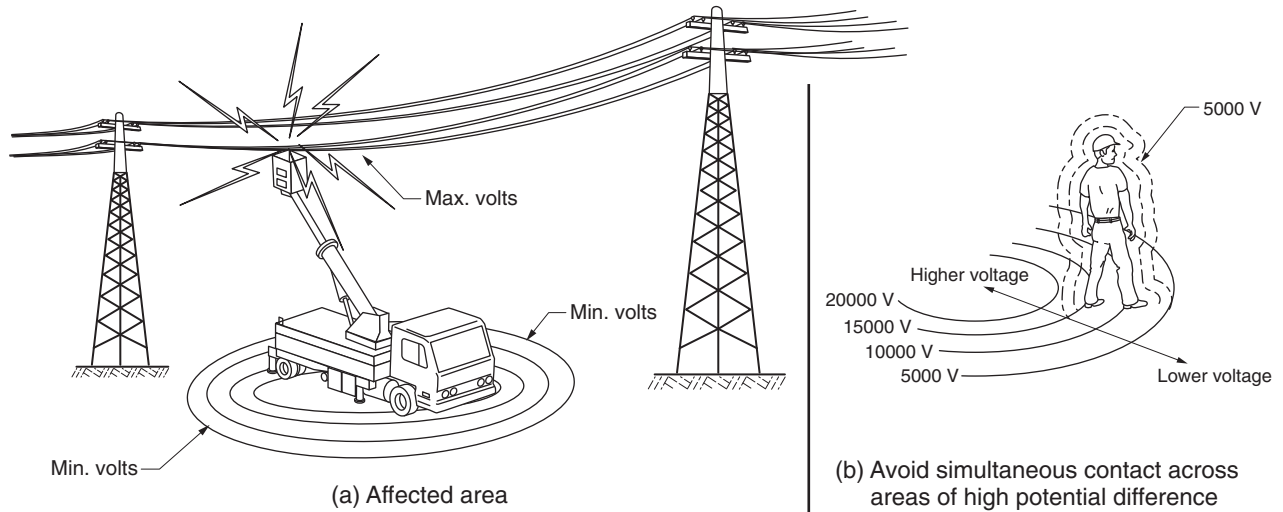

CLEARANCES FROM LIVE AERIAL CONDUCTORS

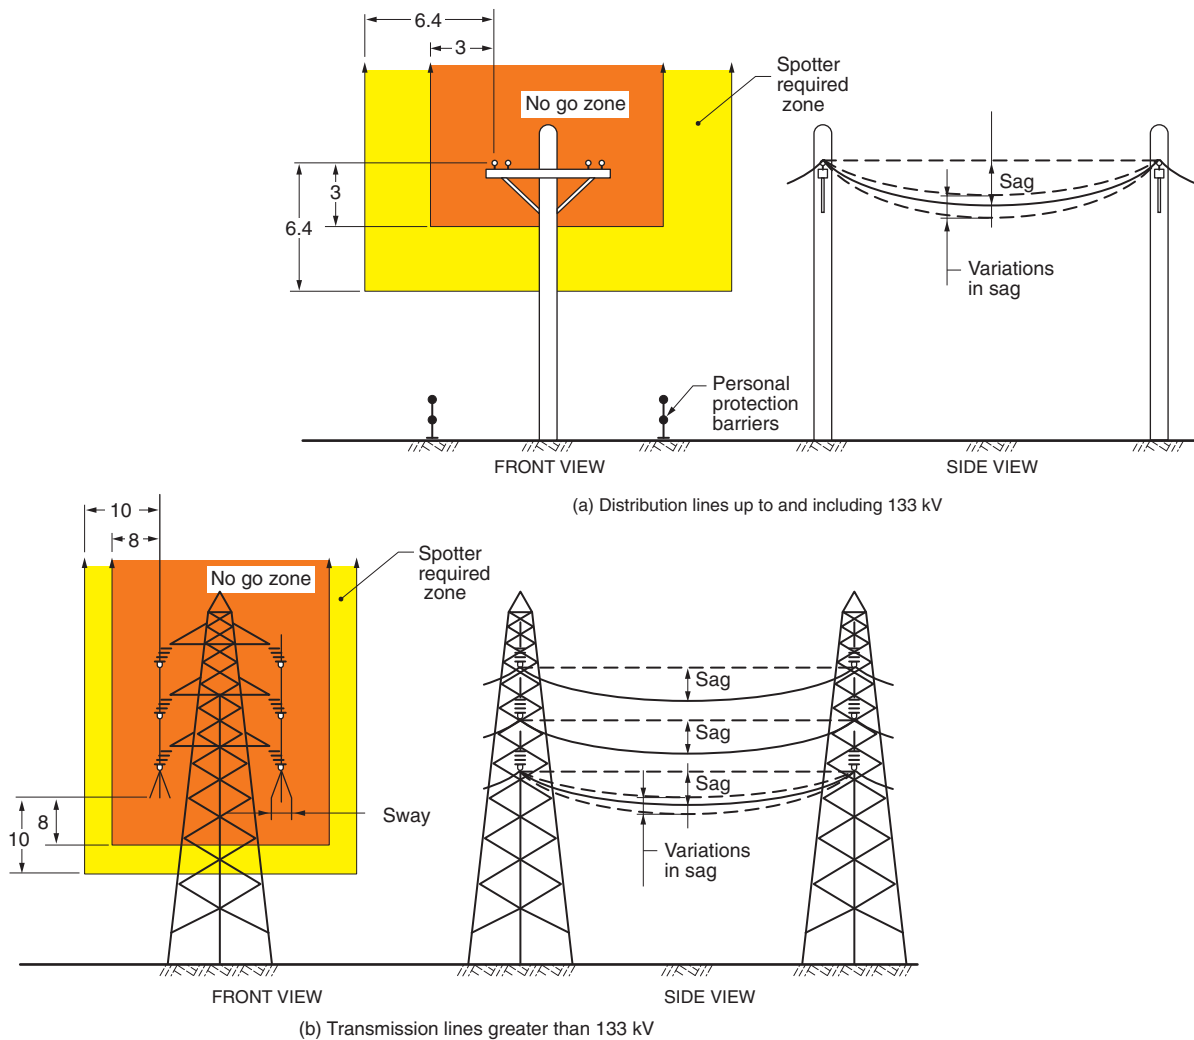

LEGEND

- = No shading, in the front views, indicates no proximity requirements
- = Light shading indicates spotter is required
- = Heavy shading indicates the NO GO ZONE

ART_3265


Tip-over Hazards



DO NOT OVERLOAD

DO NOT exceed the maximum platform capacity. The weight of options and accessories will reduce the rated platform capacity and must be factored into the total platform load. Refer to the decals on the options or contact MEC.

ON MACHINES EQUIPPED WITH THE HIGH CAPACITY OPTION,
DO NOT exceed the 500 lb (227 kg) unrestricted capacity unless the green High Capacity Indicator Light is illuminated. See page 29 for instructions.

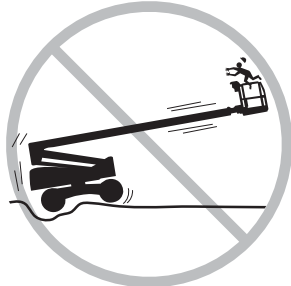

DO NOT DRIVE ON UNEVEN OR UNSTABLE SURFACE WHEN THE PLATFORM IS ELEVATED OR EXTENDED

Driving: DO NOT drive the machine on a slope that exceeds the maximum uphill or downhill slope rating. Slope rating applies to machines in the stowed position.

Driving in stowed position: Use extreme care and reduce speed when driving across uneven terrain, debris, unstable or slippery surfaces, and near holes or drop-offs.

Driving with the platform elevated: DO NOT drive on or near uneven terrain, unstable surfaces, curbs, drop-offs or other hazardous conditions.

DO NOT elevate the platform when the machine is on a surface that is soft and / or on a slope.

STOP ALL MOVEMENT if the alarm sounds and the red Tilt Indicator Light illuminates when the platform is raised – see *Tilt Indicator Light* on page 21 for instructions.

Ensure that all tires are in good condition and lug nuts are properly torqued.



DO NOT PUSH OR PULL OBJECTS OUTSIDE PLATFORM

DO NOT push off or pull toward any object outside the platform.

Maximum Allowable Side Force: 400N

NEVER transport tools and materials unless they are firmly secured. Secure all tools and loose materials. DO NOT carry materials or tools on the guardrails. DO NOT allow tools, supplies or any items to extend outside the platform.



DO NOT ELEVATE IN GUSTY CONDITIONS OR WHEN WIND EXCEEDS 28 MPH (12.5 M/S)

DO NOT elevate the platform when wind speeds are in excess of 28 m.p.h. (12.5 m/s). If wind speeds exceed 28 m.p.h. (12.5 m/s) when the platform is elevated, carefully lower the platform and discontinue operation.

DO NOT increase the surface area of the platform (i.e. cover the rails with tarp or plywood). Increased surface area exposed to the wind will decrease machine stability.

NEVER modify or alter the work platform without written permission from MEC.



DO NOT USE AS CRANE

DO NOT attach overhanging loads or use the machine as a crane. Do not allow anything (hoses, cords, wires, ropes, etc.) to hang from the platform.

NEVER alter or disable any machine components.

DO NOT replace any part of the machine with anything except MEC-supplied or MEC-approved parts.

NEVER use ladders or scaffolds in the platform or allow them to touch any part of the machine.

NEVER use the machine on a moving or mobile surface or vehicle.

Fall Hazards



DO NOT CLIMB ON RAILS

DO NOT sit, stand or climb on the platform guard rails. Maintain a firm footing on the platform floor at all times.

Keep the platform floor clear of debris.

DO NOT fasten a fall restraint lanyard to an adjacent structure.

Ensure that all gates are properly closed and secured before operating the machine.

Operators must comply with employer and job site rules and governmental regulations regarding the use of Personal Fall Protective Equipment.

DO NOT ENTER OR EXIT PLATFORM
WHEN ELEVATED

DO NOT exit the platform when elevated

Collision Hazards



ALWAYS check over, under and around the machine for personnel, structures and obstructions before activating any control function and continue to watch for hazards while operating the machine.

Check path before moving for equipment, materials or other obstructions.

Check for overhead obstructions before moving.

DO NOT place the boom or platform against another structure.



Check path before moving for crushing hazards when holding the platform rail.

Reduce travel speed when moving the machine on slopes, when near personnel and obstacles, or when surface conditions are wet, slippery or otherwise limiting.

DO NOT operate in the path of any crane unless the controls of the crane have been locked out and/or precautions have been taken to prevent any possible collision.

Stunt driving and horseplay are PROHIBITED.



Check for personnel and obstructions below the platform when lowering the platform.

Additional Safety Hazards

Explosion and Fire Hazards

DO NOT operate the machine in hazardous locations or locations where potentially flammable or explosive gasses or particles may be present.

Damaged Machine Hazards

Conduct a thorough pre-start inspection of the machine and test all functions before each work shift to check for damage, malfunction and unauthorized modification. Tag and remove a damaged, malfunctioning or modified machine from service. DO NOT use a damaged, malfunctioning or modified machine.

Routine maintenance must be performed by the operator before each work shift. Scheduled maintenance must be performed by a qualified service technician at scheduled intervals. Tag and remove from service any machine that has not had scheduled preventative maintenance performed.

Check that all safety and instructional decals are in place and undamaged.

Check that the operator's, safety and responsibilities manuals are present in the storage container located in the platform. All manuals must be complete, undamaged and readable.

Bodily Injury Hazards

DO NOT operate the machine when there is a hydraulic fluid or air leak. Hydraulic fluid or air under pressure can penetrate and burn skin, damage eyes, and may cause serious injury, blindness, and death. Repair leaks immediately. Fluid leaks under pressure may not always be visible. Check for pin hole leaks with a piece of cardboard, not your hand.

All compartments must remain closed and secure during machine operation. Improper contact with components under any cover will cause serious injury. Only trained maintenance personnel should access compartments. The operator should only access a compartment when performing pre-operation inspection.

Weld Line to Platform Safety (if equipped)

Read, understand and follow all warnings and instructions provided with the welding power unit.

DO NOT connect weld leads or cables unless the welding power unit is turned off at the platform controls.

DO NOT operate unless the weld cables are properly connected.

DO NOT connect the ground lead to the platform. Do not use any part of the machine as a ground for welding.

DO NOT hang wires or cables over guardrails or suspend from the platform.

Battery Safety

Burn Hazards

Batteries contain acid. Always wear protective clothing and eye wear when working with batteries.

Avoid spilling or contacting battery acid. Neutralize battery acid spills with baking soda and water.

Explosion Hazard


Keep sparks, flame and lighted tobacco away from batteries. Batteries emit explosive gas.

Electrocution Hazard

Avoid contact with electrical terminals.


Controls & Components

Component Locations

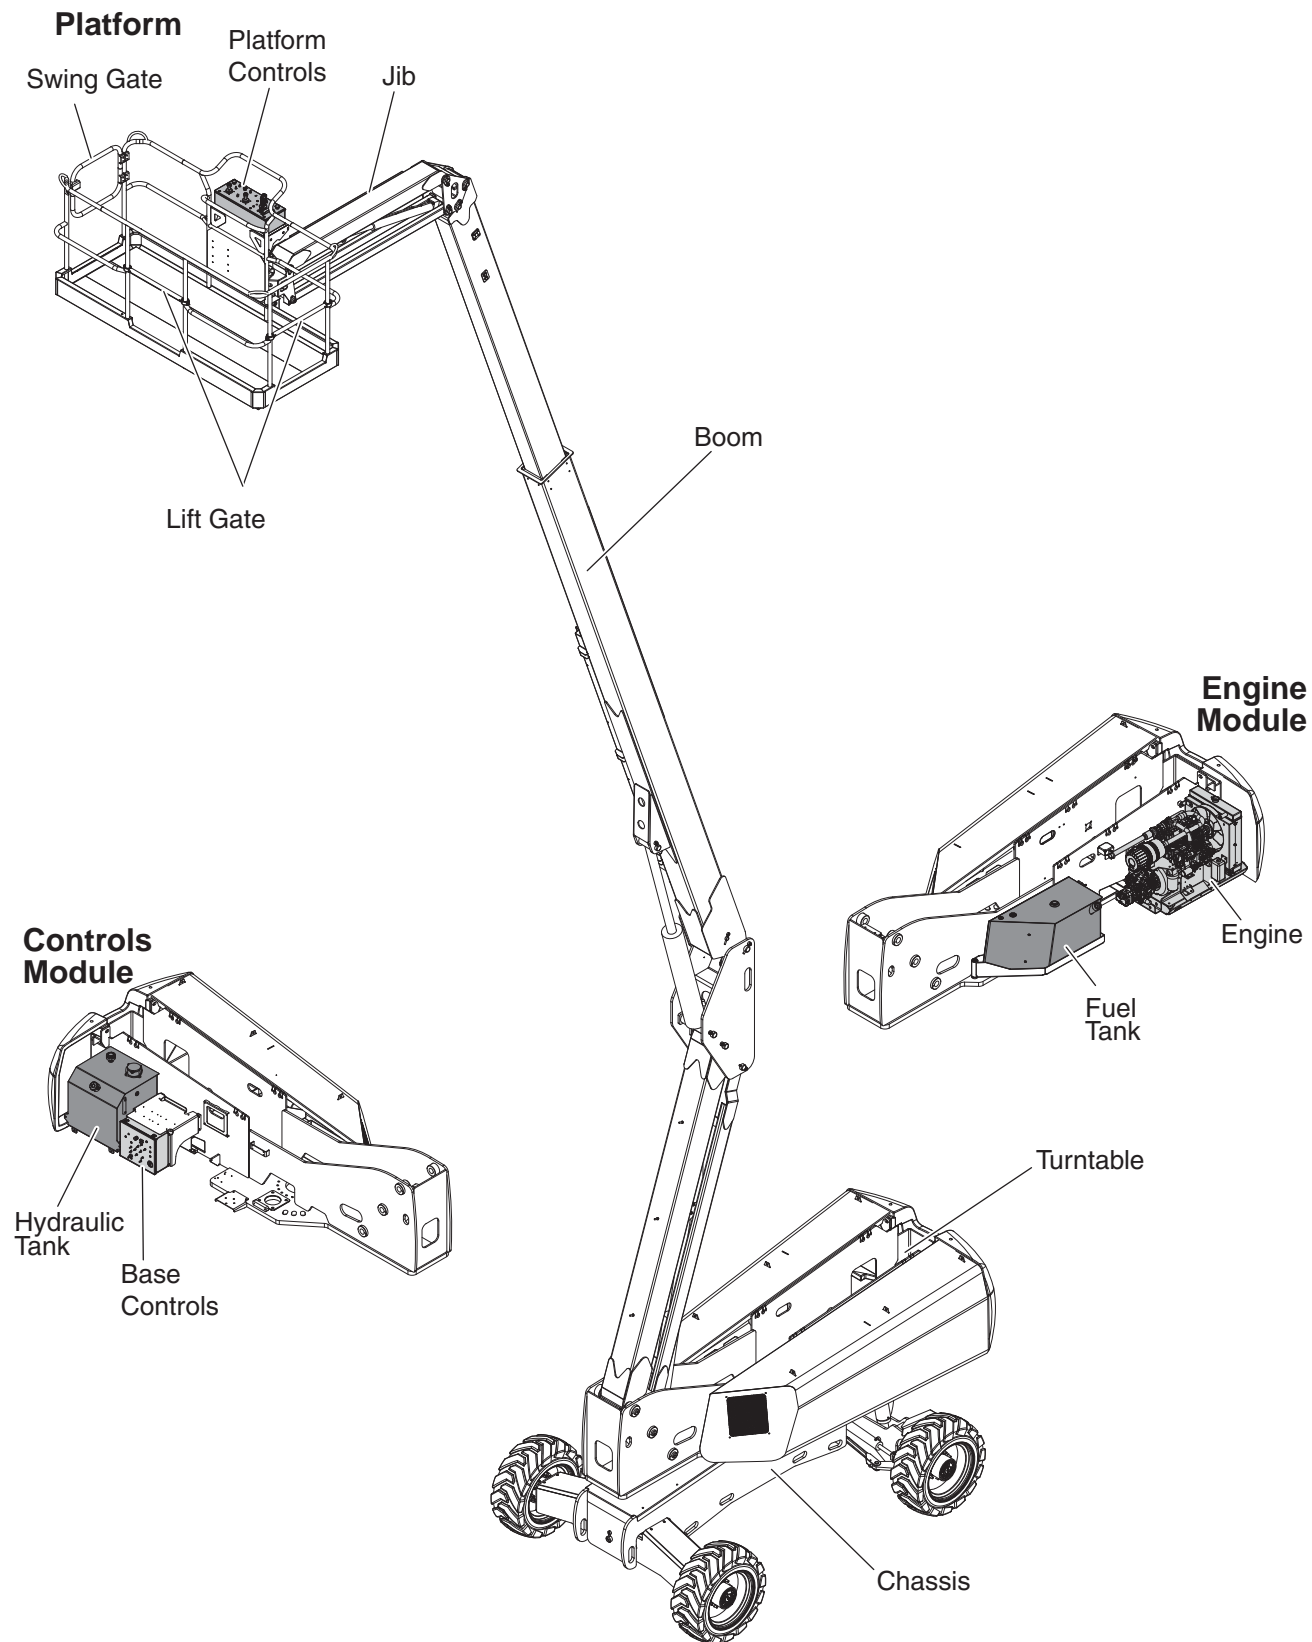

ART_4708

Platform Controls

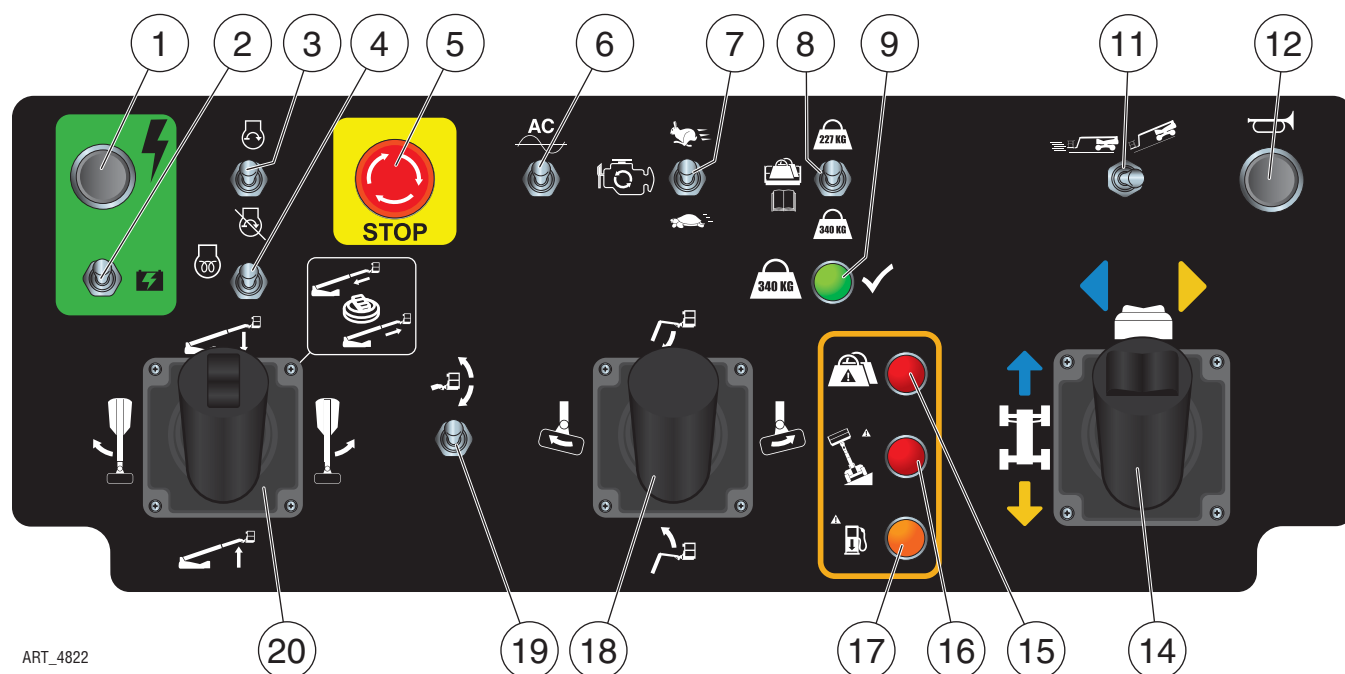

ART_4822


**WARNING**

ALWAYS check over, under and around the machine for personnel, structures and obstructions before activating any control function and continue to watch for hazards while operating the machine

CONTROL		DESCRIPTION
1	Function Enable Button	Press and hold this button to enable boom and platform operations.
2	Auxiliary Power	If normal power fails, press and hold while using Boom Retract and Boom Lower functions.
3	Start/Stop Switch	Move this switch up to start engine. Press this switch down to stop engine.
4	Glow Switch	Move this switch up to activate glow plugs prior to cold starting the engine.
5	Emergency Stop Switch	Press the EMERGENCY STOP switch at any time to stop all machine functions. Turn switch <i>clockwise</i> to reset
6	Generator Switch (Optional)	Turn switch ON to engage optional AC generator. Generator switches off when any other function is enabled.
7	Engine Speed Select Switch	Use this switch to set the engine speed when functions are enabled. Setting this switch to low idle speed allows the operator to move the machine slowly and precisely. Move this switch up for high idle speed and fast function speed. Move this switch down for low idle speed and slow function speed.
8	High Capacity Switch (Optional)	On machines equipped with the High Capacity option, use this switch to choose high or standard capacities. To set the machine to High Capacity (750 lb (340 kg)), retract the boom, then move the switch to the down position. The green High Capacity Indicator Light (#9) will illuminate when this option is properly engaged. This will restrict the Boom Extend function reach and will allow the machine to operate with more weight in the platform. Move this switch up for 500 lb (227 kg) capacity and full boom range. DO NOT exceed the 500 lb (227 kg) unrestricted capacity unless the green High Capacity Indicator Light (#9) is illuminated.

CONTROL		DESCRIPTION	
9	High Capacity Indicator Light (Optional)	<p>Green light illuminates when the High Capacity setting is properly engaged. To engage the High Capacity setting, retract the boom, then move the switch to the down position.</p> <p>If the green light does not illuminate, retract the boom until it turns on.</p> <p>DO NOT exceed the 227 kg unrestricted capacity unless the green High Capacity Indicator Light (#9) is illuminated.</p>	
10	--	--	
11	Speed/Torque Switch	Move this switch to the left for high speed drive. Push this switch to the right for high torque drive.	
12	Horn Button	Press to sound warning horn.	
13	--	--	
14	Drive/Steer Control Lever	Depending on the position of the turntable, the machine may move in unexpected directions when the Drive and Steer functions are activated. The color- and shape-coded arrows on the joystick decal correspond to similar arrow decals on the machine chassis. Be sure to check the arrows on the chassis before using the Drive or Steer functions.	
		Drive Function	Depress the enable bar on front of the control lever, then push the control lever forward or backward to drive the machine.
		Steer Function	Depress the enable bar on front of the control lever, then press the thumb switch on top of the control lever to steer left or right.
15	Overload Indicator Light	<p>Light ON indicates too much weight on the platform.</p> <p>An audible alarm will sound and all machine function will stop.</p> <p>Remove weight from the platform to restore function and continue.</p>	
16	Tilt Indicator Light	This light illuminates and an alarm sounds when the machine is not level. Follow the instructions on page 25 to safely lower the platform.	
17	Low Fuel Indicator Light	If this amber light is illuminated, the fuel level is low. Refuel soon.	
18	Jib/Platform Control Lever	Jib Lift/Lower Function	<p>Depress the enable bar on front of the control lever, then pull the control lever backward to lift the jib.</p> <p>Depress the enable bar on front of the control lever, then push the control lever forward to lower the jib.</p>
		Platform Rotate Function	<p>Depress the enable bar on front of the control lever, then push the control lever right to rotate the platform counterclockwise.</p> <p>Depress the enable bar on front of the control lever, then push the control lever left to rotate the platform clockwise.</p>
19	Platform Level Switch	Press the Function Enable Button (#1) to enable this function, then press this switch up to manually level the platform upward or down to manually level the platform downward.	
20	Boom/Turntable Control Lever	Turntable Rotate Function	Depress the enable bar on front of the control lever, then push the control lever to the left to rotate the turntable clockwise or right to rotate the turntable counterclockwise.
		Boom Lift/Lower Function	<p>Depress the enable bar on front of the control lever, then pull the control lever back to elevate the boom.</p> <p>Depress the enable bar on front of the control lever, then push the control lever forward to lower the boom.</p>
		Boom Extend/Retract Function	<p>Depress the enable bar on front of the control lever, then push the thumb switch on top of control lever back to extend the boom.</p> <p>Depress the enable bar on front of the control lever, then push the thumb switch forward to retract the boom.</p>

Base Controls

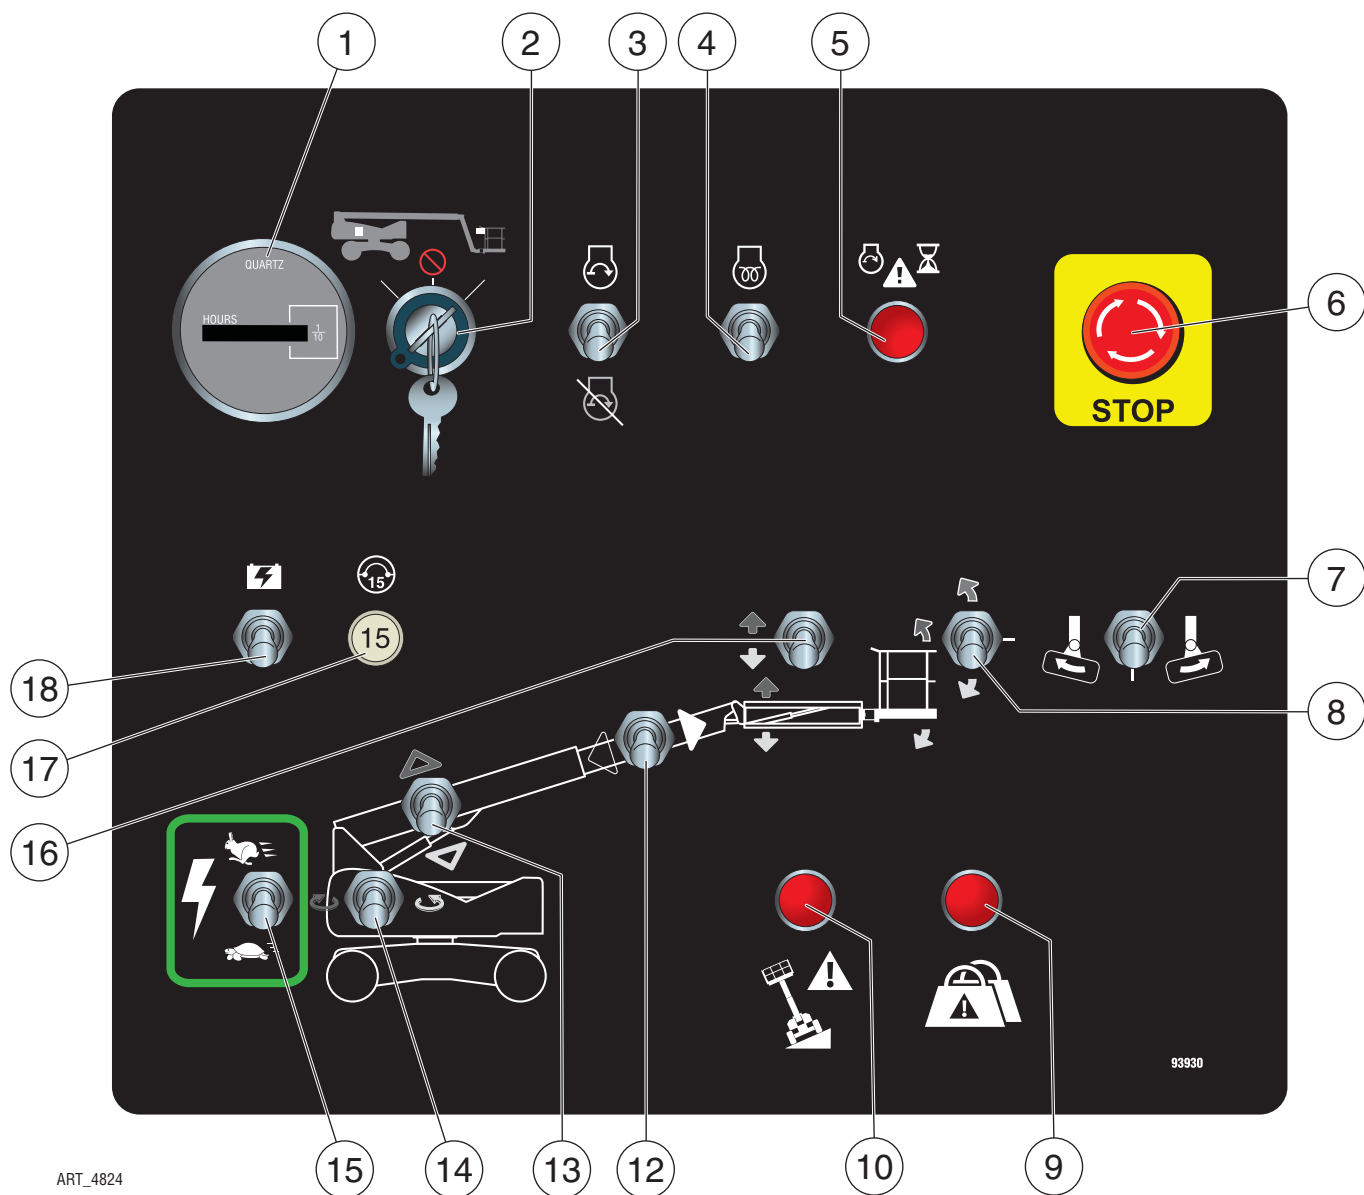

ART_4824



WARNING

ALWAYS check over, under and around the machine for personnel, structures and obstructions before activating any control function and continue to watch for hazards while operating the machine

CONTROL		DESCRIPTION
1	Hour Meter	Indicates total elapsed time of machine operation.
2	Selector Switch	PLATFORM Select to operate from the platform control panel.
		BASE Select to operate from the base control panel.
		OFF Select to stop operation from either control panel.
3	Start/Stop Switch	Push switch up to start engine. Push switch down to stop engine.
4	Glow Switch	Press this switch up to activate glow plugs prior to starting.
5	Starter Time-out Indicator	When this red light is illuminated, the starter circuit is temporarily disabled. The starter circuit times out if the starter is run continuously for 15 seconds without the engine starting. The starter functions resets after approximately 30 seconds.
6	Emergency Stop Switch	Press the EMERGENCY STOP switch at any time to stop all machine functions. Turn switch <i>clockwise</i> to reset
7	Platform Rotate Switch	Press and hold the Function Enable Switch (#15), then move this switch left to rotate the platform clockwise. Press and hold the Function Enable Switch (#15), then move this switch right to rotate the platform counterclockwise.
8	Platform Level Switch	Press and hold the Function Enable Switch (#15), then move this switch up to manually level the rear of the platform upward. Press and hold the Function Enable Switch (#15), then move this switch down to manually level the rear of the platform downward.
9	Overload Indicator Light	Light ON indicates too much weight on the platform. An audible alarm will sound and all machine function will stop. Remove weight from the platform to restore function and continue.
10	Tilt Indicator Light	This light illuminates and an alarm sounds when the machine is not level. Follow the instructions on page 25 to safely lower the platform.
11	--	--
12	Boom Extend/Retract	Press and hold the Function Enable Switch (#15), then move this switch right to extend the boom. Press and hold the Function Enable Switch (#15), then move this switch left to retract the boom.
13	Boom Lift/Lower	Press and hold the Function Enable Switch (#15), then move this switch up to lift the boom. Press and hold the Function Enable Switch (#15), then move this switch down to lower the boom.
14	Turntable Rotate	Press and hold the Function Enable Switch (#15), then move this switch left to rotate the turntable clockwise. Press and hold the Function Enable Switch (#15), then move this switch right to rotate the turntable counterclockwise.
15	Function Enable Switch	Press and hold this switch to enable boom, turntable and platform operations. Press down to operate the controls at slow speed. Press up to operate the controls at higher speed.
16	Jib Lift/Lower	Press and hold the Function Enable Switch (#15), then move this switch up to lift the jib. Press and hold the Function Enable Switch (#15), then move this switch down to lower the jib.
17	Circuit Breaker	Trips when there is excessive electrical load. Push to reset.
18	Auxiliary Power Switch	If normal power fails, press and hold while using boom retract and boom lower functions.

Workplace Inspection

DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.

Inspect the workplace and determine whether the workplace is suitable for safe machine operation. Do this before moving the machine to the workplace.

Be sure the lift is the correct machine for the job.

Be aware of workplace conditions, and continue to watch for hazards while operating the machine.

Workplace Inspection

Before operating the machine, check the workplace for all possible hazards, including but not limited to:

- drop-offs or holes, including those concealed by water, ice, mud, etc.
- sloped, unstable or slippery surfaces
- bumps, surface obstructions and debris
- overhead obstructions and electrical conductors
- other objects or equipment
- hazardous locations and atmospheres
- inadequate surface and support to withstand all load forces imposed by the machine
- wind and weather conditions
- the presence of unauthorized personnel
- other possible unsafe conditions

Operating Instructions & Pre-Operation Function Tests

DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.

This section provides instructions and tests for each function of machine operation. Follow all safety rules and instructions. The operator must conduct inspections and a Functions Test of the machine before each work shift to check that all machine systems are working properly.

Test the machine on a firm level surface with no debris, drop-offs, potholes or overhead obstructions. Perform each step outlined in this section.

This machine shall only be operated by trained and authorized personnel. If multiple operators use this machine, all must be trained, qualified and authorized to use it. New operators must perform a Pre-Start Inspection and Functions Test prior to operating the machine.

Operators must comply with all employer and job site rules and governmental regulations regarding the use of personal protective equipment – see *Fall Protection* on page 3.

DO NOT use a machine that is malfunctioning. If any function does not perform as described, tag the machine and remove for repair by a qualified service technician. After repairs are completed, a Pre-Start Inspection and Functions Test must be performed before using the machine.



ALWAYS check over, under and around the machine for personnel, structures and obstructions before activating any control function and continue to watch for hazards while operating the machine

Prestart

- Perform *Prestart Inspection* (see page 33).
- Check Emergency Stop Switches at both the base and platform controls – turn clockwise to reset.




ART_3353


Starting Engine from Base Controls

Be sure that the upper and lower EMERGENCY STOP Switches are reset.


- **Lower Control Box:** Turn Key Switch to CHASSIS.

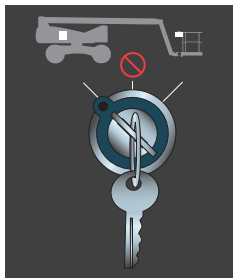

ART_4714

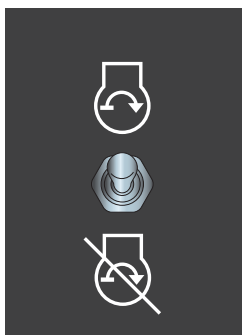

ART_4722

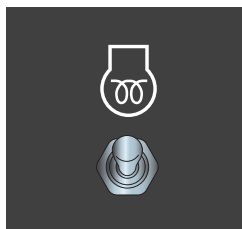

ART_4723

- Move the Start/Stop switch to the right to start. Release the switch when the engine starts.

- **Cold Start:** Move and hold the Glow Switch up as indicated in the Preheat table.
- With the Glow switch held up, press and hold the Start/Stop switch to the right until the engine starts.
- Release both switches once the engine starts.

Preheat Table


Ambient Temperature	Preheat Time
Above 10°C	5 Seconds
10°C to -5°C	10 Seconds
Below -5°C	20 Seconds
20 Seconds = Limit of Continuous Use	

- To protect the starter motor, power will cut off to the starter circuit when the starter motor has run continuously for 15 seconds without starting the engine. The Starter Circuit Cutout indicator light will turn on and power to the starter circuit will cut out for 30 seconds.



ART_4724

Starting Engine from Platform Controls

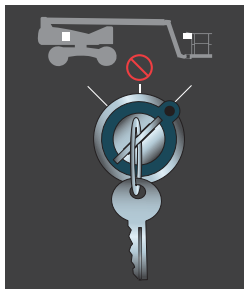

ART_4721

- **Lower Control Box:** Turn the Key Switch to PLATFORM.



ART_4725

- **Platform Control Box:** Move the Start/Stop switch UP to start. Release the switch when the engine starts.



ART_4726


- **Cold Start:** Move and hold the Glow Switch up as indicated in the Preheat table.
- With the Glow switch held up, press and hold the Start/Stop switch UP until the engine starts.
- Release both switches once the engine starts.

Preheat Table

Ambient Temperature	Preheat Time
Above 10°C	5 Seconds
10°C to -5°C	10 Seconds
Below -5°C	20 Seconds
20 Seconds = Limit of Continuous Use	

- To protect the starter motor, power will cut off to the starter circuit when the starter motor has run continuously for 15 seconds without starting the engine. The Starter Circuit Cutout indicator light will turn on at the Base Control panel and power to the starter circuit will cut out for 30 seconds.

Base Controls Operation & Pre-Operation Functions Test

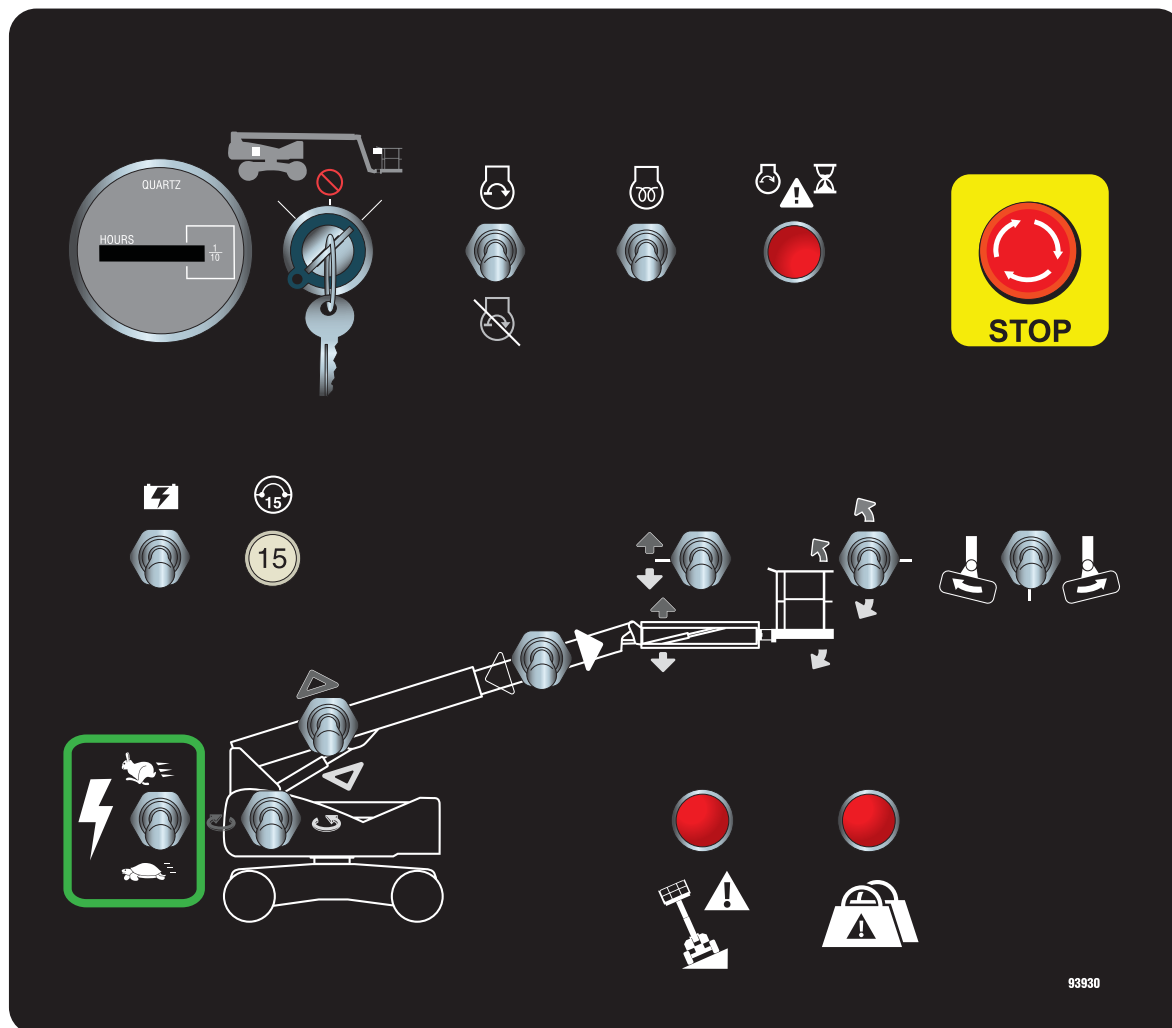


ART_4824

**WARNING**


ALWAYS check over, under and around the machine for personnel, structures and obstructions before activating any control function and continue to watch for hazards while operating the machine

Emergency Stop

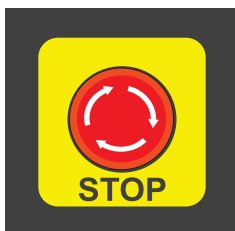

ART_3353

- Press the Emergency Stop Switch at any time to stop all machine functions.
- Turn switch *clockwise* to reset.
- Depress the EMERGENCY STOP switch whenever the machine is not in operation. Turn switch *clockwise* to reset.

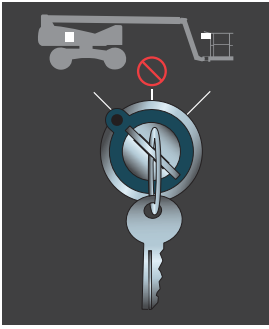

ART_4714

Select BASE Operation

- Turn the Selector Key Switch to BASE.



ART_4715


Function Enable

- Press and hold this switch to enable and operate machine functions from the base controls.
- Press down to operate the controls at slow speed.
- Press up to operate the controls at higher speed.
- Releasing this switch will disable machine functions.



Do not elevate the platform if the machine is not on a firm level surface.

Base Control Boom/Platform Functions

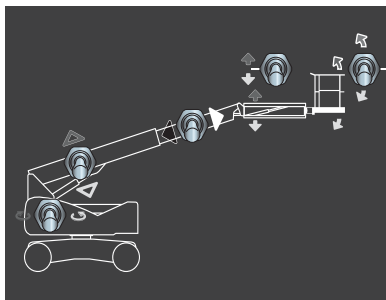

ART_4716

Boom Extend/Retract

- Move and hold the Extend/Retract switch on the base control panel to extend or retract the boom.

Test Operation

- Press and hold the Function Enable switch.
- Extend boom until it stops. Boom should extend to maximum length.
- Retract the boom until it stops. Boom should retract to minimum length.
- Releasing the switch will stop boom extension or retraction.
- Pressing the Emergency Stop Switch will stop boom extension or retraction.

Boom Lift/Lower

- Press and hold the Boom Lift/Lower switch on the base control panel to lift or lower the boom.

Test Operation


- Press and hold the Function Enable switch.
- Raise the boom until it stops.
- Lower the boom until it stops. Boom should rest on the turntable pads.
- Releasing the switch will stop Boom Lift/Lower function.
- Pressing the Emergency Stop Switch will stop boom lift/lower function.

Jib Lift/Lower


- Press and hold the Jib Lift/Lower switch on the base control panel to lift or lower the jib.

Test Operation


- Press and hold the Function Enable switch.
- Raise the jib until it stops.
- Lower the jib until it stops.
- Releasing the switch will stop Jib Lift/Lower function.
- Pressing the Emergency Stop Switch will stop jib lift/lower function.

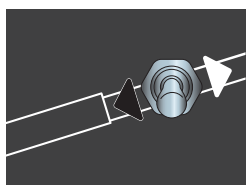


ART_4717

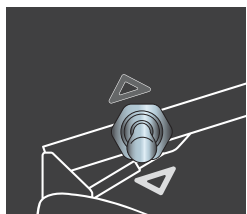

ART_4718

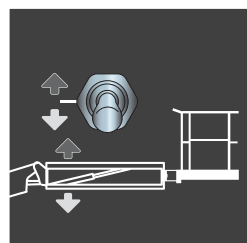

ART_4720

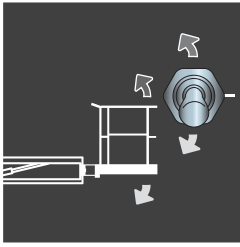

ART_4719

Platform Level

The platform will automatically level as the boom is lifted or lowered. The Platform Level function allows manual level adjustment of the platform. Manual leveling may be used to adjust the platform within 5° of level.

- Press and hold the Platform Level switch on the base control panel to manually adjust the level of the platform.

Test Operation

- Press and hold the Function Enable switch.
- Push the switch up and down. The platform level should change accordingly.
- Releasing the switch will stop platform level function.
- Pressing the Emergency Stop Switch will stop platform level function.

Platform Rotate

- Press and hold the Platform Rotate switch on the base control panel to rotate the platform.

Test Operation

- Press and hold the Function Enable switch.
- Push the switch left and right. The platform should rotate accordingly.
- Releasing the switch will stop platform rotate function.
- Pressing the Emergency Stop Switch will stop platform rotate function.




ART_4720

Tilt Indicator Light




STOP ALL MOVEMENT if Tilt Alarm sounds.

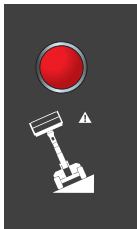

ART_3337b

Light ON and alarm sounding indicates an unsafe condition.

- STOP ALL MOVEMENT. The machine is not level.
- Look at the diagram to determine the condition of the counterweight as it relates to the slope, then use extreme caution while following the instructions. DO NOT rotate the turntable while lowering.

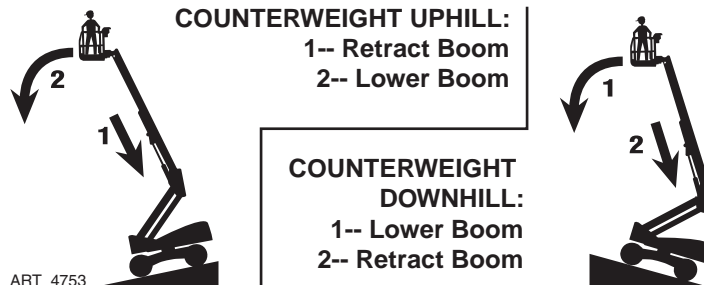

ART_4753

- If the Tilt Alarm sounds while the counterweight is uphill, first retract the boom, then lower the boom.
- If the Tilt Alarm sounds while the counterweight is downhill, first lower the boom, then retract the boom.
- Move the machine to a firm, level surface before continuing operation.



ART_3528

Overload Light and Alarm

- Light ON indicates too much weight on the platform.
- An audible alarm will sound and all machine function will stop.
- Remove weight from the platform to restore function and continue.


Platform Control Operation & Pre-Operation Functions Test

Entering The Platform

Personnel shall enter and exit the platform only at the Personnel Entry Gates, and only when the boom is fully retracted and lowered.


Ensure that all Personnel Entry Gates are properly closed and that the Swing Gate is latched in the closed position before operating the machine.

Personnel Entry Gates

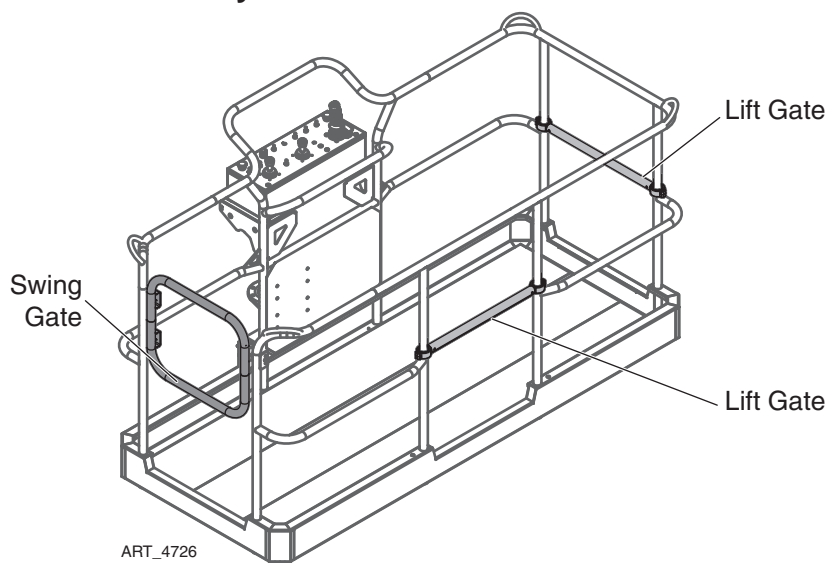

ART_4726

Fall Protection

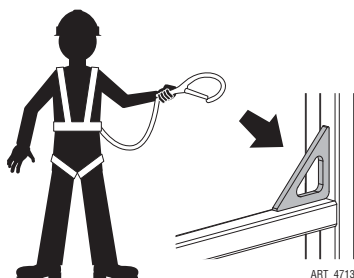

ART_4713


Personal fall protection equipment (PFPE) is required when operating this machine.

All PFPE must comply with employer and job site rules and applicable governmental regulations, and must be inspected and used in accordance with the PFPE manufacturer's instructions.

ALWAYS wear approved fall protection, properly attached to a designated anchor point, when operating the machine. Adjust the lanyard length to keep it as short as possible with respect to the work task being performed.

DO NOT attach more than one lanyard per anchor point.

Platform Control Panel

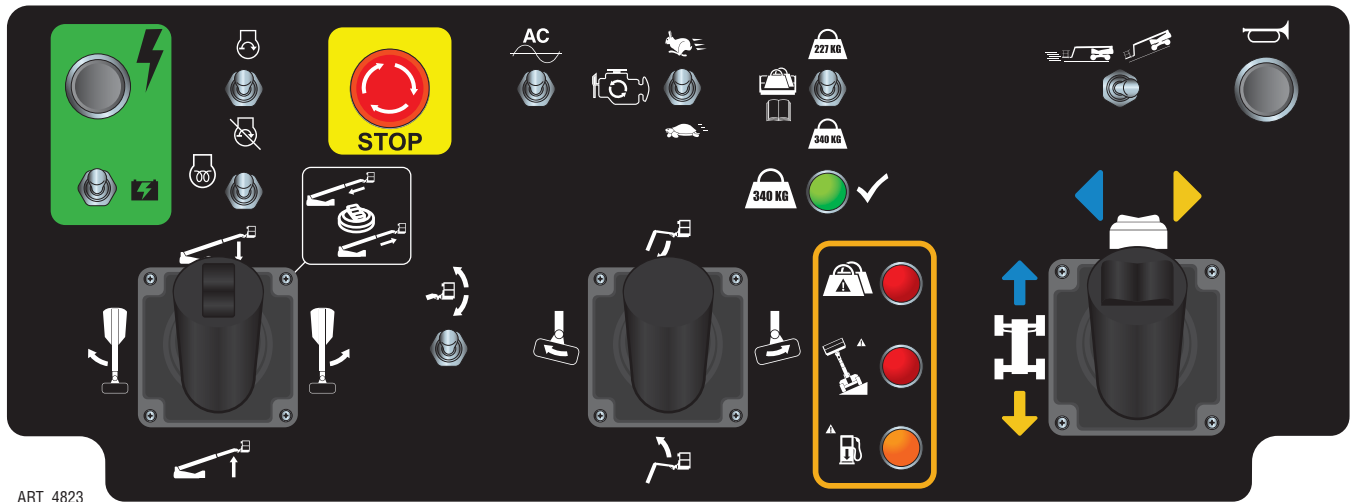

ART_4823



WARNING


ALWAYS check over, under and around the machine for personnel, structures and obstructions before activating any control function and continue to watch for hazards while operating the machine.

DO NOT hang anything over any control handle at any time.

Function Enable At Platform Controls

Note: If any Function Enable trigger or button is depressed for seven (7) seconds without any function being activated, the Enable System times out and deactivates. Release the trigger or button and reengage to activate the Function Enable System.


The Drive function and most boom functions are enabled by squeezing the trigger at the front of the appropriate control handle.

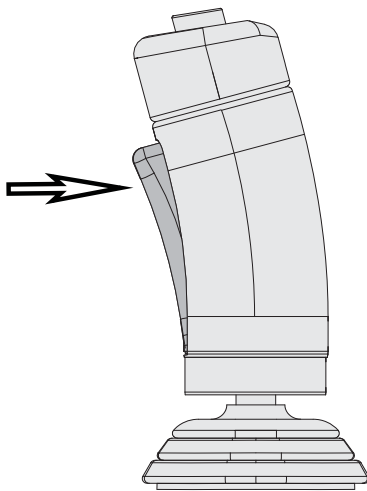

ART_4729

Platform Level Function Enable

The Platform Level Function is enabled by pressing and holding the green Enable button at the top left of the Platform Control Station.

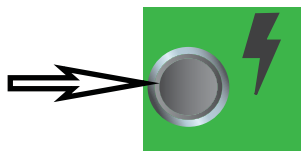

ART_4728

Platform Operations Test




ART_3353

Emergency Stop

- Press the EMERGENCY STOP switch at any time to stop all machine functions.
- Turn switch *clockwise* to reset.
- Depress the EMERGENCY STOP switch whenever the machine is not in operation. Turn switch *clockwise* to reset.



Activation of the EMERGENCY STOP switch will apply brakes immediately. This will cause sudden platform movement as the machine comes to an abrupt stop. Brace yourself and secure objects on the platform during operation of machine.

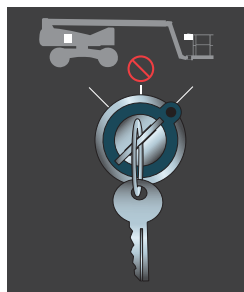

ART_4721

Select PLATFORM Operation


- **Base Controls:** Turn the selector switch to PLATFORM.



ART_4725

Operate from Platform

- Enter the platform through one of the personnel entry gates. Close and secure the entry.
- Press the Start/Stop switch UP to start. Release the switch when the engine starts.
- Press the Horn Button to verify proper operation.

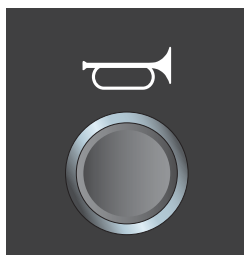


ART_3359

Tilt Indicator Light




STOP ALL MOVEMENT if Tilt Alarm sounds. Death or Serious Injury may occur.

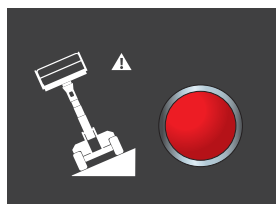

ART_3363b

Light ON and alarm sounding indicates an unsafe condition.

- STOP ALL MOVEMENT. The machine is not level.
- Look at the diagram to determine the condition of the counterweight as it relates to the slope, then use extreme caution while following the instructions. DO NOT rotate the turntable while lowering.

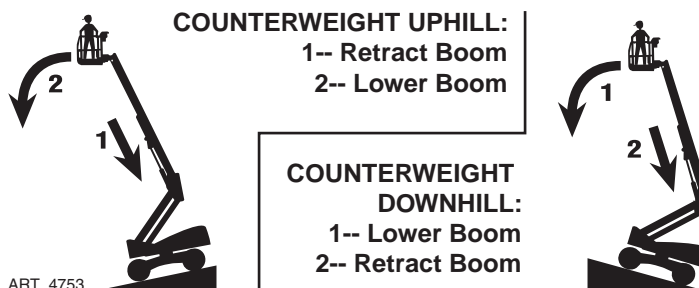


ART_4753

- If the Tilt Alarm sounds while the counterweight is uphill, first retract the boom, then lower the boom.
- If the Tilt Alarm sounds while the counterweight is downhill, first lower the boom, then retract the boom.
- Move the machine to a firm, level surface before continuing operation.

Low Fuel Indicator Light

Light ON indicates a low-fuel alert condition.


- Refuel soon.

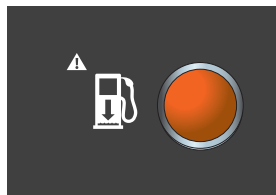

ART_3363


Overload Light and Alarm

- Light ON indicates too much weight on the platform.
- An audible alarm will sound and all machine function will stop.
- Remove weight from the platform to restore function and continue.

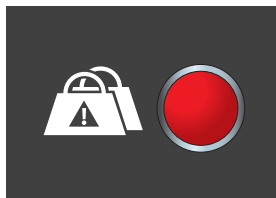

ART_3529

Drive Control Lever Operation

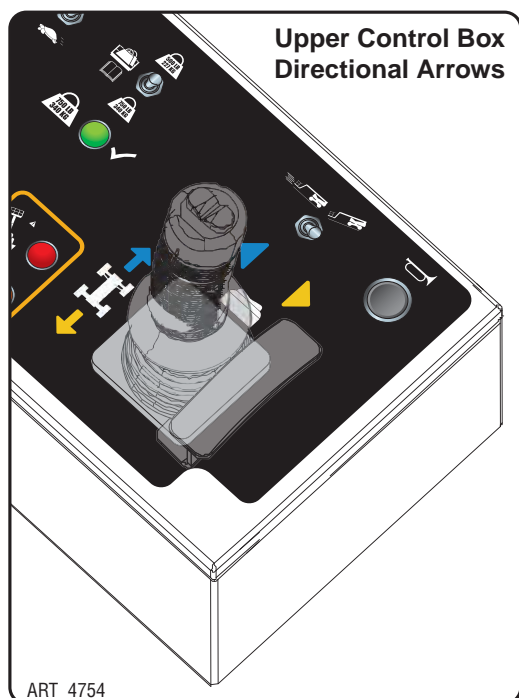

Depending on the orientation of the boom and chassis, the Drive and Steer functions may move the machine in directions opposite of the motion of the control lever. The color- and shape-coded arrows on the control lever decal correspond to similar arrow decals on the machine chassis (see illustrations). Be sure to check the arrows on the chassis before activating and using the Drive or Steer functions.

- Drive Function speed is proportional and is controlled by the positional of the control lever. The further it is moved from the neutral (center) position, the faster the speed will be.
- When the boom is elevated out of the stowed position, the maximum drive speed is reduced to 0.5 mph (0.8 km/h). Drive function speed is still fully proportional to the position of the drive control handle.
- The control lever returns to the neutral (center) position when released.
- Steering Function is not proportional.

Note: The Steering Function **does not** automatically return the steering wheels to the centered position. Always check the position of the steering wheels before and during machine operation.

Test Operation




- Drive: Squeeze the enable trigger, then move the control lever in the desired direction of movement. The further it is moved from the neutral (center) position, the faster the speed will be.
- Stop: Return the control lever to the neutral (center) position. Releasing the control lever will also stop the machine. Releasing the trigger will result in a rapid stop.
- Extend the boom approximately 3 feet (1 m), then drive the machine. Speed should be reduced significantly from the fully-retracted, fully-lowered speed. Retract the boom.
- Elevate the boom approximately 10°, then drive the machine. Speed should be reduced significantly from the fully-retracted, fully-lowered speed. Lower the boom.
- Steering: Squeeze the enable trigger, then press the thumb switch on top of the control lever to steer in the desired direction.

Note: The Steering Function **does not** automatically return the steering wheels to the centered position. Stay alert to the position of the steering wheels before and during machine operation.

Drive & Steer Directional Arrows



Pay careful attention to the Chassis Drive & Steer arrows for machine direction.

Upper Control Box

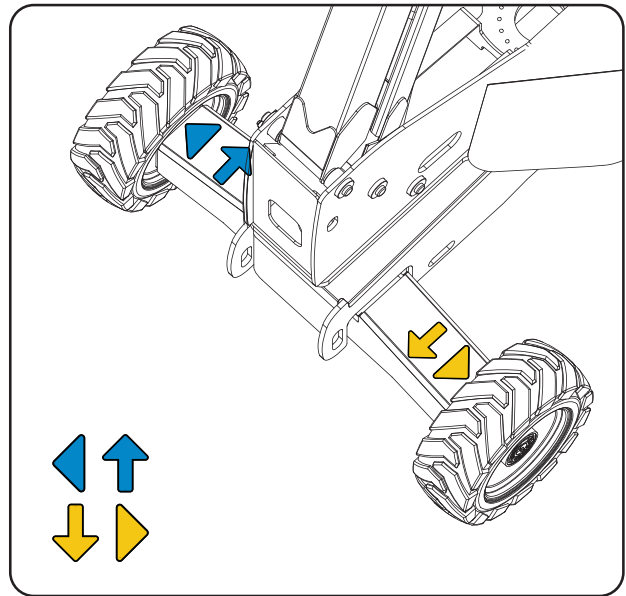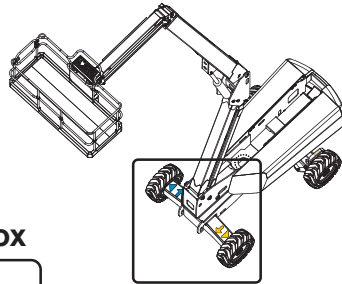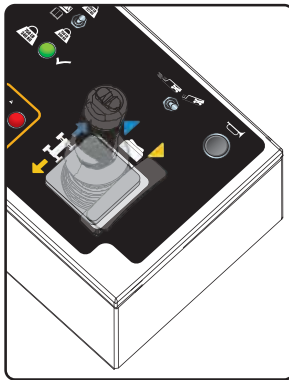

Platform over non-steering wheels


Platform over steering wheels

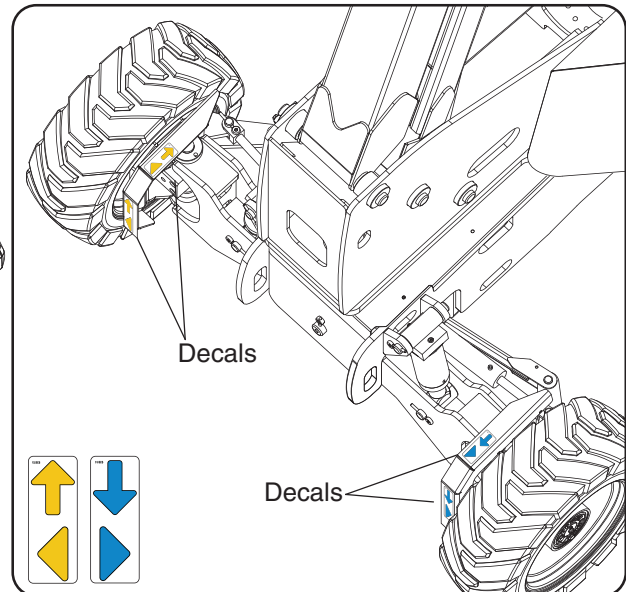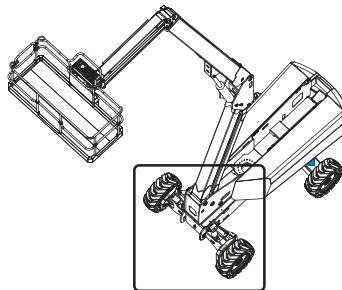

When the platform is over the steering wheels, the machine moves in the opposite direction of the Control Lever.

ART_4747


Speed/Torque Switch

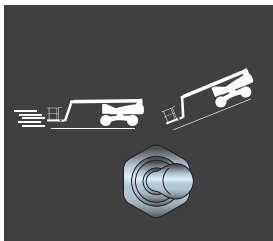

Move this switch to the left for high speed drive. Push this switch to the right for high torque drive.

ART_4757

Engine Speed Select

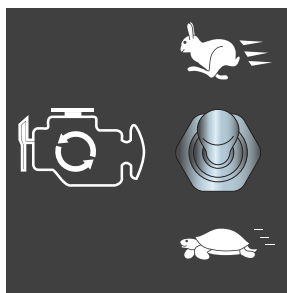

ART_4755

Use this switch to set the engine speed when functions are enabled. Setting this switch to low idle speed allows the operator to move the machine slowly and precisely.

Move this switch up for high idle speed and fast function speed.

Move this switch down for low idle speed and slow function speed.



ART_4731

Boom Functions Control Lever

This control lever controls the Boom Extend/Retract, Boom Lift/Lower and Turntable Rotate functions. The control lever is fully proportional for the Boom Lift/Lower and Turntable Rotate functions.

These functions are enabled by pressing the trigger on the front of the control lever.

Test Operation

To test the Boom Extend/Retract function:

- Squeeze the enable trigger, then press and hold the thumb switch on top of the control lever rearward until the boom reaches full extension.
- Squeeze the enable trigger, then press and hold the thumb switch forward to retract the boom.

To test the Boom Lift/Lower function:


- Squeeze the enable trigger, then pull the control handle back to lift the boom. Lift the boom completely.
- Squeeze the enable trigger, then push the control handle forward to lower the boom. Lower the boom to its stowed position.

To test the Turntable Rotate function:

- Squeeze the enable trigger, then push the control handle to the left to rotate the turntable clockwise.
- Squeeze the enable trigger, then push the control handle to the right to rotate the turntable counterclockwise.

Platform Level Switch

The platform will automatically level as the boom is lifted or lowered. The Platform Level function allows manual level adjustment of the platform. Manual leveling may be used to adjust the platform within 5° of level.

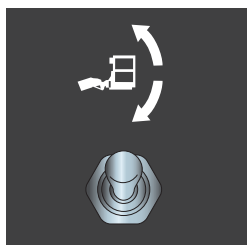


ART_4732

Test Operation

- Press and hold the Function Enable button.
- Push the Platform Level switch up or down to adjust the position of the platform.
- Platform Level power is disabled upon exceeding 5° out of level when out of the stowed position. Power is allowed only to the direction that returns the platform toward level.

Platform/Jib Functions Control Lever

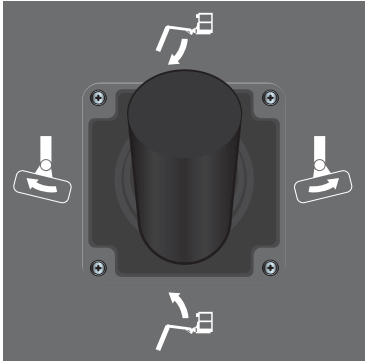

ART_4733

The Platform/Jib Functions control lever controls the Platform Rotate and Jib Lift/Lower functions. The control lever is fully proportional for both functions.

These functions are enabled by pressing the trigger on the front of the control lever.

Test Operation

To test the Jib Lift/Lower function:

- Squeeze the enable trigger, then pull the control lever back to raise the jib.
- Squeeze the enable trigger, then push the control lever forward to lower the jib.

To test the Platform Rotate function:

- Squeeze the enable trigger, then push the control lever left to turn the platform clockwise.
- Squeeze the enable trigger, then push the control lever right to turn the platform counter clockwise.

High Capacity Switch (Optional)



ART_4826

ON MACHINES EQUIPPED WITH THE HIGH CAPACITY OPTION, use the High Capacity Switch to choose high or standard capacities.

To set the machine to Standard Capacity (227 kg)


Move this switch to the up (227KG) position.

To set the machine to High Capacity (340 kg)

Retract the boom, then move the switch to the down (340 KG) position. This will restrict the Boom Extend function reach and will allow the machine to operate with more weight in the platform. The green High Capacity Indicator Light will illuminate when this option is properly engaged.

DO NOT exceed the 227 kg unrestricted capacity unless the green High Capacity Indicator Light is illuminated.

Shutdown Procedure

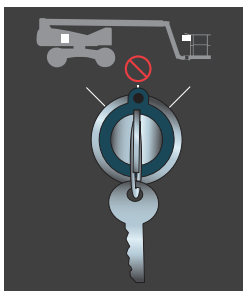

ART_4734

- When finished with the machine, place the platform in the stowed position.
- Park the machine on a level surface.
- Carefully exit the platform using a constant three (3) point dismount/grip.
- Turn the Selector Key Switch to the OFF position and remove the key to prevent unauthorized use. Always put the switch in OFF position when leaving the machine at the end of the work day.


Auxiliary Power System & Test

WARNING

If primary power fails while the platform is elevated, use the Auxiliary Power System to safely lower the platform.

Do not climb down the boom assembly or exit the platform while elevated.

ALWAYS check over, under and around the machine for personnel, structures and obstructions before activating any control function and continue to watch for hazards while operating the machine

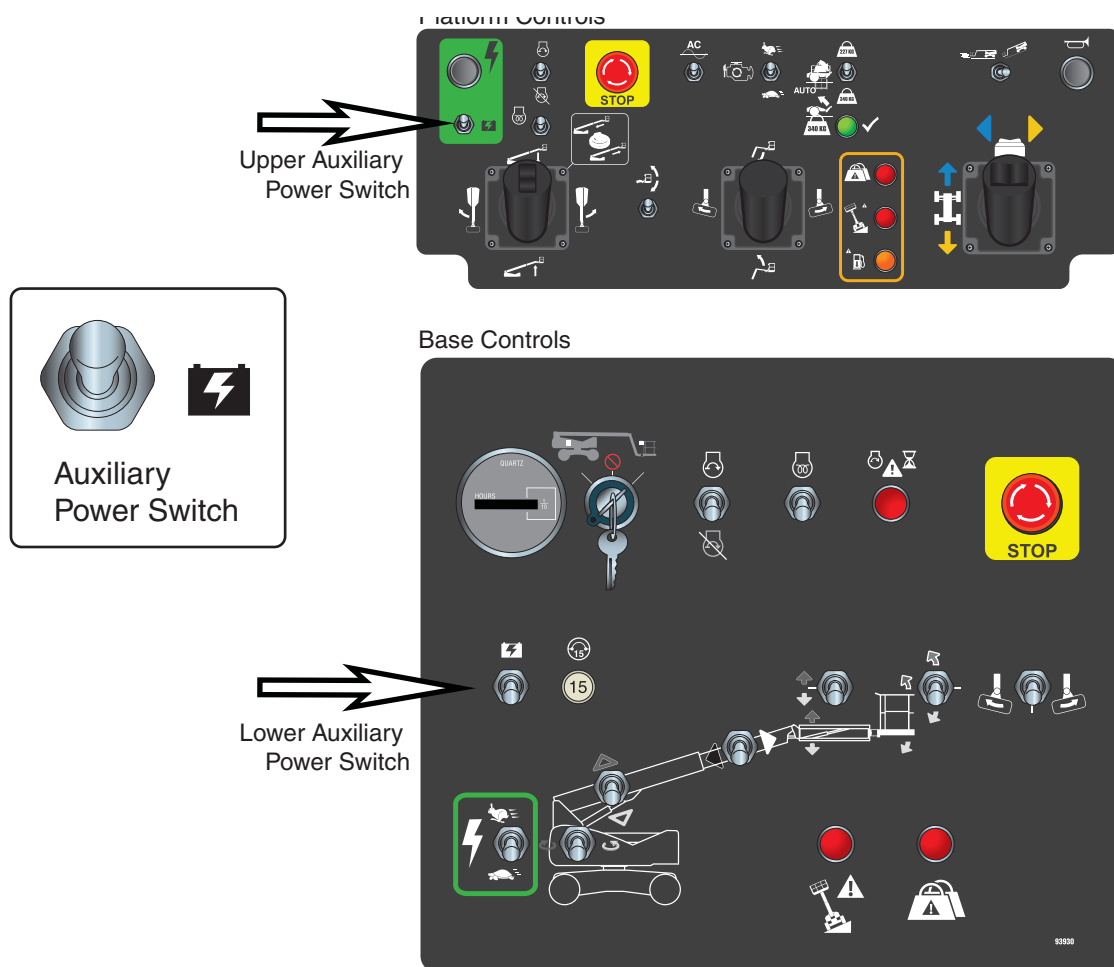

The Auxiliary Power System is used to lower the platform in case of primary power failure. To lower the platform, activate the Auxiliary Power Switch to run the auxiliary hydraulic pump.

This function uses battery power from the auxiliary battery to lower the platform.

- Push and hold the Auxiliary Power Switch, then use the Boom Extend/Retract function to retract the boom.
- Continue to hold the Auxiliary Power Switch, then use the Boom Lift/Lower function to lower the boom.

Note: The Auxiliary Power System is disabled when the engine is running.

Note: The Auxiliary Power Switch serves as an enable switch. It is not necessary to use the primary function enable switch.

Test Operation

Test the Auxiliary Power System from both control stations.

Test any lift function for 5-10 seconds to verify proper operation.

Machine Inspections and Maintenance

DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.

Tag and remove a damaged, malfunctioning or modified machine from service. DO NOT use a damaged, malfunctioning or modified machine.

Use the Pre-Start Inspection to determine what Routine Maintenance is required. The operator may perform only the routine maintenance items specified in this manual.

IMPORTANT—Scheduled maintenance inspection checklists are included in this manual for use only by qualified service technicians. Only qualified service technicians may perform repairs to the machine. After repairs are completed, the operator must perform a Pre-Start Inspection before proceeding to the Functions Test.

IMPORTANT—All waste materials and fluids must be disposed of in accordance with applicable government guidelines and regulations.



Hydraulic fluid under pressure can penetrate and burn skin, damage eyes, and may cause serious injury, blindness, and death. Repair leaks immediately. Fluid leaks under pressure may not always be visible. Check for pin hole leaks with a piece of cardboard, not your hand.



NEVER perform work under the boom assembly with the platform elevated without first supporting the boom assembly.

Failure to perform scheduled maintenance at recommended intervals may result in injury or death. Keep maintenance records current and accurate.

Immediately report any damage, defect, unauthorized modification or malfunction to your supervisor. Any defect must be repaired prior to continued use. DO NOT use a damaged, modified or malfunctioning machine.

DO NOT hang anything over any control handle at any time.



Never leave hydraulic components or hoses open. Plug all hoses and fitting immediately after disassembly to protect the system from outside contamination (including rain).

Never open a hydraulic system when there are contaminants in the air.

Always clean the surrounding area before opening hydraulic systems.

Use only recommended lubricants. Improper lubricants or incompatible lubricants may cause as much damage as no lubrication.

Watch for makeshift "fixes" which can jeopardize safety as well as lead to more costly repair.

Inspection and maintenance should be performed by qualified personnel familiar with the equipment.

Supporting The Boom Assembly


**WARNING**

NEVER perform work under the boom assembly with the platform elevated without first supporting the boom assembly.

DO NOT work beneath the boom assembly with the platform elevated unless the boom assembly is properly supported.

Use a sling and overhead hoist rated for 3 tons (2700 kg) or more.

Thread the sling through the opening in the boom post as shown below. Connect it to the overhead hoist, then lift enough that the weight of the boom assembly is being supported by the hoist.

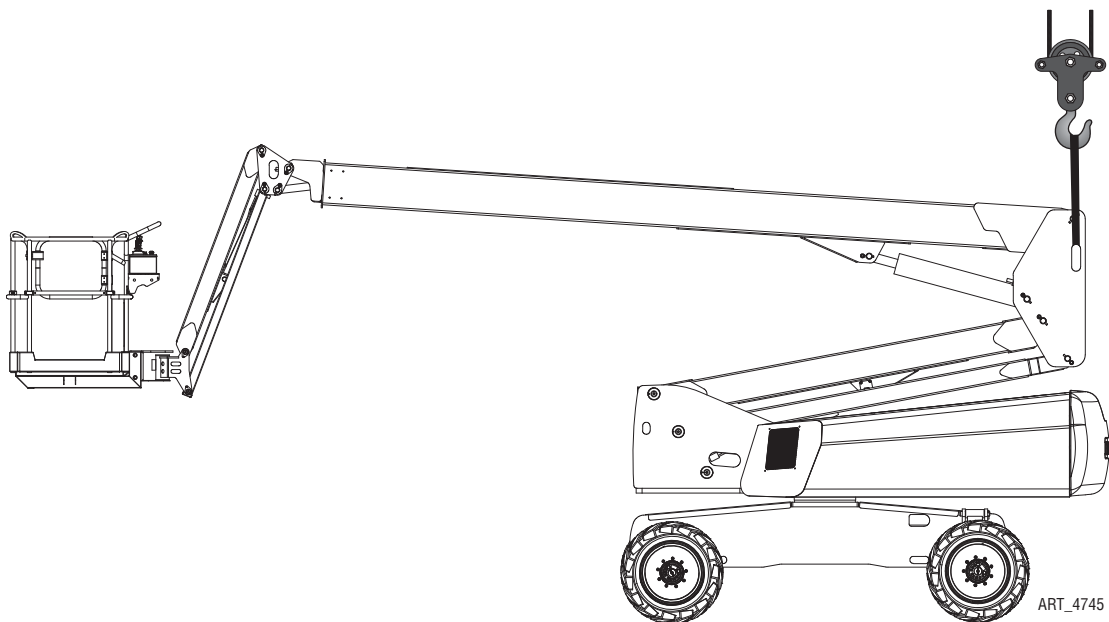

Pre-Start Inspection Checklist

The operator must conduct a Pre-Start Inspection of the machine before each work shift.

DO NOT use a damaged or malfunctioning machine.

Initial	Description
_____	Check that the operator's manual and manual of responsibilities are in the storage container located on the platform.
_____	Perform a visual inspection of all machine components. Look for missing parts; torn or loose hoses; hydraulic fluid leaks; loose, torn or disconnected wires; damaged tires; etc.
_____	Check all structural components of the machine for cracked welds, corrosion and collision damage.
_____	Check the security and condition of the lanyard attachment points.
_____	Check all controls for any damage and proper function.
_____	Check all hoses and the cables for worn or chafed areas.
_____	Check the platform rails and sliding mid-rail entries for damage or modification. Check the swing gate for proper operation and latching.
_____	Check that all warning and instructional decals are legible and secure.
_____	Check the tires for damage.
_____	Check the tire pressure (not required for foam filled tires).
_____	All structural components, pins and fasteners are present and properly tightened.
_____	Check for fluid leaks.
_____	Check hydraulic fluid level (check with platform fully lowered).
_____	Check engine oil level.
_____	Check engine coolant level at overflow bottle.
_____	Check fuel tank level.
_____	Secure all covers, panels and hoods.
_____	Ensure that all gates are properly closed and secured before operating the machine.

Frequent Inspection Checklist



This checklist must be used at 3-month intervals or every 150 hours of machine use, whichever occurs first. Failure to do so could result in death or serious injury. The frequency and extent of periodic examinations may depend on national and/or government regulations.

Frequent Maintenance Inspections should be conducted by qualified service technicians only. Photocopy this page for reuse. Keep inspections records up to date. Record and report all discrepancies to your supervisor.

Model Number _____ **Serial Number** _____ **Hour Meter Reading** _____

Initial	Description
_____	Perform all checks listed on Pre-Start Inspection.
_____	Replace engine oil and filter after the first 100 hours of service.
_____	See Kubota engine operator's manual for other engine maintenance information.
_____	Inspect the condition of hydraulic fluid in the reservoir. Oil should be a clear amber color.
_____	Check battery electrolyte level and connections.
_____	Check wheel lug nuts for proper torque (see "Machine Specifications").
_____	Check if tires are leaning in or out.
_____	Inspect all structure and pivot points for signs of wear and/or damage.
_____	Check the pin joints and retaining rings for security.
_____	Inspect the entire machine for signs of damage, broken welds, loose bolts, improper or makeshift repairs.
_____	Check that the platform does not drift down with a full load.
_____	Check all wire connections for tightness and corrosion.
_____	Check the operation speeds to ensure they are within specified limits (see <i>Specifications</i>).
_____	Check the Auxiliary Power System.
_____	Clean and lubricate all push button switches with dry lubricant and ensure that the switches operate freely in all positions.
_____	Check the tightness of the platform frame and the linkage pins.
_____	Check the overall platform and guardrail component security.
_____	Check the electrical mounting and hardware connections for security.
_____	Check the steering kingpins for excessive play.

Additional maintenance requirements for severe conditions

- _____ If the machine is used in very dusty, exceptionally hot or exceptionally cold conditions, replace hydraulic filter element and air filter element (under normal conditions replace every 6 months or 300 hours, whichever comes first).

DATE _____ **INSPECTED BY** _____

Annual Inspection Report



Annual Inspection Report

MEC Aerial Platform Sales Corp.

1401 S. Madera Avenue • Kerman, CA 93630 USA
877-632-5438 • 559-842-1500 • Fax: 559-842-1520

Date _____
Serial Number _____
Model Number _____
Date Of Last Inspection _____
Date Placed In Service _____

Customer _____
Street _____
City/State/Zip _____
Phone Number _____
Contact _____

Dealer _____
Street _____
City/State/Zip _____
Phone Number _____
Contact _____

- Check each item listed below.
- Use proper Operator's, Service and Parts manual for specific information and settings.
- If an item is found to be "Unacceptable" make the necessary repairs and check the "Repaired" box.
- When all items are "Acceptable", the unit is ready for service.

Key: 'Y' Yes/Acceptable
'N' No/Unacceptable
'R' Repaired
'U' Unnecessary/Not Applicable

Y N R U				Y N R U				Y N R U			
Decals:				Base:				Operation:			
Proper Placement/Quantity				Cover Panels Secure				Wires Tight			
Legibility				Base Fasteners Tight				Switches Secure			
Correct Capacity Noted				Bolts Tight				All Functions Operational			
Rails:				Front Axle Mounting (4WD)				Auxiliary Power Operational			
All Rail Fasteners Secure				Rear Axle Mounting (4WD)							
Entry Gate Closes Properly				Front Axle/Front Wheel Assemblies:				Slow Speed Proximity Switch:			
Manual/Safety Data In Box				Wheel Motors-Mounting Secure				Set Properly			
Platform:				Wheel Motors-Leaks				Proximity Switches Adjusted			
Platform Bolts Tight				Lug Nuts Torqued Properly				Pressures & Hydraulics:			
Platform Structure				Steering Cylinder Pins Secure				Oil Filter Secure/Chg			
All Decals Present And Legible				Swing Bearing Lubed				Oil Level Correct/Chg			
				Wheel Assemblies:				Steering Pressure Set			
				Brakes Operational				Drive Pressure Set			
				Wheel Motors-Mounting Secure				Lift Pressure Set			
Wire Harnesses:				Wheel Motors-Leaks				Engine:			
Mounted Correctly				Lug Nuts Torqued Properly				Engine Mounts Tight			
Physical Appearance				Axle Lock Operational				Fuel Lines Secure			
110/220V Outlet Safe/Working								Fuel Lines Free Of Leaks			
Elevating Assembly:				Component Area:				Fuel Tanks Secure			
Boom Structures				Valve Manifold(s) Secure				Fuel Shut Off Valves Func.			
Welds				Hoses Tight/No Leaks				All Shields/Guards In Place			
Retaining Rings				D/C Mtr(s) Secure/Operational				Oil Level			
Cylinder Pins Secure				Contactors Secure				Oil Filter			
Boom Shimming				Pump Secure				Air Filter			
Torque on Slew Ring Bolts											
Transport Locks:				Batteries:				Operator's Manual Present:			
Secure				Secure				Manual Of Responsibilities Present:			
Operational				Fully Charged							
				Emergency Stop:							
				Breaks All Circuits							
								Overload Sensing System:			
								Test for proper operation;			
								Recalibrate if it fails to cut functions			
								and sound alarm at more than 105%			
								of rated load.			

Comments: _____

Signature/Mechanic: _____ Date: _____
Signature/Owner-User: _____ Date: _____

P/N 90728 60-J

Routine Maintenance

IMPORTANT— The operator may perform only maintenance items on the Pre-Start Inspection Checklist. Frequent and Annual maintenance must be performed by qualified service technicians.

Pre-Start Inspection Perform routine maintenance as identified in the *Pre-Start Inspection Checklist* on page 33.


Frequent and Annual Maintenance

Frequent Inspection Checklists and Annual Inspection Reports must be completed by qualified service technicians trained and authorized to perform maintenance on this machine, and must be done in accordance with the procedures outlined in the service manual. Scheduled maintenance inspection checklists are included in this manual for use by qualified service technicians.

Machines that have been out of service for more than three months must have the Frequent Inspection Checklists completed before returning to service.

Lubrication

Operator may perform routine maintenance only. Lubrication listed as Scheduled Maintenance must be performed by a qualified service technician.

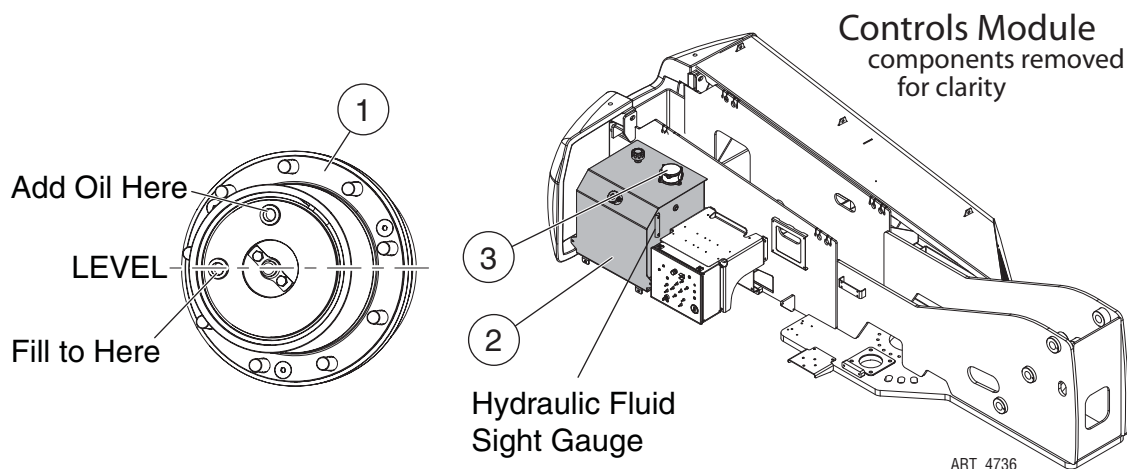

Lubrication

No.	ITEM	SPECIFICATION	FREQUENCY
1	Hubs	SAE 90 Multipurpose Hypoid Gear Oil API Service Classification GL5	Scheduled Maintenance Check every three months or 150 hours, whichever occurs first Change yearly or every 600 hours, whichever occurs first
2	Hydraulic Reservoir	Fluid Type Chevron 1000THF Chevron Rando Premium MV Do not substitute other fluids as pump damage may result. Fill to the middle of the sight gauge with platform in the stowed position and stabilizers retracted.	Routine Maintenance Check level daily Scheduled Maintenance Change yearly or every 600 hours, whichever occurs first
3	Hydraulic Filter	Filter Element (located inside Hydraulic Reservoir)	Scheduled Maintenance Normal Conditions Change every six months or 300 hours, whichever occurs first Severe Conditions--very dusty, exceptionally hot or exceptionally cold conditions Change every three months or 150 hours, whichever occurs first

Troubleshooting

**WARNING**


Should you experience erratic operation or notice any malfunction while operating this machine, discontinue use immediately.

Call for assistance and report the incident to your supervisor, and do not use the machine until it has been checked by a trained, qualified mechanic.

Machine functions will not operate


- Adequate fuel supply?
- Proper fuel blend (i.e. winter blend in cold weather)?
- Battery properly connected?
- Battery fully charged?
- Circuit Breaker tripped?
- Function toggle switch or the Enable Switch not activated?
- Selector Key Switch in proper position?
- Both Emergency Stop Switches reset?
- Hydraulic fluid level low?
- Obvious fluid leak or damaged component?
- Wires disconnected, broken, or loose?
- GP400 Diagnostic LED OFF?
LED should be ON. If not ON or FLASHING, refer to Service Manual or contact MEC Technical Support.
- Error code at Onboard Diagnostic Center?
See Section 4 of Service Manual or contact MEC Customer Service.

Lower Controls

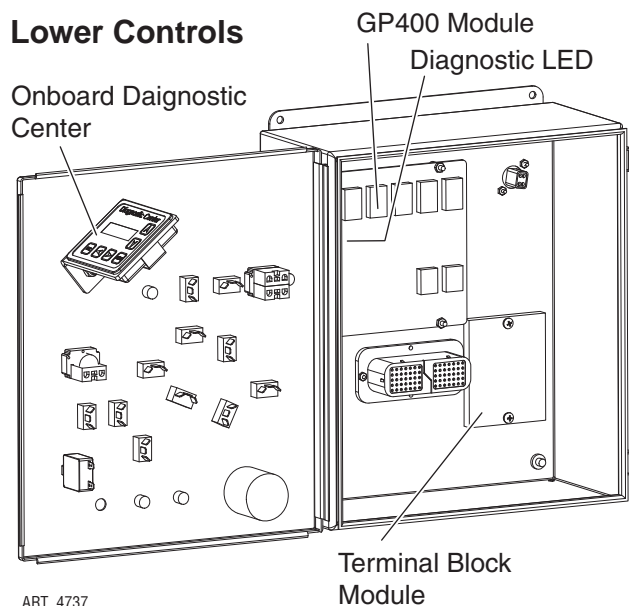

Warning and Instructional Decals

All warning and instructional decals must be present, legible and secure.

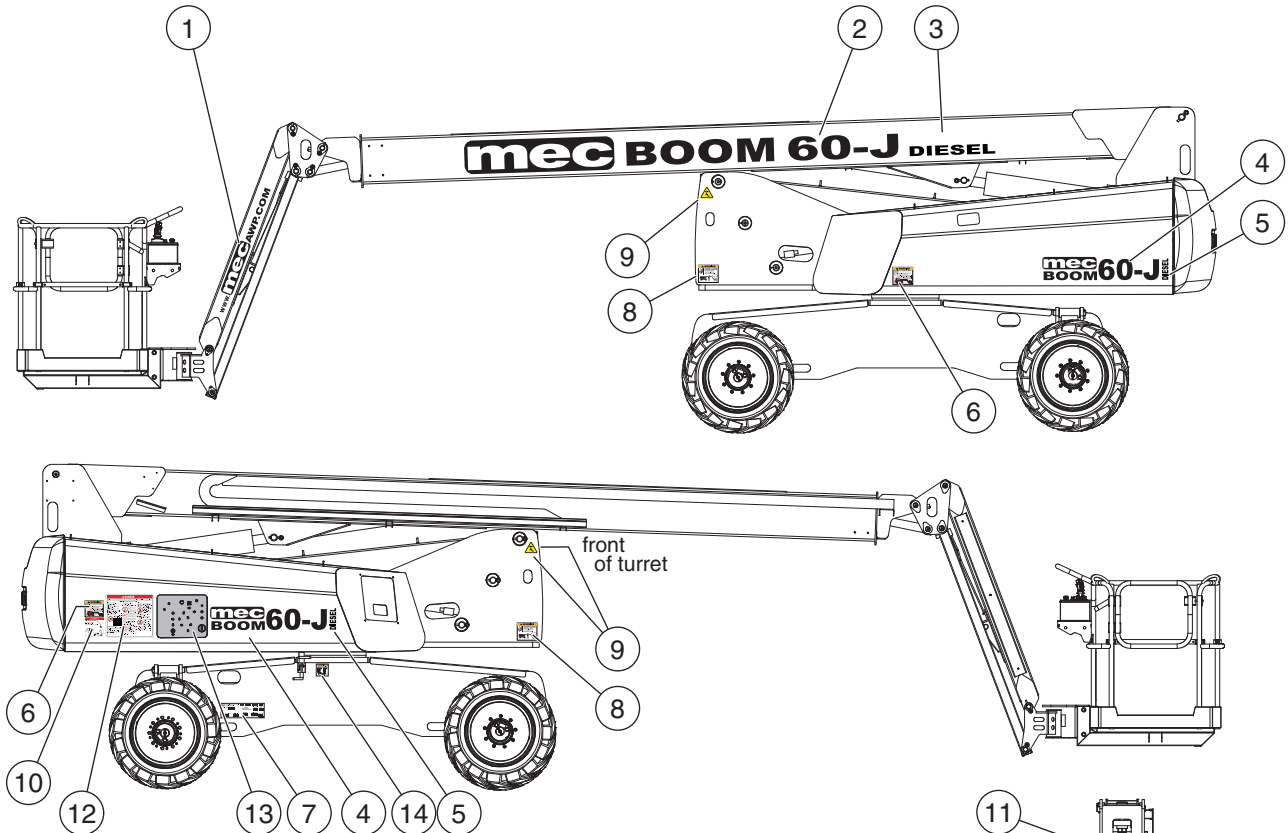

① 92416 2 places
www.mecAWP.COM

② 93741
mec BOOM 60-J

③ 93742
DIESEL

④ 93745 2 places
mec BOOM 60-J

⑤ 93746 2 places
DIESEL

⑥ 93801 2 places
WARNING
RESTRICTED COMPARTMENT ACCESS
ONLY TRAINED MAINTENANCE PERSONNEL SHOULD ACCESS COMPARTMENTS
Operators should access compartments only during Pre-Operation Inspections. All compartments must be securely closed during operation. See Operator's Manual.

⑦ 94042

⑧ 93804 2 places
WARNING
CRUSH HAZARD
Keep away from moving platform, boom and turret.

⑨ 91850 3 places




⑩ 93807
DANGER
TIP OVER HAZARD
STOP ALL MOVEMENT
If Tilt Alarm sounds, Death or Serious Injury may occur.
COUNTERWEIGHT UP/HILL:
1- Retract Boom
2- Lower Boom
COUNTERWEIGHT DOWN/HILL:
1- Lower Boom
2- Retract Boom



⑪ 90719




⑫ 93755

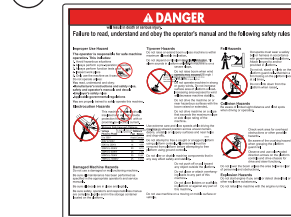

⑬ 93930

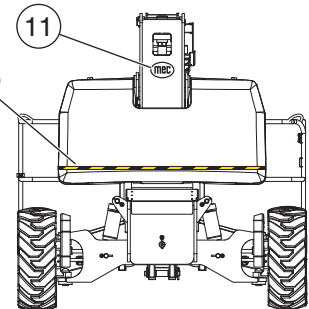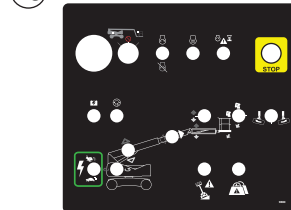


⑭ 93855

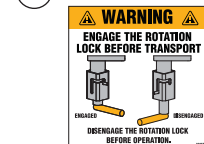

⑮ 7982
3 Places


⑯ 93572
2 Places




ART_4829

The diagram shows a grey tool with several labels and callouts:

- 1**: Points to a red line drawing of the tool's handle.
- 2**: Points to the 'INSTRUCTIONS' label, which contains detailed operating and safety instructions.
- 3**: Points to the 'WARNING' label, which includes a diagram of a person using the tool and text about safety.
- 4**: Points to the 'DANGER' label, which features a large red 'DANGER' header and several prohibition symbols (no open flame, no smoking, no drinking, no eating, no sleeping, no unauthorized persons).
- 5**: Points to the 'LWA' label, which shows the sound power level '86 dB'.
- 6**: Points to the 'DANGER' label, which includes a diagram of a person using the tool and text about safety.

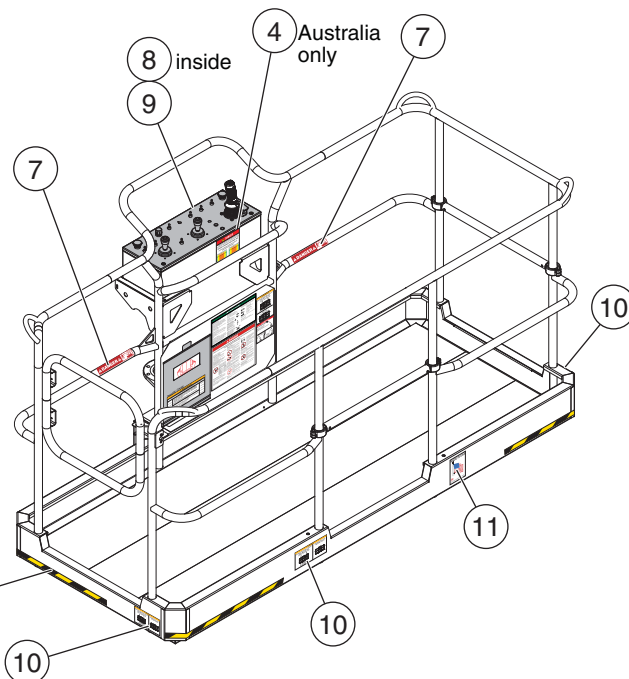


- ① 8911
- 

- 2

93754




- ③ 94043 -- Standard
227 KG Capacity

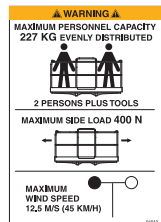

-


- 6** 93807

⚠ DANGER ⚠


TIP OVER HAZARD 

STOP ALL MOVEMENT
⚠ Tib Alarm sounds.
 Death or Serious Injury may occur.

COUNTERWEIGHT UPHILL:
 1= Retract Boom
 2= Lower Boom



COUNTERWEIGHT DOWNHILL:
 1= Lower Boom
 2= Retract Boom



93807

- 4** **91325**
Australia only

⚠ DANGER

THIS MACHINE IS NOT DESIGNED TO BE USED ON overhead power lines. It may be used on low voltage overhead power lines with a maximum clearance of 10m. For safety reasons, the machine must be used on low voltage overhead power lines with a maximum clearance of 10m. For safety reasons, the machine must be used on low voltage overhead power lines with a maximum clearance of 10m.

MINIMUM CLEARANCES FROM POWER LINES

CONSIDERED TO BE OPERATING AT A LOW VOLTAGE. THE MACHINE MUST BE USED ON LOW VOLTAGE OVERHEAD POWER LINES WITH A MAXIMUM CLEARANCE OF 10M.

OVERHEAD POWER LINES ON PILES	OVERHEAD POWER LINES ON TOWERS
	


- ⑦ 91970 2 places

- 8 92236
-  **EZ-Cal
Port**


- 9 93926 -- Std. Machine
-
- The diagram shows the internal components of the 93926 Std. Machine. Key components include a green battery pack, a yellow 'BT10P' module, a '12V' power source, and several integrated circuits (ICs) labeled with 'u' and 'A'. There are also various connectors, switches, and a motor assembly at the bottom right. The components are interconnected with a network of wires and traces.


- 93927 -- with High Capacity option

- ⑩ 3 Places
94044 -- Standard 227 KG Capacity



- 94053 -- Option 227/340 KG







- 12 91388
-  LWA
- 86** dB
- 2.135

- ⑬ 7982
4 Places


- 11 90739
- MADE IN USA**
- 
- MEC**
- MEC AERIAL PLATFORM SALES CORP.



Decals (continued)

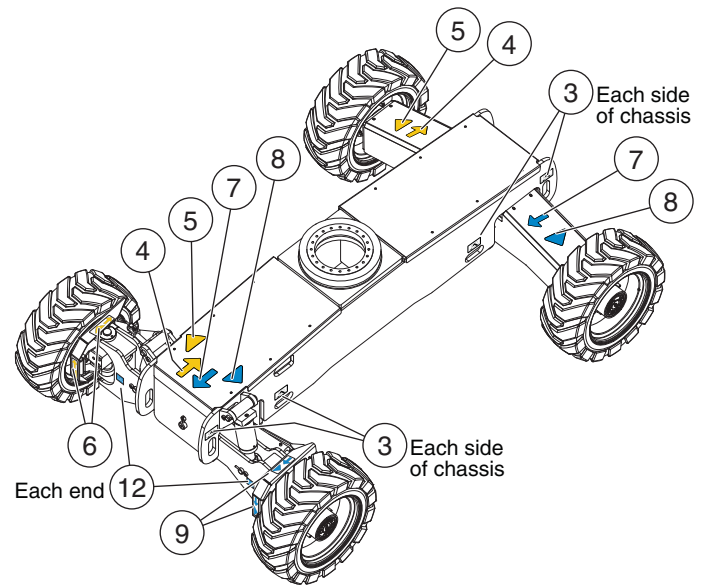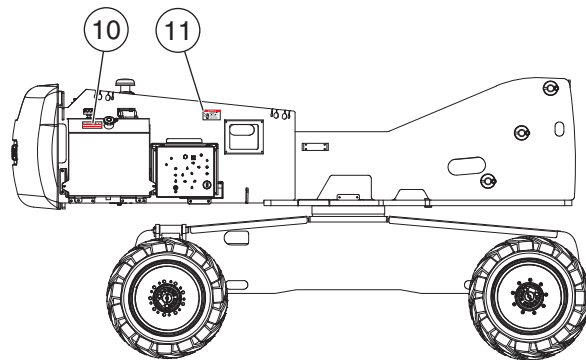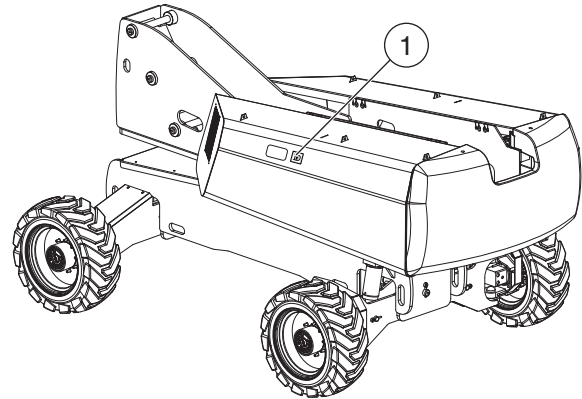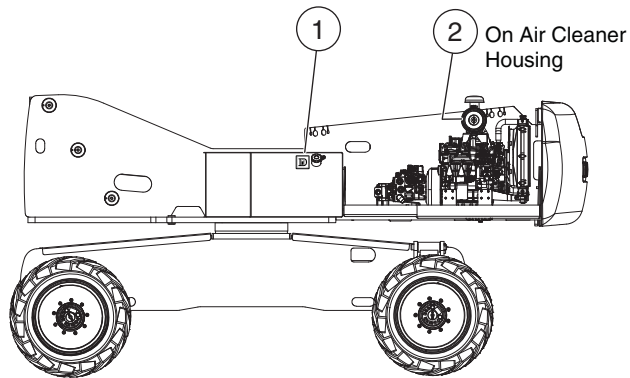

1 91975 2 places

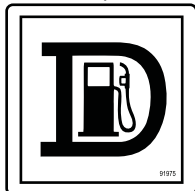

2 93806




3 91973 8 places



2 places each

4 91972



7 91971




5 91982



8 91981



6 93815



9 93814




10 92117



11 93805




12 94045 4 places



ART_4831

Serial Plate Location

The serial plate is attached to the machine at the time of manufacture. Important information about the machine is recorded on the serial plate. The Serial Plate is located on the side of the chassis below the Base Controls.

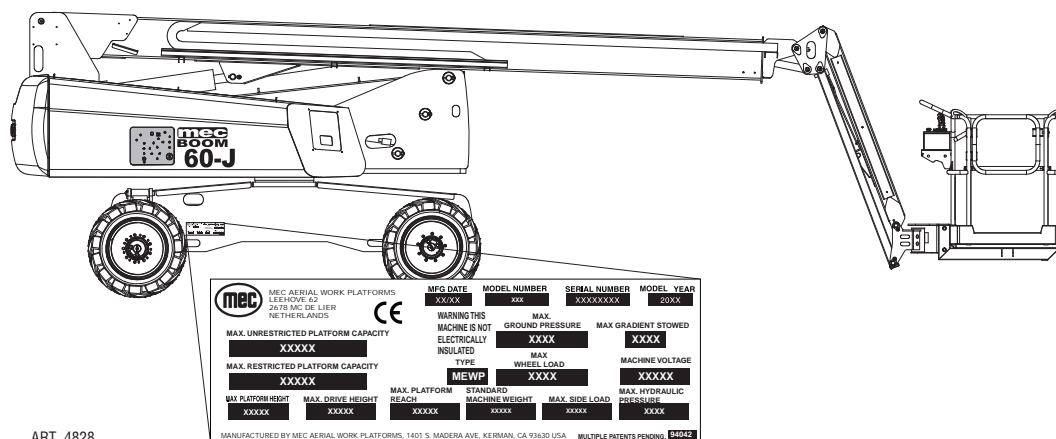

Serial Plate Description

MFG DATE. Month / Year of manufacture

MODEL NUMBER. Identifies the machine.

SERIAL NUMBER. Identifies a machine with reference to its original owner. Refer to the number when requesting information or ordering parts.

MODEL YEAR. Identifies the model year of the machine.

MAX. PLATFORM UNRESTRICTED CAPACITY. The maximum safe load (material, persons + equipment) which can be correctly placed on the platform within any range of motion.

MAX. PLATFORM RESTRICTED CAPACITY. On optionally equipped machines, the maximum safe load (material, persons + equipment) which can be correctly placed on the platform when used within a restricted range of motion.

MAX. GRADIENT STOWED. The maximum gradient at which the machine can be driven with the boom in the stowed position.

MAX. GROUND PRESSURE. The amount of pressure exerted on the surface at each wheel. Calculated with all available options installed. $P_{max} = 30\% (W_m + W_c + W_{opt}) / \text{Contact Area}$

TYPE. MEWP=Mobile Elevating Work Platform.

MAX. WHEEL LOAD. The maximum safe weight applied to each wheel. Calculated with all available options installed. $F_w = 30\% (W_m + W_c + W_{opt})$

MACHINE VOLTAGE. The electrical voltage at which the machine operates.

MAX. PLATFORM HEIGHT. The maximum attainable height measured from level ground surface to platform floor.

MAX. DRIVE HEIGHT. The maximum safe platform height at which the machine can be driven.

MAX. PLATFORM REACH. The maximum horizontal outreach of the extended boom.

STANDARD MACHINE WEIGHT. The weight of the machine with no options.

MAX. SIDE LOAD. The maximum safe force that the occupant can exert laterally on an object outside the platform.

MAX. HYDRAULIC SYSTEM PRESSURE. The maximum pressure generated by the machine's hydraulic system.

Transport Instructions

Safety Information


WARNING

This section is provided for reference and does not supersede any government or company policy regarding the loading, transport or lifting of MEC machinery.

Truck drivers are responsible for loading and securing machines, and should be properly trained and authorized to operate MEC machinery. Drivers are also responsible for selecting the correct and appropriate trailer according to government regulations and company policy. Drivers must ensure that the vehicle and chains are strong enough to hold the weight of the machine (see the serial number plate for machine weight).

ONLY properly trained and qualified operators shall load and unload this machine.

Loading

Free-wheel configuration for Winching or Towing.


DANGER

RUNAWAY HAZARD!

After releasing the brakes there is nothing to stop machine travel. Machine will roll freely on slopes. ALWAYS chock the wheels before manually releasing the brakes.


The machine can be winched or towed short distances at speeds not to exceed 5 MPH (8 km/h). Before towing or winching the machine, it is necessary to release the brakes. Reset the brakes after towing or winching.

Disengage Brakes before Towing or Winching

- Chock the wheels.
- Remove the Torque Engage Cap and reinstall with the bump facing inward on all four (4) hubs.

Engage Brakes before Driving

- Remove the Torque Engage Cap and reinstall with the bump facing outward on all four (4) hubs.

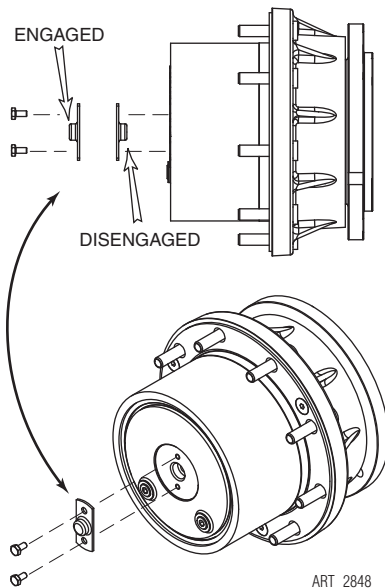

Driving or Winching onto or off of a Transport Vehicle

Before loading the machine, orient the turntable so that the platform is over the non-steering wheels so that the Rotation Lock may be engaged later in the loading process.

WARNING

ONLY properly trained and qualified operators shall load and unload this machine.

Read and understand all safety, control, and operating information found on the machine and in this manual before operating the machine.

Whether winching or driving the machine on to a truck or trailer, always check the area for dangerous situations before moving the machine.

If driving the machine, always use a second person acting as a spotter to make sure the person loading the machine avoids dangerous situations.


Driving

- Turn the Base Key Switch to PLATFORM. Check that the Emergency Stop Switch is reset by turning it clockwise.
- Enter the platform and reset the Platform Emergency Stop Switch.
- Test platform control functions.
- Raise the jib slightly for platform ground clearance.
- Carefully drive the machine off or on to the transport vehicle.
- Make sure you can see the second person giving guidance.

Note: The brakes are automatically released for driving and will automatically apply when the control lever is returned to neutral which causes the machine to stop.

Winching

- Chock the wheels, then disengage brakes (see *Disengage Brakes before Towing or Winching* on page 43).
- Carefully operate the winch to lower the machine down the ramp or pull the machine up the ramp.
- Chock the wheels and engage the brakes before disengaging the winch.

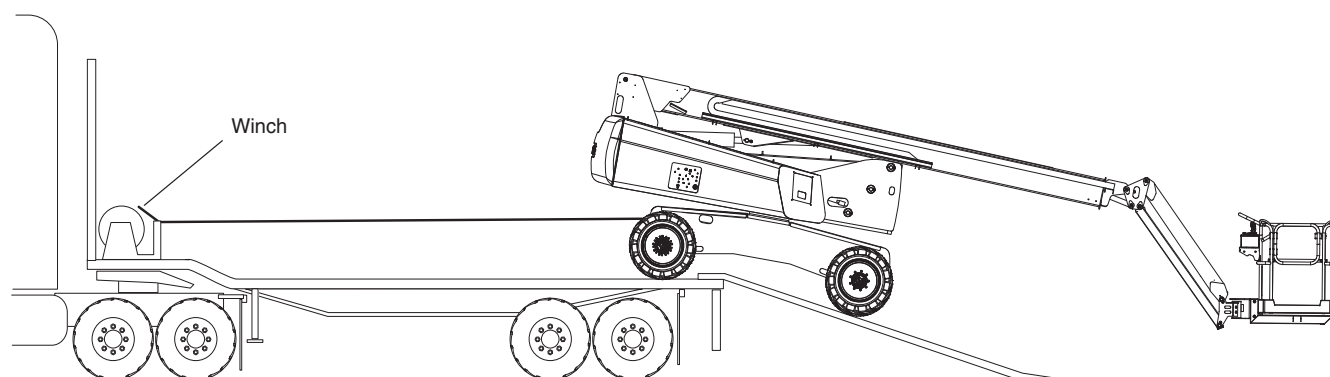


ART_4741

Securing to Truck or Trailer for Transport

- Turn the key Selector Key Switch to OFF and remove the key before transport.
- Turn the Battery Disconnect Switch to OFF before transport.
- Inspect the entire machine for loose or unsecured items.
- Secure the chassis.
- Engage the Rotation Lock.
- Secure the platform.

Securing the Chassis

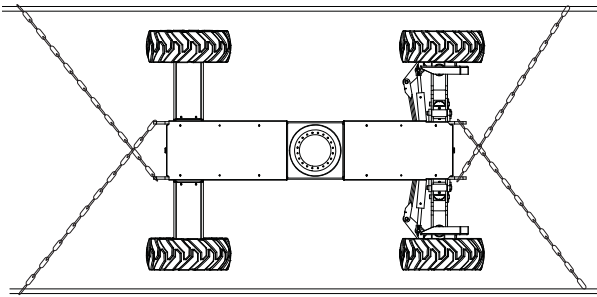


ART_4742

Make sure each of your chains is rated to hold the machine's weight (see serial number plate or Specifications). Use at least 4 chains.

Do not attach chain hooks directly to the machine. Loop the chain through the tie-down point and connect the chain hook to the chain.

Be sure chains are arranged so that they do not damage the machine.



Engaging The Rotation Lock

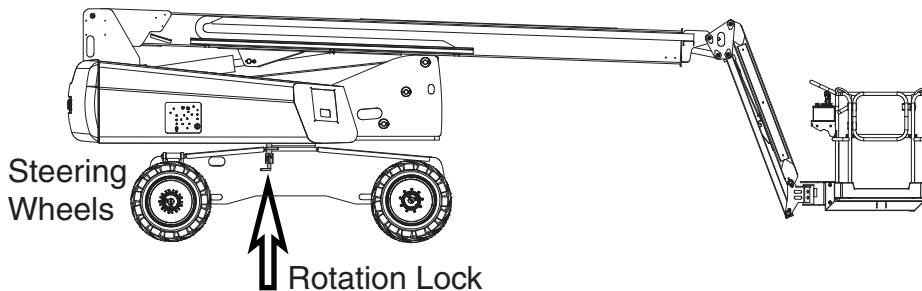

Before transport, rotate the turntable so that one of the three locking holes aligns with the Rotation Lock located on the chassis. The lock holes are located on the bottom of the Controls Module. The Rotation Lock is located on the chassis behind the left front wheel.


Lift the Rotation Lock using the attached pin, then rotate to the right and lower it into the shallow depression to engage. See illustration.

Disengage the Rotation Lock before operation.

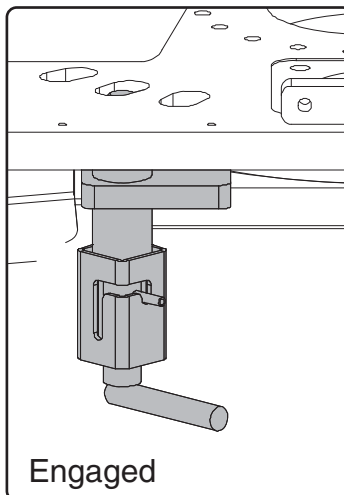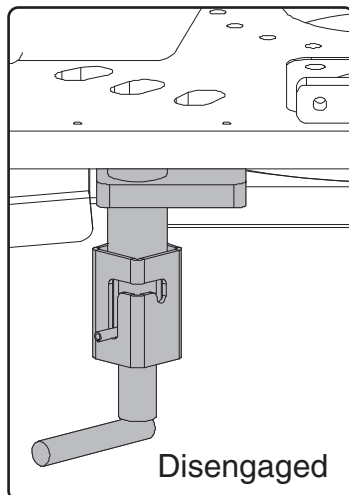

ART_4743


Securing the Platform

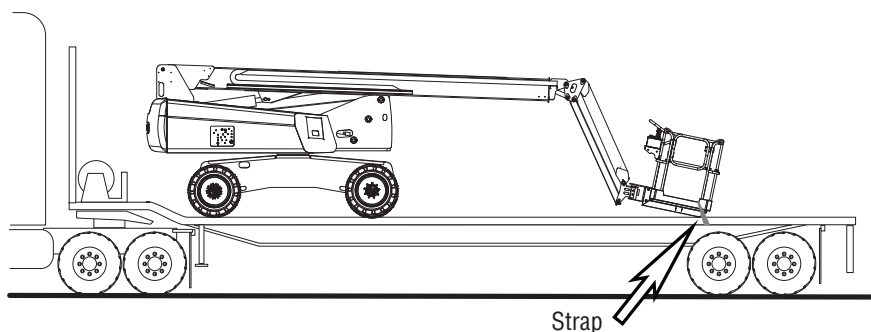

With the boom completely stowed, raise the jib slightly, then use the Platform Level function to lower the platform until the front of the platform touches the trailer surface.


Route the tie-down strap as shown through the width of the platform, over the toe boards of both side entry points. Tighten securely but do not over-tighten.

It may be necessary to turn the platform 90 degrees when loading two machines on the same trailer. In this case, route the strap over the toeboard and through the end of the platform as shown.

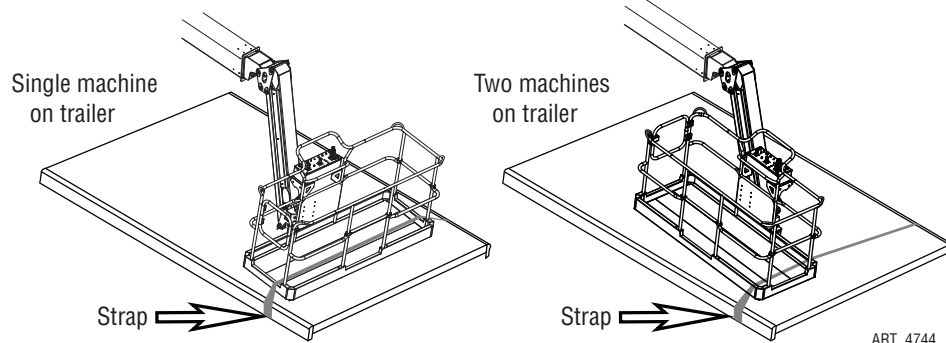

Loading Two Machines

Two machines may be loaded onto a single trailer by rotating the turntable of each machine and rotating the platforms as shown below.

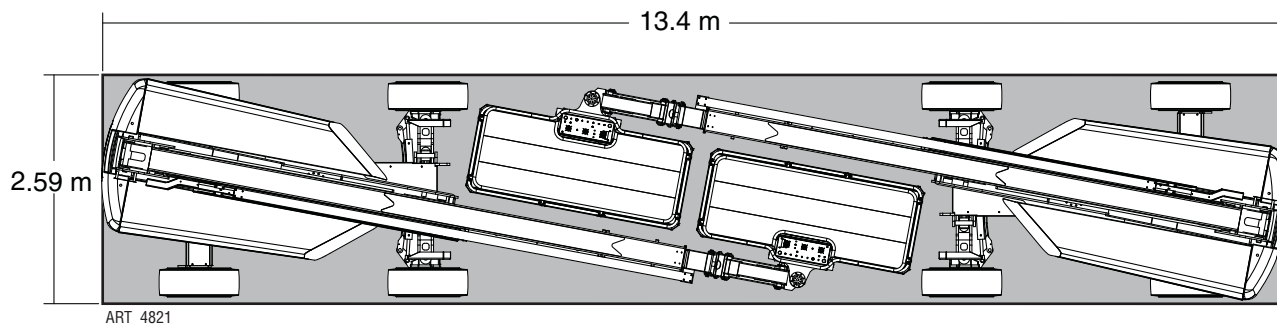

- Extend the boom of each machine approximately 38 cm.
- Arrange the machines as shown. The distance between the ends of the counterweights should be 13.4m-13.7m.
- Secure the chassis of each machine as previously instructed on page 43.
- Engage the Rotation Lock of each machine as previously instructed on page 43, using one of the side turntable locking holes.
- Secure the platform of each machine as previously instructed above.

NOTES:

NOTES:



Limited Owner Warranty

MEC Aerial Platform Sales Corp. warrants its equipment to the original purchaser against defects in material and/or workmanship under normal use and service for one (1) year from date of registered sale or date the unit left the factory if not registered. MEC Aerial Platform Sales Corp. further warrants the structural weldments of the main frame and scissor arms to be free from defects in material or workmanship for five (5) years from date of registered sale or date unit left the factory if not registered. Excluded from such warranty is the battery(s) which carries a ninety (90) day warranty from described purchase date. Warranty claims within such warranty period shall be limited to repair or replacement, MEC Aerial Platform Sales Corp's option, of the defective part in question and labor to perform the necessary repair or replacement based on MEC Aerial Platform Sales Corp's then current flat rate, provided the defective part in question is shipped prepaid to MEC Aerial Platform Sales Corp. and is found upon inspection by MEC Aerial Platform Sales Corp. to be defective in material and/or workmanship. MEC Aerial Platform Sales Corp. shall not be liable for any consequential, incidental or contingent damages whatsoever. Use of other than factory authorized parts; misuse, improper maintenance, or modification of the equipment voids this warranty. The foregoing warranty is exclusive and in lieu of all other warranties, express or implied. All such other warranties, including implied warranties of merchantability and of fitness for a particular purpose, are hereby excluded. No Dealer, Sales Representative, or other person purporting to act on behalf of MEC Aerial Platform Sales Corp. is authorized to alter the terms of this warranty, or in any manner assume on behalf of MEC Aerial Platform Sales Corp. any liability or obligation which exceeds MEC Aerial Platform Sales Corp's obligations under this warranty.



MEC Aerial Platform Sales Corp.

1401 S. Madera Avenue, Kerman, CA 93630 USA

Toll Free: 1 - 877 - 632 - 5438

Phone: 1 - 559 - 842 - 1500

Fax: 1 - 559 - 842 - 1520

info@MECawp.com

www.MECawp.com