



# Operator's Manual

## Micro2032

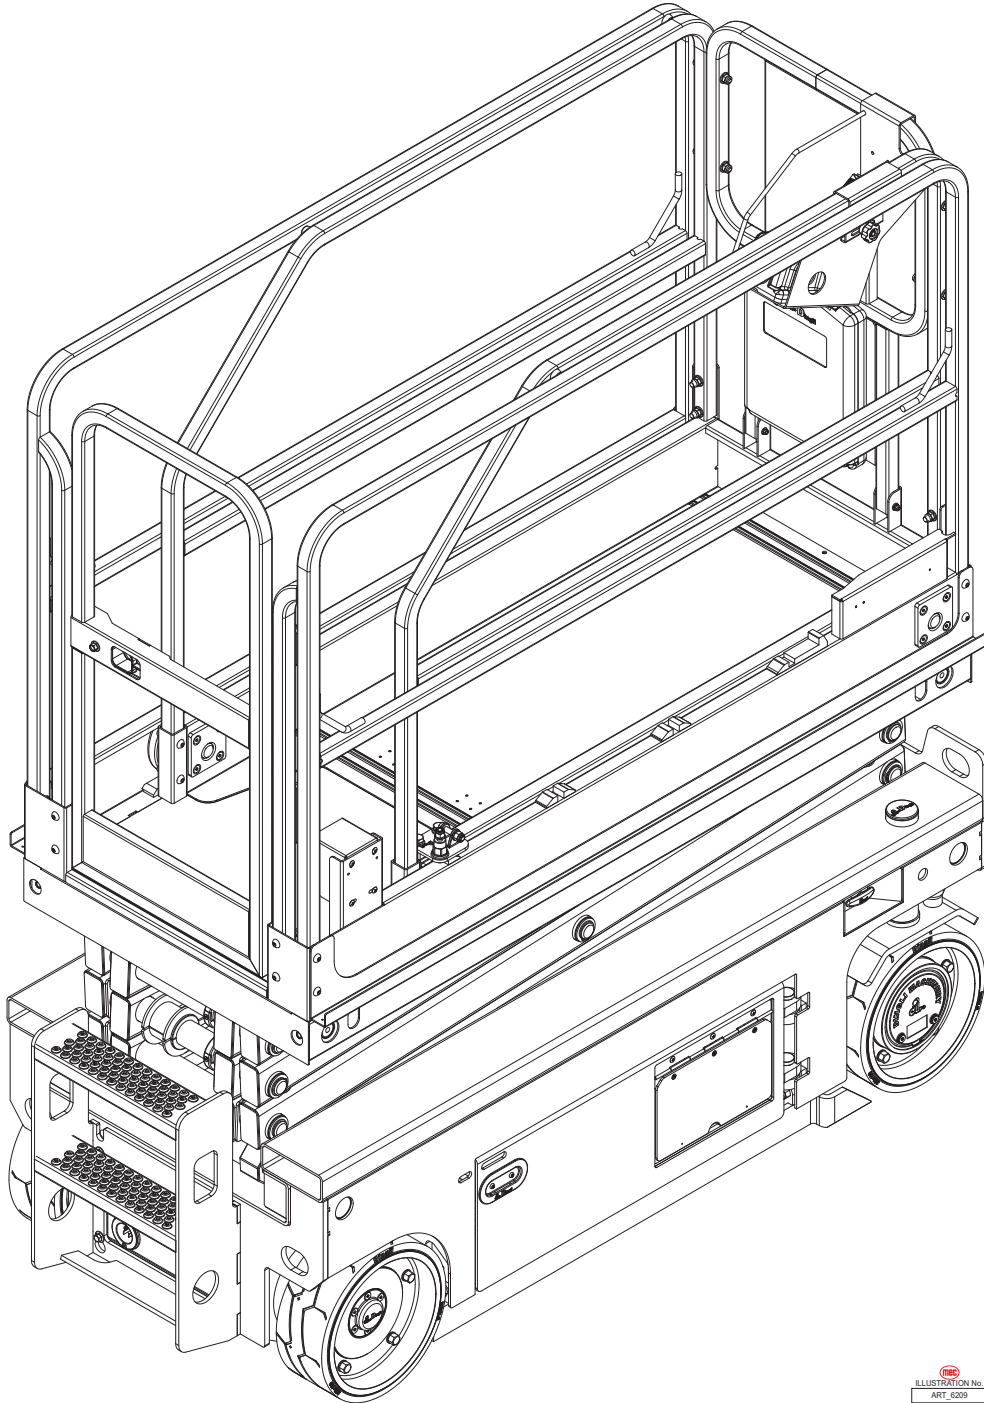


  
ILLUSTRATION No.  
ART\_6209

**Meets requirements of ANSI A92.20-2020 and CSA B354.6-2019.**  
Serial Number Range 1990025 - Up

Part # 96708  
April 2024

---

## Revision History

Date	Reason for Update
April 2024	New Release



# MEC Aerial Work Platforms

---

---

1401 S. Madera Avenue, Kerman, CA 93630 USA  
Toll Free: 1-877-632-5438  
Phone: 1-559-842-1500  
Fax: 1-559-842-1520  
info@MECawp.com  
www.MECawp.com

# Table of Contents

<b>Section 1 - Introduction</b>	<b>1</b>
<i>Introduction</i>	1
<b>Section 2 - Safety</b>	<b>2</b>
<i>Safety</i>	2
<i>Safety Alert Symbols &amp; Fall Protection</i>	3
<b>Section 3 - Specifications</b>	<b>4</b>
<i>Specifications</i>	4
<b>Section 4 - Hazards</b>	<b>5</b>
<i>Electrocution Hazard</i>	5
<i>Energized Conductor Contact Hazard</i>	6
<i>Tip-over Hazards</i>	8
<i>Fall &amp; Collision Hazards</i>	10
<i>Additional Safety Hazards</i>	12
<b>Section 5 - Controls &amp; Components</b>	<b>13</b>
<i>Component Locations</i>	13
<i>Platform Controls</i>	14
<i>Lower Controls</i>	15
<b>Section 6 - Workplace Inspection</b>	<b>16</b>
<i>Workplace Inspection</i>	16
<b>Section 7 - Operating Instructions &amp; Functions Test</b>	<b>17</b>
<i>Functions Tests</i>	17
<i>Operating Instructions</i>	23
<i>Sheet Materials Rack</i>	28
<b>Section 8 - Battery Charging</b>	<b>29</b>
<i>Battery Charging</i>	29
<b>Section 9 - Maintenance</b>	<b>30</b>
<i>Maintenance</i>	30
<i>Lubrication</i>	32
<i>Pre-Start Inspection Checklist</i>	33
<i>Frequent Inspection Checklist</i>	34
<i>Maintenance Inspection Report</i>	35
<b>Section 10 - Decals</b>	<b>36</b>
<i>Decals</i>	36
<i>Serial Plate</i>	38
<b>Section 11 - Troubleshooting</b>	<b>39</b>
<i>Troubleshooting</i>	39
<b>Section 12 - Transport and Lifting Instructions</b>	<b>40</b>
<i>Transport and Lifting Instructions</i>	40

## Introduction

This Operator's Manual has been designed to provide you, the owner, user or operator, with the instructions and operating procedures essential to properly and safely operate your MEC Aerial Work Platform for positioning personnel, along with their necessary tools and materials, to overhead work locations.

**This Operator's Manual and other manuals provided by MEC on the machine must be read and understood prior to operating your MEC Aerial Work Platform. The operator should not accept operating responsibility until he/she has read and understands the operator's manual as well as having operated the MEC Aerial Work Platform under supervision of an authorized, trained and qualified operator.**

 **DANGER**

**It is essential that the operator of the aerial work platform is not alone at the workplace during operation.**

**Modifications of this machine from the original design and specifications without written permission from MEC are strictly forbidden. A modification may compromise the safety of the machine, subjecting the platform occupants and personal around the machine to serious injury or death.**

Your MEC Aerial Work Platform has been designed, built, and tested to provide safe, dependable service. Only authorized, trained and qualified personnel shall be allowed to operate or service the machine.

MEC, as manufacturer, has no direct control over machine application and operation. Proper safety practices are the responsibility of the owner, user and operator.

**If there is a question on application and/or operation contact:**



## MEC Aerial Work Platforms

1401 S. Madera Avenue, Kerman, CA 93630 USA

Toll Free: 1-877-632-5438

Phone: 1-559-842-1500

Fax: 1-559-842-1520

info@MECawp.com

www.MECawp.com



## Safety

**DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.**

Failure to read, understand and follow all safety rules, warnings, and instructions could result in serious injury or death. For your safety and the safety of those around you, you must operate your machine as instructed in this manual.

MEC designs aerial work platforms to safely and reliably position personnel, along with their necessary tools and materials, at overhead work locations. The owner/user/operator of the machine should not accept responsibility for the operation of the machine unless properly trained.

ANSI and other applicable standards identify requirements of all parties who may be involved with self-propelled elevating work platforms. The Manual of Responsibilities is considered a part of this machine and can be found in the manual compartment, located at the platform control station. To ensure safe use of machine, inspections and training specified in ANSI/SIA A92.22 & A92.24 must be performed at designated intervals as prescribed.



**This product can expose you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).**

---

## Safety Alert Symbols & Fall Protection

MEC manuals and decals use symbols, colors and signal words to help you recognize important safety, operation and maintenance information.



**RED** and the word **DANGER** – Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**ORANGE** and the word **WARNING** – Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



**YELLOW** with alert symbol and the word **CAUTION** – Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



**YELLOW** without alert symbol and the word **CAUTION** – Indicates a potentially hazardous situation which, if not avoided, may result in property damage.




**GREEN** and the word **NOTICE** – Indicates operation or maintenance information.

### Fall Protection

Operators must comply with employer, job site and governmental rules regarding the use of personal protective equipment.

**If required by your employer or job site**, use personal fall protection equipment (PFPE) when operating this machine.

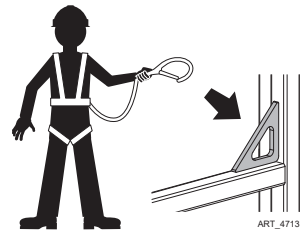

All personal fall protection equipment (PFPE) must comply with applicable governmental regulations, and must be inspected and used in accordance with the personal fall protection equipment (PFPE) manufacturer's instructions.

Fall restraint must be properly attached to a designated anchorage point when driving or operating the machine. Attach only one fall restraint to each anchorage point.

## Specifications

Height, Working Maximum*	Indoors	26.2ft	8m
	Outdoors	21.7ft	6.6m
Height, Platform Maximum	Indoors	20ft	6m
	Outdoors	15.1ft	4.6m
Height, Stowed Maximum		78.7in	2.00m
Width		32.3in	0.82m
Length	Platform Retracted	74in	1.88m
	Platform Extended	109.4in	2.78m
Platform Dimensions (Length×Width)		67.9×29.1in	1.725×0.74m
Platform Extension Length		35.4in	0.9m
Maximum Load Capacity		800lbs	363kg
Extension Deck Load Capacity		250lbs	113kg
Sheet Material Rack Capacity†		220lbs	100kg
Maximum Wind Speed		28mph	12.5m/s
Maximum Occupants	Indoors	2 Person	
	Outdoors	1 Person	
Manual Force	Indoors	90lbs	400N
	Outdoors	45lbs	200N
Wheelbase		55.1in	1.4m
Turning Radius	Outside	66.9in	1.7m
	Inside	0in	0m
Ground Clearance	Platform Lowered	3.54in	9cm
	Platform Raised	0.63in	1.6cm
Weight**		3,638lbs	1,650kg
Controls		Proportional	
Maximum Hydraulic Pressure		2,610psi	180bar
System Voltage		24 Volts DC	
Tire Size		12.7×4.9in	Φ323×125mm
<b>Maximum Slope Rating</b>			
Slope Rating, Stowed Position		25% (14°)	
Side Slope Rating, Stowed Position		5%	
Chassis Inclination		1.5 Side, 3.0 Inline	
<b>Drive Speeds</b>			
Platform Lowered		2.8mph	4.5km/h
Platform Raised		0.37mph	0.6km/h
<b>Floor Loading Information</b>			
Tire Load, Maximum		1,332lbs	604kg
Tire Contact Pressure		112.6psi	7.9kg/cm <sup>2</sup>
Occupied Floor Pressure		268psf	1306kg/m <sup>2</sup>
Meets requirements of ANSI 92.20-2020 and CSA B354.6-2019.			
*Working Height adds 6 feet (2 meters) to platform height.			
**Weight may increase with certain options.			
†Sheet material weight is part of the total platform capacity. This may limit capacity to one occupant.			

# Electrocution Hazard

**ELECTROCUTION HAZARD! THIS MACHINE IS NOT INSULATED!**

**DEATH OR SERIOUS INJURY will result from contact with or inadequate clearance from any electrically charged conductor.**



**You must maintain a CLEARANCE OF AT LEAST 10 FEET (3.05 meters) between any part of the machine, or its load, and any electrical line or apparatus carrying over 300 Volts up to 50,000 Volts. One foot (30.5 centimeters) additional clearance is required for every additional 30,000 Volts.**

**Observe Minimum Safe Approach Distance.**

This machine is not electrically insulated and will not provide protection from contact with or proximity to electrical current.

Maintain safe distances from electrical power lines and apparatus in accordance with applicable government regulations and the following chart:

Voltage	Minimum Safe Approach Distance	
	Feet	Meters
Phase to Phase		
0 to 300 Volts	Avoid Contact	
Over 300V to 50kv	10ft	3.1m
Over 50KV to 200KV	15ft	4.6m
Over 200KV to 350KV	20ft	6.1m
Over 350KV to 500KV	25ft	7.6m
Over 500KV to 750KV	35ft	10.7m
Over 750KV to 1000KV	45ft	13.7m




Allow for platform movement, electrical line sway or sag and beware of strong or gusty winds.


Keep away from the machine if it contacts energized power lines. Personnel on the ground or in the platform must not touch or operate the machine until energized power lines are shut off.

Do not use the machine as a ground for welding.


# Energized Conductor Contact Hazard

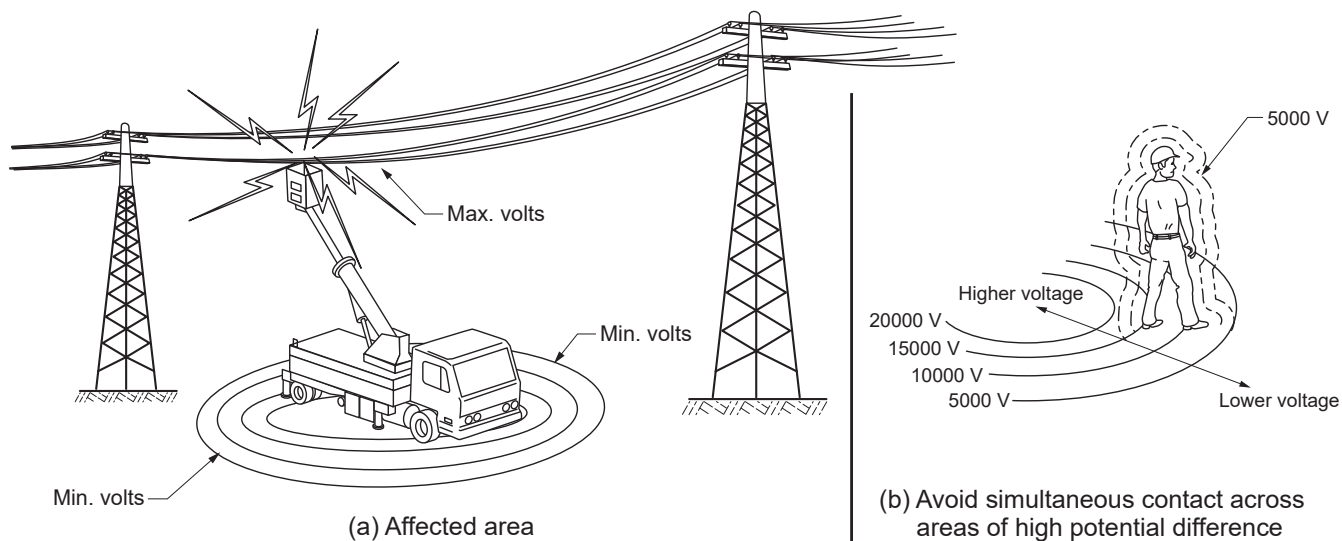

## CLEARANCES FROM LIVE AERIAL CONDUCTORS

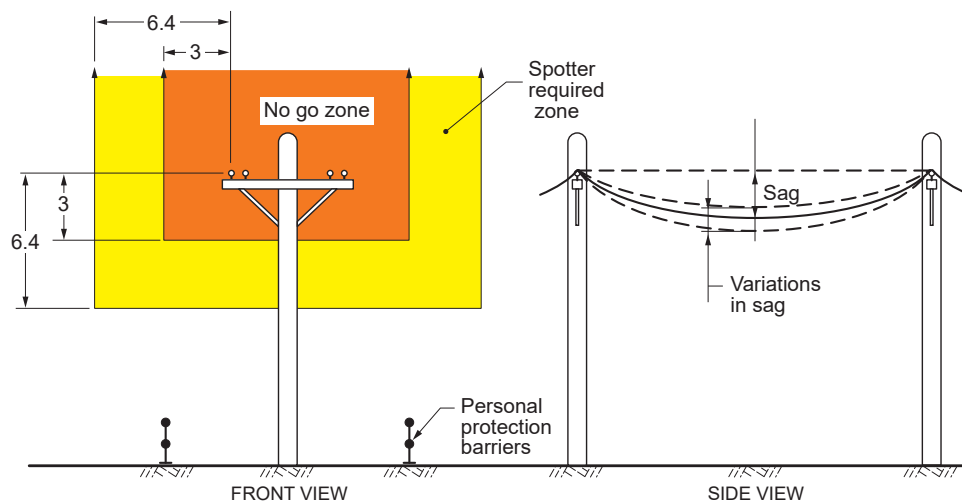

(a) Distribution lines up to and including 133 kV

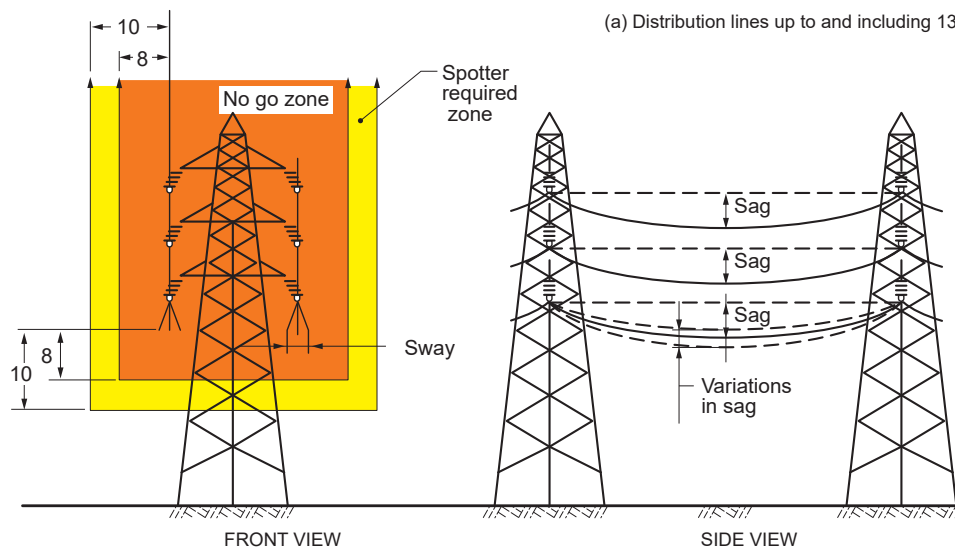

(b) Transmission lines greater than 133 kV

### LEGEND

- = No shading, in the front views, indicates no proximity requirements
- = Light shading indicates spotter is required
- = Heavy shading indicates the NO GO ZONE

ART\_3265

When working in the area of energized conductors the user shall direct and the operator shall comply with the requirements to:

- 1) Stay at least 10 feet (3.05 meters) away from power lines with any part of their body, conductive object or any part of the MEWP (Mobile Elevating Work Platform).
- 2) If work requires working nearer than 10 feet (3.05 meters), stop and consult a qualified person with respect to electrical transmission and distribution to have appropriate measures taken (such as de-energizing and grounding).
- 3) If there is a question that the power lines may carry more than 50kV, consult a qualified person with respect to electrical transmission and distribution before proceeding.
- 4) If working or approaching closer than explained above, it shall only be done by a qualified person with respect to electrical transmission and distribution. Only qualified persons may work on electric circuit parts or equipment that has not been de-energized. Such persons shall be capable of working safely on energized circuits and shall be familiar with the proper use of special precautionary techniques, personal protective equipment, insulating and shielding materials and insulated tools.

## Tip-over Hazards

DO NOT exceed the maximum platform capacity. The weight of options and accessories will reduce the rated platform capacity and must be factored into the total platform load. Refer to the decals on the options.



DO NOT elevate the platform when the machine is on a surface that is soft and/or on a slope.

DO NOT elevate the platform unless the machine is on a firm, level surface.

DO NOT depend on the tilt alarm as a level indicator. STOP if the tilt alarm sounds and the red light illuminates when the platform is raised. Use extreme caution to lower the platform. Move the machine to a firm, level surface.



**Driving:** DO NOT drive the machine on a slope that exceeds the maximum uphill, downhill or side slope rating. Slope rating applies to machines in the stowed position.

**Driving in stowed position:** Use extreme care and reduce speed when driving across uneven terrain, debris, unstable or slippery surfaces, and near holes or drop-offs.



**Driving with the platform elevated:** DO NOT drive on or near uneven terrain, unstable surfaces, curbs, drop-offs or other hazardous conditions. DO NOT drive the machine faster than 0.37mph (0.6km/h) while elevated.

DO NOT push off or pull toward any object outside the platform. DO NOT push the machine or other objects with the platform. DO NOT contact adjacent structures with the platform.



DO NOT tie the platform to adjacent structures.

Maximum Allowable Side Force (Indoor)	Maximum Allowable Side Force (Outdoor)
90lbs (400N) per person	45lbs (200N) per person

DO NOT use the platform controls to free a platform that is caught, snagged or otherwise prevented from normal motion by an adjacent structure.

DO NOT elevate the platform when wind speeds are in excess of 28mph (12.5m/s). If wind speeds exceed 28mph (12.5m/s) when the platform is elevated, carefully lower the platform and discontinue operation.



DO NOT increase the surface area of the platform (i.e. cover the rails with tarp or plywood). Increased surface area exposed to the wind will decrease machine stability.

DO NOT attach overhanging loads or use the machine as a crane. DO NOT place loads outside the platform perimeter.

NEVER transport tools and materials unless they are firmly secured. Secure all tools and loose materials.

NEVER alter or disable any machine components.

NEVER replace any part of the machine with items of different weight or specification.

NEVER modify or alter the work platform without written permission from MEC.

NEVER place ladders or scaffolds in the platform or against any part of the machine.

NEVER use the machine on a moving or mobile surface or vehicle.

Ensure that all tires are in good condition and lug nuts are properly torqued.

DO NOT operate the machine with the chassis trays open.

DO NOT alter or disable the limit switches or machine components that in any way affect safety and stability.

DO NOT replace items critical to machine stability with items of different weight or specification. DO NOT modify or alter this machine without prior written permission from the manufacturer.

Do not use batteries that weigh less than the original equipment. Batteries are used as counterweight and are critical to machine stability. Each battery must weigh 133lbs (60.5kg). The batteries must weigh a minimum of 266lbs (121kg).



## Fall & Collision Hazards

### Fall Hazards

DO NOT sit, stand or climb on the platform guard rails. Maintain a firm footing on the platform floor at all times.

DO NOT exit the platform when elevated. DO NOT climb down from the platform when elevated.

Keep the platform floor clear of debris.

DO NOT fasten a fall restraint lanyard to an adjacent structure.

Ensure that the platform entry is properly closed and secured before operating the machine.

Ensure that the guard rails are properly installed and in good condition before operating the machine.

Operators must comply with employer and job site rules and governmental regulations regarding the use of personal protective equipment.



### Collision Hazards

Check path before moving for equipment, materials or other obstructions.

Check path before moving for overhead obstructions.

Check path before moving for crushing hazards when holding the platform rail.

Be aware of limited sight distance and blind spots when driving or operating.

Be aware of extended platform position(s) when moving the machine.

Observe and use color-coded direction arrows on the platform controls and platform decal plate for drive and steer functions.

Reduce travel speed when moving the machine on slopes, when near personnel and obstacles, or when surface conditions are wet, slippery or otherwise limiting.

DO NOT operate in the path of any crane unless the controls of the crane have been locked out and/or precautions have been taken to prevent any possible collision.

Stunt driving and horseplay are PROHIBITED.

Watch for personnel and obstructions below the platform when lowering the platform.



---

Keep hands and limbs out of scissors.

Use common sense and planning when operating the machine with the controller from the ground.  
Maintain safe distances between the operator, the machine and fixed objects.

## Additional Safety Hazards

### Explosion and Fire Hazards

- DO NOT operate the machine in hazardous locations or locations where potentially flammable or explosive gases or particles may be present.

### Damaged Machine Hazards

- Conduct a thorough pre-start inspection of the machine and test all functions before each work shift to check for damage, malfunction and unauthorized modification. Tag and remove a damaged, malfunctioning or modified machine from service. DO NOT use a damaged, malfunctioning or modified machine.
- Routine maintenance must be performed by the operator before each work shift. Scheduled maintenance must be performed by a qualified service technician at scheduled intervals. Tag and remove from service any machine that has not had scheduled preventative maintenance performed.
- Check that all safety and instructional decals are in place and undamaged.
- Check that the operator's, safety and responsibilities manuals are present in the storage container located in the platform. All manuals must be complete, undamaged and readable.

### Bodily Injury Hazards

- DO NOT operate the machine when there is a hydraulic fluid or air leak. Hydraulic fluid or air under pressure can penetrate and/or burn skin.
- All compartments must remain closed and secure during machine operation. Improper contact with components under any cover will cause serious injury. Only trained maintenance personnel should access compartments. The operator should only access a compartment when performing pre-operation inspection.

### Weld Line to Platform Safety (if equipped)

- Read, understand and follow all warnings and instructions provided with the welding power unit.
- Do not connect weld leads or cables unless the welding power unit is turned off at the platform controls.
- DO NOT operate unless the weld cables are properly connected.
- DO NOT connect the ground lead to the platform.

### Battery Safety - Burn Hazards

- Batteries contain acid. Always wear protective clothing and eye wear when working with batteries.
- Avoid spilling or contacting battery acid. Neutralize battery acid spills with baking soda and water.



### Battery Safety - Explosion Hazard

- Keep sparks, flame and lighted tobacco away from batteries. Batteries emit explosive gas. The battery tray should remain open during the entire charging cycle.


### Battery Safety - Electrocutation Hazard

- Avoid contact with electrical terminals.

# Component Locations

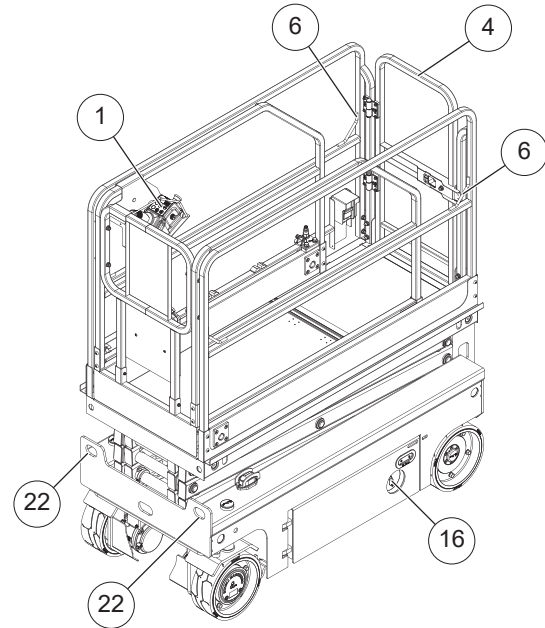
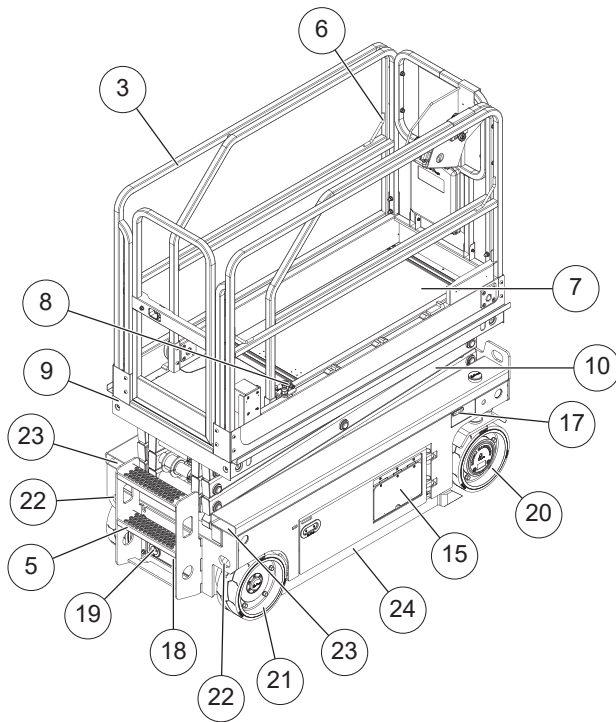


Lift Cylinder, Maintenance Lock, Motor Controller, and Battery Charger are shown for visual reference and clarity.

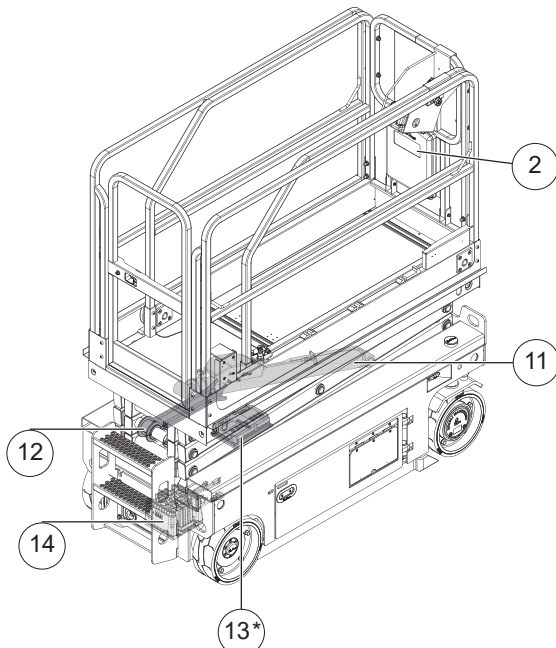


\*Under the cover.

- 1) Platform Controls
- 2) Manual Case
- 3) Platform Guardrails
- 4) Platform Entry Gate
- 5) Platform Entry Ladder
- 6) Lanyard Anchorage Point(s)
- 7) Platform Extension Deck
- 8) Platform Extension Deck Release Pedal
- 9) Main Platform
- 10) Scissor Stack
- 11) Hydraulic Lift Cylinder
- 12) Maintenance Lock
- 13) Motor Controllers (2x)
- 14) Battery Charger Unit
- 15) Ground Control Panel
- 16) Main Power Switch
- 17) Emergency Lowering Handle
- 18) Battery Charger Display
- 19) Battery Charger/Power to Platform Plug (3-Prong)
- 20) Steer Wheels
- 21) Drive Wheels
- 22) Tie-Down/Lift Points
- 23) Forklift Pockets
- 24) Pothole Guard
- 25) Hydraulic Pump Motor
- 26) Hydraulic Tank
- 27) Function Manifold
- 28) Hydraulic Filter
- 29) Batteries (2x)

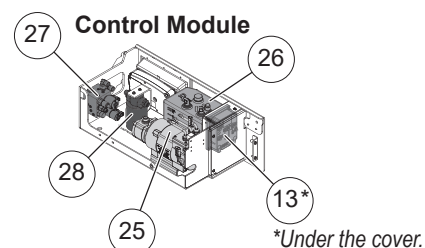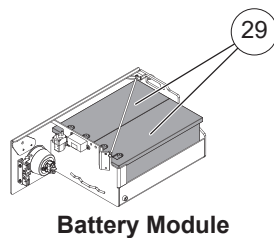

# Platform Controls

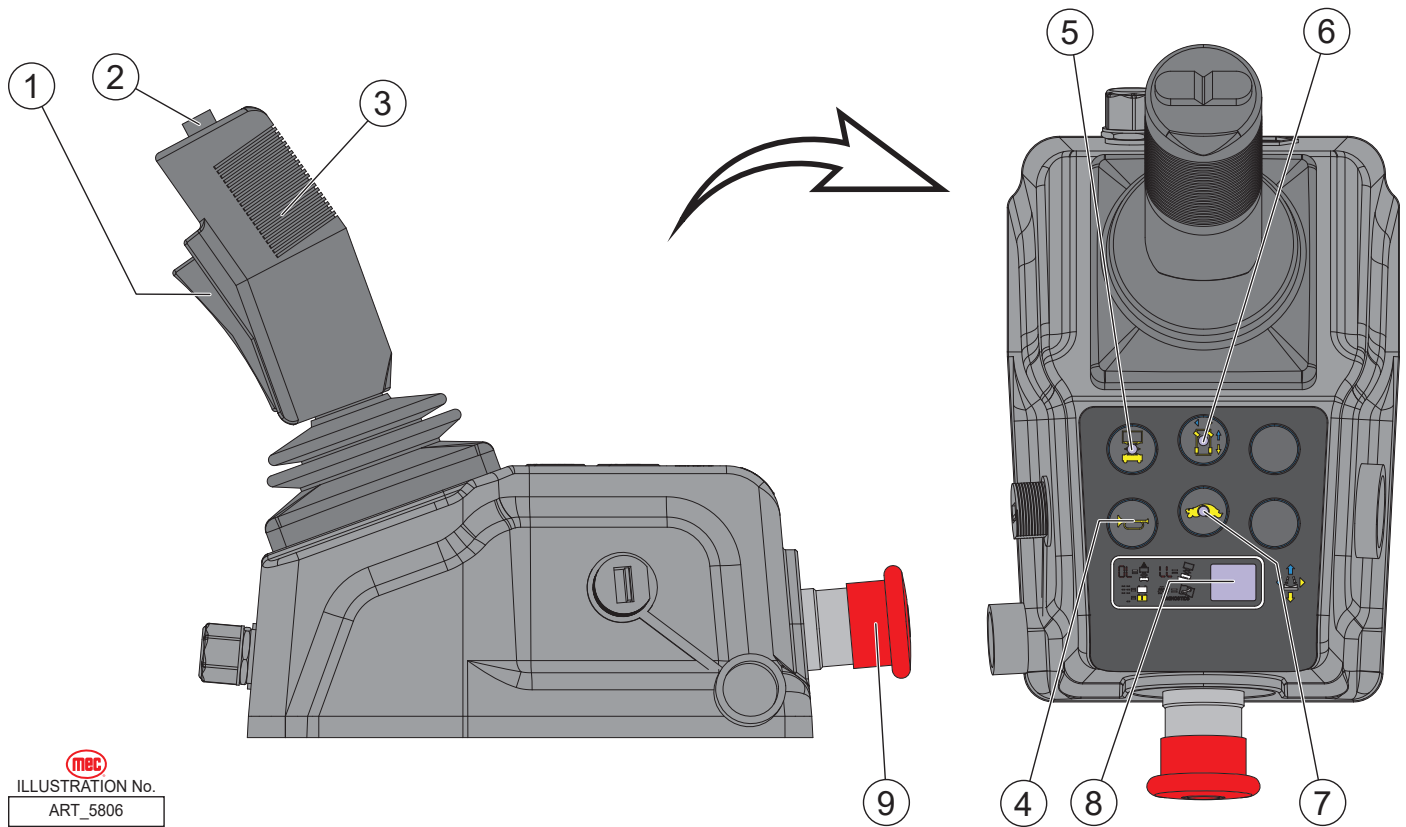

**mec**  
ILLUSTRATION No.  
ART\_5806



**ALWAYS** be aware of the machine's position and of your surroundings before activating any control function.

Control		Description
1	Function Enable Switch	Squeeze to enable Drive, Steer, and Lift functions from the Control Handle.
2	Steer Switch	Using your thumb, press and hold the rocker switch to steer Left or Right.
3	Control Handle	Drive   Proportionally controls Forward and Reverse travel.
		Lift   Proportionally controls Lift and Lower functions.
4	Horn Button	Press to sound warning horn.
5	Lift Select	Press this button to enable the Lift function. <ul style="list-style-type: none"> <li>Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Lift will time-out.</li> <li>Release then press the Function Enable Switch to reactivate selected function.</li> </ul>
6	Drive Select	Press this button to enable the Drive function. <ul style="list-style-type: none"> <li>Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Drive will time-out.</li> <li>Release then press the Function Enable Switch to reactivate selected function.</li> </ul>
7	Drive Speed Select	Light on indicates Low Speed Drive is selected. Light off indicates High Speed Drive is selected.
8	LED Display	Indicates the state of battery charge and displays diagnostic codes when necessary.
9	Emergency Stop Switch	Push in the Emergency Stop switch at any time to stop all machine functions. Pull the button out to the On position to operate the machine.

# Lower Controls

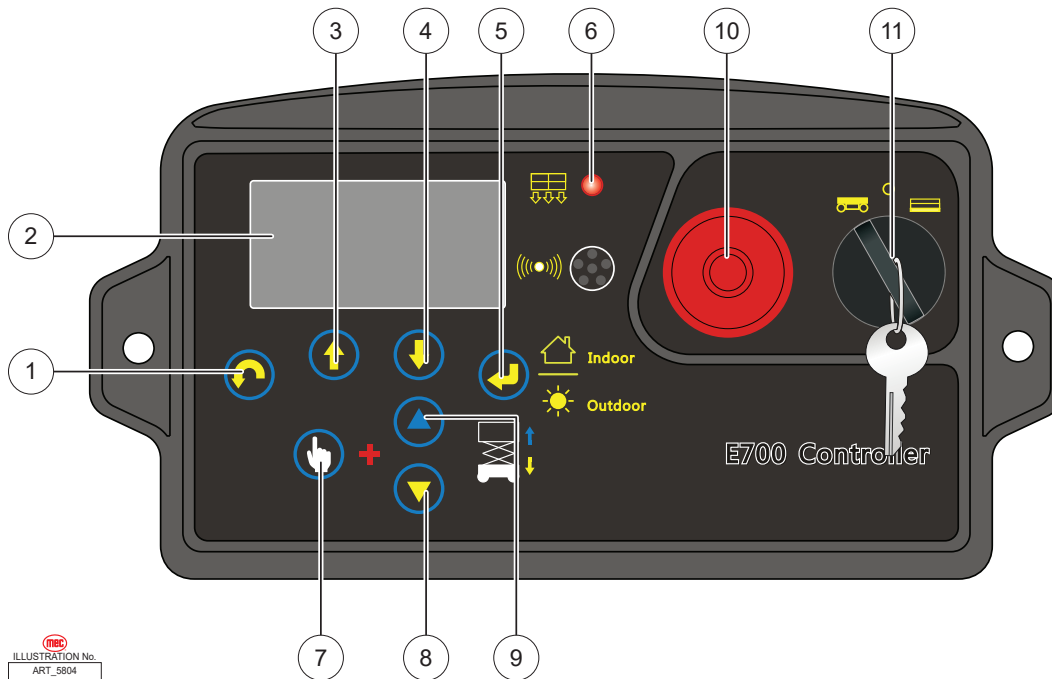


ILLUSTRATION No. ART\_5804



**WARNING** ALWAYS be aware of the machine's position and of your surroundings before activating any control function.

Control		Description
1	Menu Escape Button	Press this button to exit the Menu screen.
2	LED Readout Screen	Diagnostic readout and battery charge indicator.
3	Menu Up Button	Press this button to go up the Menu items.
4	Menu Down Button	Press this button to go down the Menu items.
5	Menu Enter Button	Press this button to enter the Menu screen
6	Overload Indicator Light	Light on indicates when platform is overloaded.
7	Function Enable Button	Press and hold this button along with either the Platform Down Button (#8) or the Platform Up Button (#9) to activate selected function.
8	Platform Down Button	Press and hold the Function Enable Button (#7) and this button then the platform with lower.
9	Platform Up Button	Press and hold the Function Enable Button (#7) and this button then the platform with rise.
10	Emergency Stop Switch	Push in the Emergency Stop switch at any time to stop all machine functions. Pull the button out to the On position to operate the machine.
11	Key Switch	Platform Turn the key switch to the platform position and the platform controls will be selected.
		Off Turn the key switch to the Off position (pushed in) and the machine will be off.
		Base Turn the key switch to the base position and the ground controls will be selected.

## Selecting Indoor/Outdoor Mode:

To select the Indoor/Outdoor Mode, press and hold the Menu Enter Button (#5) for a few seconds to switch to Indoor or Outdoor.

- **Indoor**
  - Select to allow unrestricted height when not exposed to wind.
- **Outdoor**
  - Select to limit the maximum height when exposed to wind.

## Workplace Inspection

**DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.**

Inspect the workplace and determine whether the workplace is suitable for safe machine operation. Do this before moving the machine to the workplace.

Be sure the lift is the correct machine for the job.

Be aware of workplace conditions, and continue to watch for hazards while operating the machine.

### Workplace Inspection

Before operating the machine, check the workplace for all possible hazards, including but not limited to:

- Drop-offs or holes, including those concealed by water, ice, mud, etc.
- Sloped, unstable or slippery surfaces
- Bumps, surface obstructions and debris
- Overhead obstructions and electrical conductors
- Other objects or equipment
- Hazardous locations and atmospheres
- Inadequate surface and support to withstand all load forces imposed by the machine
- Wind and weather conditions
- The presence of unauthorized personnel
- Other possible unsafe conditions



## Functions Tests

**DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.**

This section provides instructions and tests for each function of machine operation. Follow all safety rules and instructions. The operator must conduct inspections and a Functions Test of the machine before each work shift to check that all machine systems are working properly.

Test the machine on a firm level surface with no debris, drop-offs, potholes or overhead obstructions. Perform each step outlined in this section.

This machine shall only be operated by trained and authorized personnel. If multiple operators use this machine, all must be trained, qualified and authorized to use it. New operators must perform a Pre-Start Inspection and Functions Test prior to operating the machine.

Operators must comply with all employer and job site rules and governmental regulations regarding the use of personal protective equipment.

DO NOT use a machine that is malfunctioning. If any function does not perform as described, tag the machine and remove for repair by a qualified service technician. After repairs are completed, a Pre-Start Inspection and Functions Test must be performed before using the machine.



**Check the area above and around the machine for obstructions and electrical power lines before operating the machine. The machine must have space to allow full elevation of platform.**

### Prestart


Perform Prestart Inspection (see page 17).

Check the Emergency Stop Switches at both the base and platform controls. Pull the button out to the On position to operate the machine.

Check Main Power Switch. Must be in the On position (pulled out).



ART\_3353

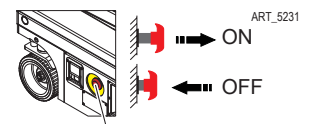

Main Power/ Lower Emergency Stop Switch

### Functions Test

1. Select a test area that is firm, level and free of obstruction.
2. Be sure the battery pack is connected.
3. Turn the main power switch to the On position (pulled out).

### At the Lower Controls

1. Pull out the red Emergency Stop button clockwise to the On position (pulled out) at both the ground and platform controls.



2. Turn the Key Switch to ground control.
3. Observe the diagnostic LED readout on the ECU window located at the Platform Controls.
  - **Result:** The LED should look similar to the picture right.
4. Observe the LED readout screen on the ECU window.
  - **Result:** The LED will come on and display system ready.

Art 5673



### Test the Emergency Stop

1. Push in the ground red Emergency Stop button to the Off position (pushed in).
  - **Result:** No functions should operate.
2. Pull out the red Emergency Stop button clockwise to the On position (pulled out).

### Test Platform Lift/Lower Functions




**Check the area above and around the machine for obstructions and electrical power lines before operating the machine.**

A buzzer with different sound frequency is controlled by the computer system. The descent alarm sounds at 60 beeps per minute. The alarm that goes off when the pothole guards have not deployed sounds at 180 beeps per minute. The alarm that goes off when the machine is not level sounds at 180 beeps per minute. The machine is equipped with an automotive-style horn.

1. At the lower controls, turn the Key Switch to the Off position or Platform position.
2. At the lower controls, press and hold either the Platform Up or the Platform Down button.
  - **Result:** No function should operate.
3. Turn the Key Switch to the lower controls.
4. At the lower controls, press and hold the Function Enable Button then press the Platform Up button.
  - **Result:** The platform should raise.
5. Press and hold the Function Enable Button then press the Platform Down button.
  - **Result:** The platform should lower to end. The descent alarm should sound while the platform is lowering.

### Test the Emergency Lowering

1. Raise the platform up approximately 2 feet (60 centimeters).
2. Pull the Emergency Lowering Handle.
  - **Result:** The platform should lower. The descent alarm will not sound.

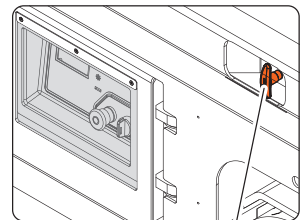

ART\_5884

Emergency Lowering Handle

### At the Platform Controls

1. Turn the Key Switch to platform control.

### Test the Emergency Stop

1. Push in the platform red Emergency Stop button to the Off position (pushed in).
  - **Result:** No functions should operate.

2. Pull out the red Emergency Stop button clockwise to the On position (pulled out).
  - **Result:** The LED indicator light should come on.

### Test the Horn

1. Push the horn button.
  - **Result:** The horn should sound.



### Test Function Enable and Platform Lift/Lower Functions



**Check the area above and around the machine for obstructions and electrical power lines before operating the machine.**

1. Press the lift function select button.
2. Do not hold the Function Enable Switch on the control handle.
3. Slowly move the control handle forward/downward, then rearward/upward.
  - **Result:** No functions should operate.
4. Press and hold the Function Enable Switch on the control handle.
5. Slowly pull the control handle rearward/upward.
  - **Result:** The platform should raise. The pothole guards should deploy.
  - Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Lift will time-out.
  - Release then press the Function Enable Switch to reactivate selected function.
6. Release the control handle.
  - **Result:** The platform should stop raising.
7. Press and hold the Function Enable Switch. Slowly push the control handle forward/downward.
  - **Result:** The platform should lower. The descent alarm should sound while the platform is lowering.
  - Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Lift will time-out.
  - Release then press the Function Enable Switch to reactivate selected function.



### Test the Steering

**Note:** When performing the steer and drive function tests, stand in the platform facing the steer end of the machine.

1. Press the drive function select button.
2. Press and hold the Function Enable Switch on the control handle.
3. Depress the thumb rocker switch on top of the control handle in the direction identified by the blue left arrow on the control panel.
  - **Result:** The steer wheels should turn in the direction that the blue left arrow points on the control panel.
4. Depress the thumb rocker switch in the direction identified by the yellow right arrow on the control panel.
  - **Result:** The steer wheels should turn in the direction that the yellow right arrow points on the control panel.



## Test Drive and Braking


1. Press the drive function select button. The indicator light should turn on.
2. Press and hold the Function Enable Switch on the control handle.
3. Slowly move the control handle forward/downward until the machine begins to move, then return the handle to the center position.
  - **Result:** The machine should move forward, in the direction of the steering wheels, then come to an abrupt stop.
  - Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Drive will time-out.
  - Release then press the Function Enable Switch to reactivate selected function.
4. Press and hold the Function Enable Switch on the control handle.
5. Slowly move the control handle rearward/upward until the machine begins to move, then return the handle to the center position.
  - **Result:** The machine should move rearward, in the direction of the platform entry, then come to an abrupt stop.
  - Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Drive will time-out.
  - Release then press the Function Enable Switch to reactivate selected function.



**Note:** The brakes must be able to hold the machine on any slope it is able to climb.

## Test the Limited Drive Speed

1. Press the lift function select button.
2. Press the Function Enable Switch. Raise the platform approximately 6.6 feet (2 meters) from the ground.
  - **Result:** The pothole guards should deploy.
3. Press the drive function select switch.
4. Press and hold the Function Enable Switch on the control handle.
5. Slowly move the control handle to the full drive position.
  - **Result:** The maximum achievable drive speed with the platform raised should not exceed 0.72 ft per second (22 cm/s).
  - If the drive speed with the platform raised exceeds 0.72 ft per second (22 cm/s), immediately tag and remove the machine from service.

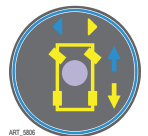

## Test the Tilt Sensor Operation

**Note:** Perform this test from the ground with the platform controller. Do not stand in the platform.

1. Fully lower the platform.
2. Place a 1.4×7.9inch (3.5×20 centimeter) or similar piece of wood under both wheels on one side and drive the machine up onto them.
3. Raise the platform approximately 6.6 feet (2 meters) from the ground.
  - **Result:** The platform should stop and the tilt alarm will sound at 180 beeps per minute. The platform controls LED readout should display LL.
4. Press the drive function select button.
5. Press and hold the function enable switch on the control handle.
6. Move the control handle in the direction indicated by the blue up arrow, then move the control



Art\_5533

handle in the direction indicated by the yellow down arrow.

- **Result:** The drive function should not work in either direction.

7. Lower the platform and drive the machine off the block.

## Test the Pothole Guards

**Note:** The pothole guards should automatically deploy when the platform is raised. The pothole guards activate another limit switch which allows the machine to continue to function. If the pothole guards do not deploy, an alarm sounds and the machine will not drive and steer.

1. Raise the platform.
  - **Result:** When the platform is raised approximately 7.8 feet (2.4 meters) from the ground, the pothole guards should deploy.
2. Press on the pothole guards on one side, and then the other.
  - **Result:** The pothole guards should not move.
3. Lower the platform.
  - **Result:** The pothole guards should return to the stowed position.
4. Place a 1.4×7.9inch (3.5×20 centimeter) or similar piece of wood under a pothole guard. Raise the platform.
  - **Result:** When the platform is raised approximately 7.8 feet (2.4 meters) from the ground, the pothole alarm will sound at 180 beeps per minute, and the platform controls LED screen readout should display 18.
5. Press the drive function select button.
6. Press and hold the function enable switch on the control handle.
7. Move the control handle in the direction indicated by the blue up arrow, and then move the control handle in the direction indicated by the yellow down arrow.
  - **Result:** The drive function should not work in either direction.
8. Press and hold the function enable switch on the control handle.
9. Depress the thumb rocker switch on top of the control handle in the direction identified by the blue and yellow arrow on the control panel.
  - **Result:** The steer function should not work in either direction.
10. Lower the platform and remove the 1.4×7.9inch (3.5×20 centimeter) wood block.

## Test the Indoor/Outdoor Functions

**Note:** Perform this test from the ground with the platform controller. Do not stand in the platform.

1. Turn the key switch to ground control position.
2. Press and hold the Menu enter button simultaneously for 3 seconds to switch Indoor/Outdoor mode.
3. Switch to the Outdoor mode.
4. Press and hold the function enable button.
5. Press and hold the platform up button.
6. Raise the platform to the highest position and measure the platform height.
  - **Result:** The platform height shall not exceed 15.1 feet (4.6 meters).
7. Switch to the Indoor mode.
8. Press and hold the function enable button.
9. Press and hold the platform up button.
10. Raise the platform to the highest position and measure the platform height.
  - **Result:** The platform continued to rise to a height of about 19.7 feet (6.0 meters).

11. Switch to the Outdoor mode.
  - **Result:** The alarm should sound.
12. Switch to the Indoor mode and fully lower the platform.
13. Turn the key switch to platform control position.
14. Switch to the Outdoor mode.
15. Press the lift function select button.
16. Press and hold the function enable switch on the control handle.
17. Slowly pull the control handle rearward/upward. Raise the platform to the highest position and measure the platform height.
  - **Result:** The platform height shall not exceed 15.1 feet (4.6 meters).
18. Switch to the Indoor mode.
19. Press and hold the function enable switch on the control handle.
20. Slowly pull the control handle rearward/upward. Raise the platform to the highest position and measure the platform height.
  - **Result:** The platform continued to rise to a height of about 19.7 feet (6.0 meters).
21. Switch to the Outdoor mode.
  - **Result:** The alarm should sound.
22. Switch to the Indoor mode and fully lower the platform.

# Operating Instructions




Check the area above and around the machine for obstructions and electrical power lines before operating the machine.

## Emergency Stop

Push in the red Emergency Stop button to the Off position (pushed in) at the ground controls or the platform controls to stop all machine functions.

If any function operates when either red Emergency Stop button is pushed in, repair the Emergency Stop function before using the machine.

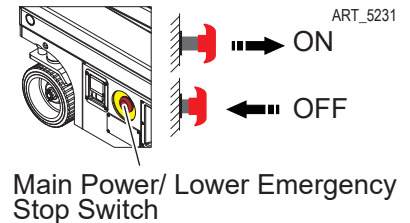

## Emergency Lowering




If the control system fails while the platform is elevated, use the emergency lowering procedure to safely lower the platform.

Do not climb down the scissor assembly or exit the platform.

The Emergency Lowering System is used to lower the platform in case of power failure.

Pull the Emergency Lowering Handle to lower the platform.

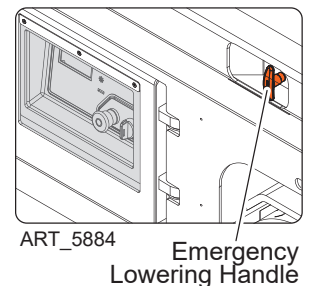

## Indoor/Outdoor Switch


To select the Indoor/Outdoor Mode, press and hold the Menu Enter Button for a few seconds to switch to Indoor or Outdoor.

- **Indoor**
  - Select to allow unrestricted height when not exposed to wind.
- **Outdoor**
  - Select to limit the maximum height when exposed to wind.

## Platform Overload

Indicates too much weight on the platform.

Remove weight from the platform to restore function and continue.

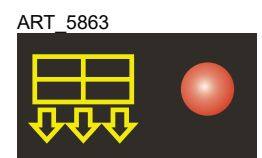

## Operation from Ground

Drive and steer functions are not available from the ground controls.


1. Turn the Key Switch to ground control.
2. Pull out the red Emergency Stop button to the On position (pulled out) at both the ground and platform controls.
3. Be sure the battery pack is connected before operating the machine.



**Check the area above and around the machine for obstructions and electrical power lines before operating the machine.**

## To Position Platform

Press the blue up arrow to raise the platform. Press the yellow down arrow to lower the platform.

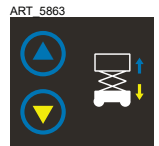

## Operation from Platform

1. Turn the Key Switch to platform control.
2. Pull out the red Emergency Stop button clockwise to the On position (pulled out) at both the ground and platform controls.
3. Be sure the battery pack is connected before operating the machine.




**Check the area above and around the machine for obstructions and electrical power lines before operating the machine.**

## To Position Platform


1. Press the lift function select button.
2. Press and hold the Function Enable Switch on the control handle.
3. Pull the control handle upward to raise the platform.
4. Push the control handle downward to lower the platform.

Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Lift will time-out. Release then press the Function Enable Switch to reactivate selected function.

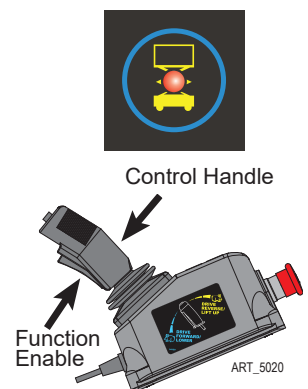

## To Steer


1. Press the drive function select button.
2. Press and hold the Function Enable Switch on the control handle.
3. Turn the steer wheels with the thumb rocker switch located on the top of the control handle.

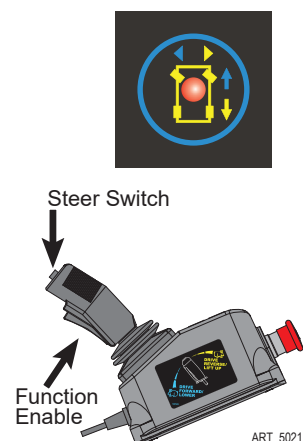



## To Drive

1. Press the drive function select button.
2. Press and hold the Function Enable Switch on the control handle.
  - **Increase speed:** Slowly move the control handle off center.
    - Push the control handle forward to move forward. Pull the control handle rearward to move rearward.
  - **Decrease speed:** Slowly move the control handle toward center.
  - **Stop:** Return the control handle to center or release the Function Enable Switch.

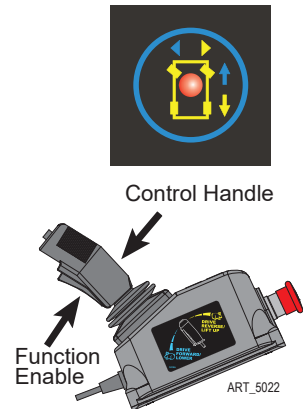

Regardless of if the Function Enable Switch is pressed or released, if no machine movement is made in 10 seconds then the current selection of Drive will time-out. Release then press the Function Enable Switch to reactivate selected function.

Use the color-coded direction arrows on the platform controls to identify the direction the machine will travel.


Machine travel speed is restricted when the platform is raised.

Battery condition will affect machine performance. Machine drive speed and function speed will drop when the battery level indicator is flashing.

## To Reduce Drive Speed

The drive controls can operate in two different drive speed modes.

- When the drive speed button light is on, slow drive speed mode is active.
- When the button light is off, fast drive speed mode is active.

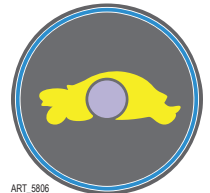

Press the drive speed button to select the desired drive speed.

## Driving on a Slope

Determine the slope and side slope ratings for the machine and determine the slope grade.

- Maximum forward/rearward slope rating, stowed position 25%.
- Maximum side slope rating, stowed position 5°.

**Note:** Slope rating is subject to ground conditions and adequate traction.

## To determine the slope grade

Measure the slope with a digital inclinometer OR use the following procedure. You will need:

- Carpenter's level
- Straight piece of wood, at least 3.3 feet (1 meters) long
- Tape measure

Lay the piece of wood on the slope.

At the downhill end, lay the level on the top edge of the piece of wood and lift the end until the piece




of wood is level.

While holding the piece of wood level, measure the distance from the bottom of the piece of wood to the ground.

Divide the tape measure distance (rise) by the length of the piece of wood (run) and multiply by 100.

**Example:**

- Run = 12 feet / 3.6 meters
- Rise = 12 inches / 0.3 meters
- $12 \text{ inches} \div 12 \text{ feet} = 0.083 \times 100 = 8.3\%$
- $0.3 \text{ meters} \div 3.6 \text{ meters} = 0.083 \times 100 = 8.3\%$

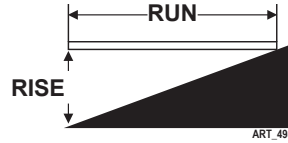

If the slope exceeds the maximum slope or side slope rating, the machine must be winched or transported up or down the slope. See Transport and Lifting section.

**Operation from Ground with Controller**




**Use extreme caution when operating the machine with the controller from the ground.**

Maintain safe distances between operator, machine and fixed objects.

Be aware of the direction the machine will travel when using the controller.


**Battery Level Indicator**

Use the LED diagnostic readout to determine the battery level.

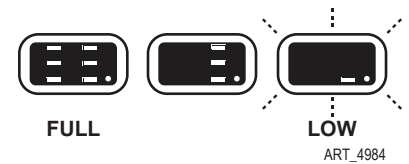

**Maintenance Lock**


1. Raise the platform approximately 1.6 feet (0.5 meters) from the ground.
2. Rotate the Maintenance Lock away from the machine and let it hang down.
3. Lower the platform until the Maintenance Lock rests securely on the link. Keep clear of the Maintenance Lock when lowering the platform.

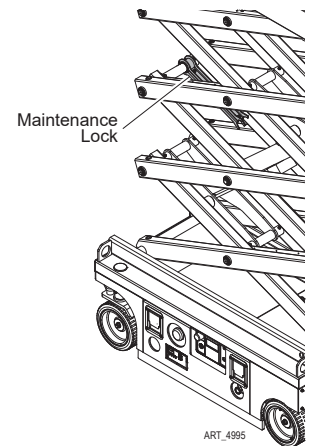

**Don't engage the Maintenance Lock unless the platform is empty of tools and material.**

## To Extend and Retract the Deck Extension

1. Press the platform lock pin foot pedal on the extension deck.
2. Push the platform extension guardrail to extend the platform to the desired position.

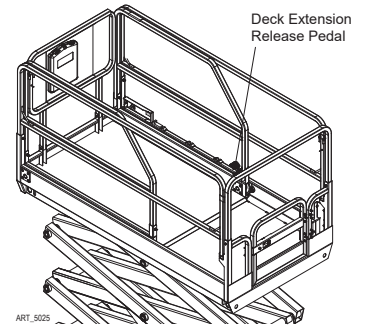


**IF THE ROLL-OUT DECK IS EXTENDED CHECK FOR CLEARANCE UNDER DECK AREA BEFORE LOWERING PLATFORM.**

## Error Indicator Readout

The Error Indicator Readout is located at the Upper Controls station. Consult the Service & Parts Manual for Alarm Code descriptions. Manuals are available free online at [www.MECawp.com](http://www.MECawp.com).

If a load in excess of the rated load is detected the lift or lower will be restricted. The load must be removed before movement can occur.

The platform overload is measured when the machine is stationary and not in motion.

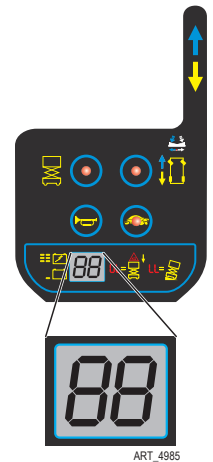

## Shutdown Procedure

When finished with the machine, place the platform in the stowed position.

Park the machine on a level surface.

Turn the Key Switch to the Off position (pushed in) and remove the key to prevent unauthorized use. Carefully exit the platform using a constant three (3) point dismount/grip.

Always put the main power switch in Off position (pushed in) when leaving the machine at the end of the work day.

Charge the batteries.

## Platform overload system

The accuracy of the pressure sensor on the hydraulic cylinder is affected by the hydraulic oil temperature. During the actual use, in addition to the specified time interval, when the working environment temperature changes significantly from the ambient temperature during the last calibration, the platform overload system may appear abnormal conditions. It need to be calibrated again, the platform overload system cannot be used again until the platform overload system get back to normal.

## Sheet Materials Rack

**SHEET MATERIAL WEIGHT IS PART OF THE TOTAL PLATFORM CAPACITY. THIS MAY LIMIT CAPACITY TO ONE OCCUPANT.**

**DO NOT** exceed the Sheet Materials Racks capacity listed in the table below.




**DO NOT** allow any personnel to stand below the machine when the Sheet Materials is in use.

**Fasten the material securely with straps or optional material clamps until use.**

The machine is equipped with two Sheet Materials Racks. Sheet material may be secured outside the platform to the racks up to the capacities listed in the table below. Maximum size of material on the Sheet Material Racks is 4 feet × 8 feet (1.2 meters × 2.4 meters) for outdoor wind loading. All material should be centered on the Sheet Materials Rack.

Use caution when driving the machine or elevating the platform when the Sheet Material Rack is loaded.

Secure the sheets to the platform with the provided material clamp until ready to use.

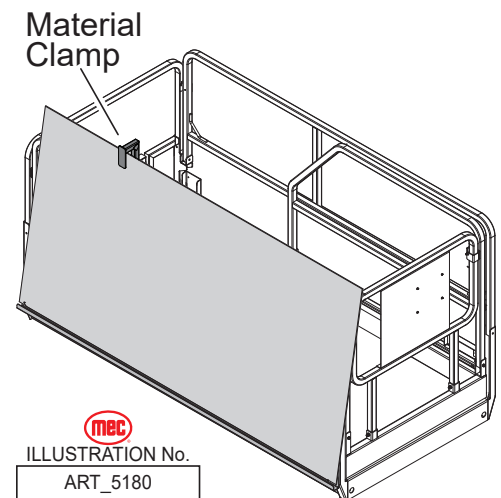

Remove the J-shaped arm from the Material Clamp when loading material on the Sheet Material Rack.

When all material is loaded, replace the J-shaped arm as shown and secure in place with the snap pin.

<b>Single Sheet Material Rack Capacity</b>	110lbs (50kg)
<b>Both Sheet Material Rack Capacity</b>	220lbs (100kg)

## Battery Charging

The charger surface can get hot while operating. Contact with the skin or surrounding materials should be avoided.



To reduce the risk of an electric shock, connect only to a properly grounded single-phase (3 wire) outlet.

Do not use an external charger or booster battery.


Charge the battery in a well-ventilated area.



Use proper AC input voltage for charging as indicated on the machine.

Use only MEC authorized batteries and chargers.

The charger will indicate the status of the charge cycle.

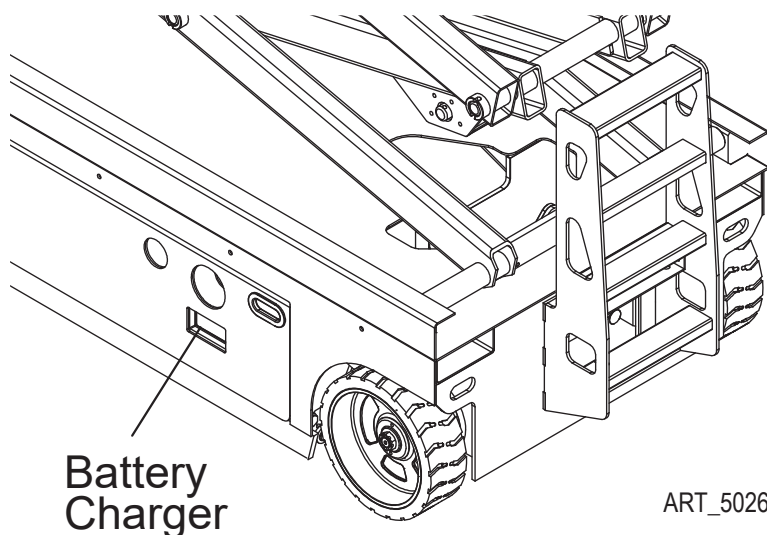

## Maintenance

**DO NOT** operate this machine until you have read and understood this manual, have performed the **Workplace Inspection, Pre-Start Inspection and Routine Maintenance**, and have completed all the test operations detailed in the **Operating Instructions** section.

The operator must conduct a Pre-Start Inspection of the machine and test all functions before each work shift to check for damage, malfunction and unauthorized modification. The inspection is designed to discover if anything is apparently wrong with a machine before the operator performs the function tests.

Tag and remove a damaged, malfunctioning or modified machine from service. **DO NOT** use a damaged, malfunctioning or modified machine.

Use the Pre-Start Inspection to determine what Routine Maintenance is required. The operator may perform only the routine maintenance items specified in this manual.

**IMPORTANT:** Scheduled maintenance inspection checklists are included in this manual for use only by qualified service technicians. Only qualified service technicians may perform repairs to the machine. After repairs are completed, the operator must perform a Pre-Start Inspection before proceeding to the Functions Test.



**Hydraulic fluid under pressure can penetrate and burn skin, damage eyes, and may cause serious injury, blindness, and death. Repair leaks immediately. Fluid leaks under pressure may not always be visible. Check for pin hole leaks with a piece of cardboard, not your hand.**



**NEVER** perform work or inspection on the machine with the platform elevated without first blocking the scissor assembly with the Maintenance Lock (see page 29).

**Perform scheduled maintenance at recommended intervals. Failure to perform scheduled maintenance at recommended intervals may result in a defective or malfunctioning machine and may result in injury or death of the operator. Keep maintenance records current and accurate.**

**Immediately report any damage, defect, unauthorized modification or malfunction to your supervisor. Any defect must be repaired prior to continued use. DO NOT** use a damaged, modified or malfunctioning machine.



**Never leave hydraulic components or hoses open. Plug all hoses and fitting immediately after disassembly to protect the system from outside contamination (including rain).**

**Never open a hydraulic system when there are contaminants in the air.**

---

Always clean the surrounding area before opening hydraulic systems.

Use only recommended lubricants. Improper lubricants or incompatible lubricants may cause as much damage as no lubrication.



Watch for makeshift “fixes” which can jeopardize safety as well as lead to more costly repair.

Inspection and maintenance should be performed by qualified personnel familiar with the equipment.

---

## Routine Maintenance



**NEVER** perform work or inspection on the machine with the platform elevated without first blocking the scissor assembly with the Maintenance Lock.

See page 30 for instructions.

---

**IMPORTANT:** The operator may perform only maintenance items on the Pre-Start Inspection Checklist. Frequent and Annual maintenance must be performed by qualified service technicians.

## Pre-Start Inspection

Perform routine maintenance as identified in the Pre-Start Inspection Checklist on page 30.

## Frequent and Annual Maintenance


Frequent Inspection Checklists and Annual Inspection Reports must be completed by qualified service technicians trained and authorized to perform maintenance on this machine, and must be done in accordance with the procedures outlined in the service manual. Scheduled maintenance inspection checklists are included in this manual for use by qualified service technicians.

**IMPORTANT:** In addition to the Frequent Inspection Checklists and Annual Inspection, the **30-Day Service must be performed after the first 30 days or 40 hours of initial service. See the Service & Parts Manual for specific instructions.**

Machines that have been out of service for more than three months must have the Frequent Inspection Checklists completed before returning to service.

# Lubrication

Operator may perform routine maintenance only. Lubrication listed as Scheduled Maintenance must be performed by a qualified service technician.

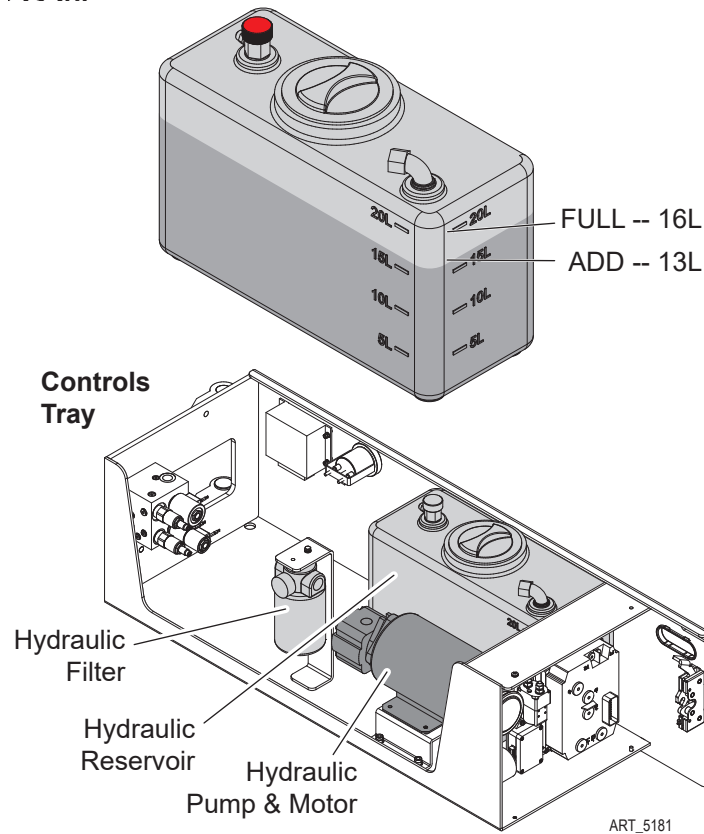

No.	Item	Specification	Frequency
1	Hydraulic Reservoir	<p>Mobile Fluid DTE 10, DTE 13 M, or AW32</p> <p><b>Do not substitute other fluids as pump damage may result.</b></p> <p>Check as shown above with platform in the stowed position. Fill as needed.</p>	<p><b>Routine Maintenance</b></p> <ul style="list-style-type: none"> <li>Check hydraulic oil level every week</li> </ul> <p><b>Scheduled Maintenance</b></p> <ul style="list-style-type: none"> <li>Change yearly or every 600 hours, whichever occurs first</li> </ul>
2	Hydraulic Cap Breather Filter and Hydraulic Filter	<p>Breather Filter (Located inside Filler Cap)</p> <p>Hydraulic Filter Canister</p>	<p><b>Scheduled Maintenance</b></p> <p><b>Normal Conditions</b></p> <ul style="list-style-type: none"> <li>Change every six months or 300 hours, whichever occurs first</li> </ul> <p><b>Severe Conditions--very dusty, exceptionally hot or exceptionally cold conditions</b></p> <ul style="list-style-type: none"> <li>Change every three months or 150 hours, whichever occurs first</li> </ul>

## Pre-Start Inspection Checklist

The operator must conduct a Pre-Start Inspection of the machine before each work shift.

DO NOT use a damaged or malfunctioning machine.

	Be sure that the operator's manual are complete, legible and in the storage container located in the platform.
	Be sure that all decals are legible and in place. See Decals section.
	Check for hydraulic oil leaks.
	Check for battery fluid leaks.

**Check the following components or areas for damage, improperly installed or missing parts and unauthorized modifications:**

	Electrical components, wiring and electrical cables
	Battery connections
	Hydraulic hoses, fittings, cylinders and manifolds
	Battery pack and connections
	Drive motors
	Slide blocks/wear pads
	Tires and wheels
	Ground strap
	Limit switches, alarm and beacon
	Nuts, bolts and other fasteners
	Platform entry gate
	Beacons and alarms
	Maintenance Lock
	Platform extension
	Scissor pins and retaining fasteners
	Platform control handle
	Brake release components
	Pothole guards

**Check entire machine for:**

	Cracks in welds or structural components
	Dents or damage to machine
	Be sure that all structural and other critical components are present and all associated fasteners and pins are in place and properly tightened
	Be sure that guard rails are properly installed and secured, and that all pins and bolts are properly fastened.
	Be sure that the chassis trays are closed and latched and the batteries are properly connected.



**NEVER perform work or inspection on the machine with the platform elevated without first blocking the scissor assembly with the Maintenance Lock. See page 32 for instructions.**



# Frequent Inspection Checklist



**This checklist must be used at 3-month intervals or every 150 hours of machine use, whichever occurs first. Failure to do so could result in death or serious injury.**

Frequent Maintenance Inspections should be conducted by qualified service technicians only. Photocopy this page for reuse. Keep inspections records up to date. Record and report all discrepancies to your supervisor. See the Service & Parts Manual for specific instructions.

Model Number \_\_\_\_\_ Serial Number \_\_\_\_\_ Hour Meter Reading \_\_\_\_\_

	Perform all checks listed on Pre-Start Inspection.
	Grease the Steering Yokes
	Inspect the condition of hydraulic fluid in the reservoir. Oil should be a clear and amber in color.
	Batteries
	Electrical Wiring
	Tires and wheels
	Emergency Stop
	Key Switch
	Horn
	Drive Brakes
	Drive Speed, Stowed Platform
	Drive Speed, Raised Platform
	Drive Speed, Slow
	Tank Venting System
	Latch Components
	Test Down & Pothole Limit Switches
	Test Up Limit Switches

## Additional maintenance requirements for severe conditions

If the machine is used in very dusty, exceptionally hot or exceptionally cold conditions, replace the Hydraulic Cap Breather Filter and Hydraulic Filter (under normal conditions replace every 6 months or 300 hours, whichever comes first).

Date \_\_\_\_\_ Inspected By \_\_\_\_\_

# Maintenance Inspection Report

## SE & MICRO Series Scissors

Fleet Equipment Number \_\_\_\_\_ Date \_\_\_\_\_  
 Inspector Name \_\_\_\_\_ Inspector Co. \_\_\_\_\_  
 Model Number \_\_\_\_\_ Address \_\_\_\_\_  
 Serial Number \_\_\_\_\_  
 Hour Meter \_\_\_\_\_ Signature \_\_\_\_\_  
 Machine Owner & address \_\_\_\_\_

**Maintain all service records in accordance with ANSI A92.24-2019**

\* If an inspection receives an "N", remove from service. Once repaired, place an "R" in the box.  
 \* Refer to the proper service manual for specific information, settings and torque specifications.

**Key** Y = Yes, Acceptable N = No, Remove from Service R = Repaired 0 = Not Applicable

**QUARTERLY** - Inspect only those marked "Q"  **ANNUAL** - Inspect all items


	Q/A	Y/N/O	R
<b>DECALS:</b>			
Legible - undamaged/readable	Q		
Capacity decal correct for model	Q		
<b>RAILS:</b>			
Not damaged, all in place	Q		
All rail fasteners secure	Q		
Entry gate secure, closes properly	Q		
Manual box in good condition	Q		
Operators Manual in manual box	Q		
<b>PLATFORM EXTENSION:</b>			
Rolls in and out freely	Q		
Lock holds deck in place	Q		
Release pedal moves freely (lube)	Q		
<b>ELEVATING ASSEMBLY:</b>			
Scissor Slide Blocks, lubed	Q		
Maintenance Stand, good Cond	Q		
Beam structures: Straight, no cracks	A		
Welds: secure, no cracks	A		
Retaining Rings	A		
Cylinder Pins, secure	A		
<b>ELECTRICAL:</b>			
GFCI operates correctly	Q		
Wire harnesses good cond, secure	A		
Comm cable no damage, secure	A		
<b>BASE:</b>			
Fasteners tight	Q		
Cover panels secure	Q		
Welds	A		

	Q/A	Y/N/O	R
<b>WHEELS:</b>			
Tire damage	Q		
Lug nuts (Wheel mounting) torqued correctly	Q		
King Pins lubed	A		
<b>COMPONENT AREA:</b>			
Hydraulic - no leaks	Q		
Hydraulic tank, correct level	Q		
Hoses not damaged - Fittings tight	Q		
Valve manifold secure, no leaks	Q		
Power unit secure, no leaks	Q		
Batteries properly filled and cables clean	Q		
Emergency stop, cuts power/operation	Q		
Battery switch cuts battery feed	Q		
Plastic cover secure (door end 2632-4555 only)	A		
Hydraulic tank, oil clean	A		
Replace Hydraulic Filter (if equipped)	A		
Clean or replace tank breather filter	A		
<b>OPERATIONAL INSPECTION:</b>			
All functions, operate smooth and quiet	Q		
All functions, speeds correct.	Q		
Upper control box, operates correctly	Q		
Emergency Down, operates correctly	Q		
Limit switches slows drive when elevated	Q		
Pothole switch test	Q		
Steering pressure relief, set correctly	Q		
Lift pressure relief, set correctly	Q		
**Check Platform Overload Sensing operation	Q		


\*\*For machine equipped with Platform Overload Protection system only




# Decals

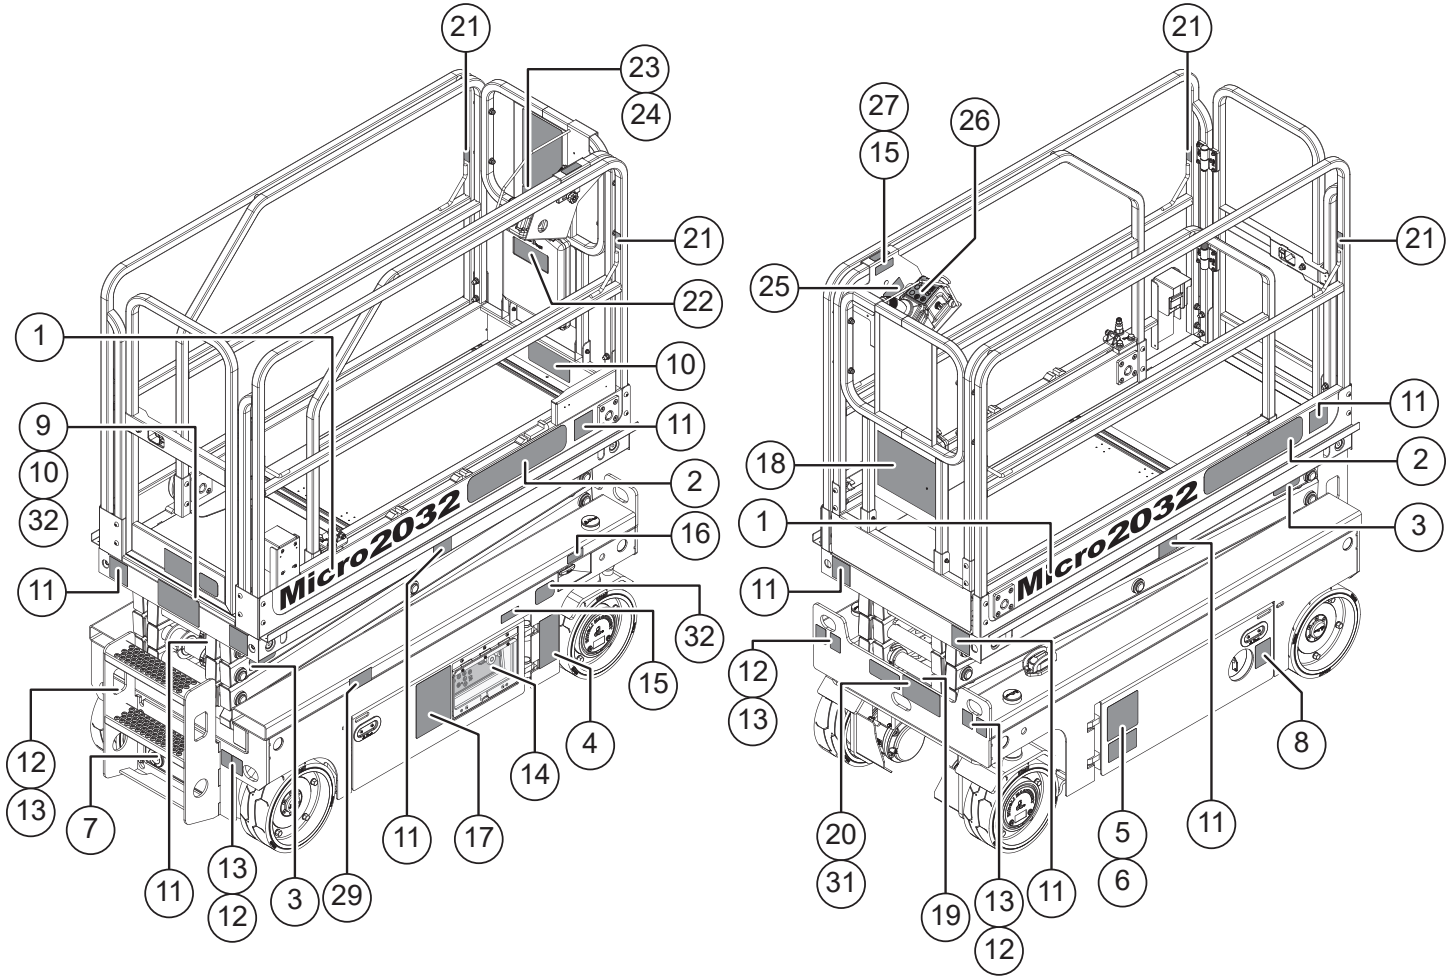



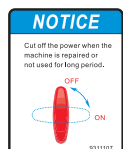

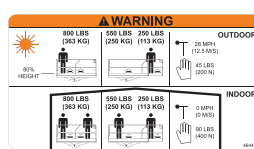
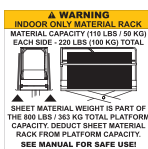


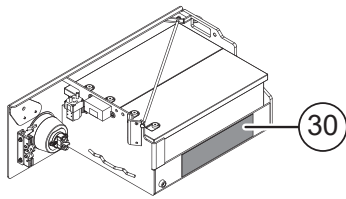
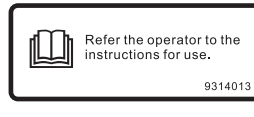





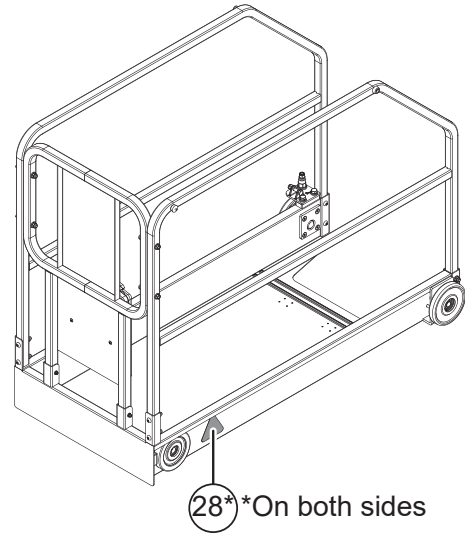


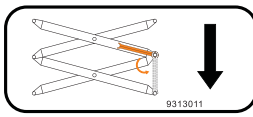





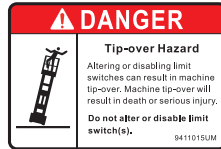



**BATTERY MODULE**

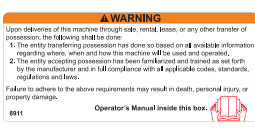

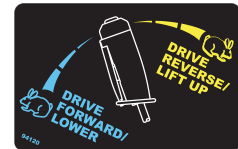**PLATFORM EXTENDED**

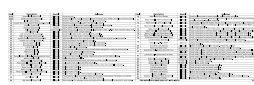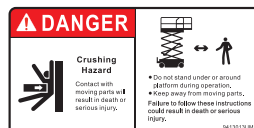

<p><b>1</b></p> <p><b>Micro2032</b></p> <p>96677 Qty. - 2</p>	<p><b>2</b></p> <p><b>mec</b></p> <p>94114 Qty. - 2</p>	<p><b>3</b></p>  <p>41638 Qty. - 2</p>	<p><b>4</b></p>  <p>95215 Qty. - 1</p>	<p><b>5</b></p>  <p>41641 Qty. - 1</p>
<p><b>6</b></p>  <p>48386 Qty. - 1</p>	<p><b>7</b></p> <p><b>BATTERY CHARGER AND POWER TO PLATFORM</b></p> <p>94659 Qty. - 1</p>	<p><b>8</b></p>  <p>41666 Qty. - 1</p>	<p><b>9</b></p>  <p>95301 Qty. - 1</p>	<p><b>10</b></p>  <p>46447 Qty. - 2</p>
<p><b>11</b></p>  <p>47820 Qty. - 8</p>	<p><b>12</b></p>  <p>41635 Qty. - 4</p>	<p><b>13</b></p>  <p>41634 Qty. - 4</p>	<p><b>14</b></p>  <p>44795 Qty. - 1</p>	<p><b>15</b></p>  <p>41639 Qty. - 2</p>
<p><b>16</b></p> <p><b>EMERGENCY LOWER</b></p> <p>Pull knob to lower platform</p> <p>9311017</p> <p>41636 Qty. - 1</p>	<p><b>17</b></p>  <p>41649 Qty. - 1</p>	<p><b>18</b></p>  <p>90719 Qty. - 1</p>	<p><b>19</b></p>  <p>41642 Qty. - 1</p>	<p><b>20</b></p>  <p>94423 Qty. - 1</p>
<p><b>21</b></p>  <p>41648 Qty. - 4</p>	<p><b>22</b></p>  <p>8911 Qty. - 1</p>	<p><b>23</b></p>  <p>41652 Qty. - 1</p>	<p><b>24</b></p>  <p>41647 Qty. - 1</p>	<p><b>25</b></p>  <p>94120 Qty. - 1</p>
<p><b>26</b></p>  <p>44797 Qty. - 1</p>	<p><b>27</b></p>  <p>41640 Qty. - 1</p>	<p><b>28</b></p>  <p>91850 Qty. - 2</p>	<p><b>29</b></p>  <p>90732 Qty. - 1</p>	<p><b>30</b></p>  <p>43879 Qty. - 1</p>
<p><b>31</b></p>  <p>41646 Qty. - 1</p>	<p><b>32</b></p>  <p>96695 Qty. - 2</p>			

# Serial Plate

## Serial Plate Location

The serial plate is attached to the machine at the time of manufacture. Important information about the machine is recorded on the serial plate.

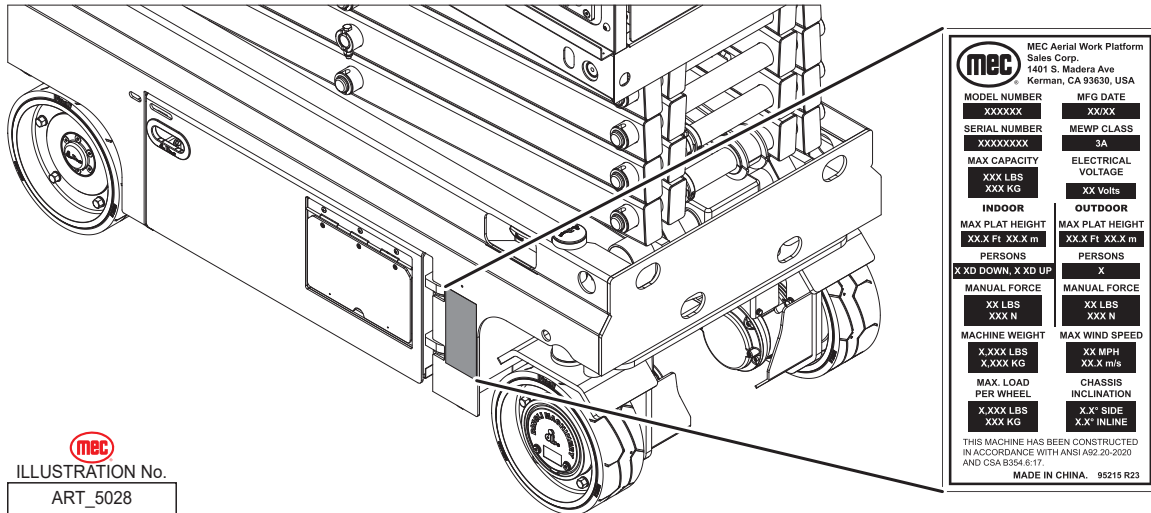


ILLUSTRATION No.  
ART\_5028

## Serial Plate Description

**MODEL NUMBER:** Identifies the machine.

**MFG DATE:** Month / Year of manufacture.

**SERIAL NUMBER:** Identifies a machine with reference to its original owner. Refer to the number when requesting information or ordering parts.

**MEWP CLASS:** MEWP=Mobile Elevating Work Platform

**MAX. CAPACITY:** The maximum safe load (material, persons + equipment) which can be correctly placed on the platform at any elevation.

**ELECTRICAL VOLTAGE:** The voltage at which this machine operates.

**MAX. PLATFORM HEIGHT (INDOOR):** The indoors maximum attainable height measured from level ground surface to platform floor.

**PERSONS (INDOOR):** The maximum number of occupants indoors.

**MANUAL FORCE (INDOOR):** Amount of manual force need to move machine indoors.

**MAX. PLATFORM HEIGHT (OUTDOOR):** The outdoors maximum attainable height measured from level ground surface to platform floor.

**PERSONS (OUTDOOR):** The maximum number of occupants outdoors.

**MANUAL FORCE (OUTDOOR):** Amount of manual force need to move machine outdoors.

**MACHINE WEIGHT:** The weight of the machine with no options.

**MAX WIND SPEED:** The maximum wind speed for safe working conditions.

**MAX. LOAD PER WHEEL:** The maximum safe weight applied to each wheel. Calculated with all available options installed.  $F_w = 30\% (W_m + W_c + W_{opt})$

**CHASSIS INCLINATION:** The maximum amount of tilt for safe working conditions.

---

## Troubleshooting

---

Should you experience erratic operation or notice any malfunction while operating this machine, discontinue use immediately.



Call for assistance and report the incident to your supervisor, and do not use the machine until it has been checked by a trained, qualified mechanic.

---

### Machine functions will not operate

- Master disconnect turned on?
- Batteries properly connected?
- Batteries fully charged?
- Key Switch in proper position?
- Both Emergency Stop Switches reset?
- Function Enable Switch not activated?
- Hydraulic fluid level low?
- Obvious fluid leak or damaged component?
- Wires disconnected, broken, or loose?
- Diagnostic panel on?
- Platform Control Box Fault Code present?
  - Contact MEC Technical Support or refer to service manual. Manuals are available free online at [www.MECawp.com](http://www.MECawp.com).

# Transport and Lifting Instructions

## Safety Information

---

This section is provided for reference and does not supersede any government or company policy regarding the loading, transport or lifting of MEC machinery.



Truck drivers are responsible for loading and securing machines, and should be properly trained and authorized to operate MEC machinery. Drivers are also responsible for selecting the correct and appropriate trailer according to government regulations and company policy. Drivers must ensure that the vehicle and chains are strong enough to hold the weight of the machine (see the serial number plate for machine weight).

While loading and unloading, the transport vehicle must be parked on a level surface and secured to prevent rolling.

---

## Loading: Free-wheel configuration for Winching or Towing

---

### RUNAWAY HAZARD!



After releasing the brakes there is nothing to stop machine travel. Machine will roll freely on slopes.

**ALWAYS** chock the wheels before manually releasing the brakes.

---

The machine can be winched or towed short distances at speeds not to exceed 0.5mph (0.8km/h).

Before towing or winching the machine, it is necessary to release the brakes. Reset the brakes after towing or winching.

### Brake Release Operation

1. Chock the wheels to prevent the machine from rolling.
2. Pull out the platform and lower control emergency red Emergency Stop button to the On position (pulled out).
3. Turn the key switch to the “ground” position while pressing and holding down the yellow “Menu Enter Button” button on the ECU panel to enter the password input screen.
4. Press the yellow “Menu Enter Button” 4 times to enter the Menu screen.
5. Press the yellow “Menu Down Button” button to select “4. Special Mode”.
6. Press the yellow “Menu Enter Button” button to enter Special mode and the screen will display “1. Brake Release”.
7. Press the yellow “Menu Enter Button” button to display “long press to confirm release of brake”. Press and hold down the yellow “Menu Enter Button” button to show “Brake Released!” The horn will sound signaling that all brakes have been released.
8. If you want to reset the brakes, turn the key switch to the “ground” position.



## Driving or Winching onto or off of a Transport Vehicle

**Always attach the machine to a winch when loading or unloading from a truck or trailer by driving.**



**Read and understand all safety, control, and operating information found on the machine and in this manual before operating the machine.**

Before loading or unloading the machine, check that:

- The deck extension, controls and component trays are secure.
- The platform is fully lowered.
- All loose items have been removed.

Before driving or winching the machine:

- Attach the machine to a winch.
- Remove all machine tie downs. Remove wheel chocks.

### Driving

- Turn the Base Key Switch to Platform. Check that the Emergency Stop Switch is reset by pulling it out.
- Enter the platform and reset the Platform Emergency Stop Switch.
- Test platform control functions.
- Select slow drive speed mode. Carefully drive the machine off the transport vehicle with the winch attached.

**Note:** The brakes are automatically released for driving and will automatically apply when the machine stops.

### Winching


- Disengage brakes (see Free-wheel configuration for Winching or Towing on page 40).
- Carefully operate the winch to lower the machine down the ramp.
- Chock the wheels and engage the brakes.



**Lifting the machine from the side may result in component damage.**

### Lifting the machine with a Forklift

- Position the forklift forks in line with the forklift pockets.
- Drive forward to the full extent of the forks.
- Raise the machine 6 inches (15 centimeters) and then tilt the forks back slightly to keep the machine secure.
- Be sure the machine is level when lowering the forks.


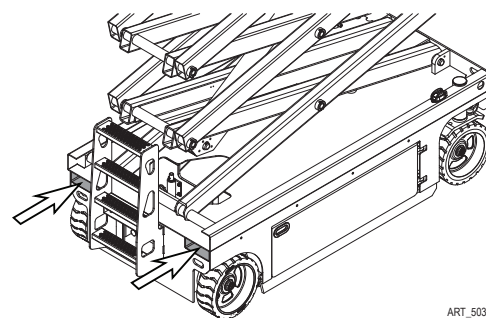


ART\_5030



### Securing to truck or trailer for Transport

- Turn the Key Switch to off and remove the key before transport.
- Inspect the entire machine for loose or unsecured items.
- Chock the wheels
- Use the tie-down points on the chassis for anchoring down to the transport surface.
- Use chains or straps of ample load capacity.
- Use a minimum of four (4) chains or straps.
- Adjust the rigging to prevent damage to the chains and the machine.

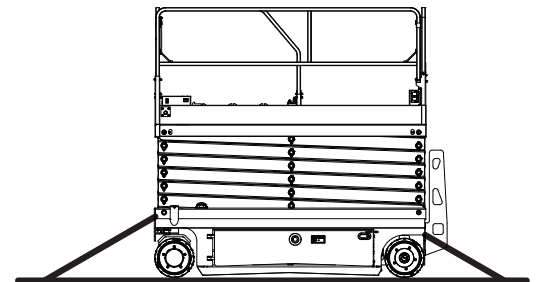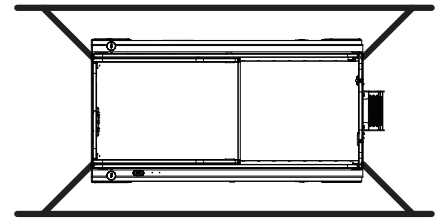

ART\_5031

### Lifting Instructions

Only qualified riggers should rig and lift the machine.




Ensure that the crane, loading surfaces, spreader bars, cables, chains and straps are of sufficient capacity to withstand the machine weight. See the serial plate for the machine weight.

Fully lower the platform. Be sure the deck extension is retracted and the controls and component trays are closed and secure. Remove all loose items from the machine.

Determine the center of gravity of the machine. Attach rigging to the designated lift points only.

Adjust the rigging to prevent damage to the machine and to keep the machine level.

X Axis	Y Axis
26 inches (66 centimeters)	19.3 inches (49.1 centimeters)

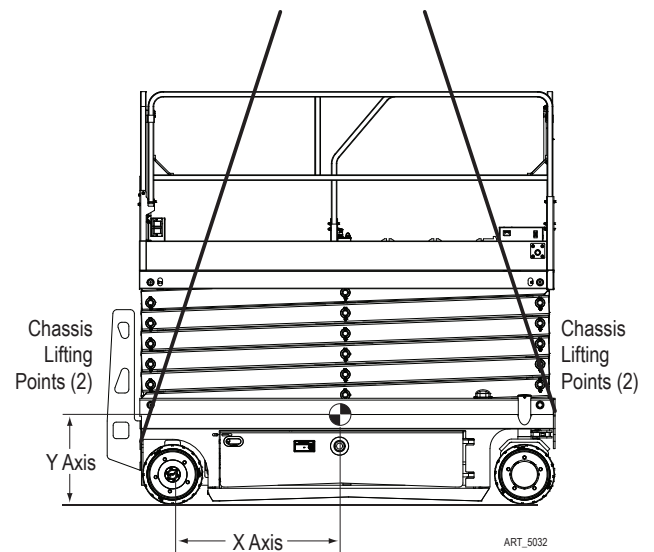

ART\_5032



# MEC Parts Order Form

Phone: 559-842-1523

Fax: 559-400-6723

Email: Parts@mecawp.com

Please Fill Out Completely:

Date: \_\_\_\_\_

Ordered By: \_\_\_\_\_

Account: \_\_\_\_\_

Your Fax No.: \_\_\_\_\_

Bill to: \_\_\_\_\_

Ship to: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Purchase Order Number \_\_\_\_\_

Ship VIA \_\_\_\_\_

*\*\* All orders MUST have a Purchase Order Number*

*\*\*Fed Ex shipments require Fed Ex account number*

Part Number	Description	Quantity	Price

All back-ordered parts will be shipped when available via the same ship method as original order unless noted below:

- \_\_\_\_\_ Ship complete order only - No Backorders
- \_\_\_\_\_ Ship all available parts and contact customer on disposition of back-ordered parts
- \_\_\_\_\_ Other (Please specify)

Signature \_\_\_\_\_



## Limited Owner Warranty

MEC Aerial Platform Sales Corp. warrants its equipment to the original purchaser against defects in material and/or workmanship under normal use and service for one (1) year from date of registered sale or date the unit left the factory if not registered. MEC Aerial Platform Sales Corp. further warrants the structural weldments of the main frame and scissor arms to be free from defects in material or workmanship for five (5) years from date of registered sale or date unit left the factory if not registered. Excluded from such warranty is the battery(s) which carries a ninety (90) day warranty from described purchase date. Warranty claims within such warranty period shall be limited to repair or replacement, MEC Aerial Platform Sales Corp's option, of the defective part in question and labor to perform the necessary repair or replacement based on MEC Aerial Platform Sales Corp's then current flat rate, provided the defective part in question is shipped prepaid to MEC Aerial Platform Sales Corp. and is found upon inspection by MEC Aerial Platform Sales Corp. to be defective in material and/or workmanship. MEC Aerial Platform Sales Corp. shall not be liable for any consequential, incidental or contingent damages whatsoever. Use of other than factory authorized parts; misuse, improper maintenance, or modification of the equipment voids this warranty. The foregoing warranty is exclusive and in lieu of all other warranties, express or implied. All such other warranties, including implied warranties of merchantability and of fitness for a particular purpose, are hereby excluded. No Dealer, Sales Representative, or other person purporting to act on behalf of MEC Aerial Platform Sales Corp. is authorized to alter the terms of this warranty, or in any manner assume on behalf of MEC Aerial Platform Sales Corp. any liability or obligation which exceeds MEC Aerial Platform Sales Corp's obligations under this warranty.



# MEC Aerial Work Platforms

---

1401 S. Madera Avenue, Kerman, CA 93630 USA

Toll Free: 1-877-632-5438

Phone: 1-559-842-1500

Fax: 1-559-842-1520

[info@MECawp.com](mailto:info@MECawp.com)

[www.MECawp.com](http://www.MECawp.com)