



Parts Manual

+Series Slab Electric Scissors

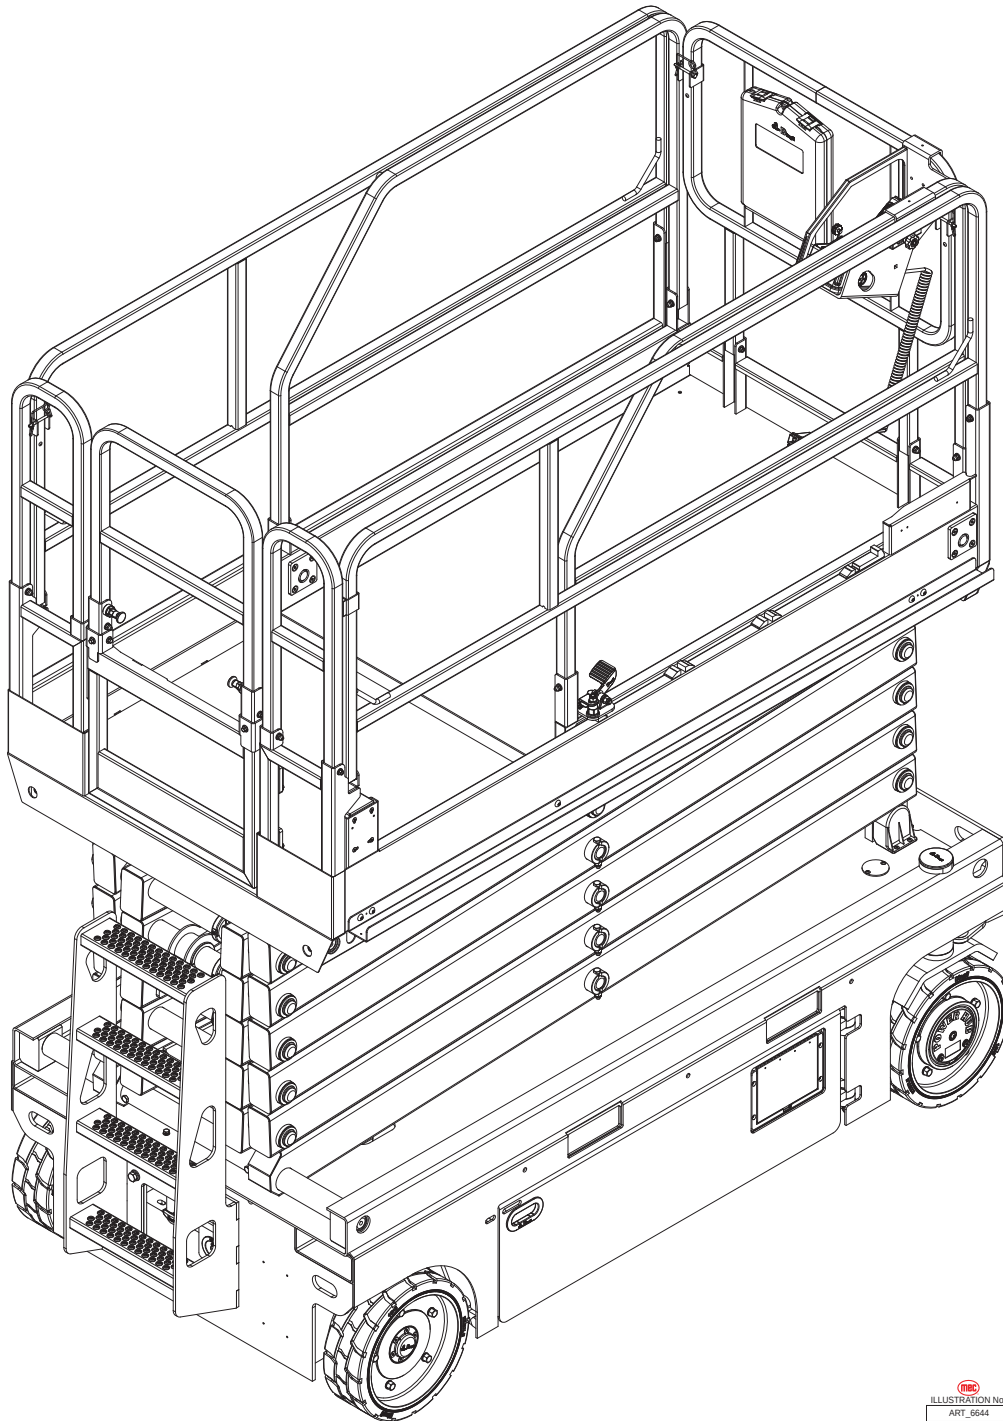


ILLUSTRATION No.
ART 5644

Meets requirements of ANSI A92.20-2020 and CSA B354.6:17.

3232+ Serial Number 23200100 - Up

4035+ Serial Number 21200100 - Up

4555+ Serial Number 23600100 - Up

3346+ Serial Number 23500100 - Up

4046+ Serial Number 20400100 - Up

Part # 97325

August 2026

Revision History

Date	Reason for Update
August 2026	New Release



MEC Aerial Work Platforms

1401 S. Madera Avenue, Kerman, CA 93630 USA
Toll Free: 1.877.MEC.LIFT or 1.877.632.5438
Phone: 1.559.710.2425
Fax: 1.559.710.2390
info@MECawp.com
www.MECawp.com

Table of Contents

Chapter - Parts	1
<i>Parts Introduction</i>	1
Section 1 - Chassis	2
<i>Steer Linkage and Wheels Assembly</i>	2
<i>Pothole Protection Assembly</i>	6
<i>Battery Pack Module</i>	8
<i>Power Unit Module</i>	10
<i>Ground Control (YILI)</i>	12
<i>Hydraulic Power Unit Assembly</i>	14
<i>Hydraulic Power Unit</i>	16
<i>Motor Controller Assembly</i>	18
<i>Rear Wheel and Ladder (3232+, 4035+)</i>	20
<i>Rear Wheel and Ladder (3346+, 4046+, 4555+)</i>	22
<i>Chassis Accessory Installation</i>	24
<i>Counterweight and Bracket Accessory (3232+)</i>	26
<i>Counterweight and Bracket Accessory (4035+)</i>	28
<i>Counterweight and Bracket Accessory (3346+, 4046+, 4555+)</i>	30
<i>Leak Containment System®</i>	32
Section 2 - Scissor	34
<i>Scissor Assembly (3232+)</i>	34
<i>Scissor Assembly (3346+)</i>	38
<i>Scissor Assembly (4035+)</i>	42
<i>Scissor Assembly (4046+)</i>	46
<i>Scissor Assembly (4555+)</i>	50
Section 3 - Platform	54
<i>Main Platform Assembly (3232+, 4035+)</i>	54
<i>Platform Extension Assembly (3232+, 4035+)</i>	56
<i>Main Platform Assembly (3346+, 4046+, 4555+)</i>	58
<i>Platform Extension Assembly (3346+, 4046+, 4555+)</i>	60
<i>Platform Locking Device Assembly</i>	62
<i>Platform Control Assembly</i>	64
<i>Platform Control Box Assembly</i>	66
Section 4 - Hydraulic System	68
<i>Lift Cylinder Assembly</i>	68
<i>Upper Lift Cylinder Assembly (3232+, 3346+, 4046+, 4035+,4555+)</i>	70
<i>Hydraulic Hoses and Fittings (3232+, 3346+, 4046+, 4035+,4555+)</i>	72
Section 5 - Electrical System	74
<i>Electrical Harness(3232+, 3346+)</i>	74
<i>Electrical Harness (4035+, 4046+, 4555+)</i>	76
<i>Power to Platform</i>	78
Section 6 - Decals	80
<i>Decals, 3232+</i>	80

<i>Decals, 3346+</i>	<i>82</i>
<i>Decals, 4035+</i>	<i>84</i>
<i>Decals, 4046+</i>	<i>86</i>
<i>Decals, 4555+</i>	<i>88</i>

Parts Introduction

This Parts sections consists of illustrated parts sections and is designed to provide you, the customer, with illustrations and the list of associated parts needed to properly maintain the MEC self-propelled aerial work platform. When used in conjunction with the Service section in this manual and the Operator's Manual (provided separately), this manual will assist you in making necessary adjustments and repairs, and identifying and ordering the correct replacement parts.

All parts represented here are manufactured and supplied in accordance with MEC quality standards.

We recommend that you use genuine MEC parts to ensure proper operation and reliable performance.

To obtain maximum benefits from your MEC Aerial Work Platforms, always follow the proper operating and maintenance procedures. Only trained authorized personnel should be allowed to operate or service this machine. Service personnel should read and study the Operator's, and the Service and Parts Manuals in order to gain a thorough understanding of the unit prior to making any repairs.

Steer Linkage and Wheels Assembly

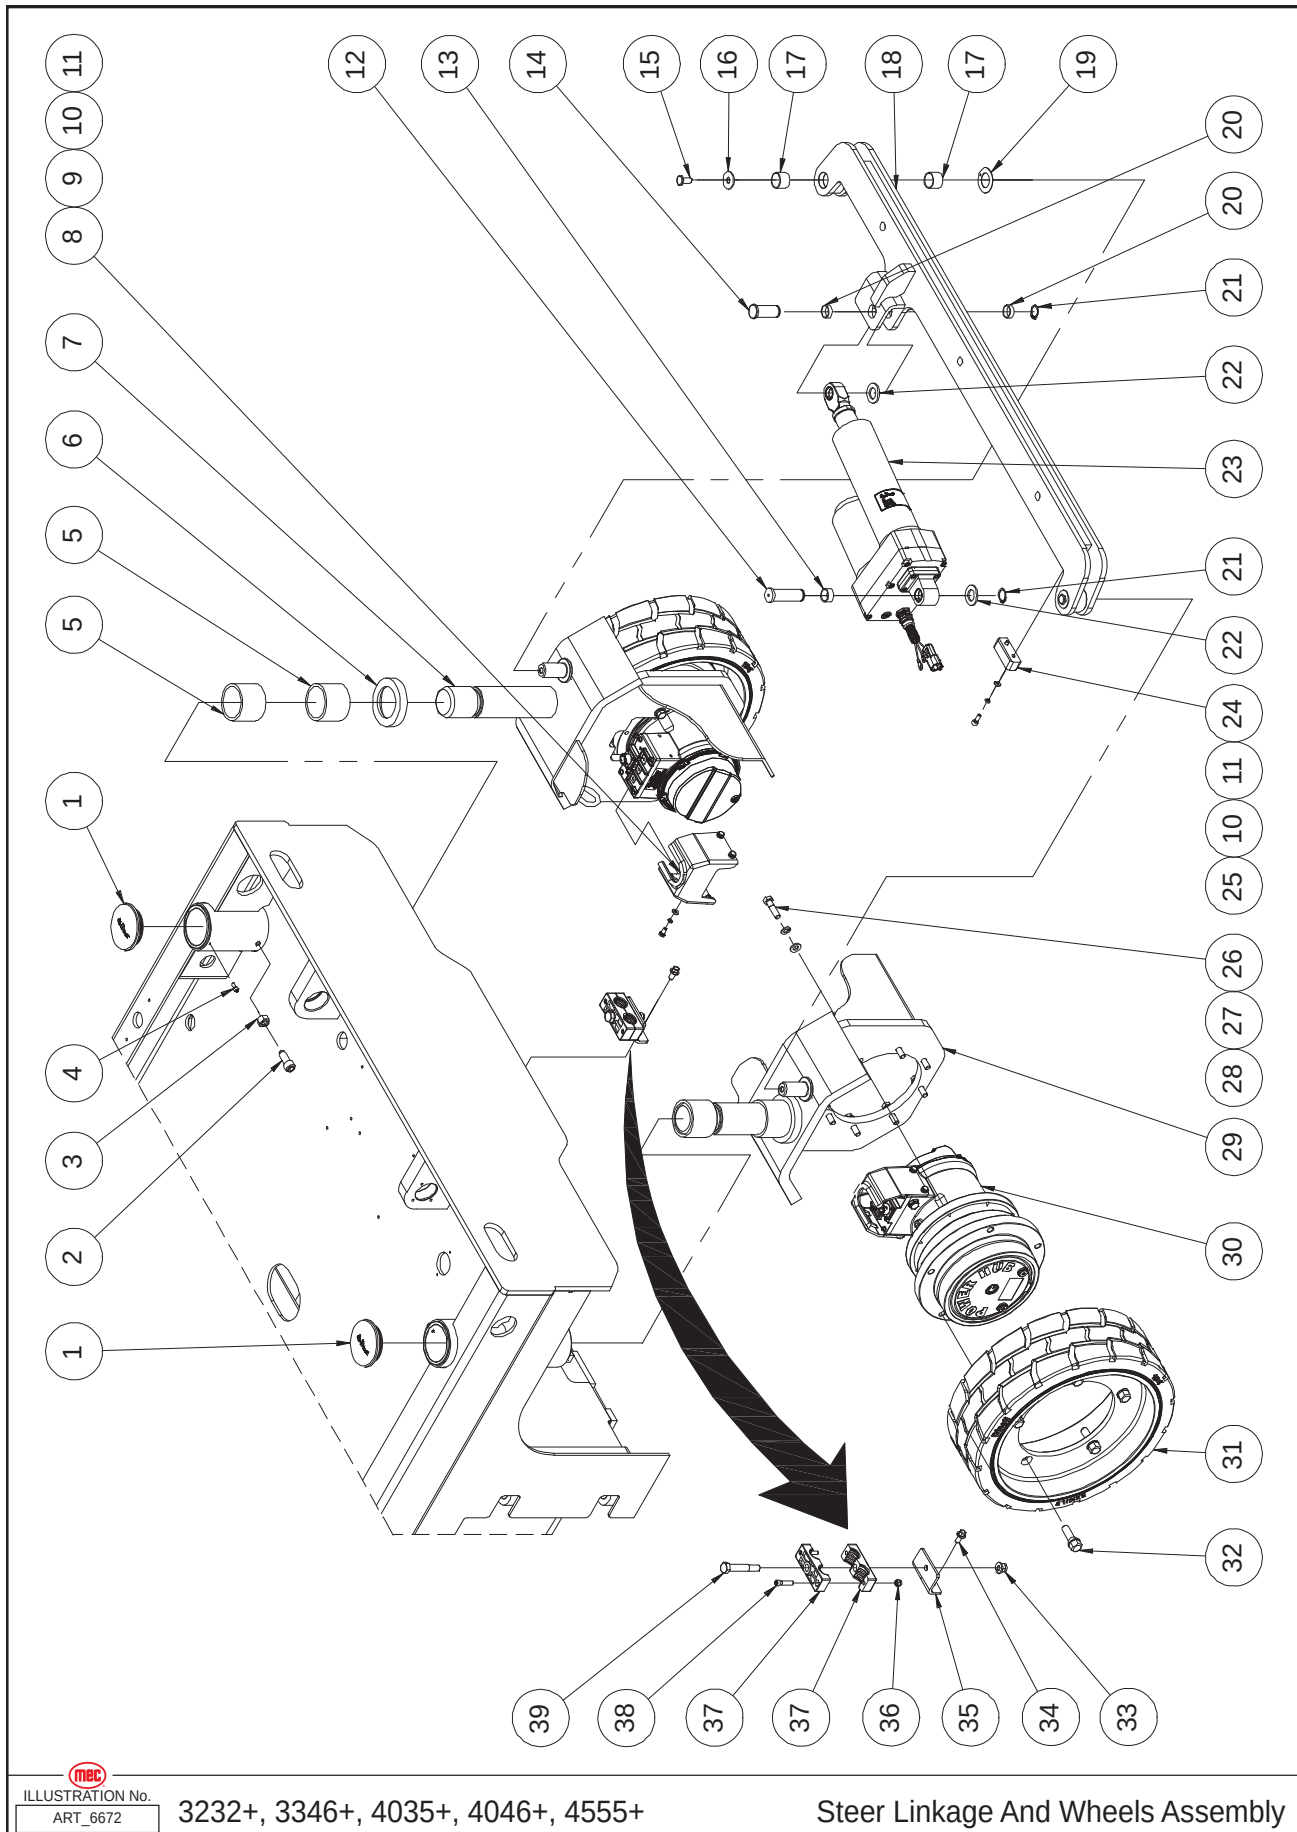


ILLUSTRATION No.
ART_6672

3232+, 3346+, 4035+, 4046+, 4555+

Steer Linkage And Wheels Assembly

Item	Part No.	Description	Qty.
1	41010	Cover King Pin	2
2	41376	Screw	2
3	50590	Nut NHEX M12-1.75 ZP	2
4	53116	Screw SHCS M05-0.80 × 12 ZP	2
5	41011	Bearing	4
6	41013	Washer, Thrust Washer	2
7	46351	Steer Yoke Weldment (3346+, 4046+, 4555+)	1
	45306	Steer Yoke Weldment (3232+, 4035+)	1
8	46353	Motor Cover	2
9	53104	Screw HHCS M06-1.00 × 12 ZP	8
10	53046	WSHR M06 Spring Washer ZP	12
11	50000	WSHR M06 Standard Flat Washer ZP	12
12	46822	Pin (3232+, 4035+)	1
	61006	Pin, Electric Steering Cylinder Support (3346+, 4046+, 4555+)	1
13	62773	Bearing (3232+, 4035+)	1
14	41009	Axle, Steering Cylinder Pin	1
15	44926	Pin	2
16	44927	Washer	2
17	41046	Bearing	4
18	62816	Tie Rod Weldment (3232+)	1
	62826	Tie Rod Weldment (4035+)	1
	62808	Tie Rod Weldment (3346+, 4046+)	1
	62807	Tie Rod Weldment (4555+)	1
19	41019	Bearing	2
20	62772	Bearing	2
21	43574	Circlips	2
22	61007	Washer Support, Steer Cylinder	2
23	45195	Electric Cylinder Assembly (3232+, 4035+) (Includes Electric Cylinder & Motor)	1
--	62806	Electric Cylinder Unit	1
--	62814	Motor	1
23	62788	Electric Cylinder Assembly (3346+, 4046+, 4555+) (Includes Electric Cylinder & Motor)	1
--	62813	Electric Cylinder Unit	1
--	62814	Motor	1
24	62770	Bumper, Spacer	2
25	53138	Screw SHCS M06-1.00 × 16 ZP	4
26	53447	Screw HHCS 3/8-16 × 1 1/2 ZP	14
27	53316	WSHR 3/8 Spring Washer ZP	14
28	53317	WSHR 3/8 Standard Flat Narrow Washer ZP	14
29	46352	Steer Yoke Weldment (3346+, 4046+, 4555+)	1
	45308	Steer Yoke Weldment (3232+, 4035+)	1
30	62787	Drive Motor Assembly	2
--	46355	Reducer	1
--	62755	Motor (With Brake)	1

--	62786	Motor	1
--	62777	Brake	1
31	62759	Wheel	2
32	46238	Tapered Wheel Lug Bolt	10
33	50311	Nut NNYL M10-1.50 Flange ZP	3
34	53194	Screw HHCS M08-1.25 × 16 Serrated Flange ZP	2
35	44343	Hose Clamp Support	1
36	50047	Nut NNYL M06-1.00 ZP	2
37	45313	Hose Clamp	2
38	53207	Screw SHCS M06-1.00 × 30 ZP	2
39	45420	Bolt	1

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Pothole Protection Assembly

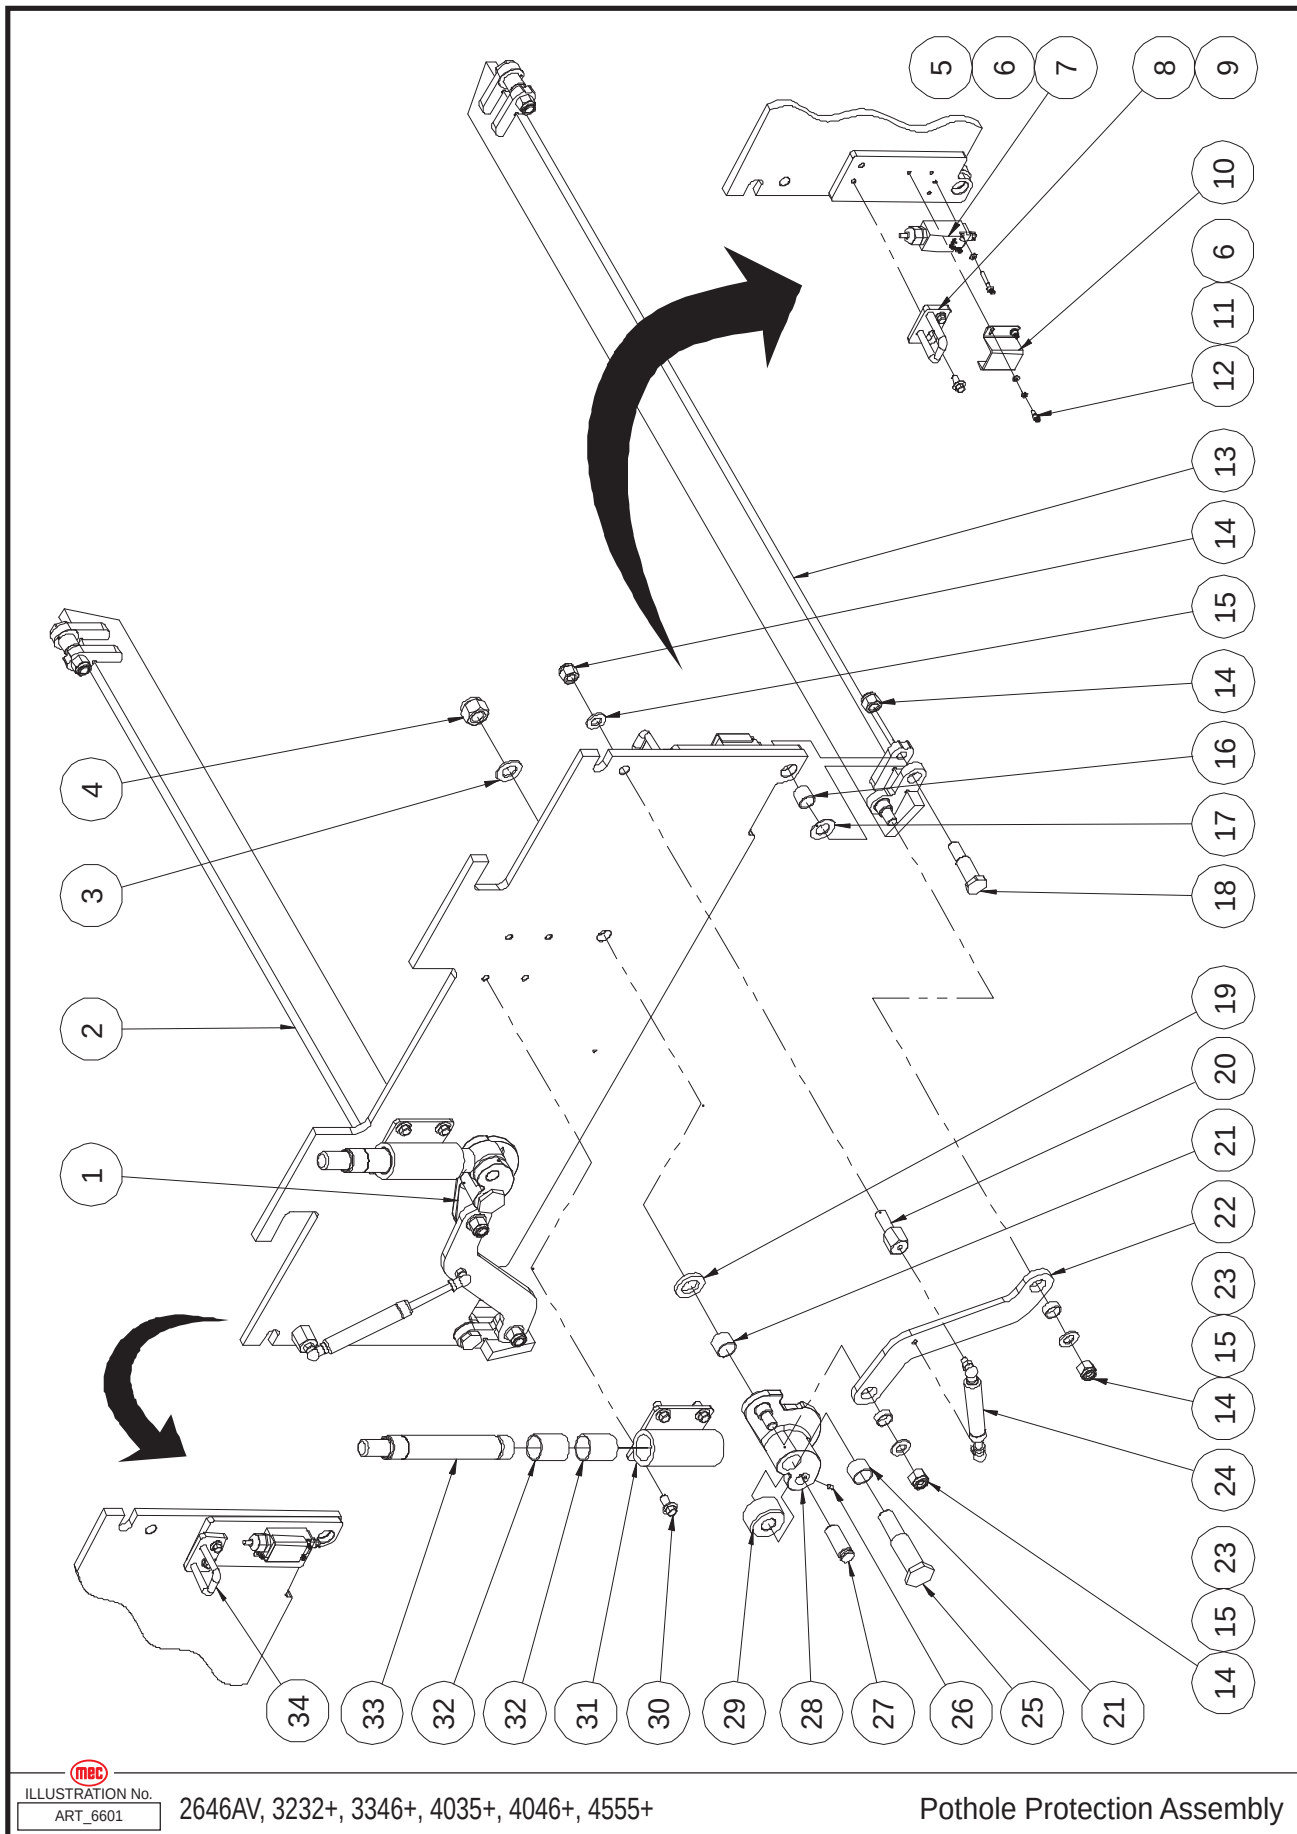


ILLUSTRATION No.
ART_6601

2646AV, 3232+, 3346+, 4035+, 4046+, 4555+

Pothole Protection Assembly

Item	Part No.	Description	Qty.
1	47092	Pothole Linkage Weldment Right Hand (3232+, 4035+, 3346+, 4046+)	1
	41030	Pothole Linkage Weldment Right Hand (4555+)	1
2	45316	Pothole Guard Weldment (3232+, 4035+, 3346+, 4046+)	1
	62805	Pothole Guard Weldment (4555+)	1
3	50005	WSHR M20 Standard Flat Washer ZP	2
4	50052	Nut NNYL M20-2.50 ZP	2
5	53171	Screw SHCS M05-0.80 × 30 ZP	4
6	53043	WSHR M05 Spring Washer ZP	8
7	46242	Limit Switch	2
8	41033	Lock Clasp	1
9	53194	Screw HHCS M08-1.25 × 16 Serrated Flange ZP	4
10	41035	Cover, Limit Switch	2
11	53038	WSHR M05 Standard Flat Washer ZP	4
12	53173	Screw SHCS M05-0.80 × 10 ZP	4
13	45317	Pothole Linkage Weldment Left Hand (3232+, 4035+, 3346+, 4046+)	1
	62804	Pothole Linkage Weldment Left Hand (4555+)	1
14	50303	Nut NNYL M14-2.00 ZP	10
15	53049	WSHR M14 Standard Flat Washer ZP	6
16	41037	Bearing	4
17	41038	Bearing	4
18	41039	Pin, Cross Board	4
19	41040	Cushion, Thrust Washer	2
20	41044	Gas Shock Strut	2
21	41046	Bearing	4
22	45318	Pothole Link Plate (3232+)	1
	62827	Pothole Link Plate (4035+)	1
	41398	Pothole Link Plate (3346+, 4046+)	1
	41042	Pothole Link Plate (4555+)	1
23	41214	Bearing, Pivot	4
24	41045	Gas Shock Spring	2
25	41047	Pin	2
26	53283	Set Screw M05-0.80 × 10 Cone Point ZP	2
27	41048	Pin, Wheel	2
28	47093	Mid Linkage Welded Body (3232+, 4035+, 3346+, 4046+)	1
	41041	Mid Linkage Welded Body (4555+)	1
29	41049	Roller, Wheel	2
30	53433	Screw HHCS M10-1.50 × 20 Serrated Flange ZP	8
31	41395	Pothole Guide (3232+, 4035+)	1
	41050	Pothole Guide (3346+, 4046+, 4555+)	2
32	43568	Bearing	4
33	44934	Pothole Hole Pusher Assembly (3232+, 4035+, 3346+, 4046+)	2
	44935	Pothole Hole Pusher Assembly (4555+)	2
34	41031	Lock Clasp	1

Battery Pack Module

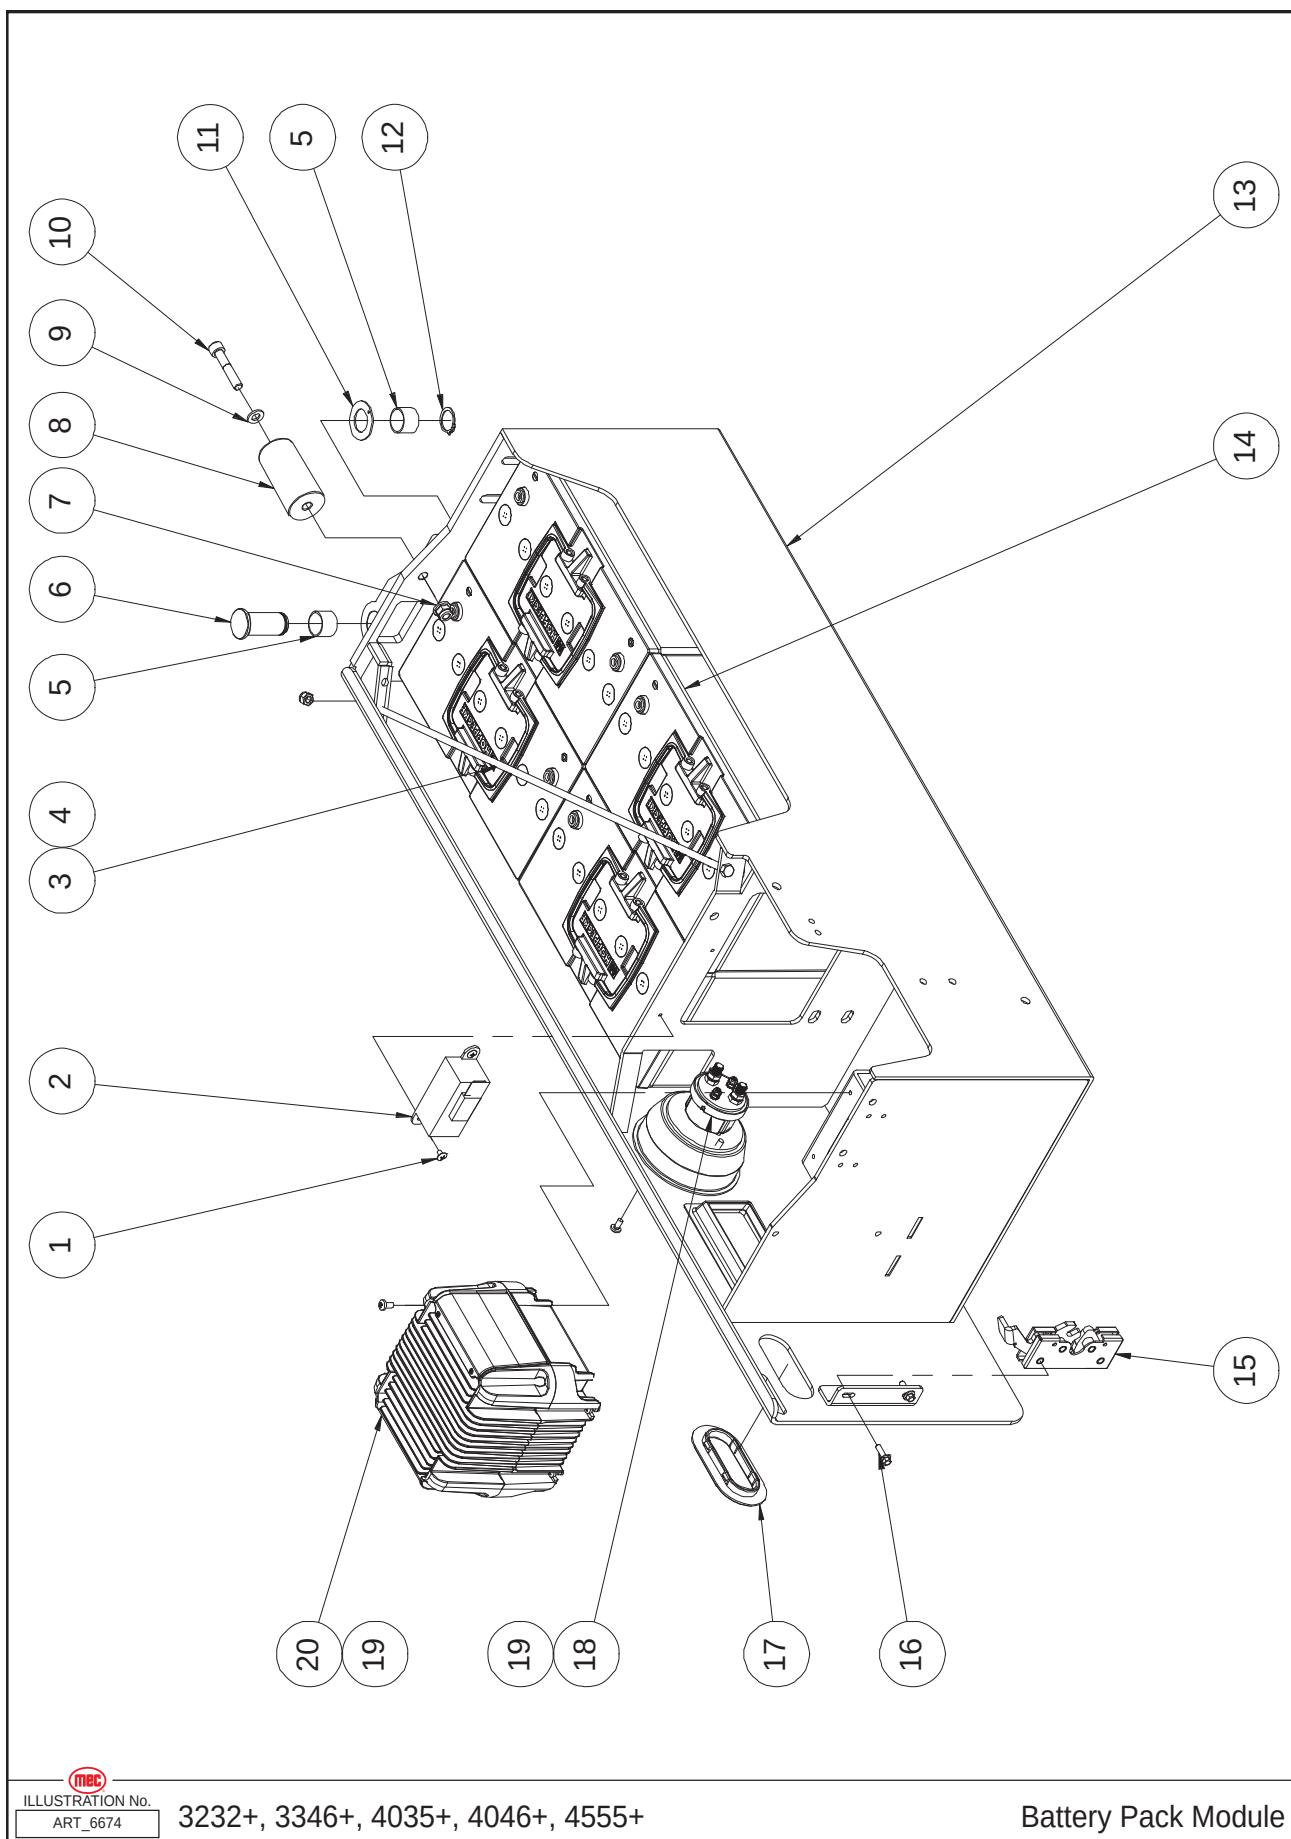


ILLUSTRATION No.
ART_6674

3232+, 3346+, 4035+, 4046+, 4555+

Battery Pack Module

Item	Part No.	Description	Qty.
1	53451	Screw THMS M05-0.80 × 8 ZP	2
2	46363	300A Fuse Assembly	1
--	46364	300A Fuse	1
--	46248	Fuse Block	1
3	41066	Threaded Rod	1
4	50048	Nut NNYL M08-1.25 ZP	1
5	41046	Bearing	4
6	41060	Hinge Pin	2
7	50311	Nut NNYL M10-1.50 Flange ZP	1
8	41062	Bumper, Rubber Block	1
9	50002	WSHR M10 Standard Flat Washer ZP	1
10	50519	Screw SHCS M10-1.50 × 55 ZP	1
11	41019	Bearing	2
12	44936	Circlips	2
13	61008	Battery Tray Weldment (3232+, 4035+, 3346+, 4046+)	1
	61009	Battery Tray Weldment (4555+)	1
14	46368	Battery (3346+) (Need to Install the Liner 46369)	4
	46370	Battery (3232+, 4035+, 4046+, 4555+)	4
15	42896	Latch Left, Battery Module	1
16	53255	Screw HHCS M06-1.00 × 20 Serrated Flange ZP	2
17	41068	Handle Hole Ring	1
18	49899	Main Power Switch, Lockable	1
19	53318	Screw PHMS M06-1.00 × 12 ZP	6
20	42903	Charger, Battery Charger	1

Power Unit Module

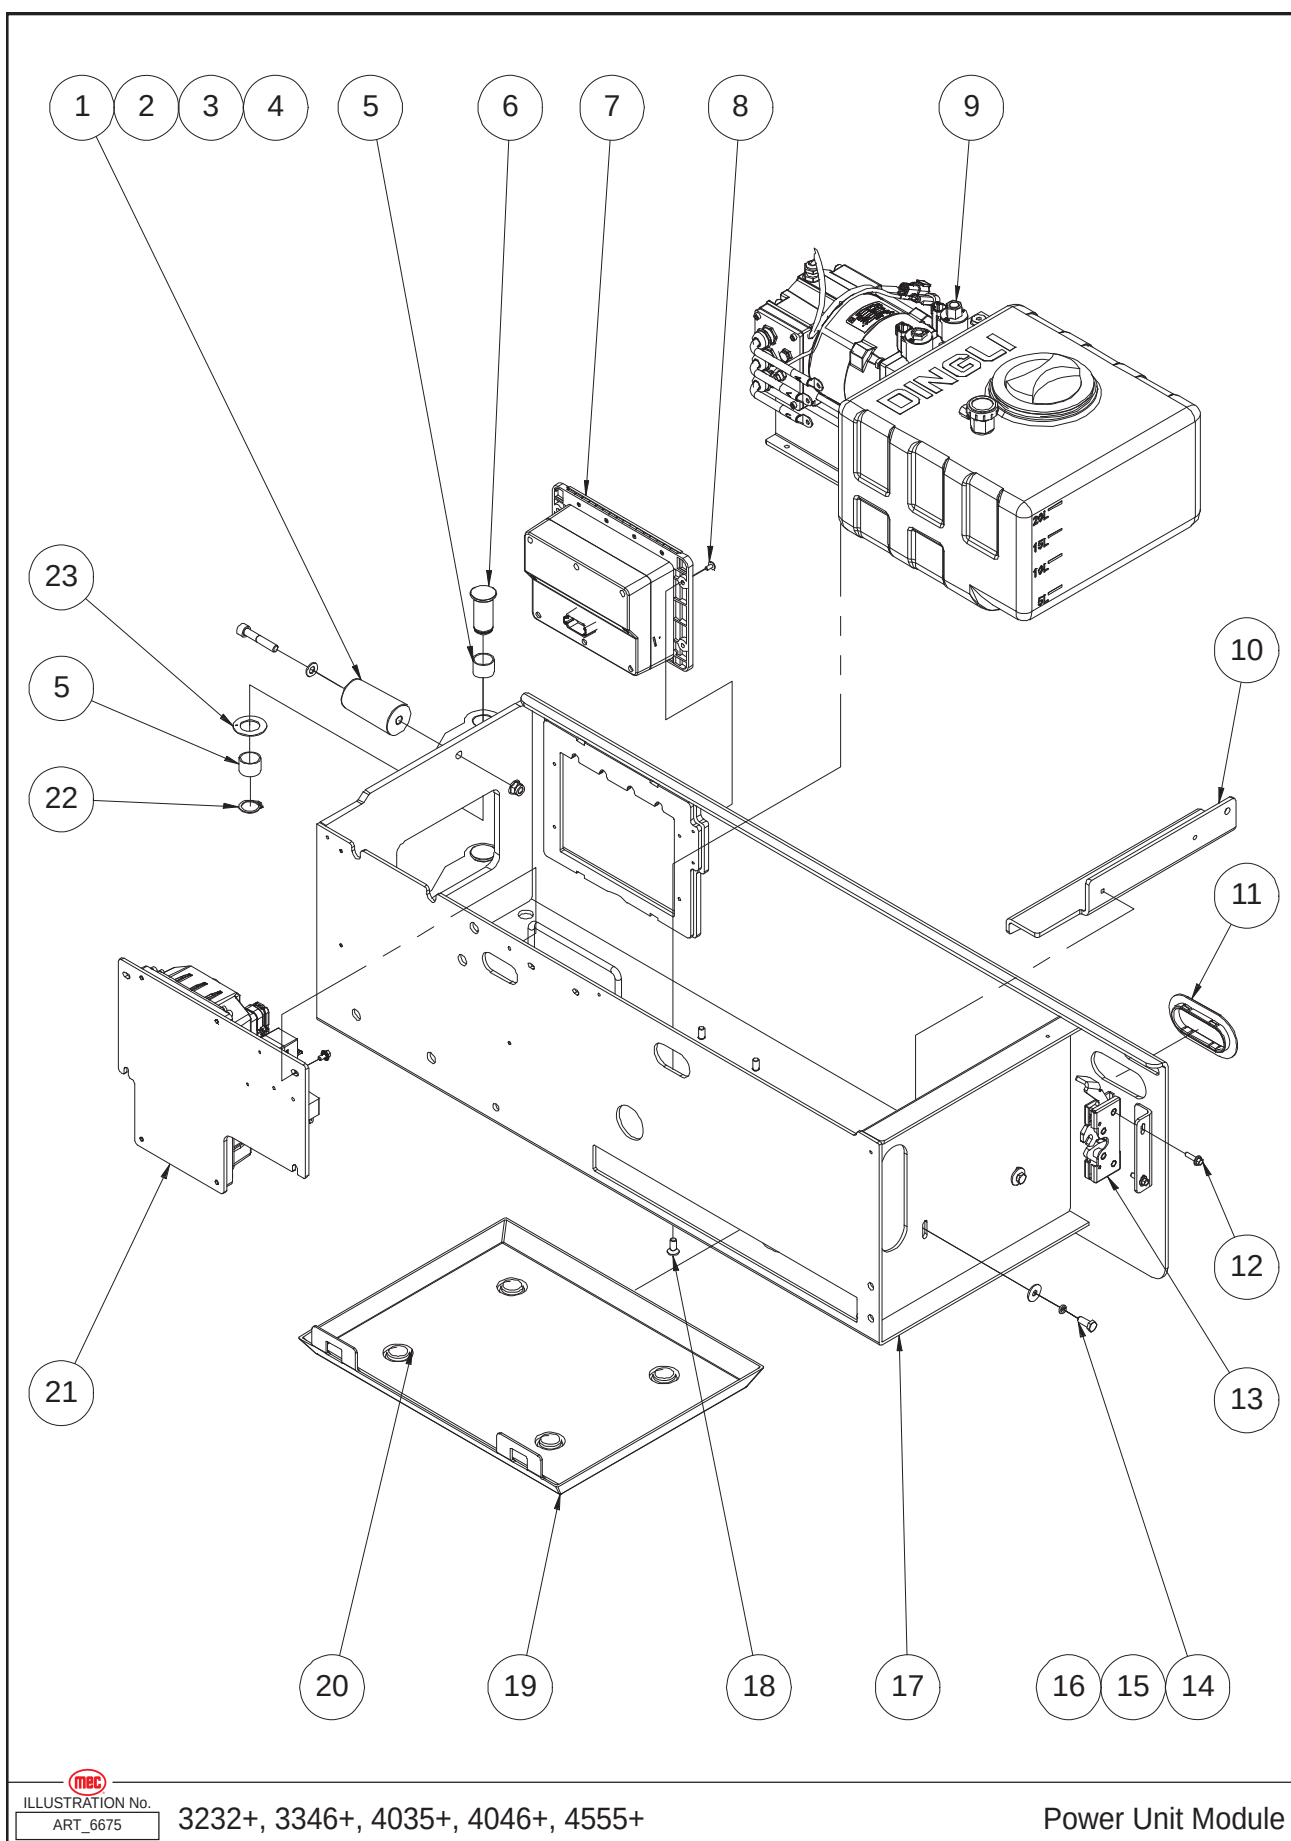


ILLUSTRATION No.
ART_6675


3232+, 3346+, 4035+, 4046+, 4555+

Power Unit Module

Item	Part No.	Description	Qty.
1	41062	Bumper, Rubber Block	1
2	50519	Screw SHCS M10-1.50 × 55 ZP	1
3	50002	WSHR M10 Standard Flat Washer ZP	1
4	50311	Nut NNYL M10-1.50 Flange ZP	1
5	41046	Bearing	4
6	41060	Hinge Pin	2
7	62723	Ground Control (YILI) (Refer to page 12)	1
8	53265	Screw THMS M05-0.80 × 10 ZP	4
9	REF	Hydraulic Power Assembly (Refer to page 14)	1
10	62809	Hydraulic Tank Support	1
11	41068	Handle Hole Ring	1
12	53255	Screw HHCS M06-1.00 × 20 Serrated Flange ZP	2
13	41067	Latch Right, Control Module	1
14	50030	Screw HHCS M08-1.25 × 20 ZP	2
15	50218	WSHR M08 Flat Fender Washer ZP	2
16	53055	WSHR M08 Spring Washer ZP	1
17	61010	Hydraulic Tray Weldment (3346+, 4046+)	1
	61011	Hydraulic Tray Weldment (3232+, 4035+)	1
	61012	Hydraulic Tray Weldment (4555+)	1
18	53282	Screw CSCS M08-1.25 × 20 ZP	4
19	61013	LCS Drip Pan, Power Module	1
20	61014	Oil Absorbent Pad	1
21	REF	Motor Controller Assembly (Refer to page 18)	1
22	44936	Circlips	2
23	41019	Bearing	2

REF - Reference

Ground Control (YILI)

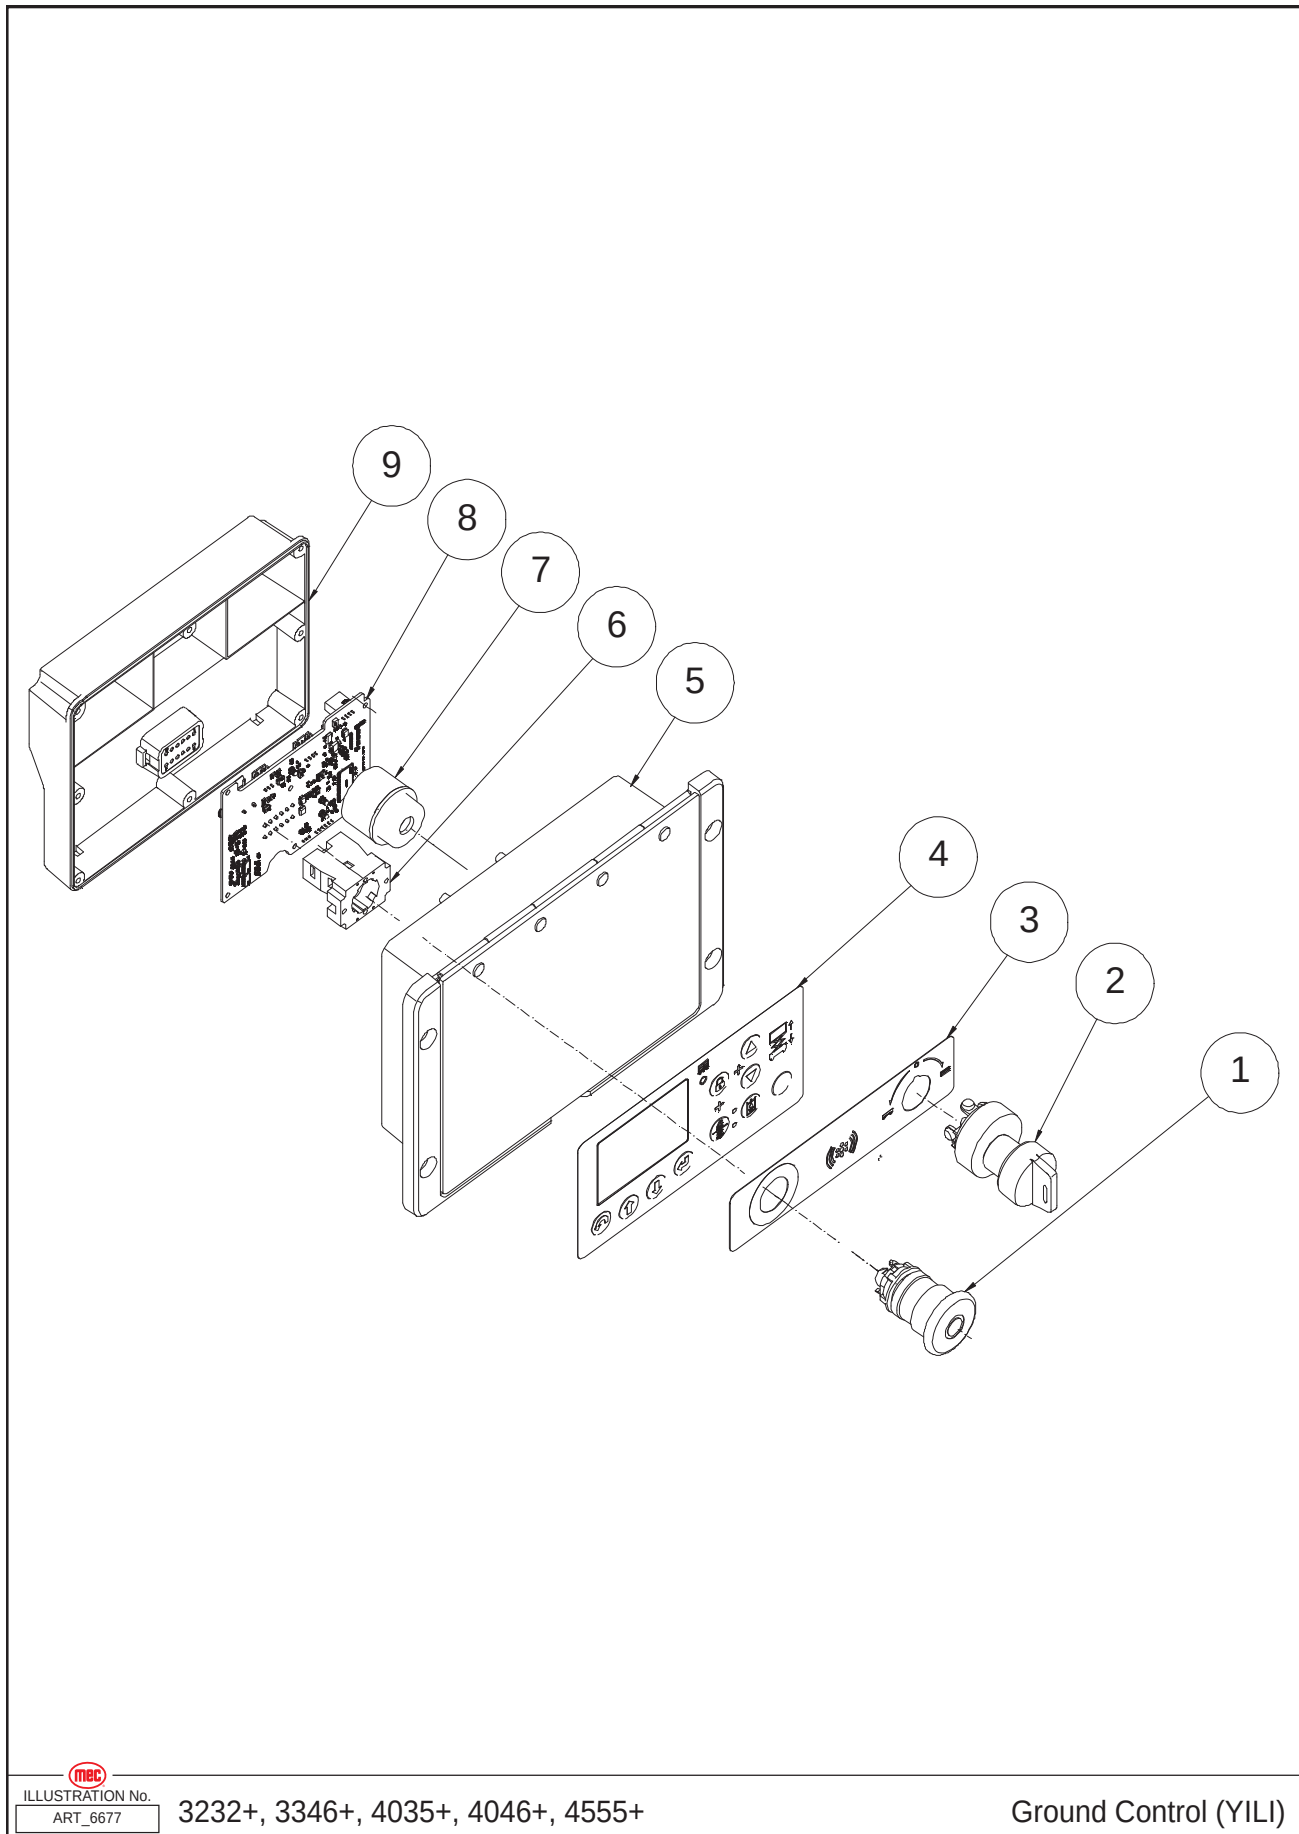

Item	Part No.	Description	Qty.
1	43632	Red Mushroom Head	1
2	62781	Key Switch	1
3	49776	Decal - Lower Controls Top Half, E-Stop & Key Switch	1
4	49777	Decal - Lower Controls Bottom Half, LED Display & Buttons	1
5	61015	Ground Control Housing Components, Upper Half	1
--	61016	Clear Cover Assembly	1
6	43633	Base With 1 NO Contact	1
7	61017	Alarm	1
8	61018	Main Board	1
9	61019	Ground Control Housing Components, Lower Half (YILI)	1

Hydraulic Power Unit Assembly

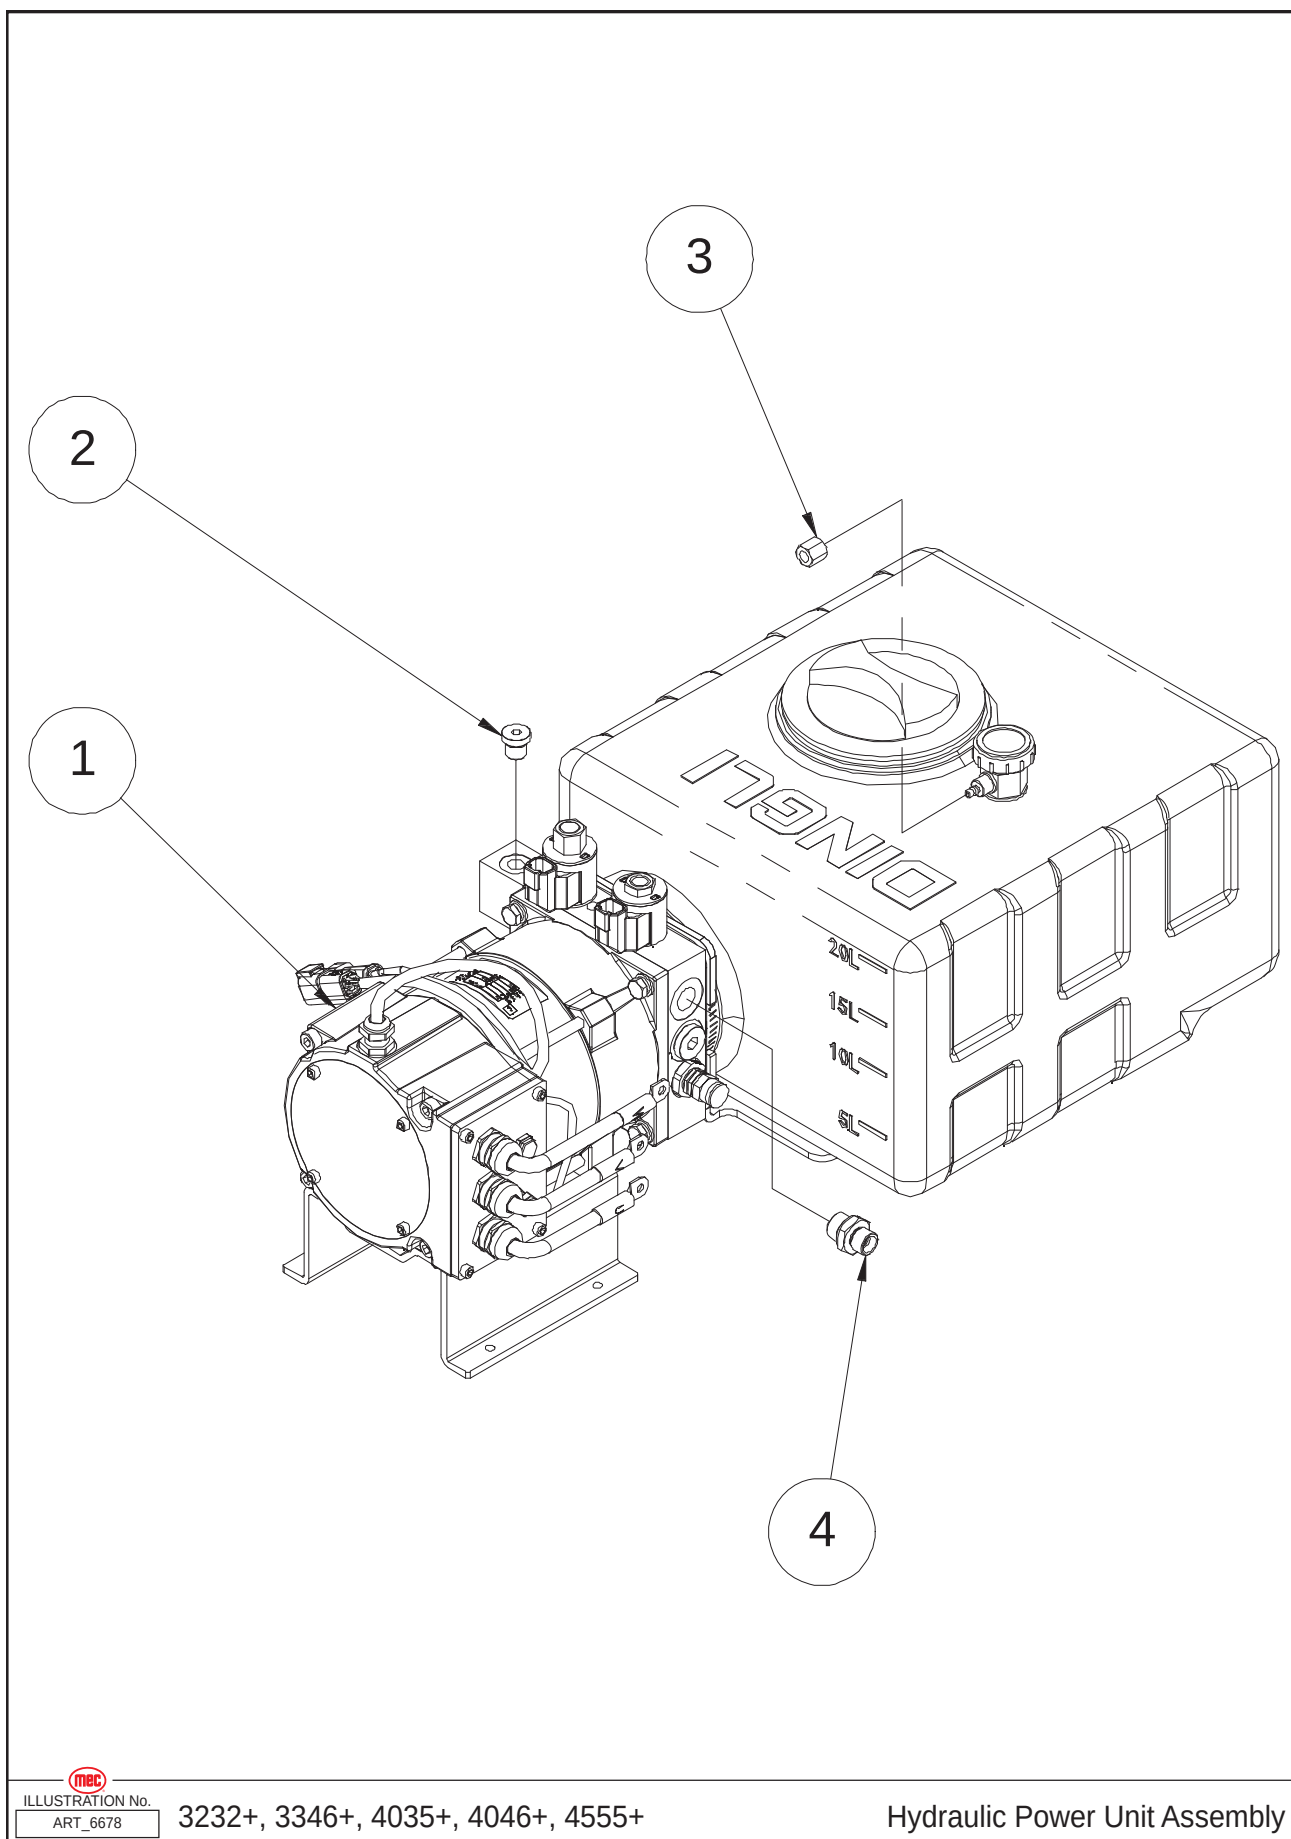



ILLUSTRATION No.
ART_6678

3232+, 3346+, 4035+, 4046+, 4555+

Hydraulic Power Unit Assembly

Item	Part No.	Description	Qty.
1	62910	Hydraulic Power Unit (Refer to page 16)	1
2	42480	Plug	1
3	41413	Nut	1
4	43638	Straight Fitting	1

Hydraulic Power Unit

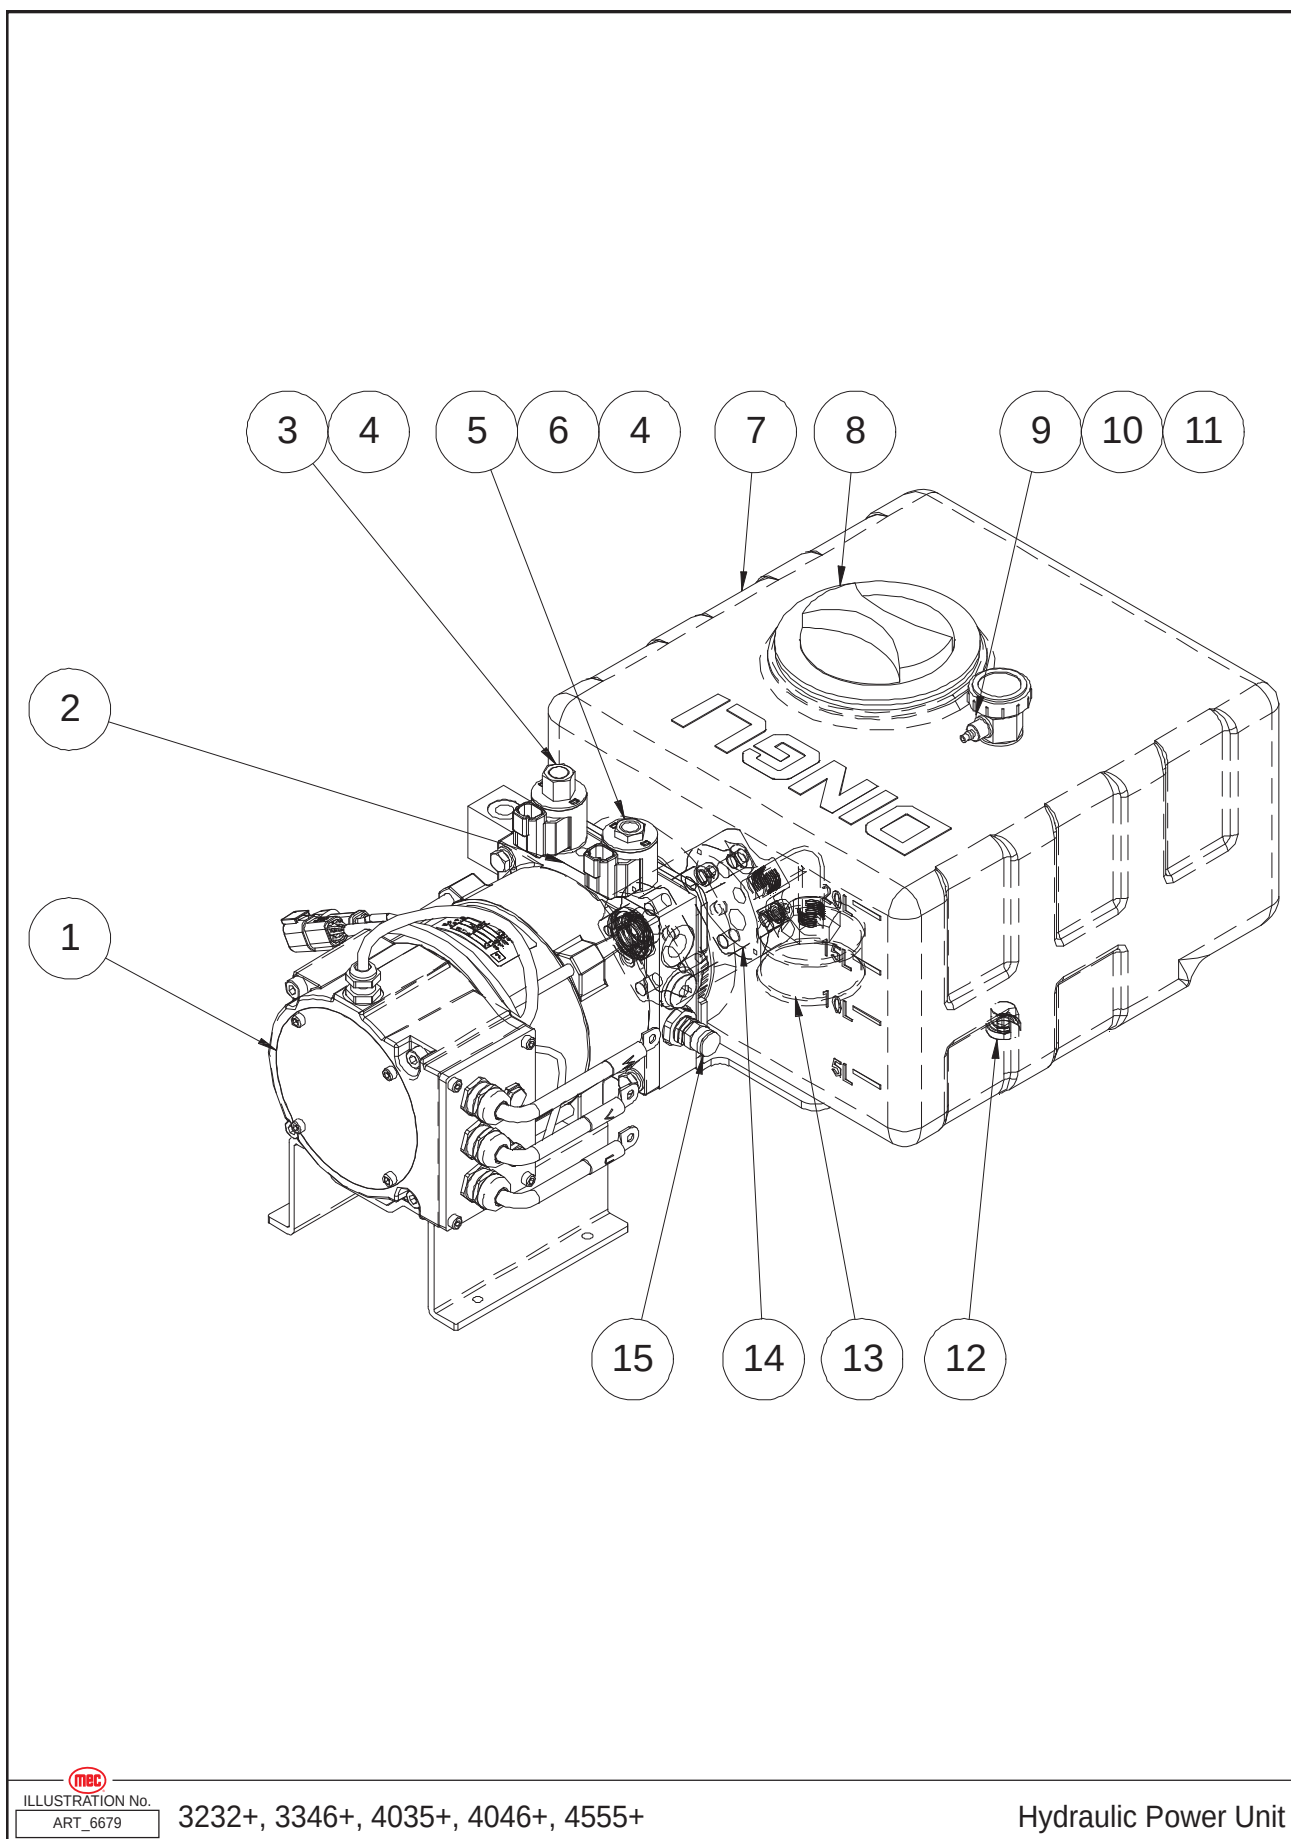


ILLUSTRATION No.
ART_6679

3232+, 3346+, 4035+, 4046+, 4555+

Hydraulic Power Unit



Item	Part No.	Description	Qty.
1	62754	Motor	1
--	62740	Coupling	1
2	61020	Valve Body	1
3	62800	Solenoid Valve Spool	1
4	62845	Coil	2
5	53362	Nut NHEX 1/2-20 UNF ZP	1
6	62801	Solenoid Valve Spool	1
7	62760	Tank	1
8	62765	Tank Cover	1
9	41090	Fitting, Seat	1
10	42901	Breather Cap Red	1
11	61021	Washer, Hydraulic Tank Breather Cap	1
12	41087	Plug Screw	1
13	62739	Filter Web	1
14	62757	Pump	1
15	62742	Relief Valve	1

Motor Controller Assembly

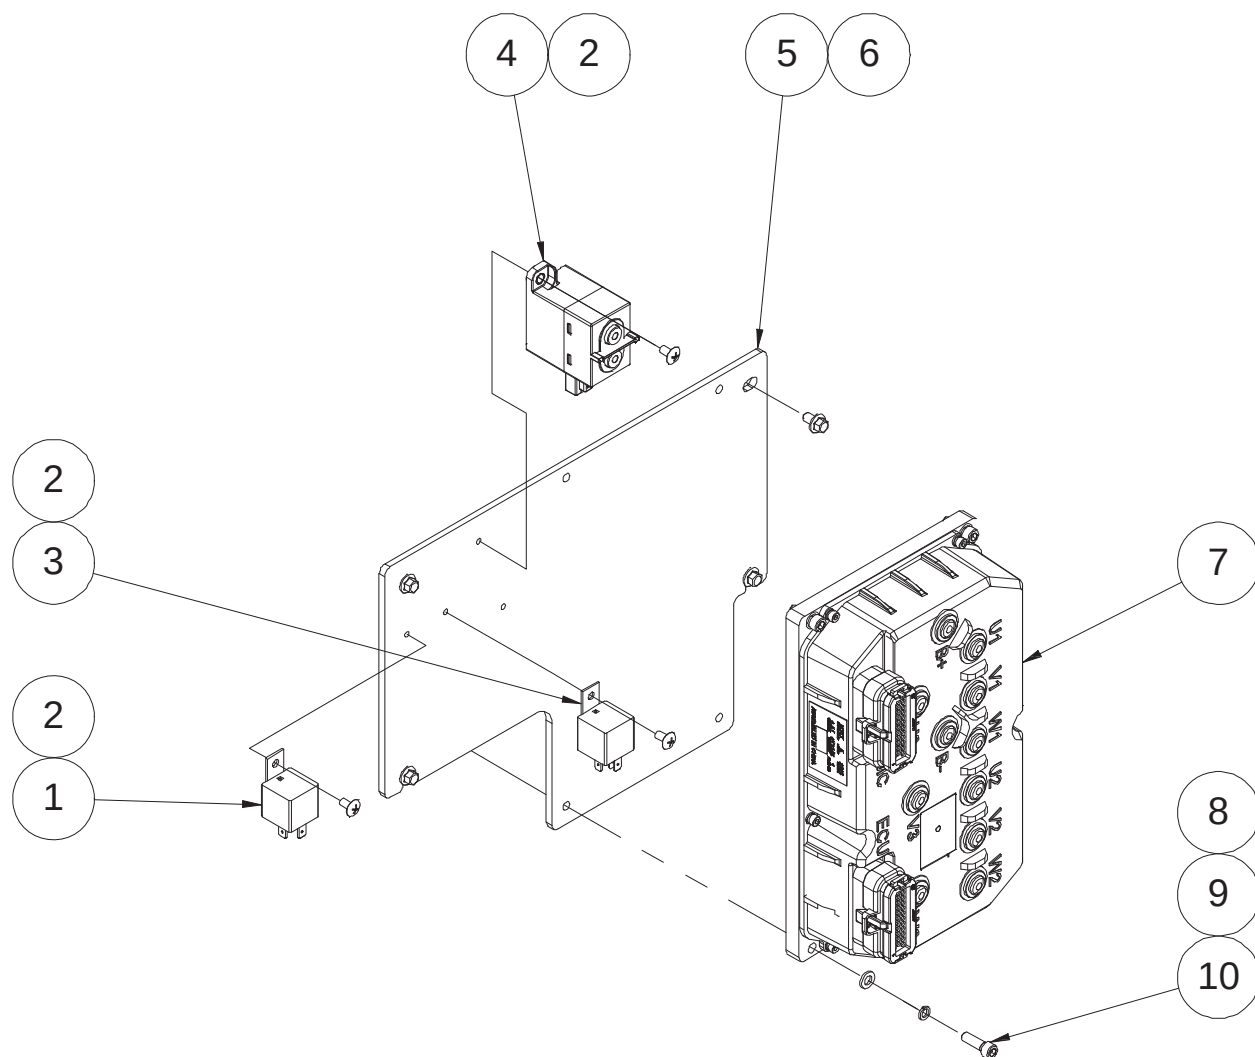



ILLUSTRATION No.
ART_6681

3232+, 3346+, 4035+, 4046+, 4555+

Motor Controller Assembly

Item	Part No.	Description	Qty.
1	46252	Relay	1
2	53265	Screw THMS M05-0.80 × 10 ZP	4
3	62747	Relay	1
4	62748	Contactor	1
5	61022	Mounting Plate, Motor Controller	1
6	53260	Screw HHCS M06-1.00 × 10 Serrated Flange ZP	4
7	62728	Motor Controller (Santrol)	1
8	50000	WSHR M06 Standard Flat Washer ZP	4
9	53046	WSHR M06 Spring Washer ZP	4
10	53124	Screw SHCS M06-1.00 × 20 ZP	4

Rear Wheel and Ladder (3232+, 4035+)

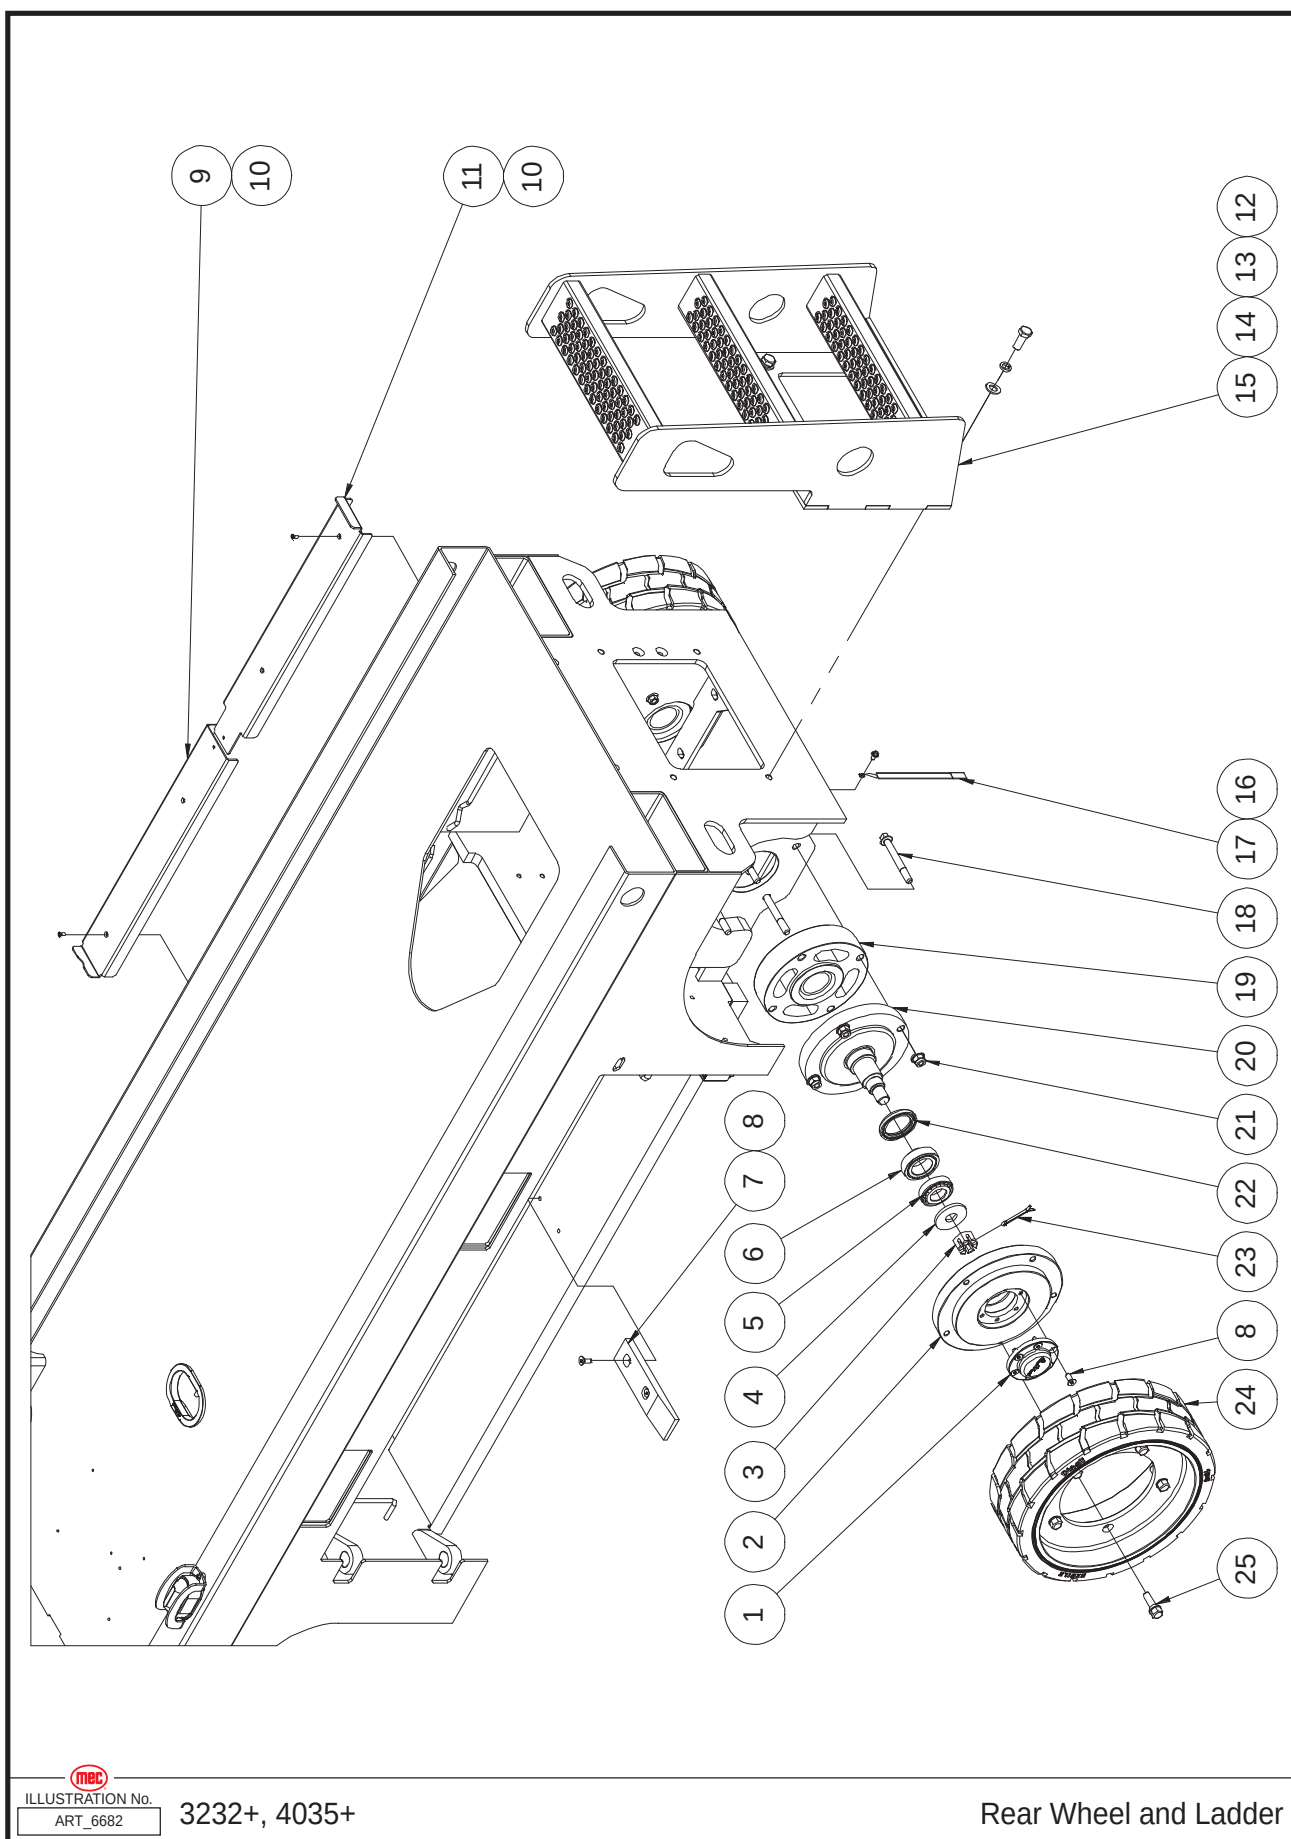


ILLUSTRATION No.
ART_6682

3232+, 4035+

Rear Wheel and Ladder

Item	Part No.	Description	Qty.
1	41237	Cap, Shaft End Cover Plate	2
2	41025	Bearing Seat	2
3	53262	Castle Nut M22-1.50 ZP	2
4	41304	Washer	2
5	41024	Bearing	2
6	41029	Bearing	2
7	41002	Spacer	2
8	53282	Screw CSCS M08-1.25 × 20 ZP	16
9	62810	Baffle 1	1
10	53279	Screw CSCS M05-0.80 × 12 ZP	4
11	62812	Baffle 2	1
12	53047	Screw HHCS M14-2.00 × 35 ZP	4
13	53048	WSHR M14 Spring Washer ZP	4
14	53049	WSHR M14 Standard Flat Washer ZP	4
15	41464	Ladder (3232+)	1
	41004	Ladder (4035+)	1
16	53260	Screw HHCS M06-1.00 × 10 Serrated Flange ZP	1
17	41003	Ground Strap, Electrical Static	1
18	53438	Screw HHCS M12-1.75 × 100 Flange ZP	8
19	41021	Terminal Pad, Cushion	2
20	41022	Spindle, Wheel Axle Seat	2
21	53261	Nut NNYL M12-1.75 Flange ZP	8
22	43588	Seal	2
23	43585	Cotter Pin	2
24	62759	Wheel	2
25	46238	Tapered Wheel Lug Bolt	10

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

mecc

ILLUSTRATION No. ART_6683

3346+, 4046+, 4555+

Rear Wheel and Ladder

Item	Part No.	Description	Qty.
1	41237	Cap, Shaft End Cover Plate	2
2	41025	Bearing Seat	2
3	53262	Castle Nut M22-1.50 ZP	2
4	41304	Washer	2
5	41024	Bearing	2
6	41029	Bearing	2
7	41002	Spacer	2
8	53282	Screw CSCS M08-1.25 × 20 ZP	16
9	53047	Screw HHCS M14-2.00 × 35 ZP	4
10	53048	WSHR M14 Spring Washer ZP	4
11	53049	WSHR M14 Standard Flat Washer ZP	4
12	41464	Ladder (3346+)	1
	41004	Ladder (4046+, 4555+)	1
13	53260	Screw HHCS M06-1.00 × 10 Serrated Flange ZP	1
14	41003	Ground Strap, Electrical Static	1
15	53438	Screw HHCS M12-1.75 × 100 Flange ZP	8
16	41021	Terminal Pad, Cushion	2
17	41022	Spindle, Wheel Axle Seat	2
18	53261	Nut NNYL M12-1.75 Flange ZP	8
19	43588	Seal	2
20	43585	Cotter Pin	2
21	62759	Wheel	2
22	46238	Tapered Wheel Lug Bolt	10

Chassis Accessory Installation

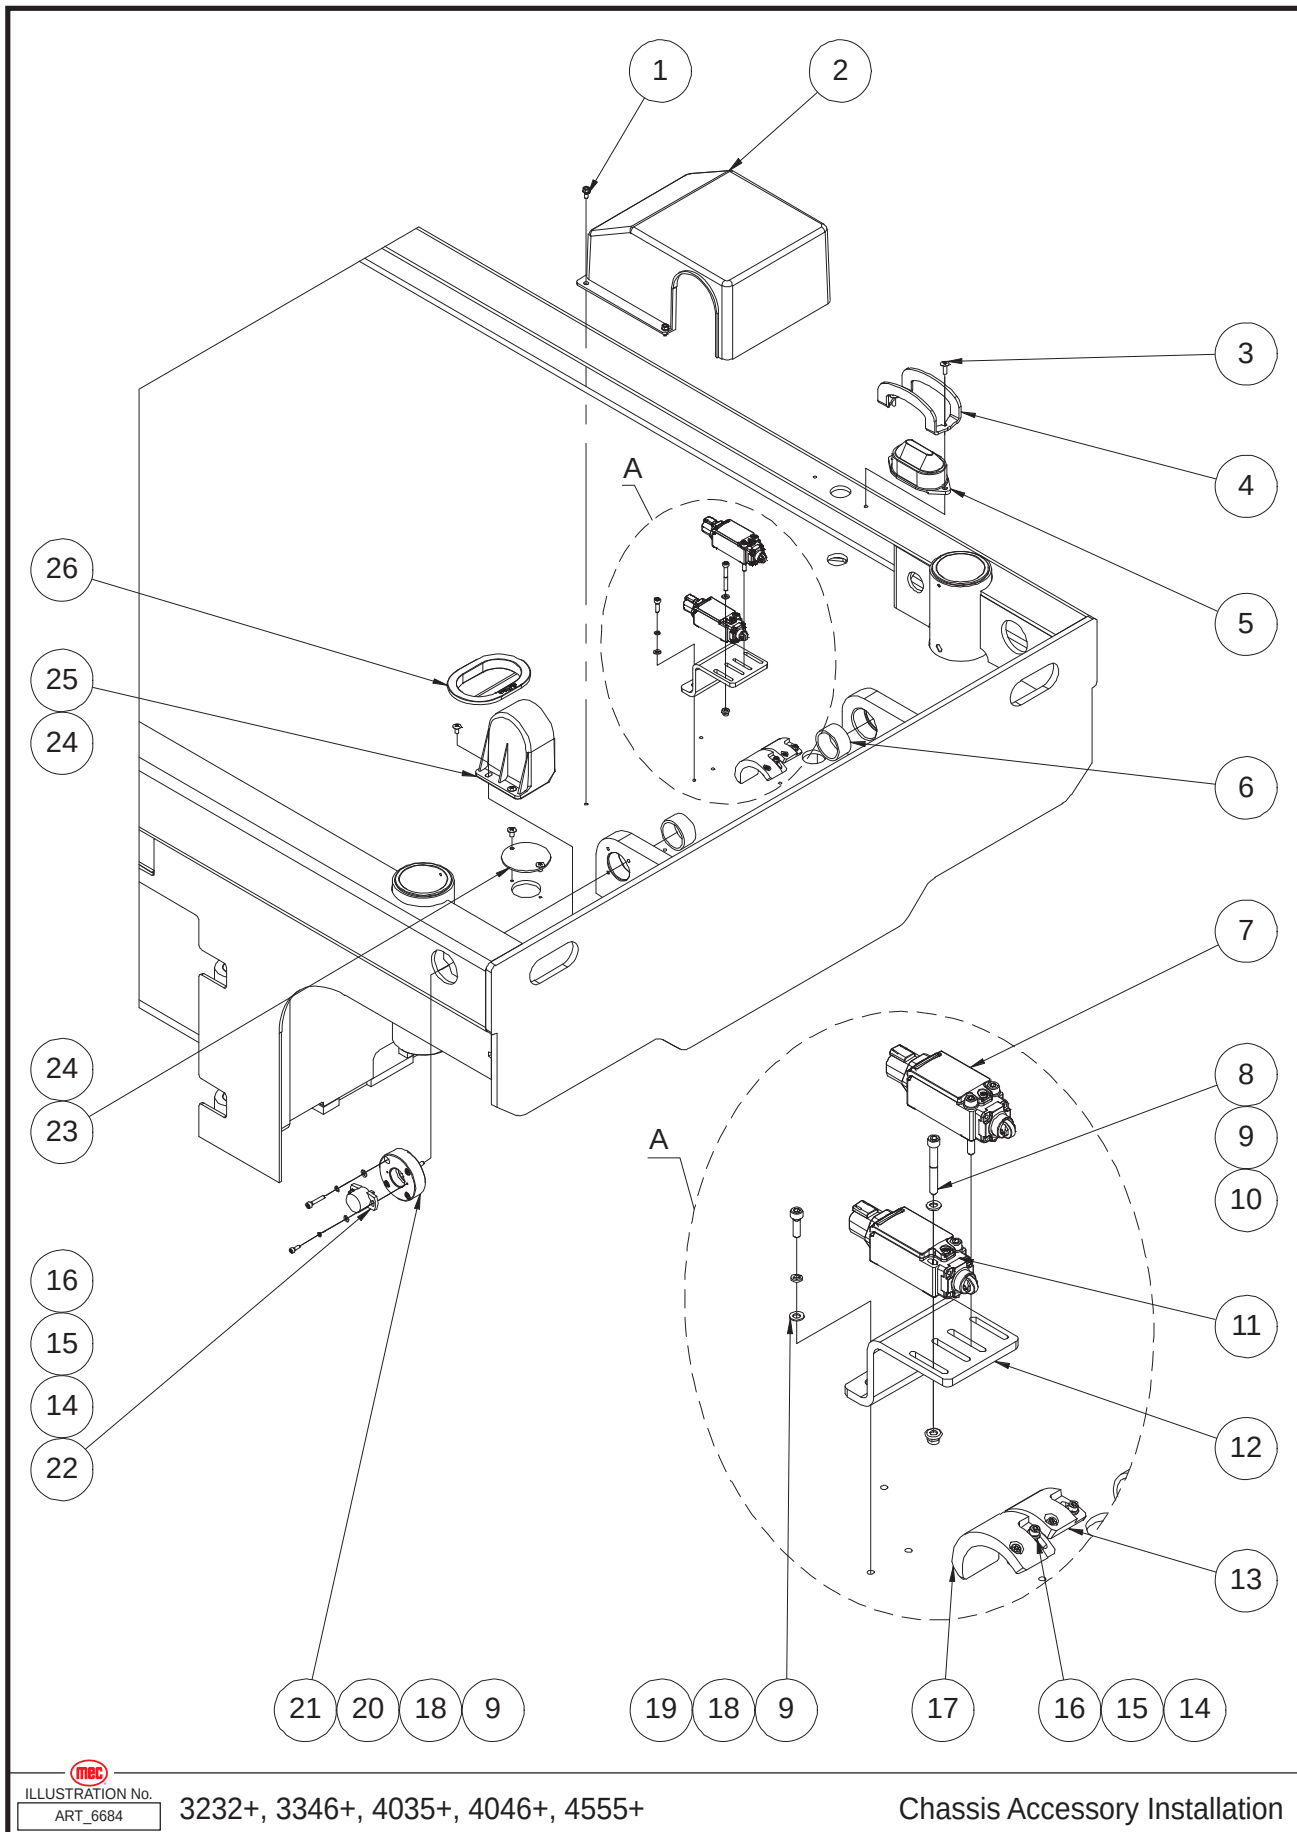


ILLUSTRATION No.
ART_6684

3232+, 3346+, 4035+, 4046+, 4555+

Chassis Accessory Installation

Item	Part No.	Description	Qty.
1	53449	Screw HHCS M05-0.80 × 10 Flange ZP	4
2	44942	Cover	1
3	53223	Screw THMS M05-0.80 × 16 ZP	2
4	41309	Beacon Cover	1
5	41310	Beacon	1
6	46379	Bearing	2
7	--	--	--
8	53067	Screw SHCS M05-0.80 × 40 ZP	4
9	53038	WSHR M05 Standard Flat Washer ZP	10
10	53281	Nut NNYL M05-0.80 Flange ZP	4
11	46265	Limit Switch	1
12	41414	Bracket, Limit Switch	1
13	--	--	--
14	50423	Screw SHCS M04-0.70 × 12 ZP	6
15	53062	WSHR M04 Spring Washer ZP	6
16	50284	WSHR M04 Standard Flat Washer ZP	6
17	45954	Signal Plate 2	1
18	53043	WSHR M05 Spring Washer ZP	6
19	50359	Screw SHCS M05-0.80 × 16 ZP	2
20	53356	Screw SHCS M05-0.80 × 25 ZP	4
21	46268	Sensor Bracket	1
22	49921	Rotary Sensor, Chassis	1
23	62815	Cover (3232+, 4035+)	1
	62848	Cover (3346+, 4046+, 4555+)	1
24	53265	Screw THMS M05-0.80 × 10 ZP	4
25	46384	Sensor Cover	1
26	41001	Sheath, Trim Lock	1

Counterweight and Bracket Accessory (3232+)

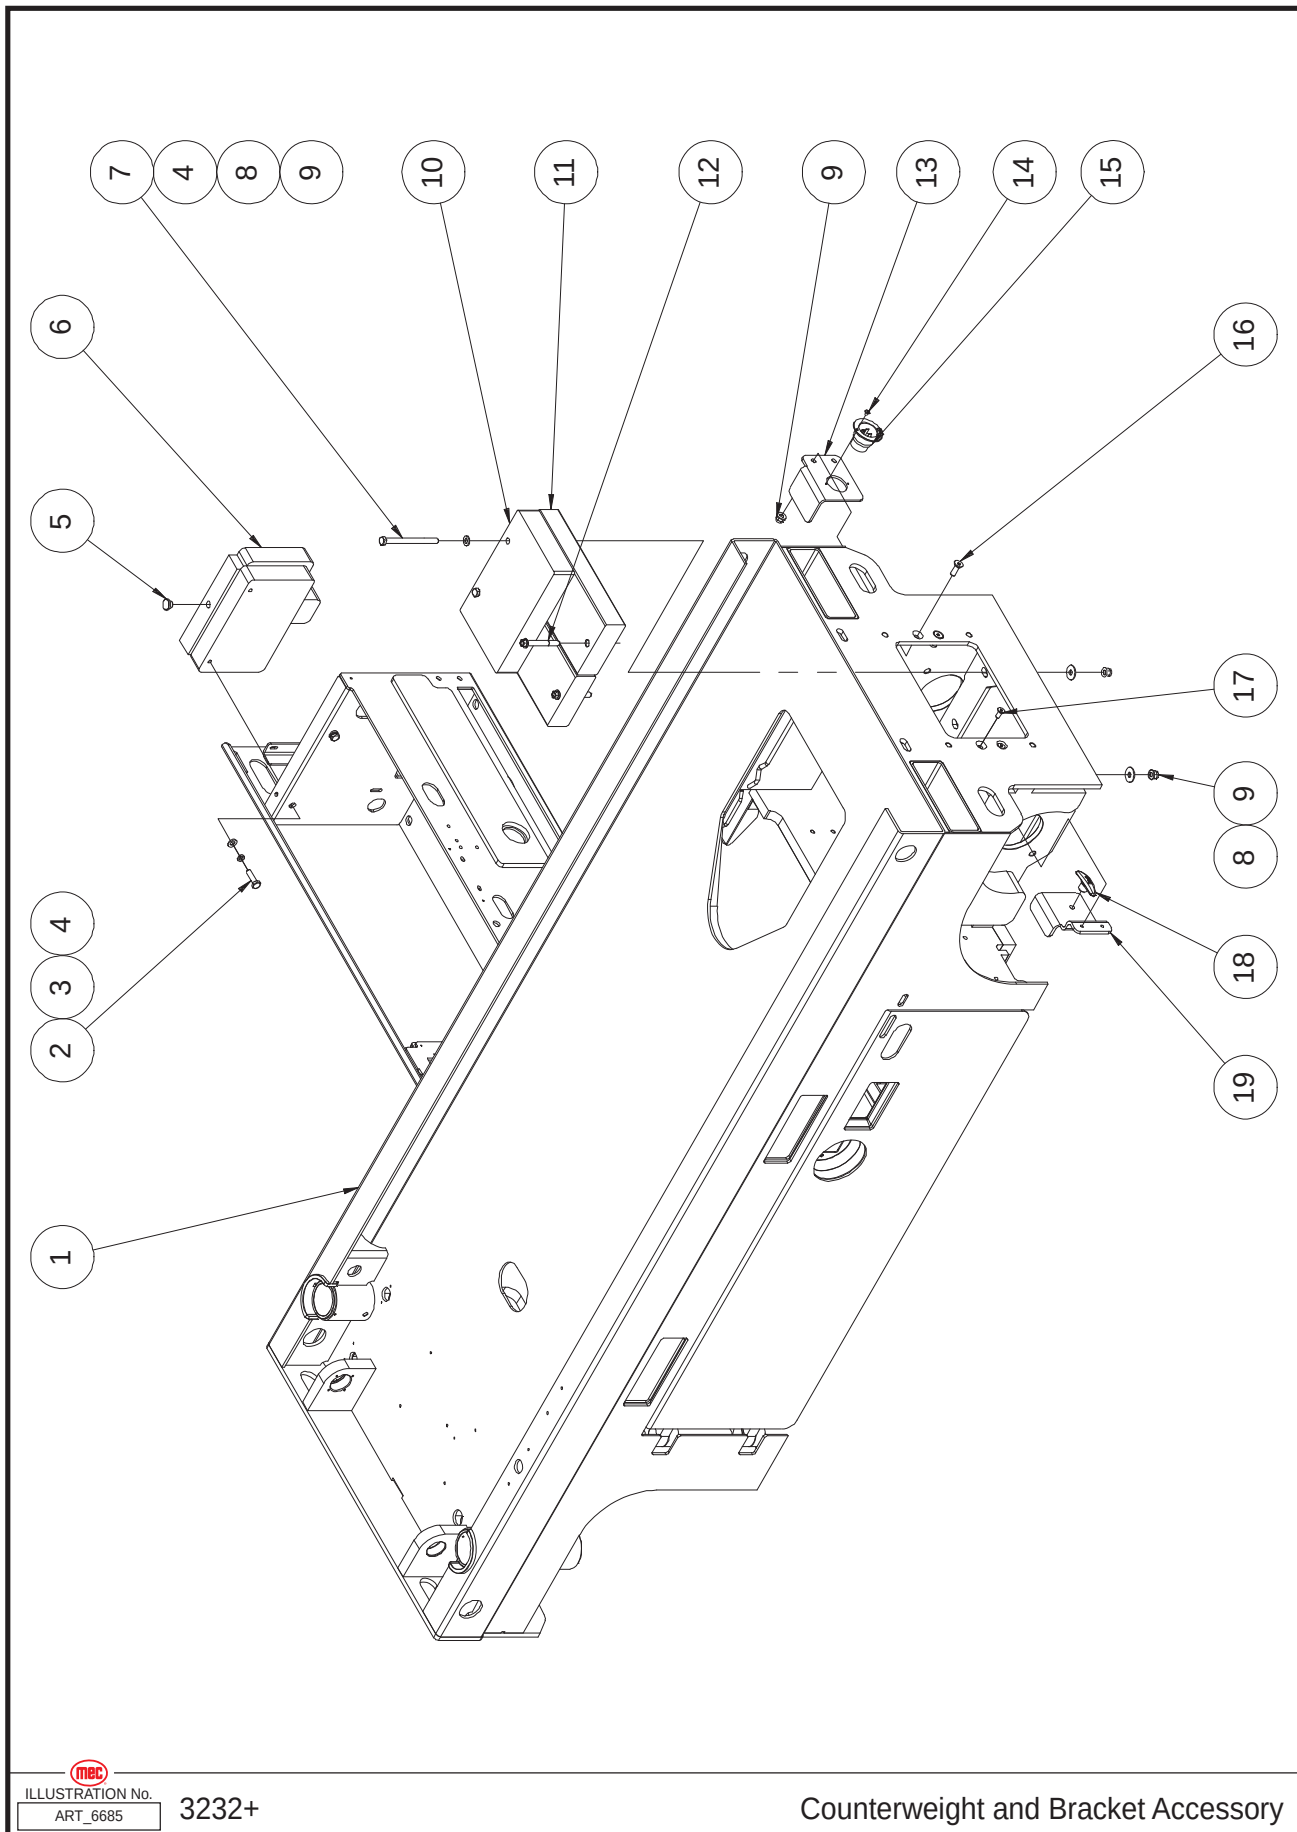



ILLUSTRATION No.
ART_6685

3232+

Counterweight and Bracket Accessory


Item	Part No.	Description	Qty.
1	61023	Weldment, Chassis Frame	1
2	50332	Screw HHCS M10-1.50 × 35 ZP	2
3	53054	WSHR M10 Spring Washer ZP	2
4	50002	WSHR M10 Standard Flat Washer ZP	4
5	62763	Cover	1
6	61024	Counterweight, Control Module	1
7	50318	Screw HHCS M10-1.50 × 130 ZP	2
8	53375	WSHR M10 Flat Fender Washer ZP	4
9	50311	Nut NNYL M10-1.50 Flange ZP	6
10	61025	Counterweight, Control Module Bottom	1
11	45330	Counterweight	2
12	53482	Screw HHCS M10-1.50 × 80 Flange ZP	2
13	45326	Bracket, Plug Bracket	1
14	53263	Screw THMS M04-0.70 × 8 ZP	2
15	41575	Plug, Input Socket	1
16	53225	Screw CPCS M10-1.50 × 30 ZP	2
17	53282	Screw CPCS M08-1.25 × 20 ZP	2
18	43367	Lowering Handle	1
19	62817	Mounting Handle Bracket	1

Counterweight and Bracket Accessory (4035+)

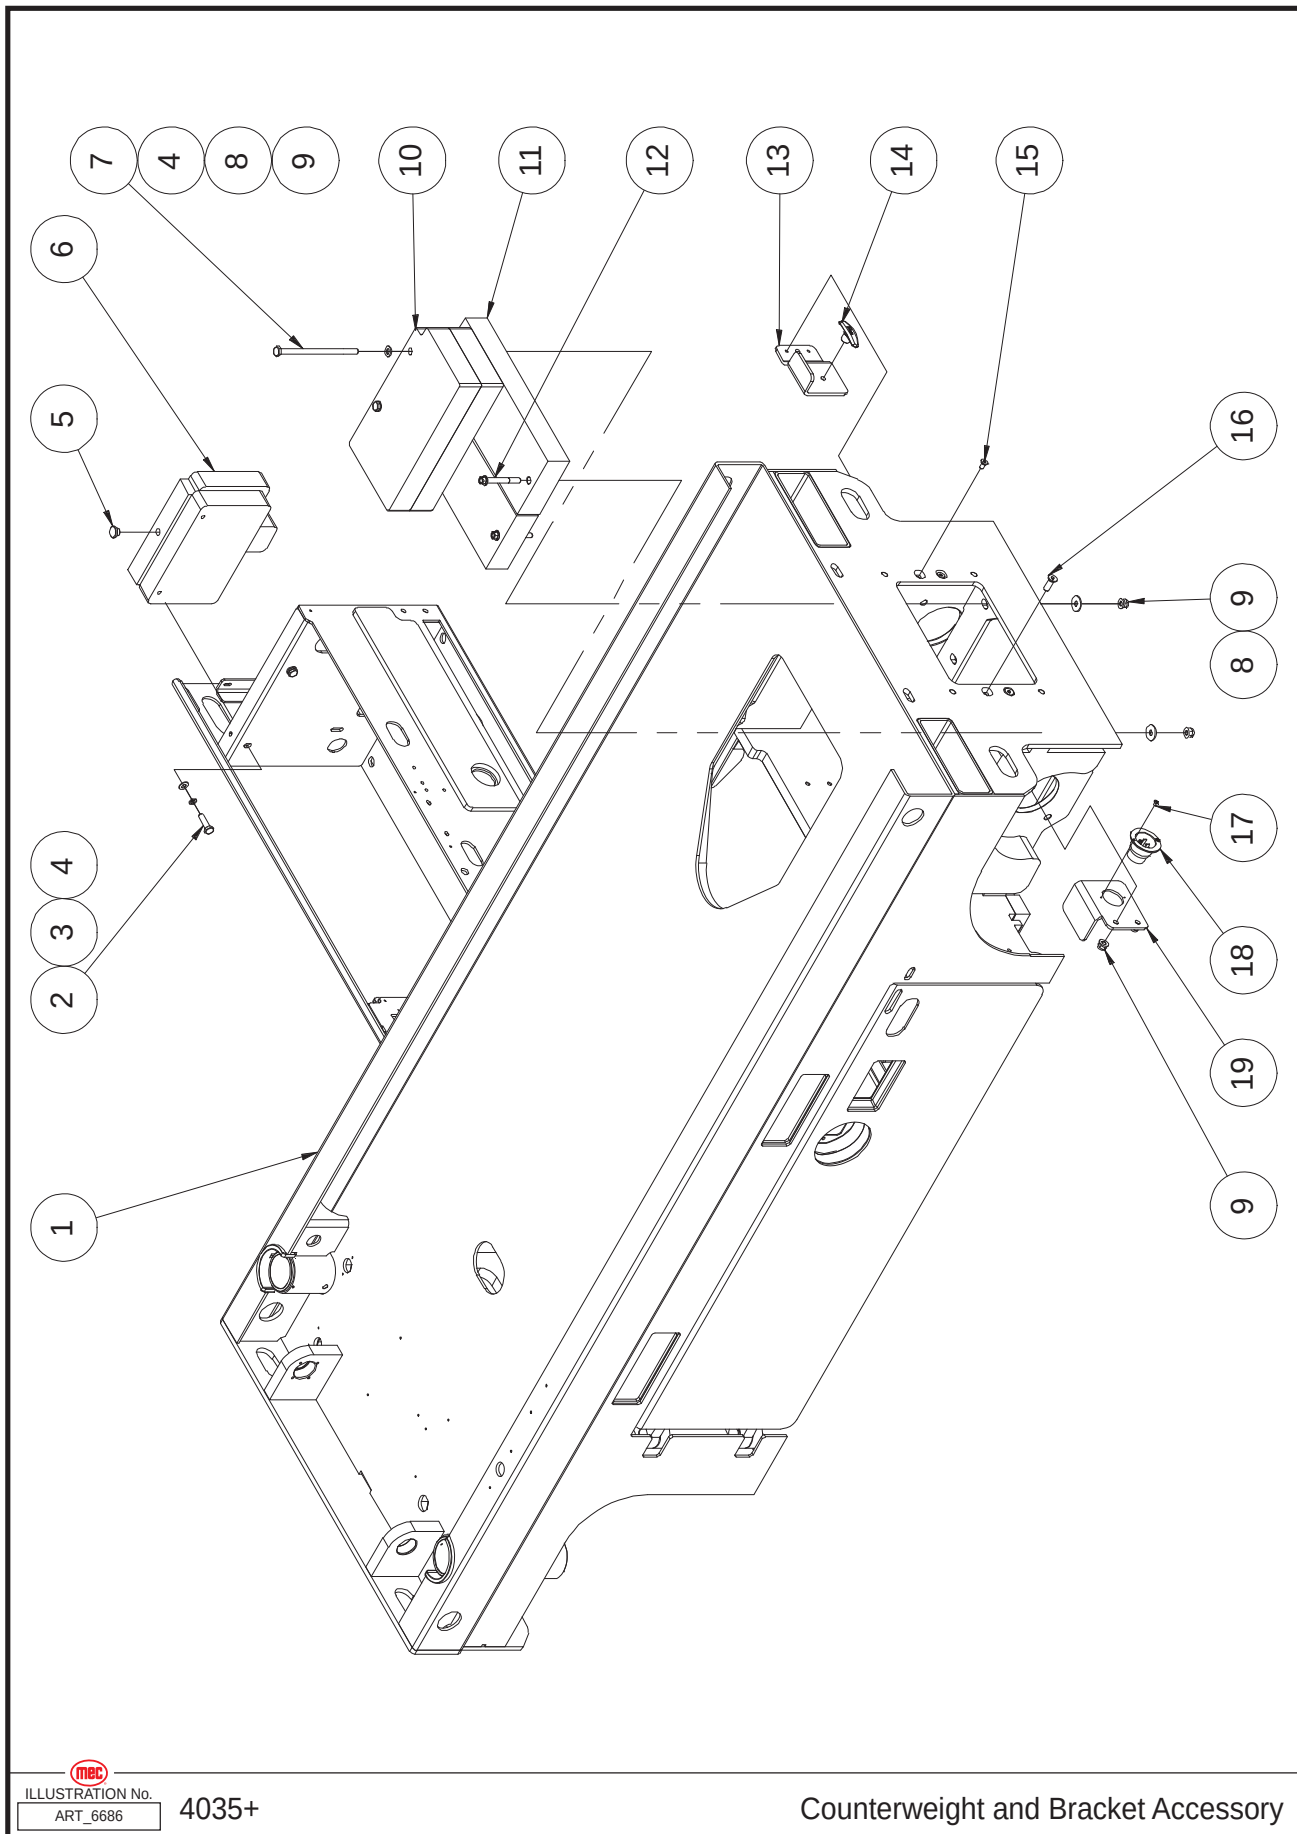


Item	Part No.	Description	Qty.
1	61026	Weldment, Chassis Frame	1
2	50332	Screw HHCS M10-1.50 × 35 ZP	2
3	53054	WSHR M10 Spring Washer ZP	2
4	50002	WSHR M10 Standard Flat Washer ZP	4
5	62763	Cover	1
6	61024	Counterweight, Control Module	1
7	50316	Screw HHCS M10-1.50 × 180 ZP	2
8	53375	WSHR M10 Flat Fender Washer ZP	4
9	50311	Nut NNYL M10-1.50 Flange ZP	6
10	61027	Counterweight, Control Module Bottom Small	2
11	61028	Counterweight, Control Module Bottom Large	2
12	53482	Screw HHCS M10-1.50 × 80 Flange ZP	2
13	62828	Mounting Handle Bracket	1
14	43367	Lowering Handle	1
15	53434	Screw CSCS M08-1.25 × 16 ZP	2
16	53225	Screw CSCS M10-1.50 × 30 ZP	2
17	53263	Screw THMS M04-0.70 × 8 ZP	2
18	41575	Plug, Input Socket	1
19	45331	Bracket, Plug Bracket	1

Counterweight and Bracket Accessory (3346+, 4046+, 4555+)

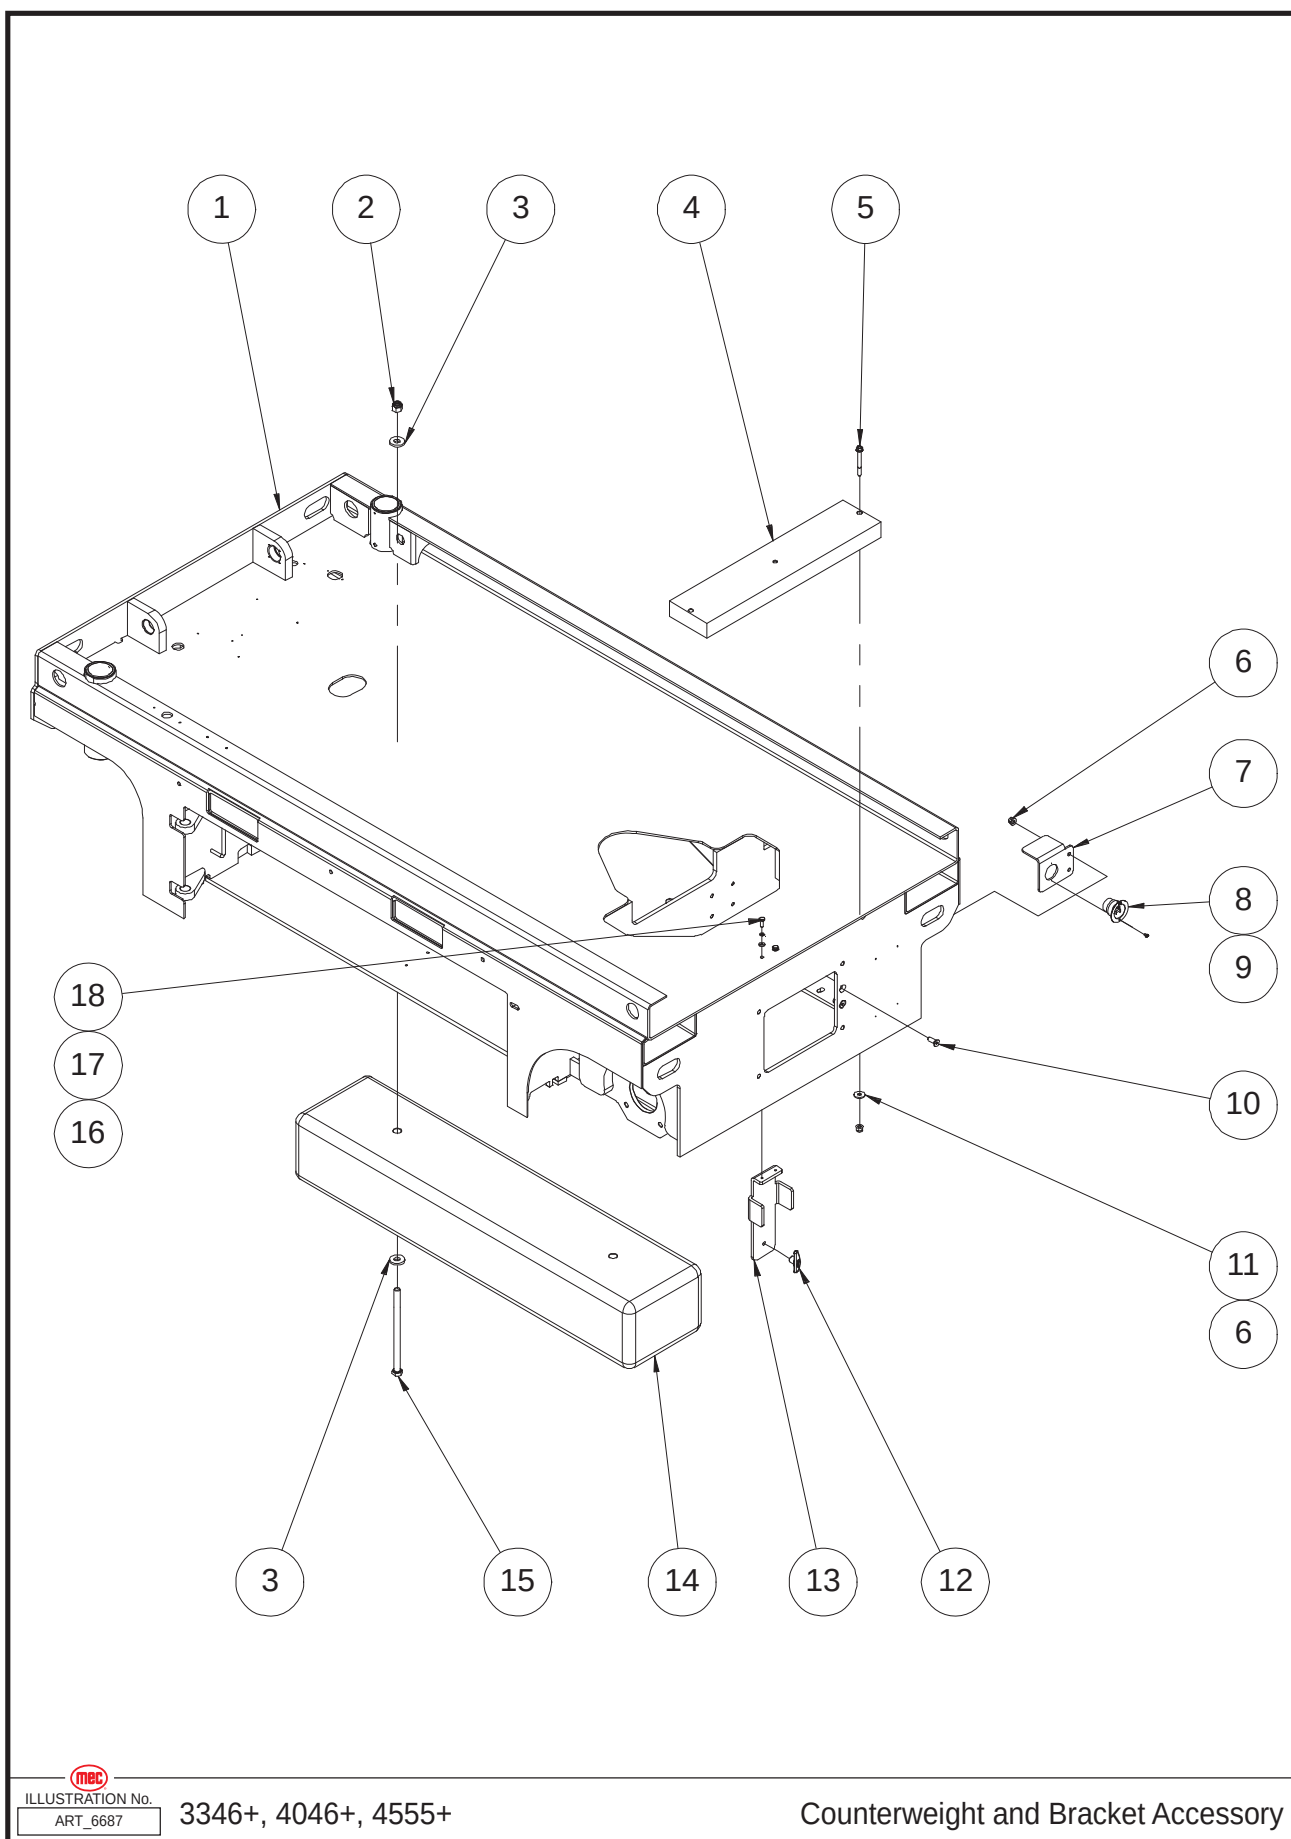


Item	Part No.	Description	Qty.
1	61029	Weldment, Chassis Frame (3346+, 4046+)	1
	61030	Weldment, Chassis Frame (4555+)	1
2	50051	Nut NNYL M16-2.00 ZP	2
3	53314	WSHR M16 Flat Fender Washer ZP	4
4	61031	Counterweight, Rear Chassis (3346+, 4046+)	1
5	53482	Screw HHCS M10-1.50 × 80 Flange ZP	2
6	50311	Nut NNYL M10-1.50 Flange ZP	2
7	45326	Bracket, Plug Bracket	1
8	41575	Plug, Input Socket	1
9	53263	Screw THMS M04-0.70 × 8 ZP	2
10	53225	Screw CSCS M10-1.50 × 30 ZP	2
11	53375	WSHR M10 Flat Fender Washer ZP	2
12	43367	Lowering Handle	1
13	62811	Handle Bracket	1
14	41457	Counterweight 400 (3346+, 4046+)	1
	44948	Counterweight 180 (4555+)	1
15	53677	Screw HHCS M16-2.00 × 260 ZP, Partially Threaded	2
16	50001	WSHR M08 Standard Flat Washer ZP	2
17	53055	WSHR M08 Spring Washer ZP	2
18	50030	Screw HHCS M08-1.25 × 20 ZP	2

Leak Containment System®

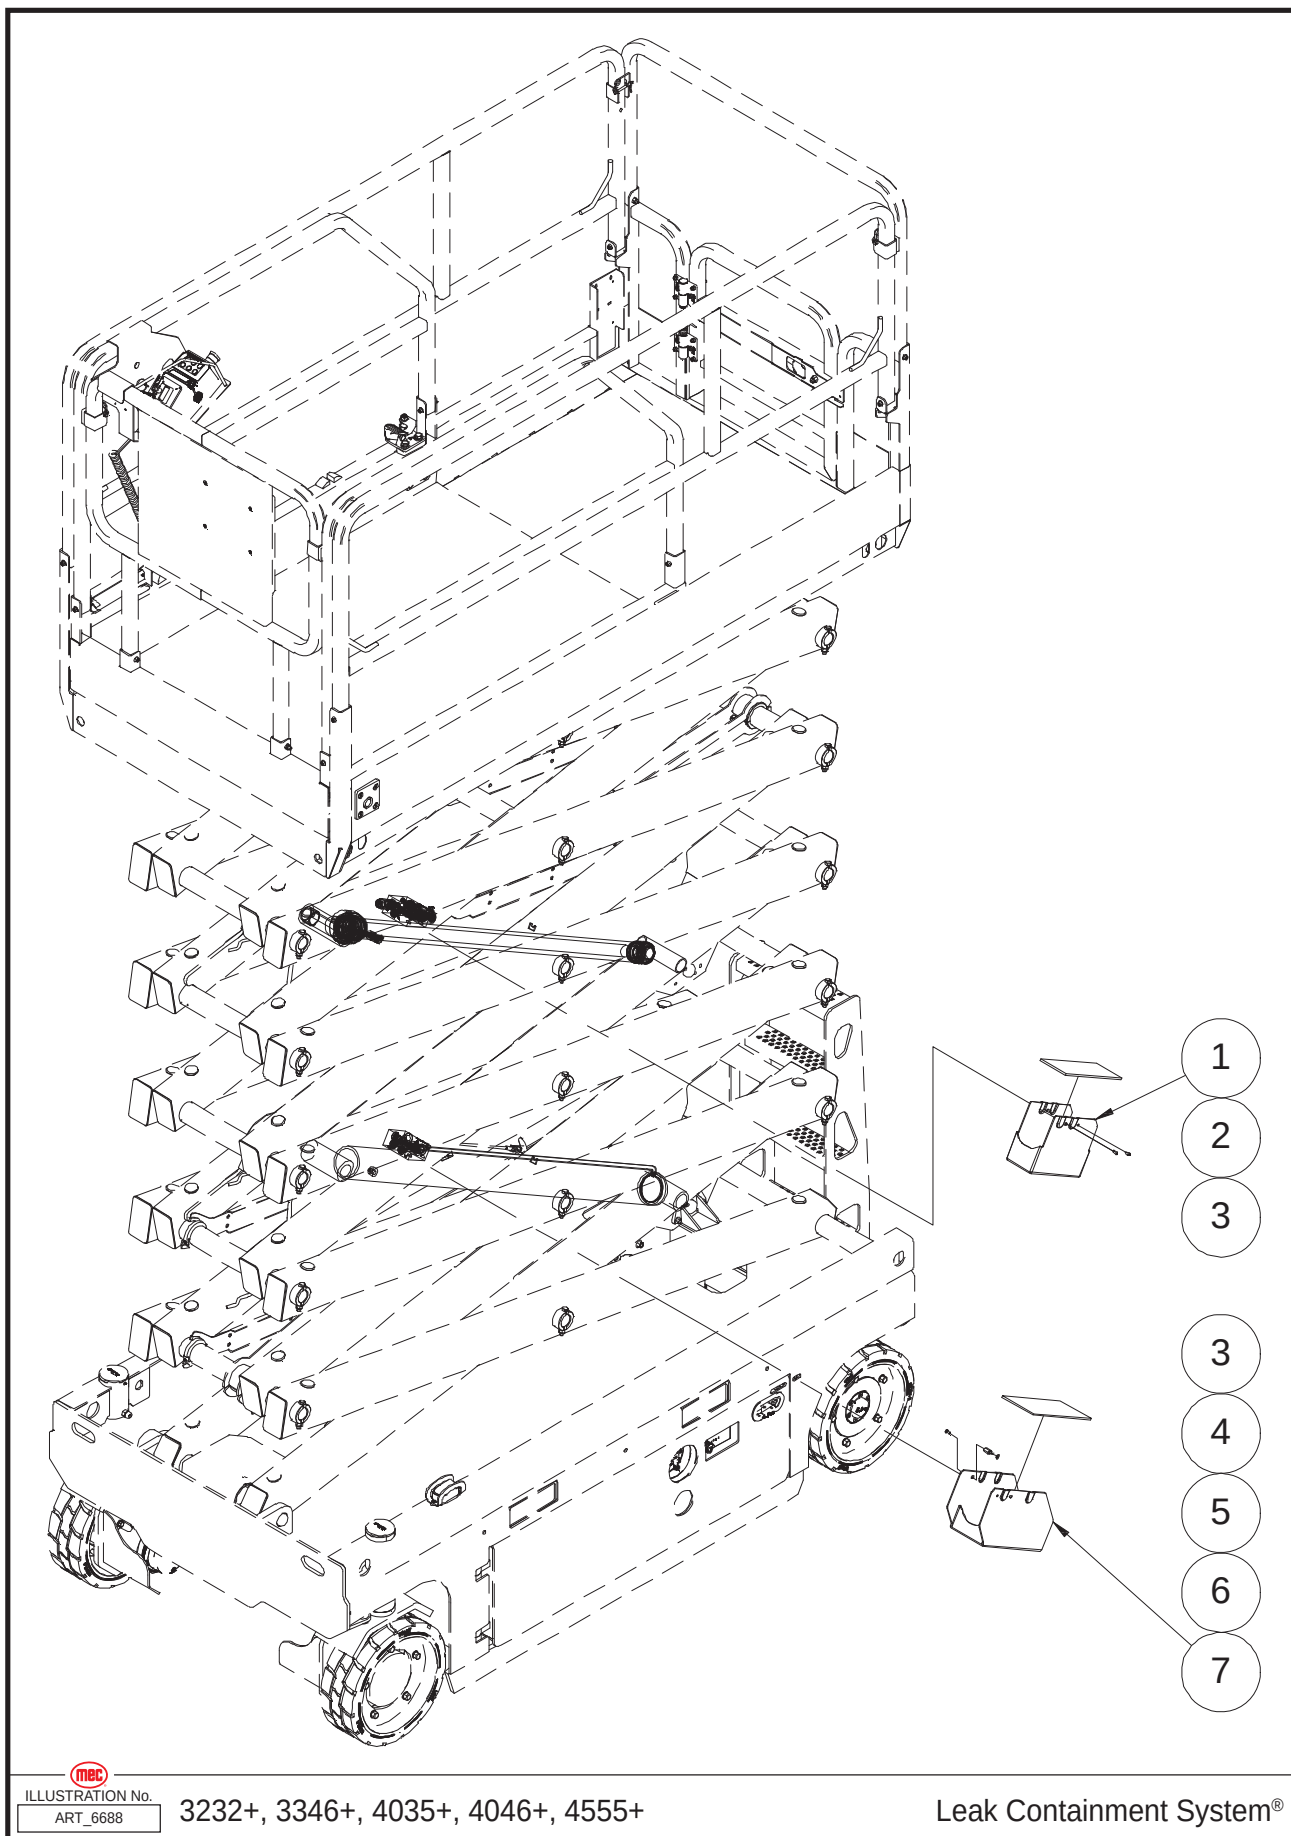

Item	Part No.	Description	Qty.
1	62761	LCS Cylinder Guard (Pad is 61056)	1
2	61056	Oil-Absorbent Cotton Pad (For 62761)	1
3	53026	Screw BHCS M06-1.00 × 12 ZP	4
4	62771	Linking Pole	1
5	50000	WSHR M06 Standard Flat Washer ZP	1
6	62851	Oil-Absorbent Cotton Pad (For 62762)	1
7	62762	LCS Cylinder Guard (Pad is 62851)	1

Scissor Assembly (3232+)

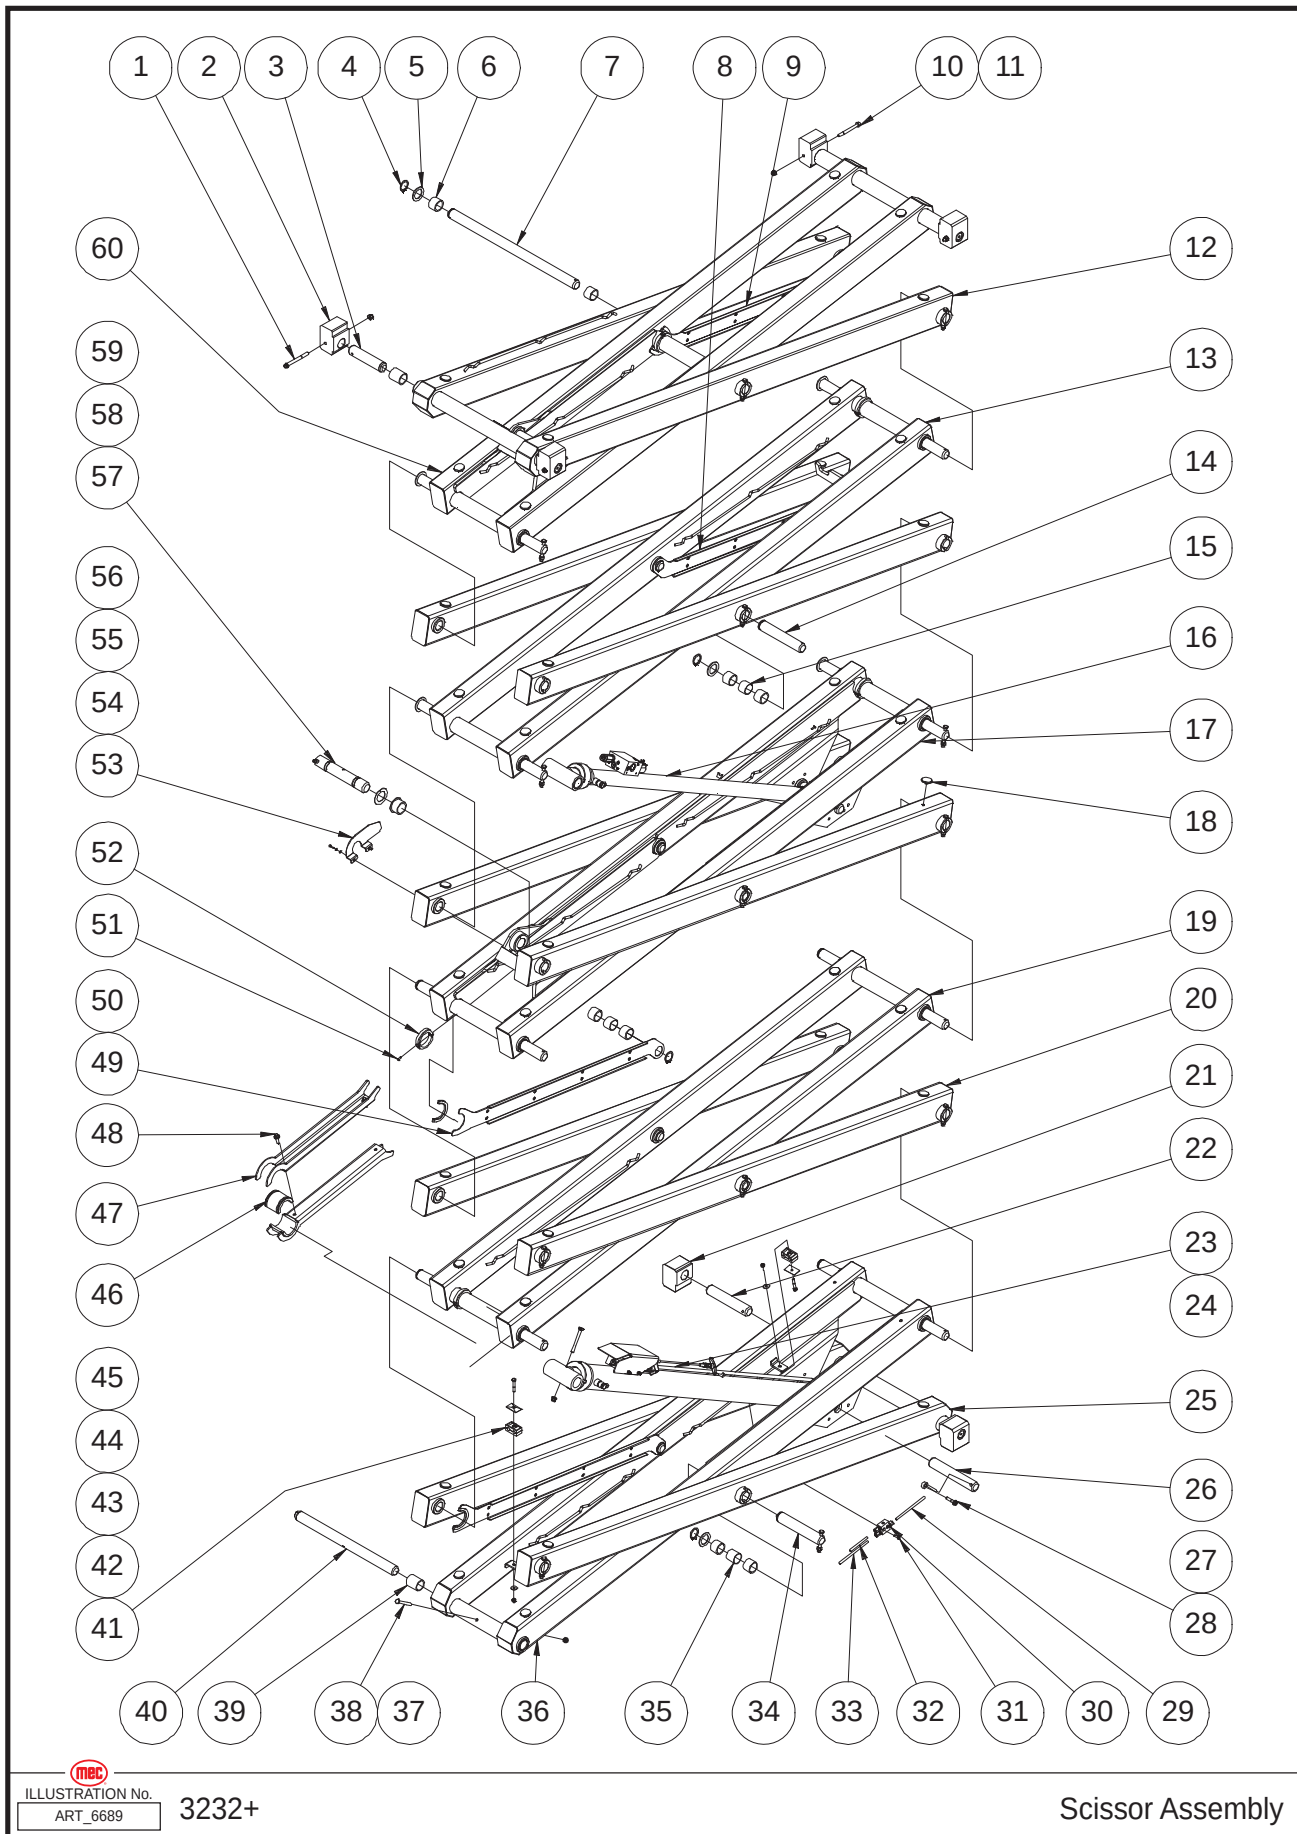


Item	Part No.	Description	Qty.
1	53267	Screw HHCS M10-1.50 × 110 Flange ZP	2
2	41519	Platform Slider	4
3	41102	Pin	4
4	43248	Circlips	17
5	41480	Washer	14
6	41105	Bearing	34
7	41479	Pin, Long Axle	9
8	41482	Cable Bridge 1	1
9	41117	Cable Bridge 2	1
10	53271	Screw HHCS M10-1.50 × 100 Flange ZP	2
11	50311	Nut NNYL M10-1.50 Flange ZP	9
12	41478	Outer Arm 3	1
13	41502	Inner Arm 4	1
14	41491	Pin	4
15	41116	Spacer Sleeve	4
16	REF	Upper Lift Cylinder Assembly (Refer to page 70)	1
17	61032	Inner Arm 3, Scissor	1
18	41114	Block	40
19	44949	Inner Arm 2	1
20	41489	Outer Arm	3
21	45333	Chassis Slider	2
22	45334	Chassis Slider	2
23	REF	Lower Lift Cylinder Assembly (Refer to page 67)	1
24	53678	Screw HHCS M10-1.50 × 90 ZP, Fully Threaded	1
25	44955	Outer Arm 1	1
26	41104	Pin, Cylinder Axle	3
27	41431	Pin, Axle	3
28	53440	Screw HHCS M10-1.50 × 40 Flange ZP	2
29	44961	Hose (To Tank)	1
30	41112	Hydraulic Hoses Manifolds	1
31	50386	Screw CSCS M06-1.00 × 25 ZP	2
32	43600	Hose (To Lower Lift Cylinder)	1
33	44960	Hose (To Upper Lift Cylinder)	1
34	41485	Pin	4
35	41487	Spacer Sleeve	4
36	46385	Inner Arm 1	1
37	50049	Nut NNYL M10-1.50 ZP	20
38	50352	Screw HHCS M10-1.50 × 80 ZP	20
39	41103	Bearing	6
40	46386	Pin	1
41	46277	Hose Clamp	2
42	41415	Base Plate	2
43	50218	WSHR M08 Flat Fender Washer ZP	2
44	50048	Nut NNYL M08-1.25 ZP	2

45	50015	Screw HHCS M08-1.25 × 50 ZP	2
46	41109	Safety Arm Bushing	2
47	41108	Safety Arm	2
48	53268	Screw HHCS M10-1.50 × 30 Serrated Flange ZP	3
49	44957	Cable Bridge 3	2
50	44534	Bushing Insert Clamp 1	5
51	53269	Screw CPCS M05-0.80 × 16 ZP	5
52	44958	Clamp Collar 1	5
53	45739	Harness Plate Cover	1
54	50359	Screw SHCS M05-0.80 × 16 ZP	2
55	53043	WSHR M05 Spring Washer ZP	2
56	53038	WSHR M05 Standard Flat Washer ZP	2
57	49412	Pin, Upper Lift Cylinder Support	1
58	62767	Bearing	2
59	49413	Bearing, Inner Arm Pin	2
60	61033	Inner Arm 3, Scissor	1

REF - Reference

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Scissor Assembly (3346+)

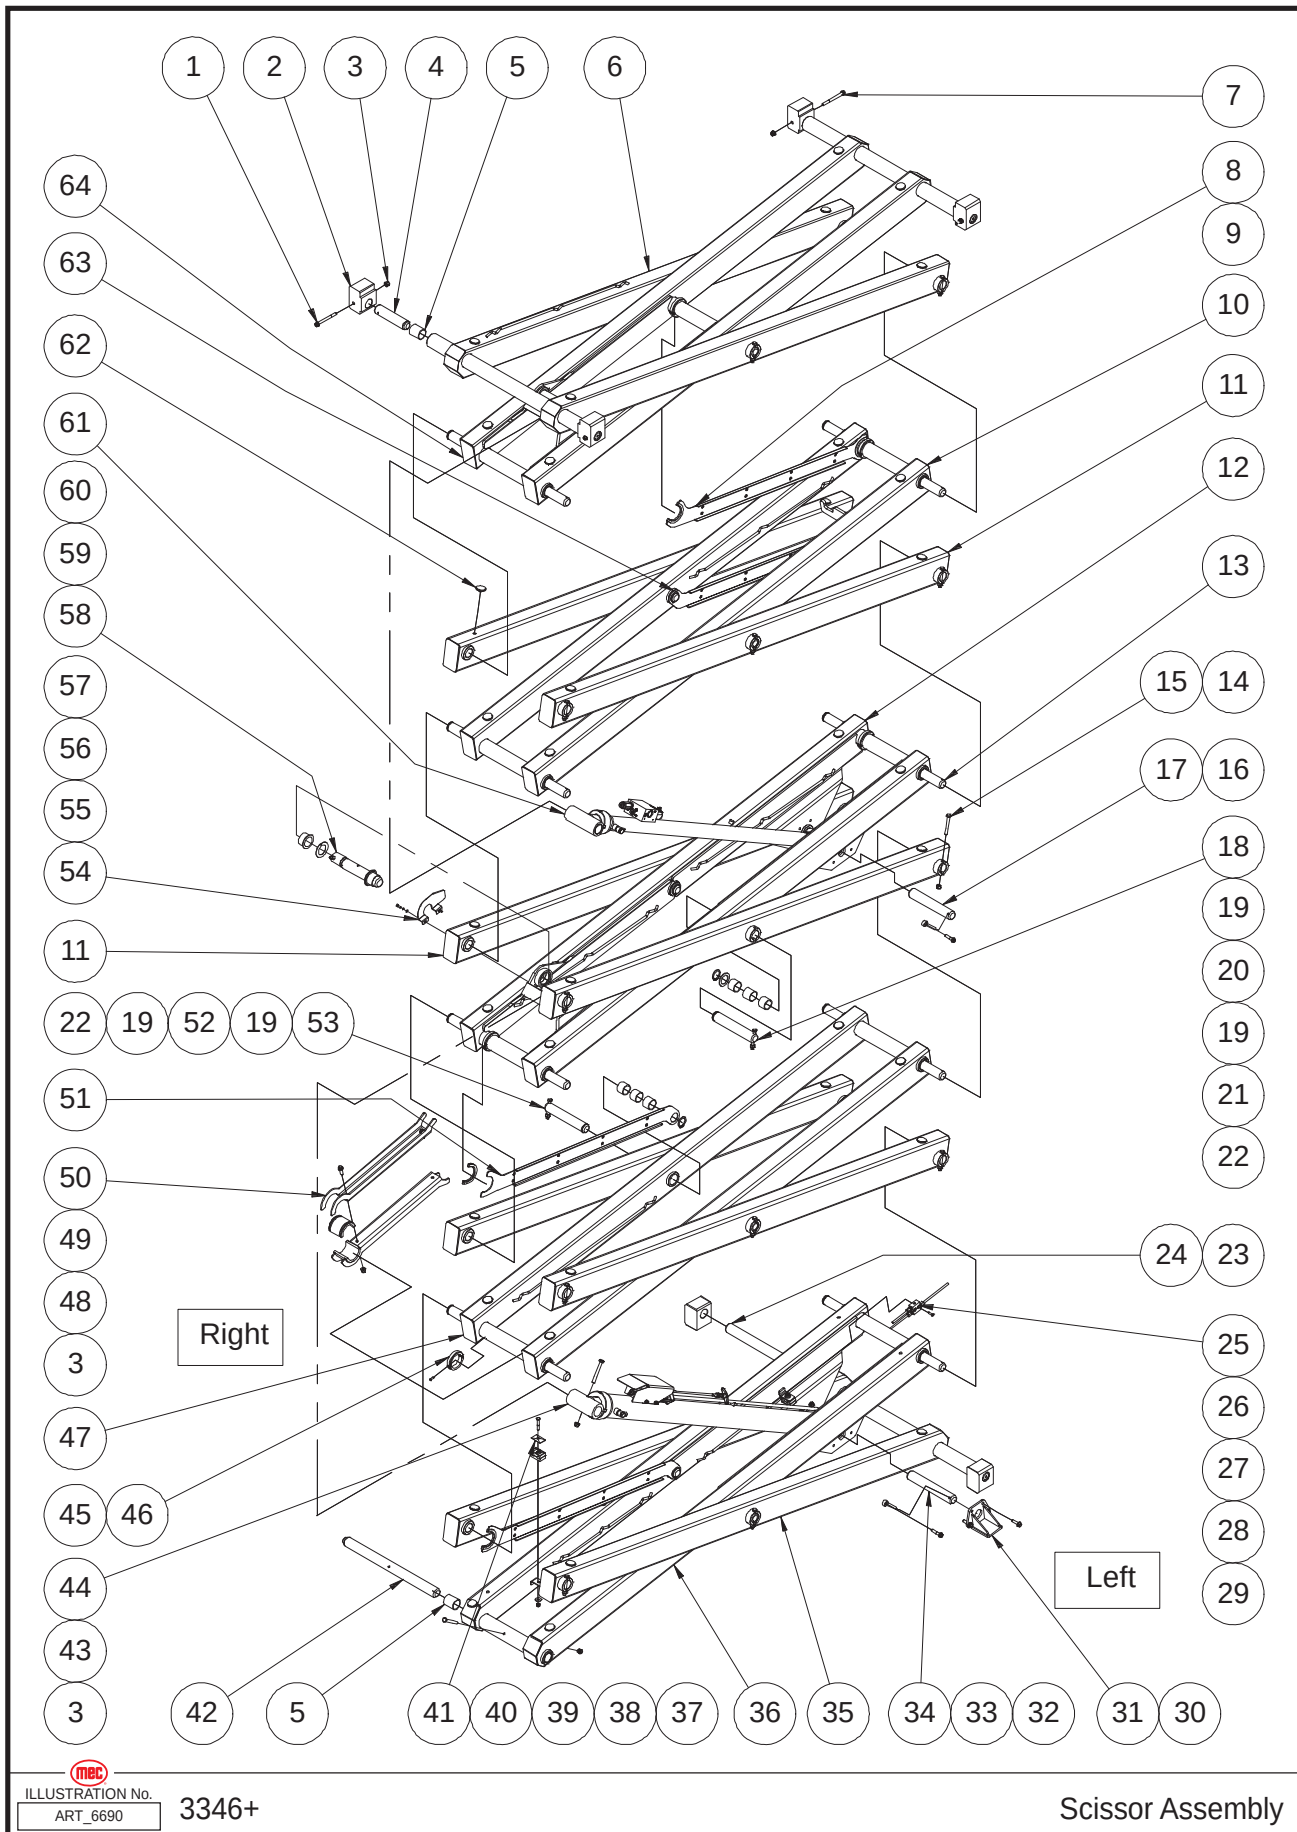


Item	Part No.	Description	Qty.
1	53271	Screw HHCS M10-1.50 × 100 Flange ZP	2
2	41519	Platform Slider	4
3	50311	Nut NNYL M10-1.50 Flange ZP	16
4	41102	Pin	4
5	41103	Bearing	6
6	41494	Outer Arm 5	1
7	53267	Screw HHCS M10-1.50 × 110 Flange ZP	2
8	41117	Cable Bridge 2	1
9	44534	Bushing Insert Clamp 1	5
10	41502	Inner Arm 4	1
11	41489	Outer Arm	3
--	44950	Left Single Link	3
--	44951	Right Single Link	3
12	61032	Inner Arm 3, Scissor	1
13	41479	Pin, Long Axle	9
14	50049	Nut NNYL M10-1.50 ZP	20
15	50352	Screw HHCS M10-1.50 × 80 ZP	20
16	53440	Screw HHCS M10-1.50 × 40 Flange ZP	1
17	41104	Pin, Cylinder Axle	2
18	41485	Pin	4
19	41105	Bearing	34
20	41487	Spacer Sleeve	4
21	41480	Washer	14
22	43248	Circlips	17
23	44952	Chassis Slider	2
24	44963	Pin	2
25	41112	Hydraulic Hoses Manifolds	1
26	43600	Hose (To Lower Lift Cylinder)	1
27	44960	Hose (To Upper Lift Cylinder)	1
28	44961	Hose (To Tank)	1
29	50386	Screw CSCS M06-1.00 × 25 ZP	2
30	53304	Screw HHCS M10-1.50 × 35 Serrated Flange ZP	7
31	41113	Pothole Pusher	2
32	53441	Screw HHCS M10-1.50 × 45 Flange ZP	1
33	41431	Pin, Axle	3
34	41498	Pin, Long Cylinder Axle	1
35	44962	Outer Arm 1	1
36	46385	Inner Arm 1	1
37	50048	Nut NNYL M08-1.25 ZP	2
38	50218	WSHR M08 Flat Fender Washer ZP	2
39	50015	Screw HHCS M08-1.25 × 50 ZP	2
40	46277	Hose Clamp	2
41	41415	Base Plate	2
42	46386	Pin	1

43	53678	Screw HHCS M10-1.50 × 90 ZP, Fully Threaded	1
44	REF	Lower Lift Cylinder Assembly (Refer to page 67)	1
45	53269	Screw CSCS M05-0.80 × 16 ZP	5
46	44958	Clamp Collar 1	5
47	44949	Inner Arm 2	1
48	53268	Screw HHCS M10-1.50 × 30 Serrated Flange ZP	3
49	41109	Safety Arm Bushing	2
50	41108	Safety Arm	2
51	44957	Cable Bridge 3	2
52	41116	Spacer Sleeve	4
53	41491	Pin	4
54	45739	Harness Plate Cover	1
55	53038	WSHR M05 Standard Flat Washer ZP	2
56	53043	WSHR M05 Spring Washer ZP	2
57	50359	Screw SHCS M05-0.80 × 16 ZP	2
58	49412	Pin, Upper Lift Cylinder Support	1
59	49413	Bearing, Inner Arm Pin	2
60	62767	Bearing	2
61	REF	Upper Lift Cylinder Assembly (Refer to page 70)	1
62	41114	Block	40
63	41482	Cable Bridge 1	1
64	41496	Inner Arm 5	1

REF - Reference

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Scissor Assembly (4035+)

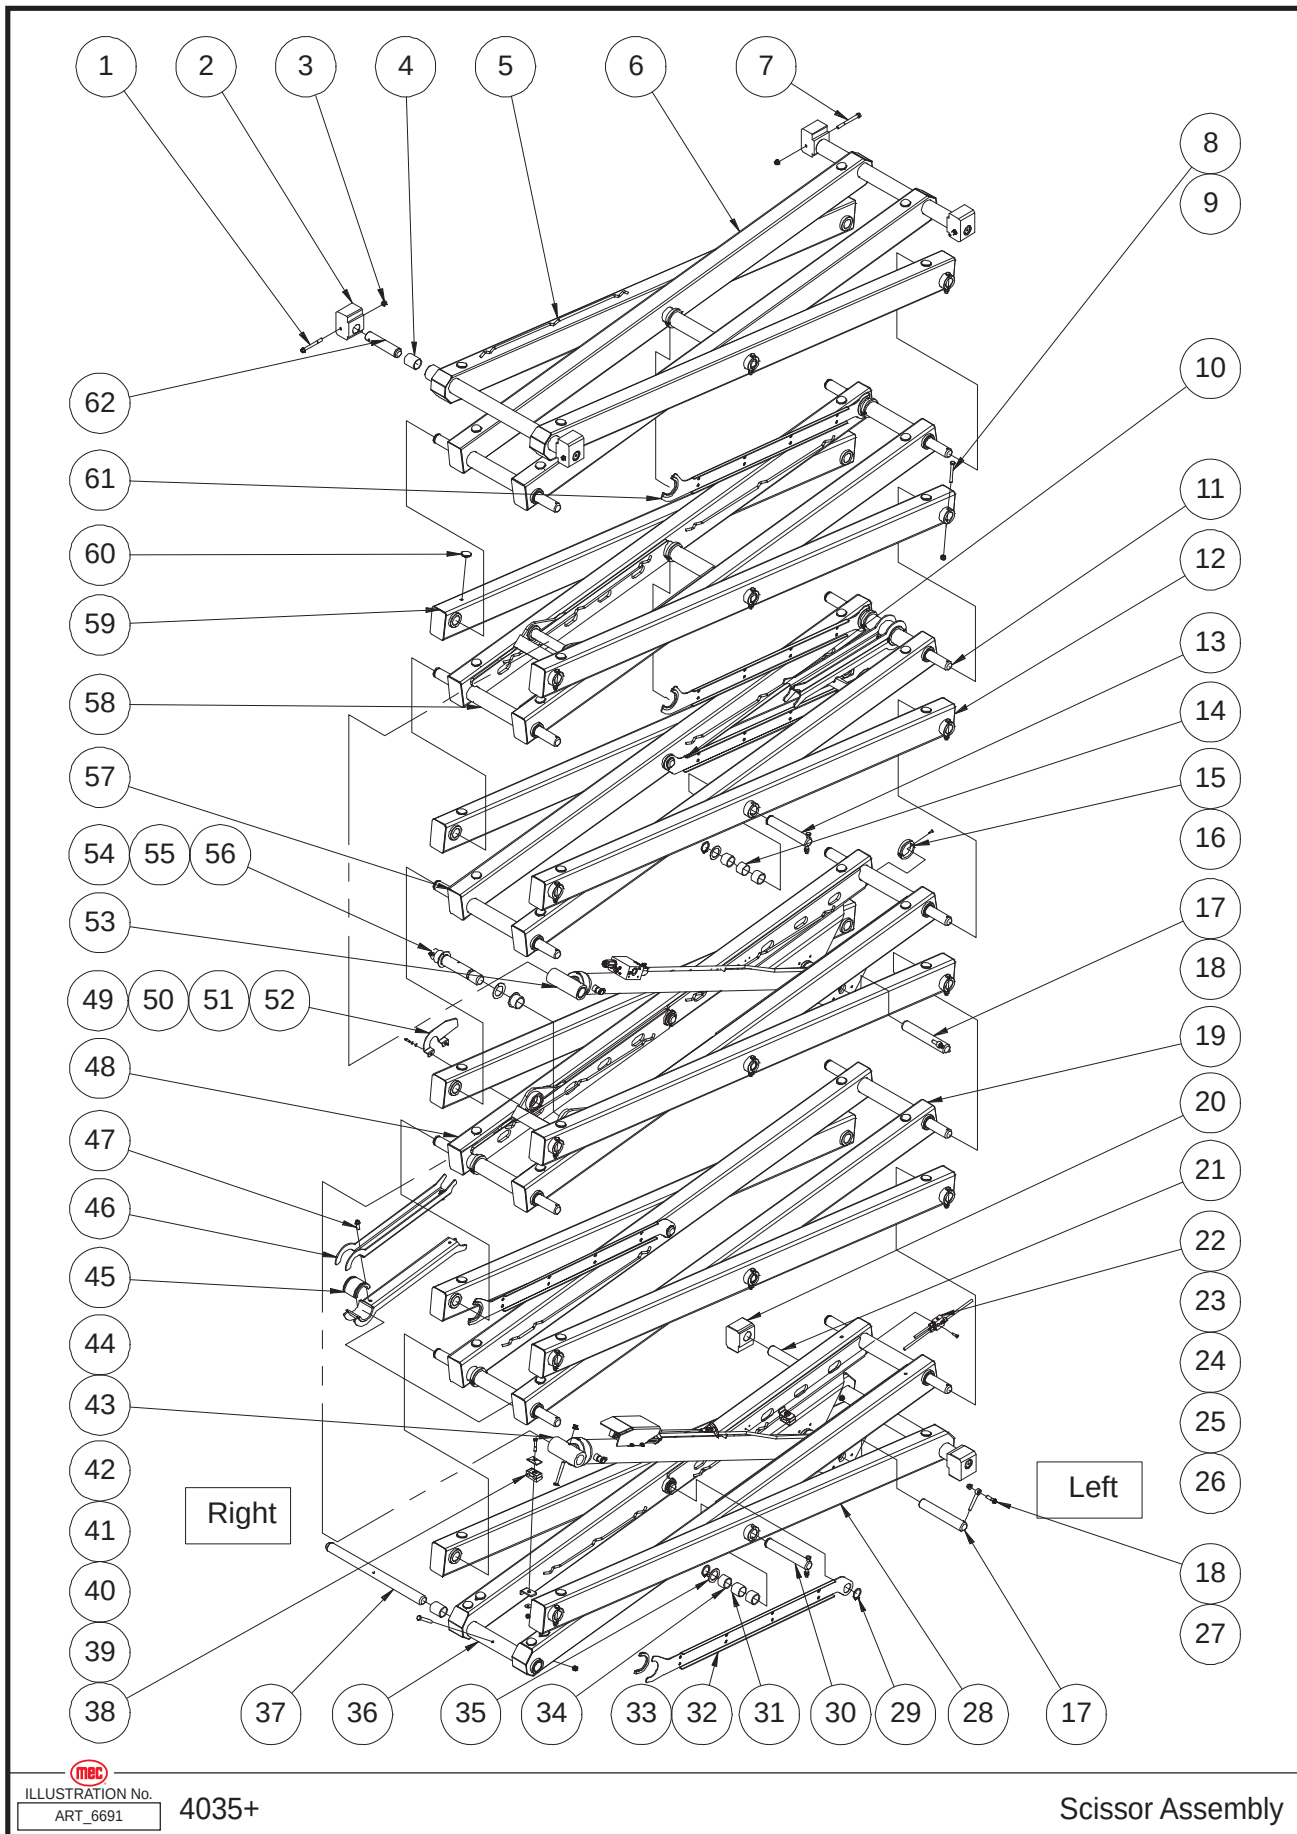


Item	Part No.	Description	Qty.
1	53271	Screw HHCS M10-1.50 × 100 Flange ZP	2
2	41519	Platform Slider	4
3	50311	Nut NNYL M10-1.50 Flange ZP	11
4	41103	Bearing	6
5	61034	Outer Arm 6, Scissor	1
6	61035	Inner Arm 6, Scissor	1
7	53267	Screw HHCS M10-1.50 × 110 Flange ZP	2
8	50352	Screw HHCS M10-1.50 × 80 ZP	23
9	50049	Nut NNYL M10-1.50 ZP	23
10	41482	Cable Bridge 1	1
11	41479	Pin, Long Axle	12
12	41489	Outer Arm	3
--	44950	Left Single Link	3
--	44951	Right Single Link	3
13	41491	Pin	4
14	41116	Spacer Sleeve	4
15	44958	Clamp Collar 1	7
16	53269	Screw CSCS M05-0.80 × 16 ZP	7
17	41104	Pin, Cylinder Axle	2
18	53440	Screw HHCS M10-1.50 × 40 Flange ZP	1
19	44949	Inner Arm 2	1
20	45333	Chassis Slider	2
21	62766	Pin	2
22	41112	Hydraulic Hoses Manifolds	1
23	44961	Hose (To Tank)	1
24	43600	Hose (To Lower Lift Cylinder)	1
25	50386	Screw CSCS M06-1.00 × 25 ZP	2
26	44960	Hose (To Upper Lift Cylinder)	1
27	41431	Pin, Axle	3
28	61036	Outer Arm 1, Scissor	1
29	43248	Circlips	20
30	41485	Pin	4
31	41487	Spacer Sleeve	4
32	44957	Cable Bridge 3	2
33	44534	Bushing Insert Clamp 1	7
34	41105	Bearing	40
35	41480	Washer	17
36	46385	Inner Arm 1	1
37	46386	Pin	1
38	46277	Hose Clamp	2
39	41415	Base Plate	2
40	50218	WSHR M08 Flat Fender Washer ZP	2
41	50048	Nut NNYL M08-1.25 ZP	2
42	50015	Screw HHCS M08-1.25 × 50 ZP	2

43	REF	Lower Lift Cylinder Assembly (Refer to page 67)	1
44	53678	Screw HHCS M10-1.50 × 90 ZP, Fully Threaded	1
45	41109	Safety Arm Bushing	4
46	41108	Safety Arm	4
47	53268	Screw HHCS M10-1.50 × 30 Serrated Flange ZP	5
48	61032	Inner Arm 3, Scissor	1
49	50359	Screw SHCS M05-0.80 × 16 ZP	2
50	53043	WSHR M05 Spring Washer ZP	2
51	53038	WSHR M05 Standard Flat Washer ZP	2
52	45739	Harness Plate Cover	1
53	REF	Upper Lift Cylinder Assembly (Refer to page 70)	1
54	62767	Bearing	2
55	49413	Bearing, Inner Arm Pin	2
56	49412	Pin, Upper Lift Cylinder Support	1
57	41502	Inner Arm 4	1
58	41495	Inner Arm 3	1
59	41499	Outer Arm 3	1
--	44950	Left Single Link	1
--	44959	Right Single Link 5	1
60	41114	Block	48
61	41117	Cable Bridge 2	2
62	41102	Pin	4

REF - Reference

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Scissor Assembly (4046+)

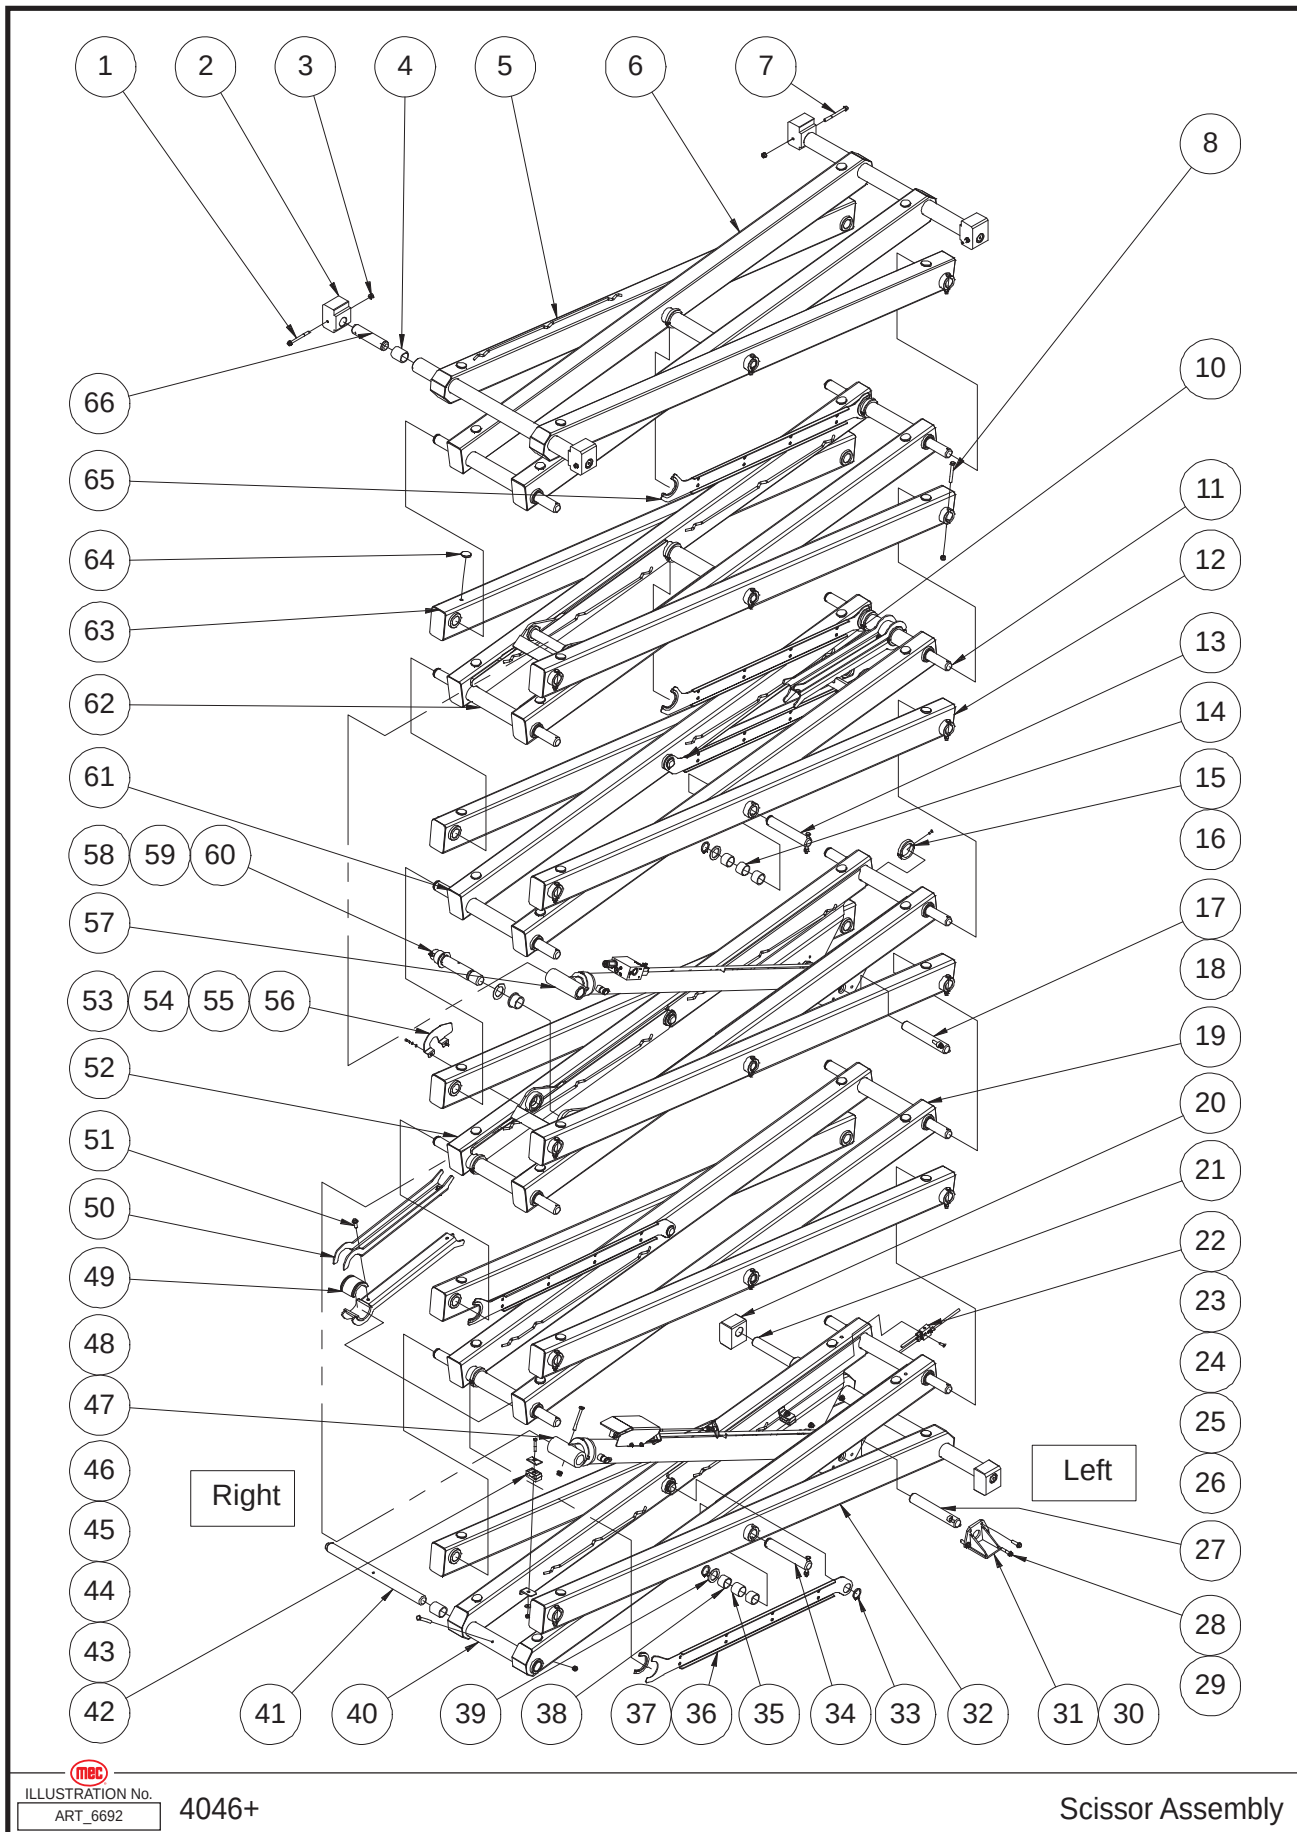


Item	Part No.	Description	Qty.
1	53271	Screw HHCS M10-1.50 × 100 Flange ZP	2
2	41519	Platform Slider	4
3	50311	Nut NNYL M10-1.50 Flange ZP	18
4	41103	Bearing	6
5	41494	Outer Arm 5	1
6	41493	Inner Arm 4	1
7	53267	Screw HHCS M10-1.50 × 110 Flange ZP	2
8	50352	Screw HHCS M10-1.50 × 80 ZP	23
9	50049	Nut NNYL M10-1.50 ZP	23
10	41482	Cable Bridge 1	1
11	41479	Pin, Long Axle	12
12	41489	Outer Arm	3
--	44950	Left Single Link	3
--	44951	Right Single Link	3
13	41491	Pin	4
14	41116	Spacer Sleeve	4
15	44958	Clamp Collar 1	7
16	53269	Screw CSCS M05-0.80 × 16 ZP	7
17	41104	Pin, Cylinder Axle	2
18	53440	Screw HHCS M10-1.50 × 40 Flange ZP	1
19	44949	Inner Arm 2	1
20	44952	Chassis Slider	2
21	44963	Pin	2
22	41112	Hydraulic Hoses Manifolds	1
23	44961	Hose (To Tank)	1
24	43600	Hose (To Lower Lift Cylinder)	1
25	50386	Screw CSCS M06-1.00 × 25 ZP	2
26	44960	Hose (To Upper Lift Cylinder)	1
27	41498	Pin, Long Cylinder Axle	1
28	53441	Screw HHCS M10-1.50 × 45 Flange ZP	1
29	41431	Pin, Axle	3
30	53304	Screw HHCS M10-1.50 × 35 Serrated Flange ZP	7
31	41113	Pothole Pusher	2
32	44962	Outer Arm 1	1
33	43248	Circlips	20
34	41485	Pin	4
35	41487	Spacer Sleeve	4
36	44957	Cable Bridge 3	2
37	44534	Bushing Insert Clamp 1	7
38	41105	Bearing	40
39	41480	Washer	17
40	46385	Inner Arm 1	1
41	46386	Pin	1
42	46277	Hose Clamp	2

43	41415	Base Plate	2
44	50218	WSHR M08 Flat Fender Washer ZP	2
45	50048	Nut NNYL M08-1.25 ZP	2
46	50015	Screw HHCS M08-1.25 × 50 ZP	2
47	REF	Lower Lift Cylinder Assembly (Refer to page 67)	1
48	53678	Screw HHCS M10-1.50 × 90 ZP, Fully Threaded	1
49	41109	Safety Arm Bushing	4
50	41108	Safety Arm	4
51	53268	Screw HHCS M10-1.50 × 30 Serrated Flange ZP	5
52	61032	Inner Arm 3, Scissor	1
53	53038	WSHR M05 Standard Flat Washer ZP	2
54	53043	WSHR M05 Spring Washer ZP	2
55	50359	Screw SHCS M05-0.80 × 16 ZP	2
56	45739	Harness Plate Cover	1
57	REF	Upper Lift Cylinder Assembly (Refer to page 70)	1
58	49413	Bearing, Inner Arm Pin	2
59	49412	Pin, Upper Lift Cylinder Support	1
60	62767	Bearing	2
61	41502	Inner Arm 4	1
62	41495	Inner Arm 3	1
63	41499	Outer Arm 3	1
--	44950	Left Single Link	1
--	44959	Right Single Link 5	1
64	41114	Block	48
65	41117	Cable Bridge 2	2
66	41102	Pin	4

REF - Reference

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Scissor Assembly (4555+)

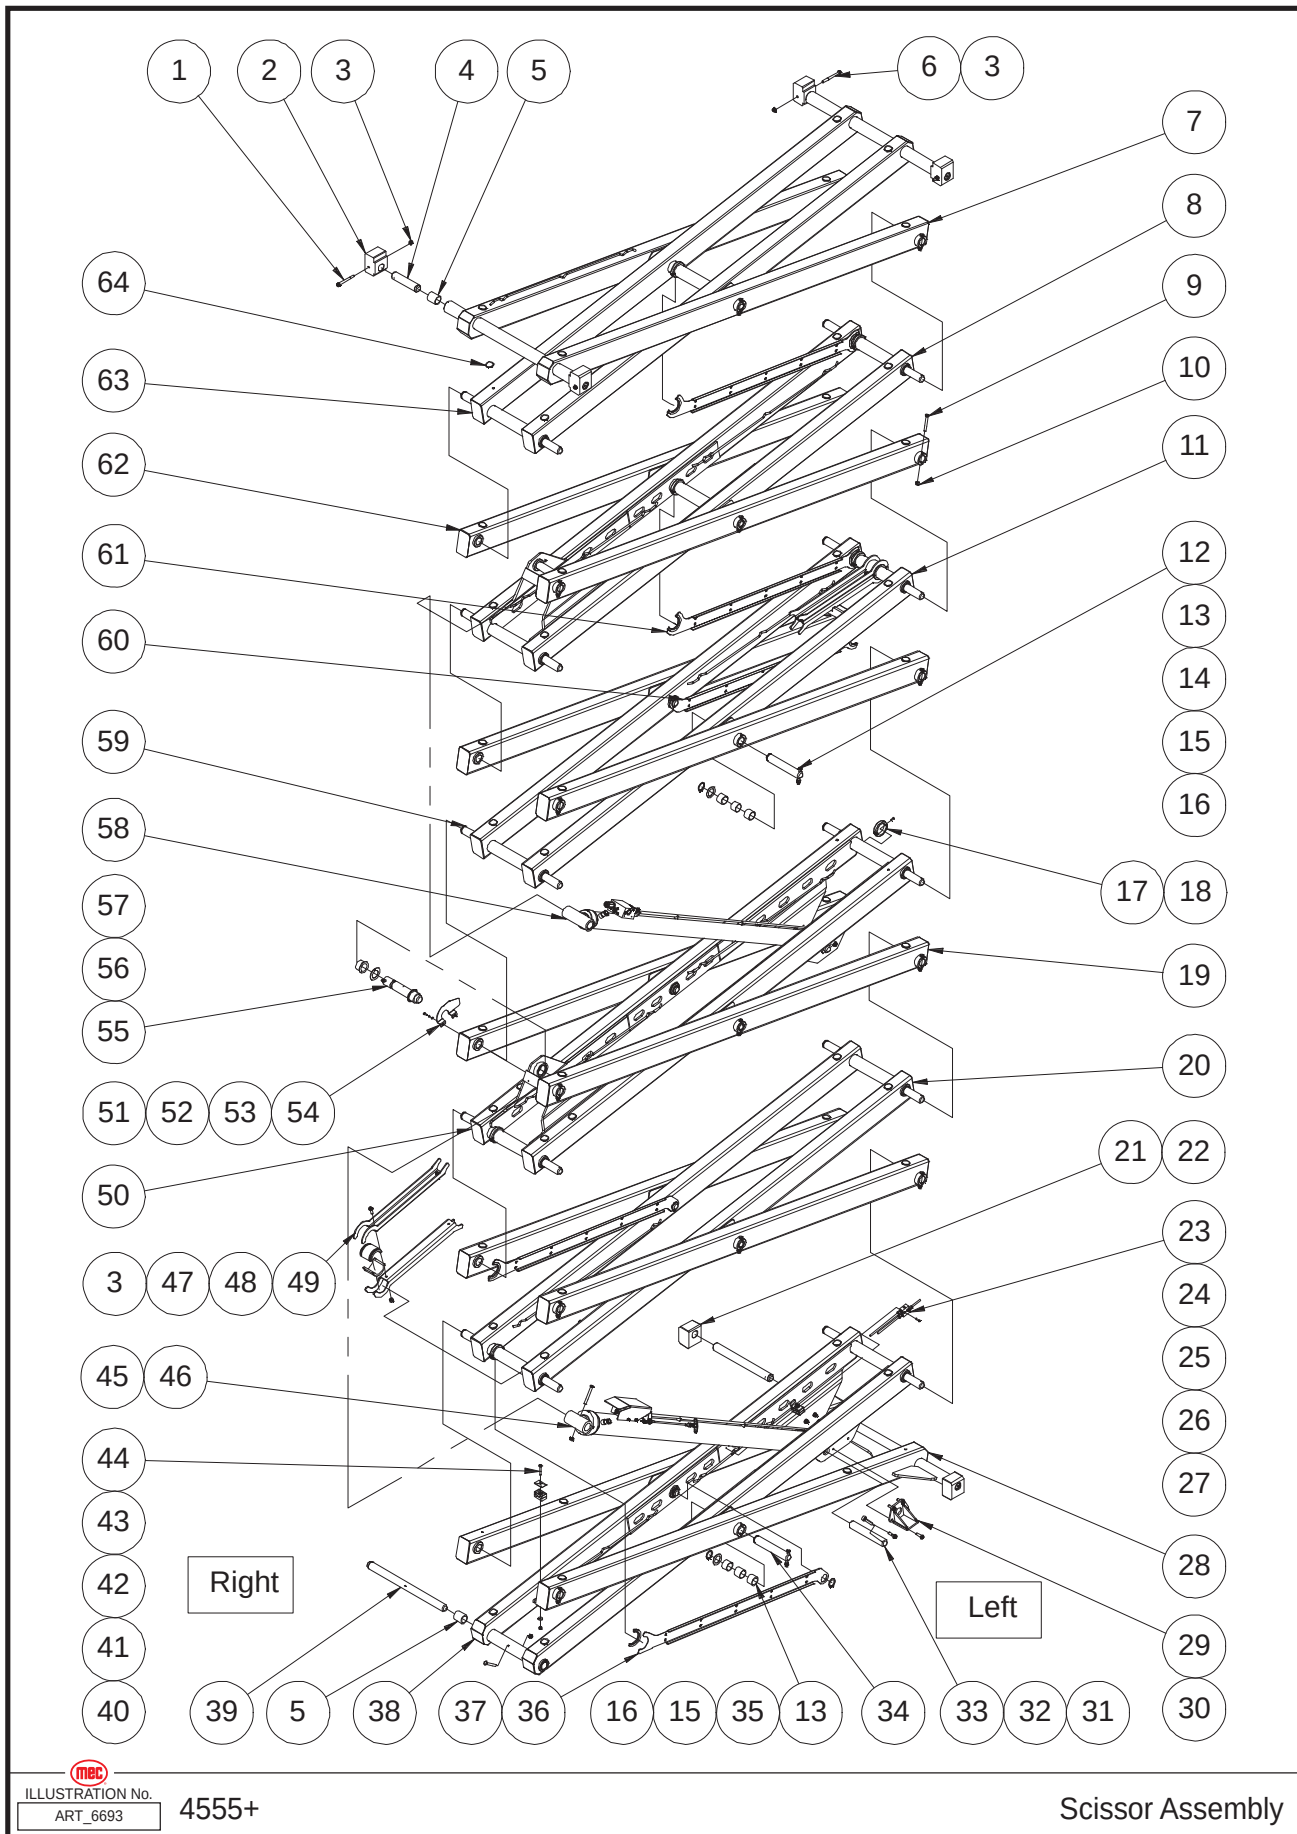

Item	Part No.	Description	Qty.
1	53271	Screw HHCS M10-1.50 × 100 Flange ZP	2
2	41519	Platform Slider	4
3	50311	Nut NNYL M10-1.50 Flange ZP	19
4	41102	Pin	4
5	41103	Bearing	6
6	53267	Screw HHCS M10-1.50 × 110 Flange ZP	2
7	41507	Outer Arm 6	1
8	45336	Inner Arm 5	1
9	50352	Screw HHCS M10-1.50 × 80 ZP	23
10	50049	Nut NNYL M10-1.50 ZP	23
11	41511	Inner Arm 4	1
12	41491	Pin	4
13	41105	Bearing	40
14	41116	Spacer Sleeve	4
15	41480	Washer	17
16	43248	Circlips	20
17	44958	Clamp Collar 1	7
18	53269	Screw CSCS M05-0.80 × 16 ZP	7
19	41510	Outer Arm 2-3	3
--	44965	Right Single Link	3
--	44964	Left Single Link	3
20	46387	Inner Arm 2	1
21	44952	Chassis Slider	2
22	44966	Pin	2
23	41112	Hydraulic Hoses Manifolds	1
24	44968	Hose (To Tank)	1
25	50386	Screw CSCS M06-1.00 × 25 ZP	2
26	44969	Hose (To Lower Lift Cylinder)	1
27	44967	Hose (To Upper Lift Cylinder)	1
28	41515	Outer Arm 1	1
29	41113	Pothole Pusher	2
30	53304	Screw HHCS M10-1.50 × 35 Serrated Flange ZP	8
31	53440	Screw HHCS M10-1.50 × 40 Flange ZP	2
32	41431	Pin, Axle	3
33	41104	Pin, Cylinder Axle	3
34	41485	Pin	4
35	41487	Spacer Sleeve	4
36	46388	Cable Bridge 3	2
37	44534	Bushing Insert Clamp 1	7
38	46389	Inner Arm 1	1
39	46386	Pin	1
40	50048	Nut NNYL M08-1.25 ZP	2
41	50218	WSHR M08 Flat Fender Washer ZP	2
42	41417	Hose Clamp	2

43	41415	Base Plate	2
44	50015	Screw HHCS M08-1.25 × 50 ZP	2
45	53678	Screw HHCS M10-1.50 × 90 ZP, Fully Threaded	1
46	REF	Lower Lift Cylinder Assembly (Refer to page 67)	1
47	53268	Screw HHCS M10-1.50 × 30 Serrated Flange ZP	5
48	41109	Safety Arm Bushing	4
49	41108	Safety Arm	4
50	61037	Inner Arm 3, Scissor	1
51	53038	WSHR M05 Standard Flat Washer ZP	2
52	53043	WSHR M05 Spring Washer ZP	2
53	50359	Screw SHCS M05-0.80 × 16 ZP	2
54	45739	Harness Plate Cover	1
55	62790	Pin	1
56	49413	Bearing, Inner Arm Pin	2
57	62767	Bearing	2
58	REF	Upper Lift Cylinder Assembly (Refer to page 70)	1
59	41479	Pin, Long Axle	12
60	41107	Cable Bridge 1	1
61	41118	Cable Bridge 2	2
62	41508	Outer Arm 5	1
63	41506	Inner Arm 6	1
64	41114	Block	48

REF - Reference

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Main Platform Assembly (3232+, 4035+)

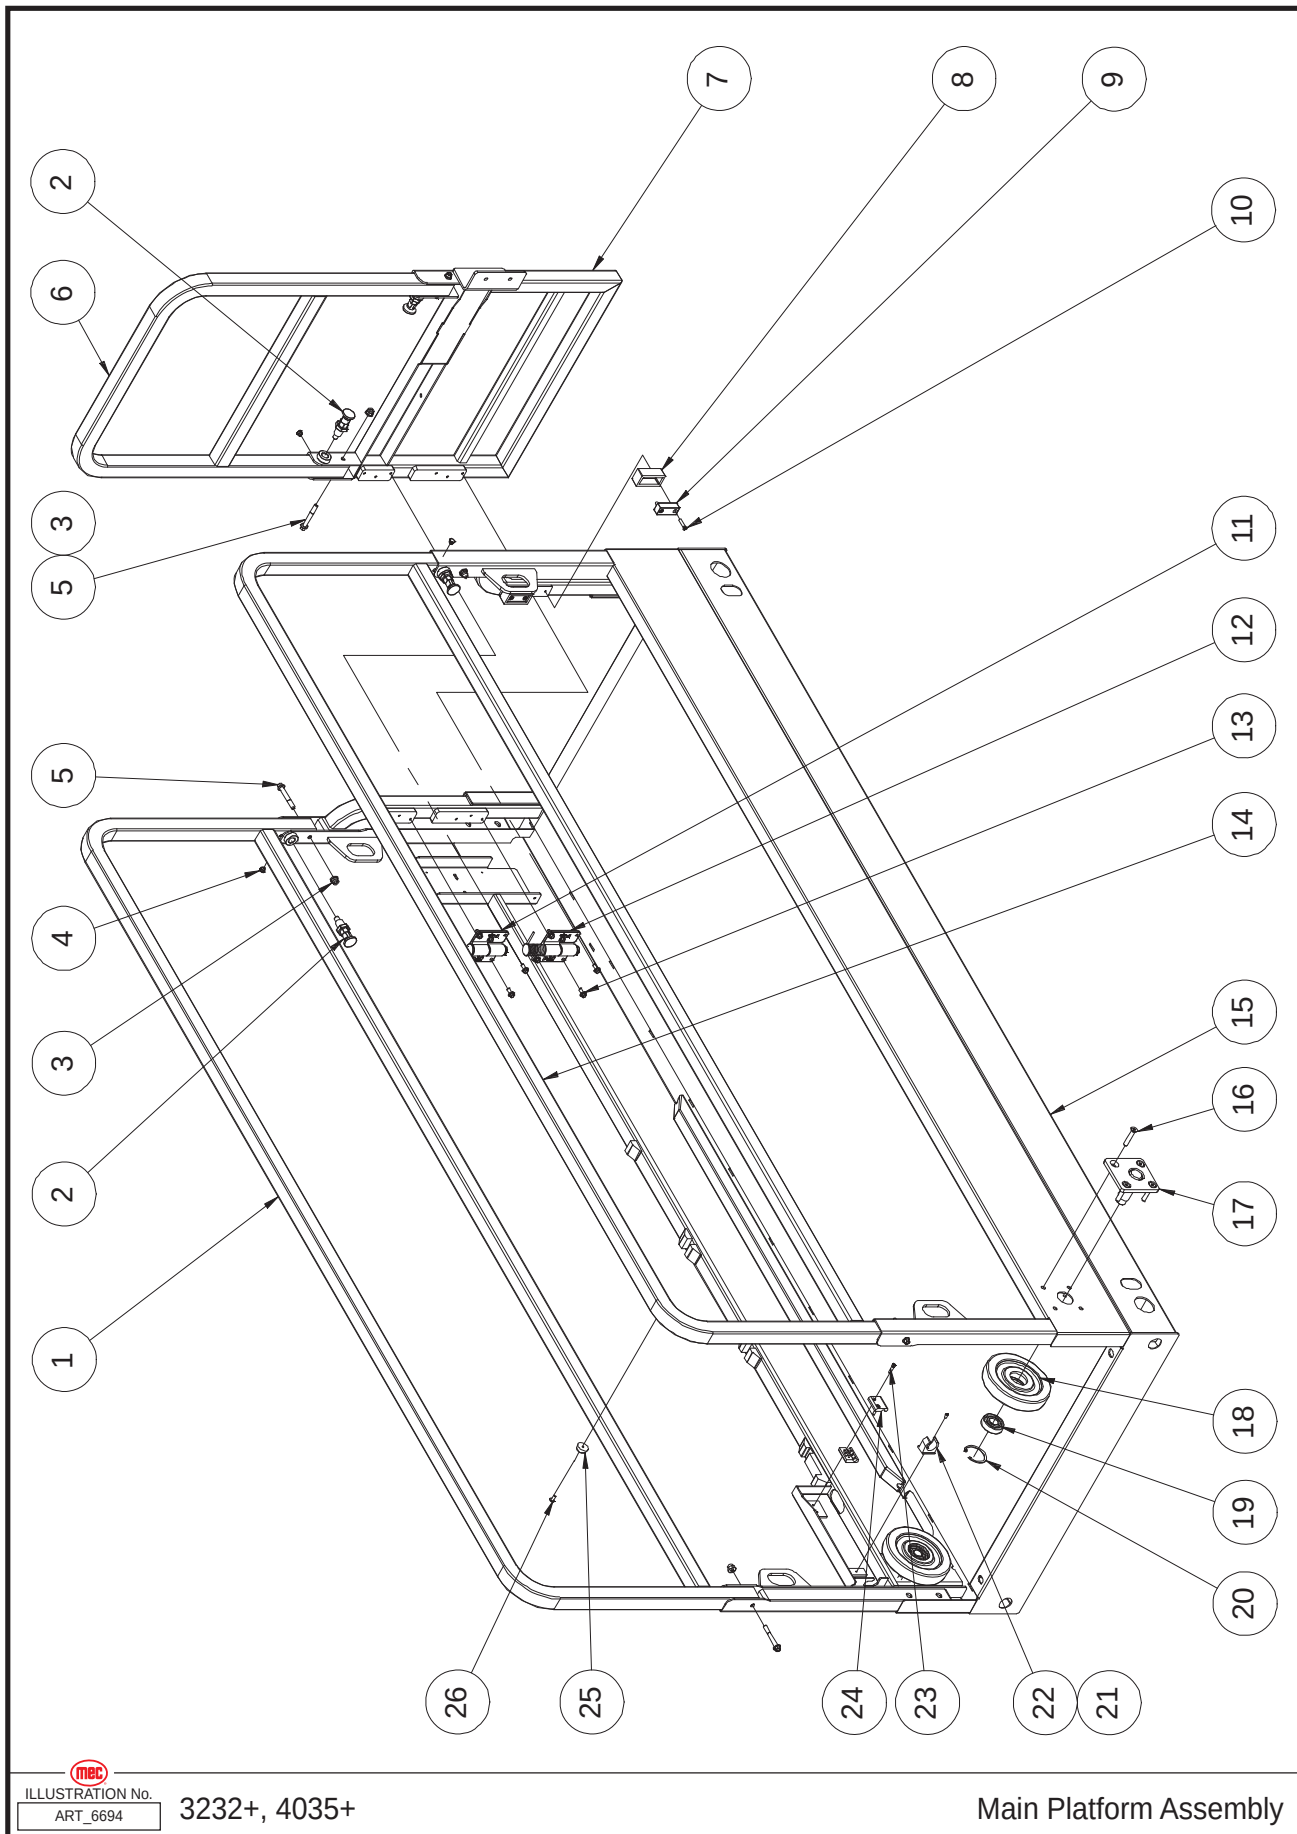



ILLUSTRATION No.
ART_6694

3232+, 4035+

Main Platform Assembly


Item	Part No.	Description	Qty.
1	45347	Right Main Rail	1
2	43337	Lock Pin	4
3	50313	Nut NNYL M08-1.25 Flange ZP	6
4	45339	Hole Plug	6
5	53442	Screw HHCS M08-1.25 × 60 Flange ZP	6
6	45348	Door Rail	1
7	62835	Entry Gate	1
8	62764	Cover, Pothole Pusher	2
9	62776	Magnet	2
10	50386	Screw CSCS M05-0.80 × 25 ZP, Phillips	4
11	41127	Hinge A	1
12	41128	Hinge B	1
13	53273	Screw HHCS M06-1.00 × 14 Serrated Flange ZP	12
14	45350	Left Main Rail	1
15	62834	Main Deck Weldment (3232+)	1
	62836	Main Deck Weldment (4035+)	1
16	53275	Screw CSCS M08-1.25 × 45 ZP	8
17	41270	Roller Installation Bracket	2
18	43617	Roller	2
19	41131	Bearing	2
20	43618	Circlips	2
21	53276	Screw PHMS M04-0.70 × 8 ZP	1
22	41134	Clip 24	1
23	53278	Screw SHCS M04-0.70 × 20 ZP	2
24	41059	Wire Clip, Single	2
25	41120	Bumper, Rubber Gasket	1
26	53224	Screw THMS M05-0.80 × 12 ZP	1

Platform Extension Assembly (3232+, 4035+)

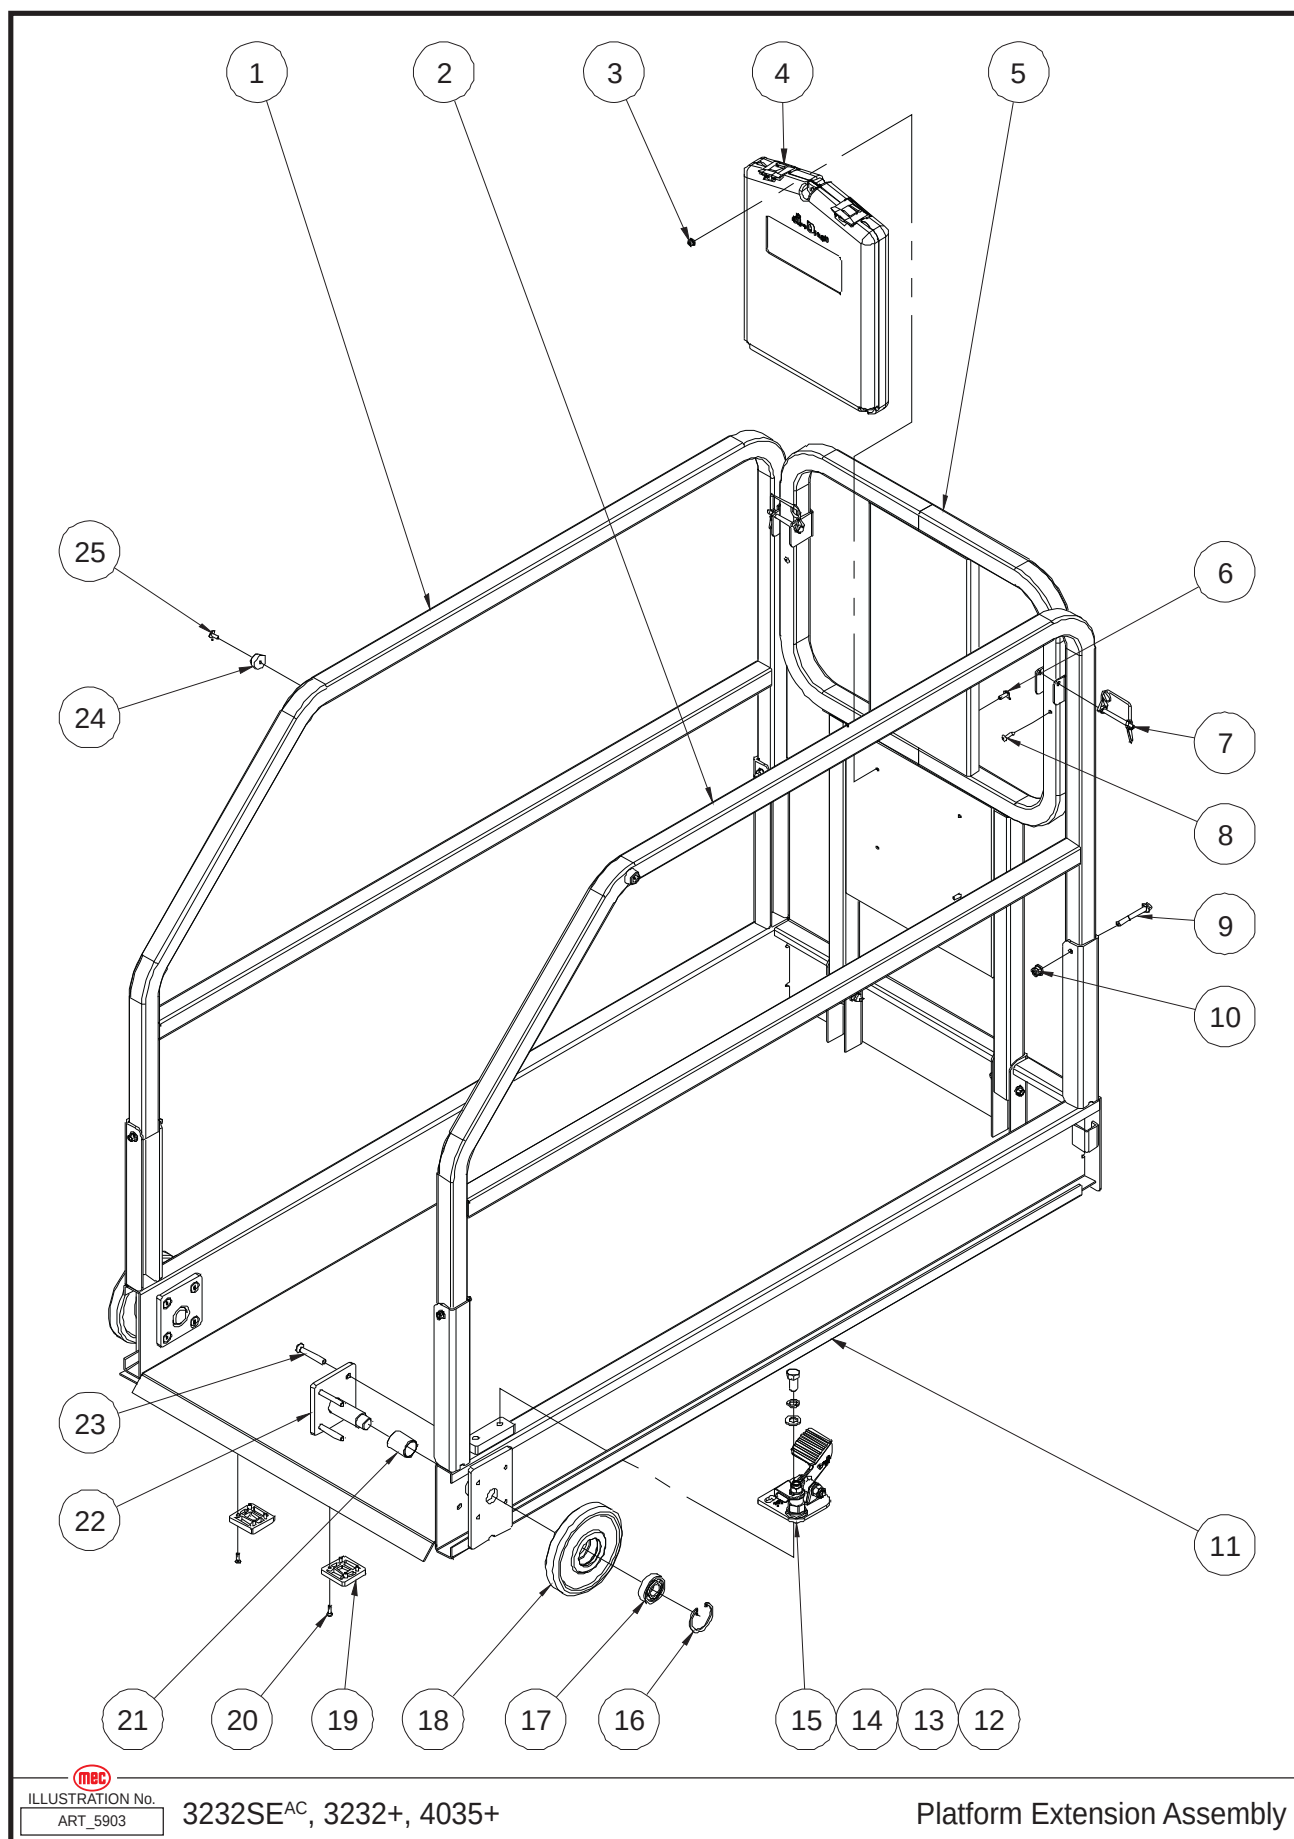

Item	Part No.	Description	Qty.
1	45352	Left Extension Rail (3232+)	1
	62831	Left Extension Rail (4035+)	1
2	45353	Right Extension Rail (3232+)	1
	62832	Right Extension Rail (4035+)	1
3	53281	Nut NNYL M05-0.80 Flange ZP	1
4	61038	Manual Box	1
5	45354	Front Rail (3232+)	1
	62830	Front Rail (4035+)	1
6	53223	Screw THMS M05-0.80 × 16 ZP	1
7	41357	Inserted Pin	2
8	43301	Rivet	2
9	53442	Screw HHCS M08-1.25 × 60 Flange ZP	6
10	50313	Nut NNYL M08-1.25 Flange ZP	6
11	45355	Extension Deck Weldment (3232+)	1
	62829	Extension Deck Weldment (4035+)	1
12	50038	Screw HHCS M12-1.75 × 25 ZP	1
13	53148	WSHR M12 Spring Washer ZP	1
14	50003	WSHR M12 Standard Flat Washer ZP	1
15	44599	Platform Locking Device Assembly (Refer to page 62)	1
16	43618	Circlips	2
17	41131	Bearing	2
18	41141	Roller 2	2
19	41284	Slide Pad	2
20	53269	Screw CPCS M05-0.80 × 16 ZP	8
21	46393	Bearing	2
22	41270	Roller Installation Bracket	2
23	53280	Screw CPCS M08-1.25 × 55 ZP	8
24	41120	Bumper, Rubber Gasket	2
25	53224	Screw THMS M05-0.80 × 12 ZP	2

Main Platform Assembly (3346+, 4046+, 4555+)

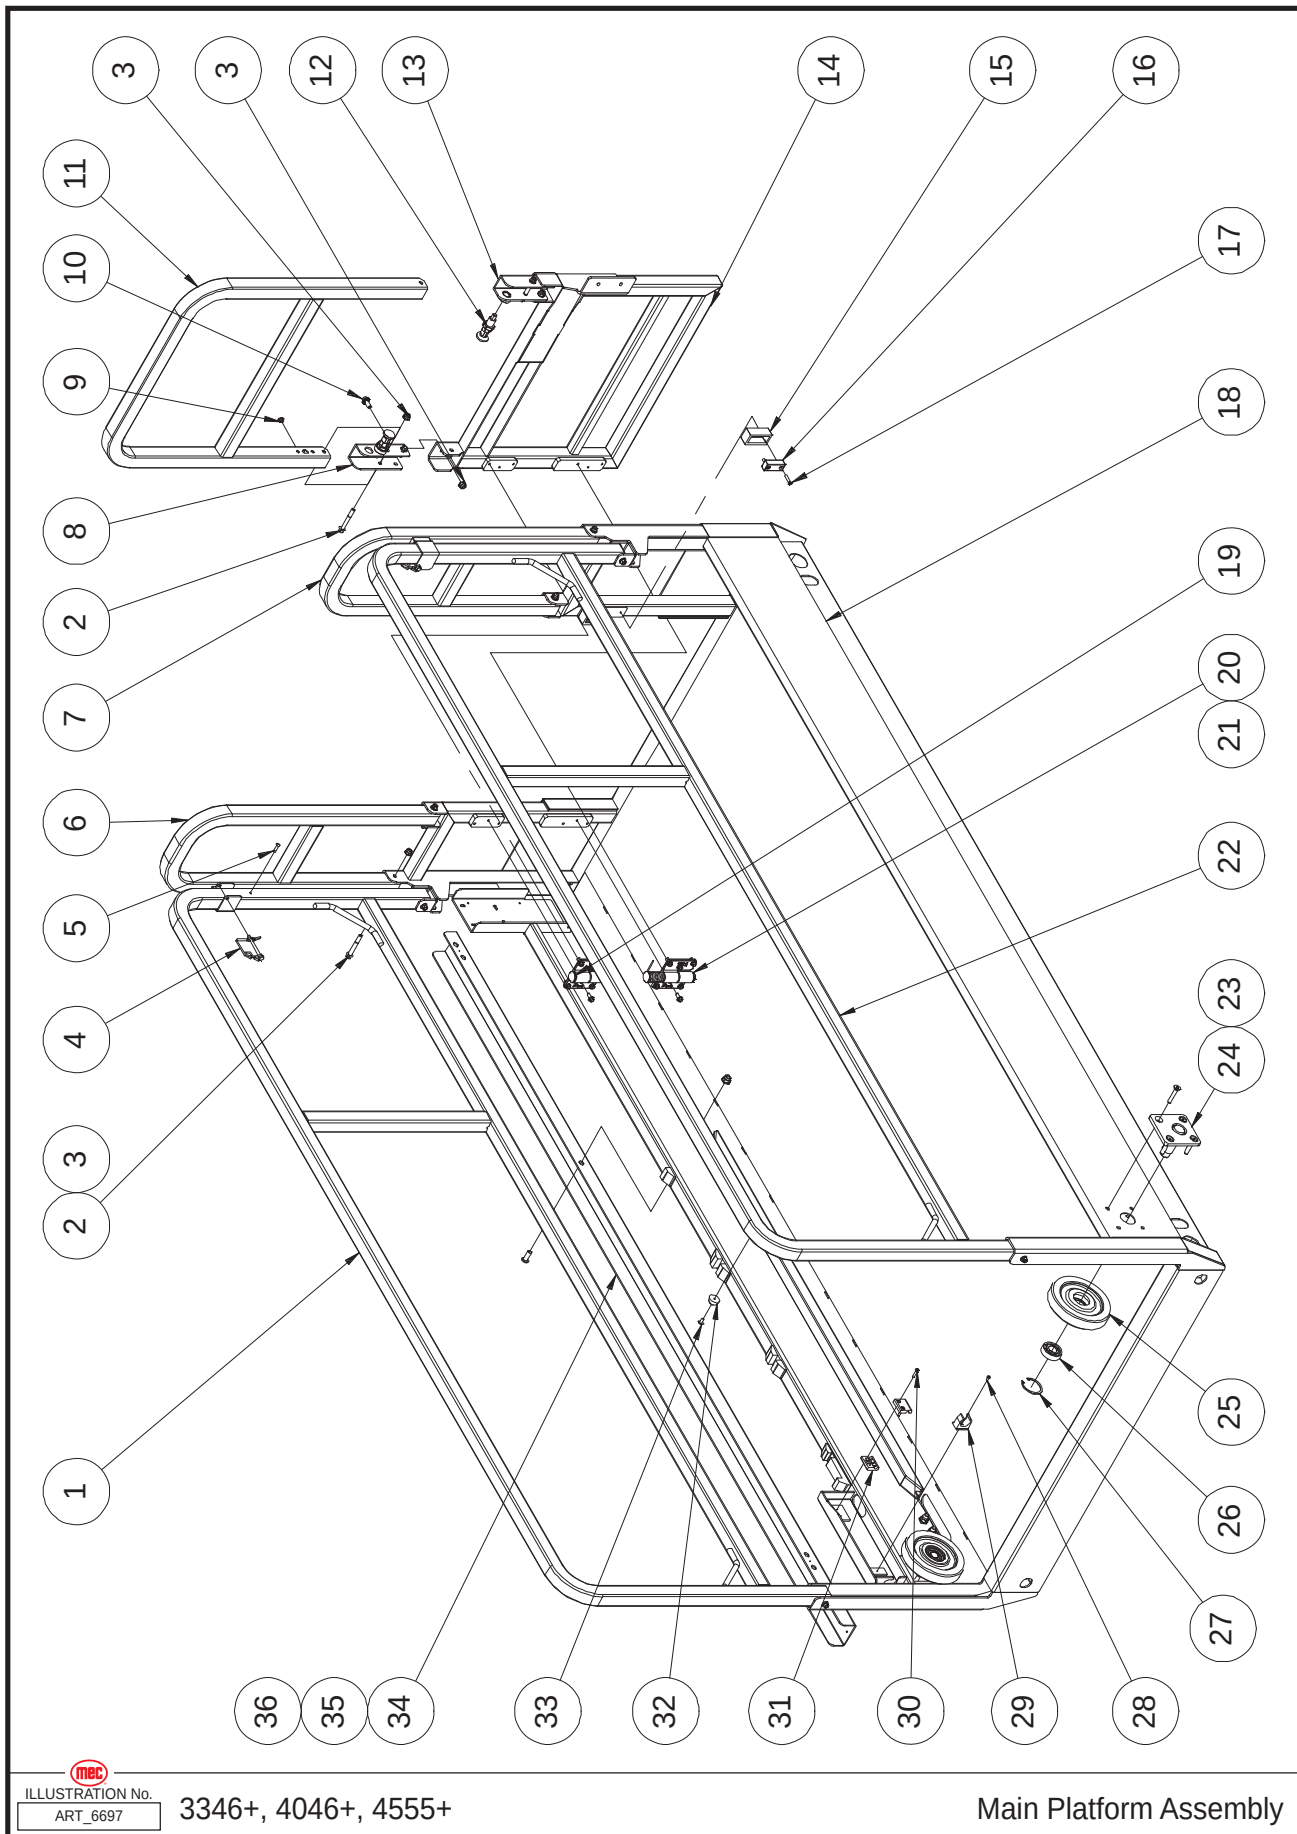

Item	Part No.	Description	Qty.
1	46395	Right Main Rail (3346+, 4046+)	1
	41119	Right Main Rail (4555+)	1
2	53442	Screw HHCS M08-1.25 × 60 Flange ZP	8
3	50313	Nut NNYL M08-1.25 Flange ZP	12
4	41357	Inserted Pin	4
5	43301	Rivet	4
6	45376	Inserted Rail Pin	1
7	45377	Rail Rivet	1
8	49589	Door Guard Support 2, Right	1
9	45339	Hole Plug	2
10	53257	Screw HHCS M08-1.25 × 20 Serrated Flange ZP	4
11	45379	Door Rail	1
12	43337	Lock Pin	2
13	45378	Door Guard Support 1, Left	1
14	62833	Entry Gate	1
15	62764	Cover, Pothole Pusher	2
16	62776	Magnet	2
17	50386	Screw CPCS M05-0.80 × 25 ZP, Phillips	4
18	62839	Main Deck Weldment (3346+, 4046+)	1
	62839	Main Deck Weldment (4555+)	1
19	41127	Hinge A	1
20	41128	Hinge B	1
21	53273	Screw HHCS M06-1.00 × 14 Serrated Flange ZP	12
22	46394	Left Main Rail (3346+, 4046+)	1
	41122	Left Main Rail (4555+)	1
23	53275	Screw CPCS M08-1.25 × 45 ZP	8
24	41270	Roller Installation Bracket	4
25	43617	Roller	2
26	41131	Bearing	4
27	43618	Circlips	4
28	53276	Screw PHMS M04-0.70 × 8 ZP	1
29	41134	Clip 24	1
30	53278	Screw SHCS M04-0.70 × 20 ZP	2
31	41059	Wire Clip, Single	2
32	41120	Bumper, Rubber Gasket	3
33	53224	Screw THMS M05-0.80 × 12 ZP	3
34	48604	Sheet Material Tray (3346+, 4046+)	1
35	50297	Screw BHCS M10-1.50 × 25 ZP	5
36	50311	Nut NNYL M10-1.50 Flange ZP	5

Platform Extension Assembly (3346+, 4046+, 4555+)

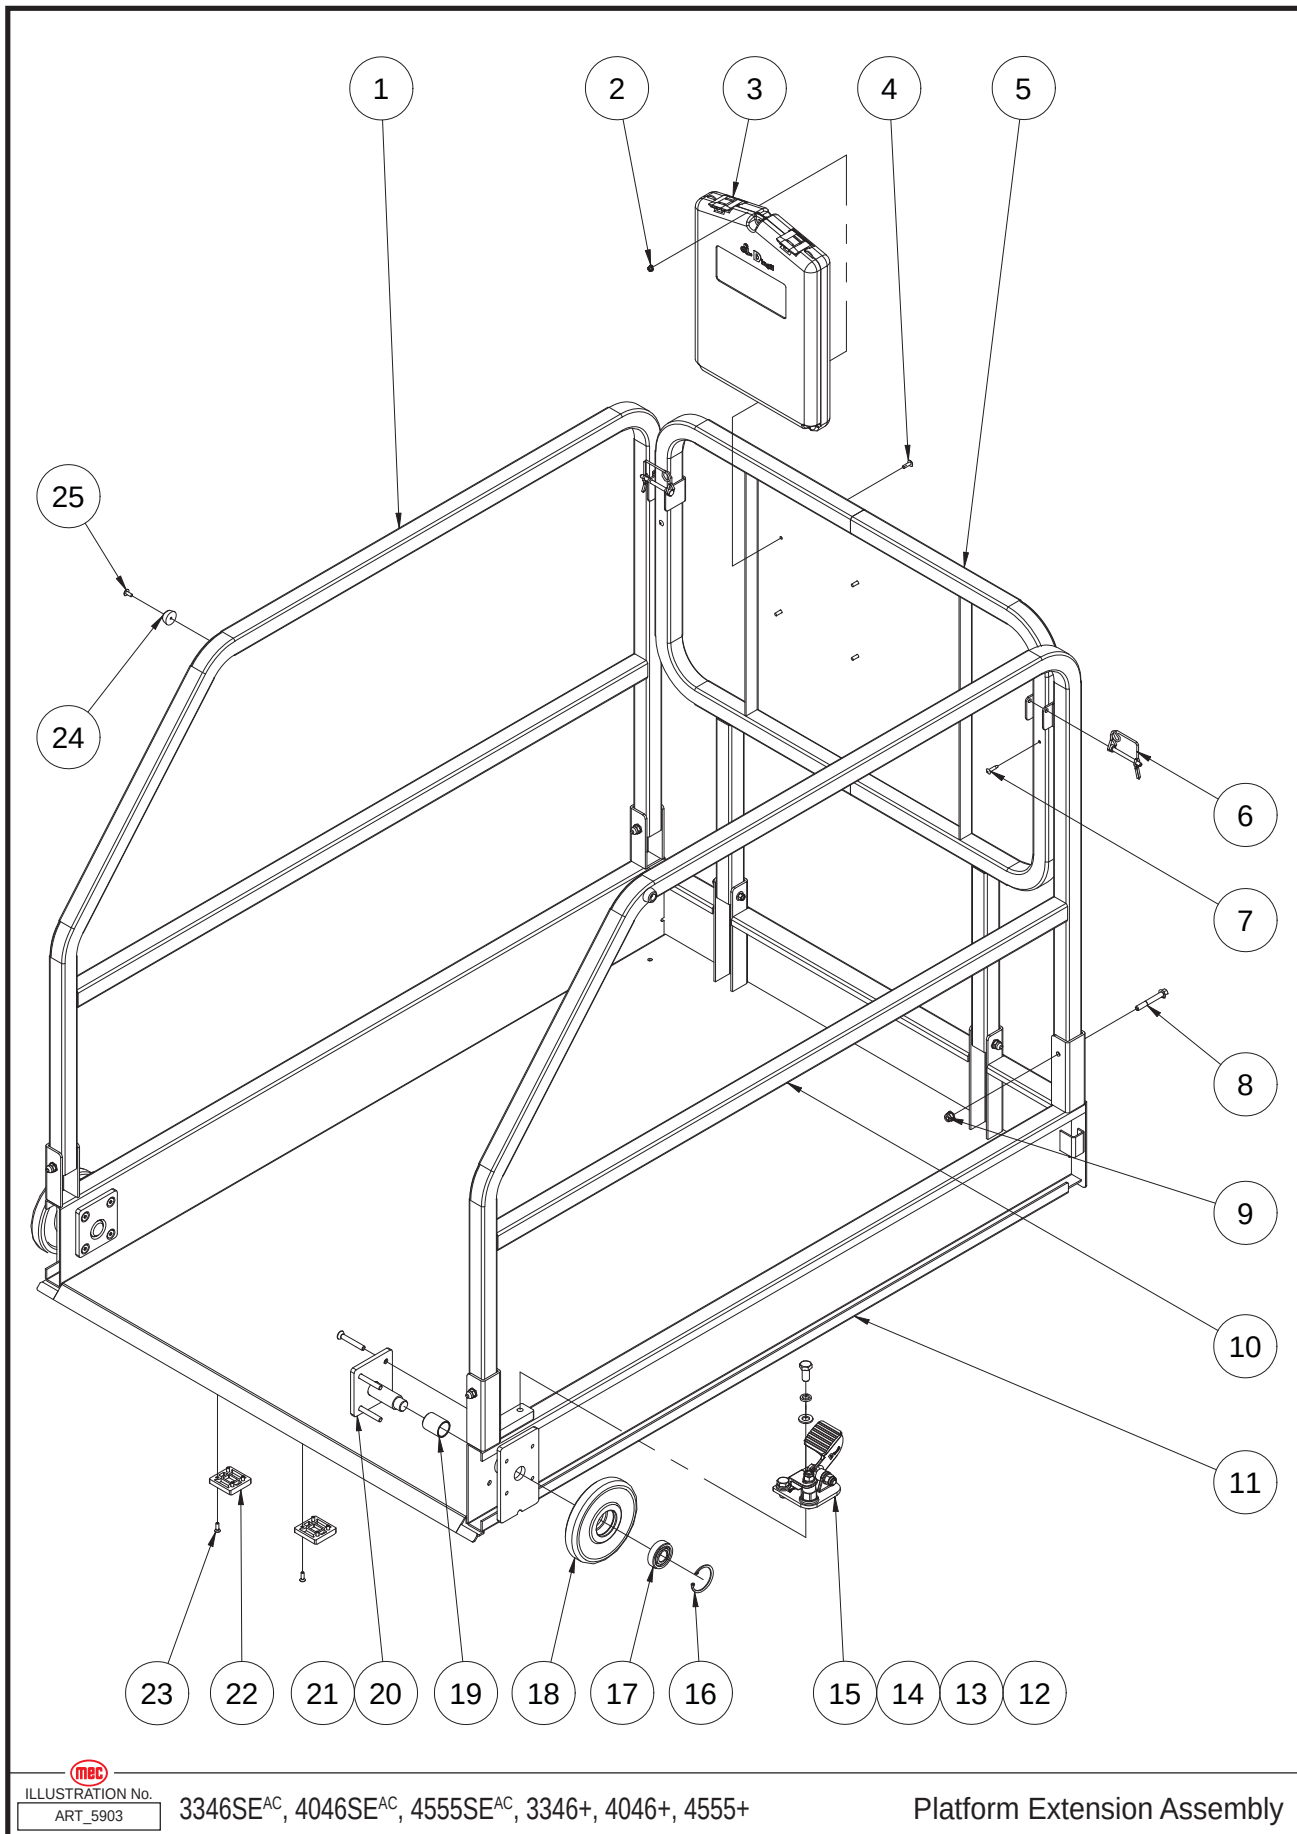


ILLUSTRATION No.
ART_5903

3346SE^{AC}, 4046SE^{AC}, 4555SE^{AC}, 3346+, 4046+, 4555+

Platform Extension Assembly

Item	Part No.	Description	Qty.
1	41135	Left Extension Rail	1
2	53281	Nut NNYL M05-0.80 Flange ZP	4
3	61038	Manual Box	1
4	53223	Screw THMS M05-0.80 × 16 ZP	4
5	41136	Front Rail	1
6	41357	Inserted Pin	2
7	43301	Rivet	2
8	53442	Screw HHCS M08-1.25 × 60 Flange ZP	6
9	50313	Nut NNYL M08-1.25 Flange ZP	6
10	41139	Right Extension Rail	1
11	46400	Extension Deck Weldment	1
12	50038	Screw HHCS M12-1.75 × 25 ZP	2
13	53148	WSHR M12 Spring Washer ZP	2
14	50003	WSHR M12 Standard Flat Washer ZP	2
15	44599	Platform Locking Device Assembly (Refer to page 62)	1
16	43618	Circlips	2
17	41131	Bearing	2
18	41141	Roller 2	2
19	46393	Bearing	2
20	41270	Roller Installation Bracket	2
21	53280	Screw CSCS M08-1.25 × 55 ZP	8
22	41284	Slide Pad	2
23	53269	Screw CSCS M05-0.80 × 16 ZP	8
24	41120	Bumper, Rubber Gasket	2
25	53224	Screw THMS M05-0.80 × 12 ZP	2

Platform Locking Device Assembly

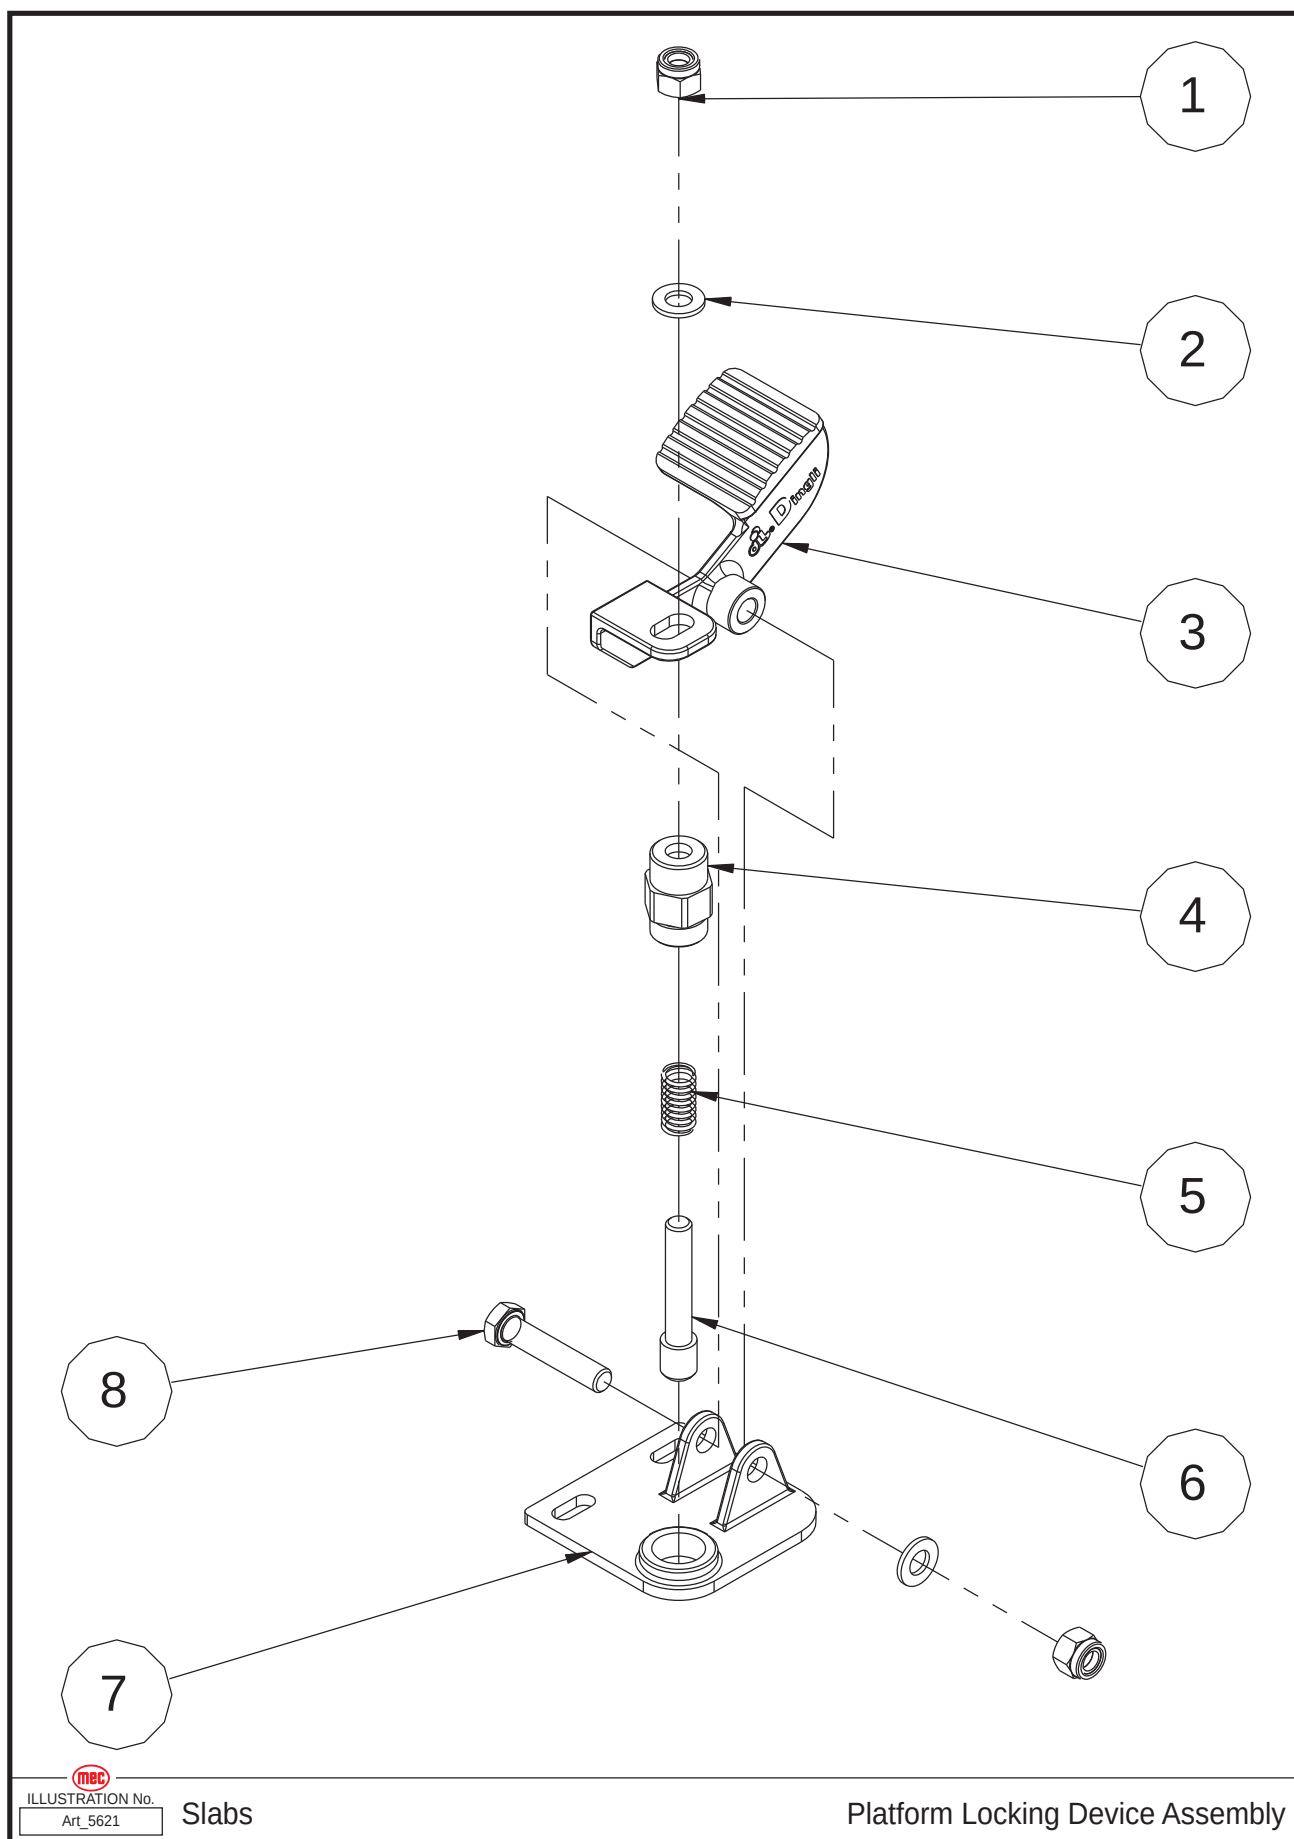



ILLUSTRATION No.
Art_5621

Slabs

Platform Locking Device Assembly

Item	Part No.	Description	Qty.
1	50049	Nut NNYL M10-1.50 ZP	2
2	50002	WSHR M10 Standard Flat Washer ZP	2
3	41143	Foot Pedal	1
4	41144	Lock Pin Housing	1
5	41145	Spring	1
6	41146	Lock Pin	1
7	44767	Bracket	1
8	50020	Screw HHCS M10-1.50 × 50 ZP	1

Platform Control Assembly

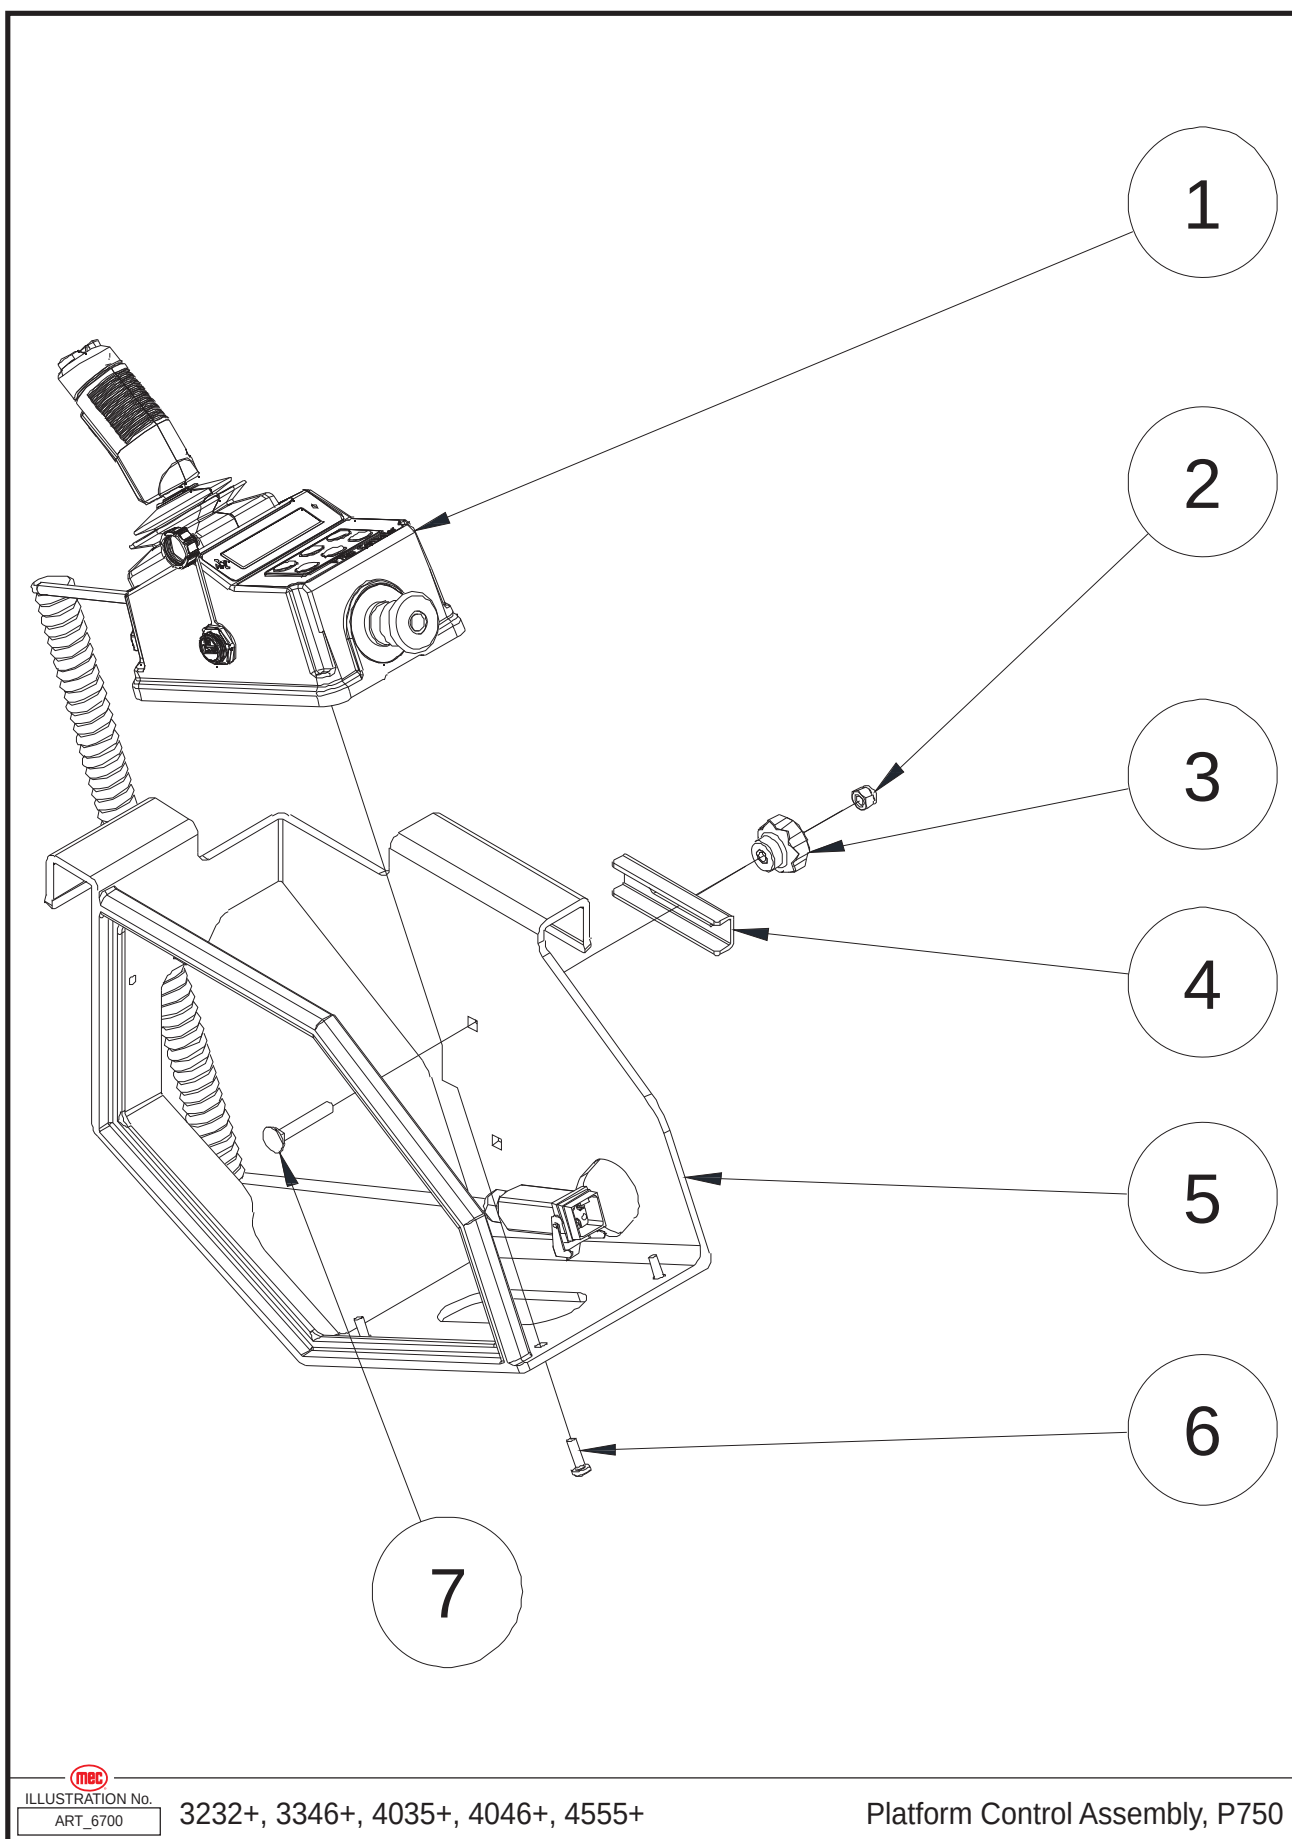

Item	Part No.	Description	Qty.
1	60992	Platform Control Box Assembly, P750	1
2	50048	Nut NNYL M08-1.25 ZP	1
3	42501	Handle, Star	1
4	42500	Locating Fixed Plate	1
5	49024	Platform Control Box Mount Bracket, Tilted	1
6	53264	Screw PHMS M06-1.00 × 20 ZP	4
7	53610	Screw CARB M08-1.25 × 50 ZP	1

Platform Control Box Assembly

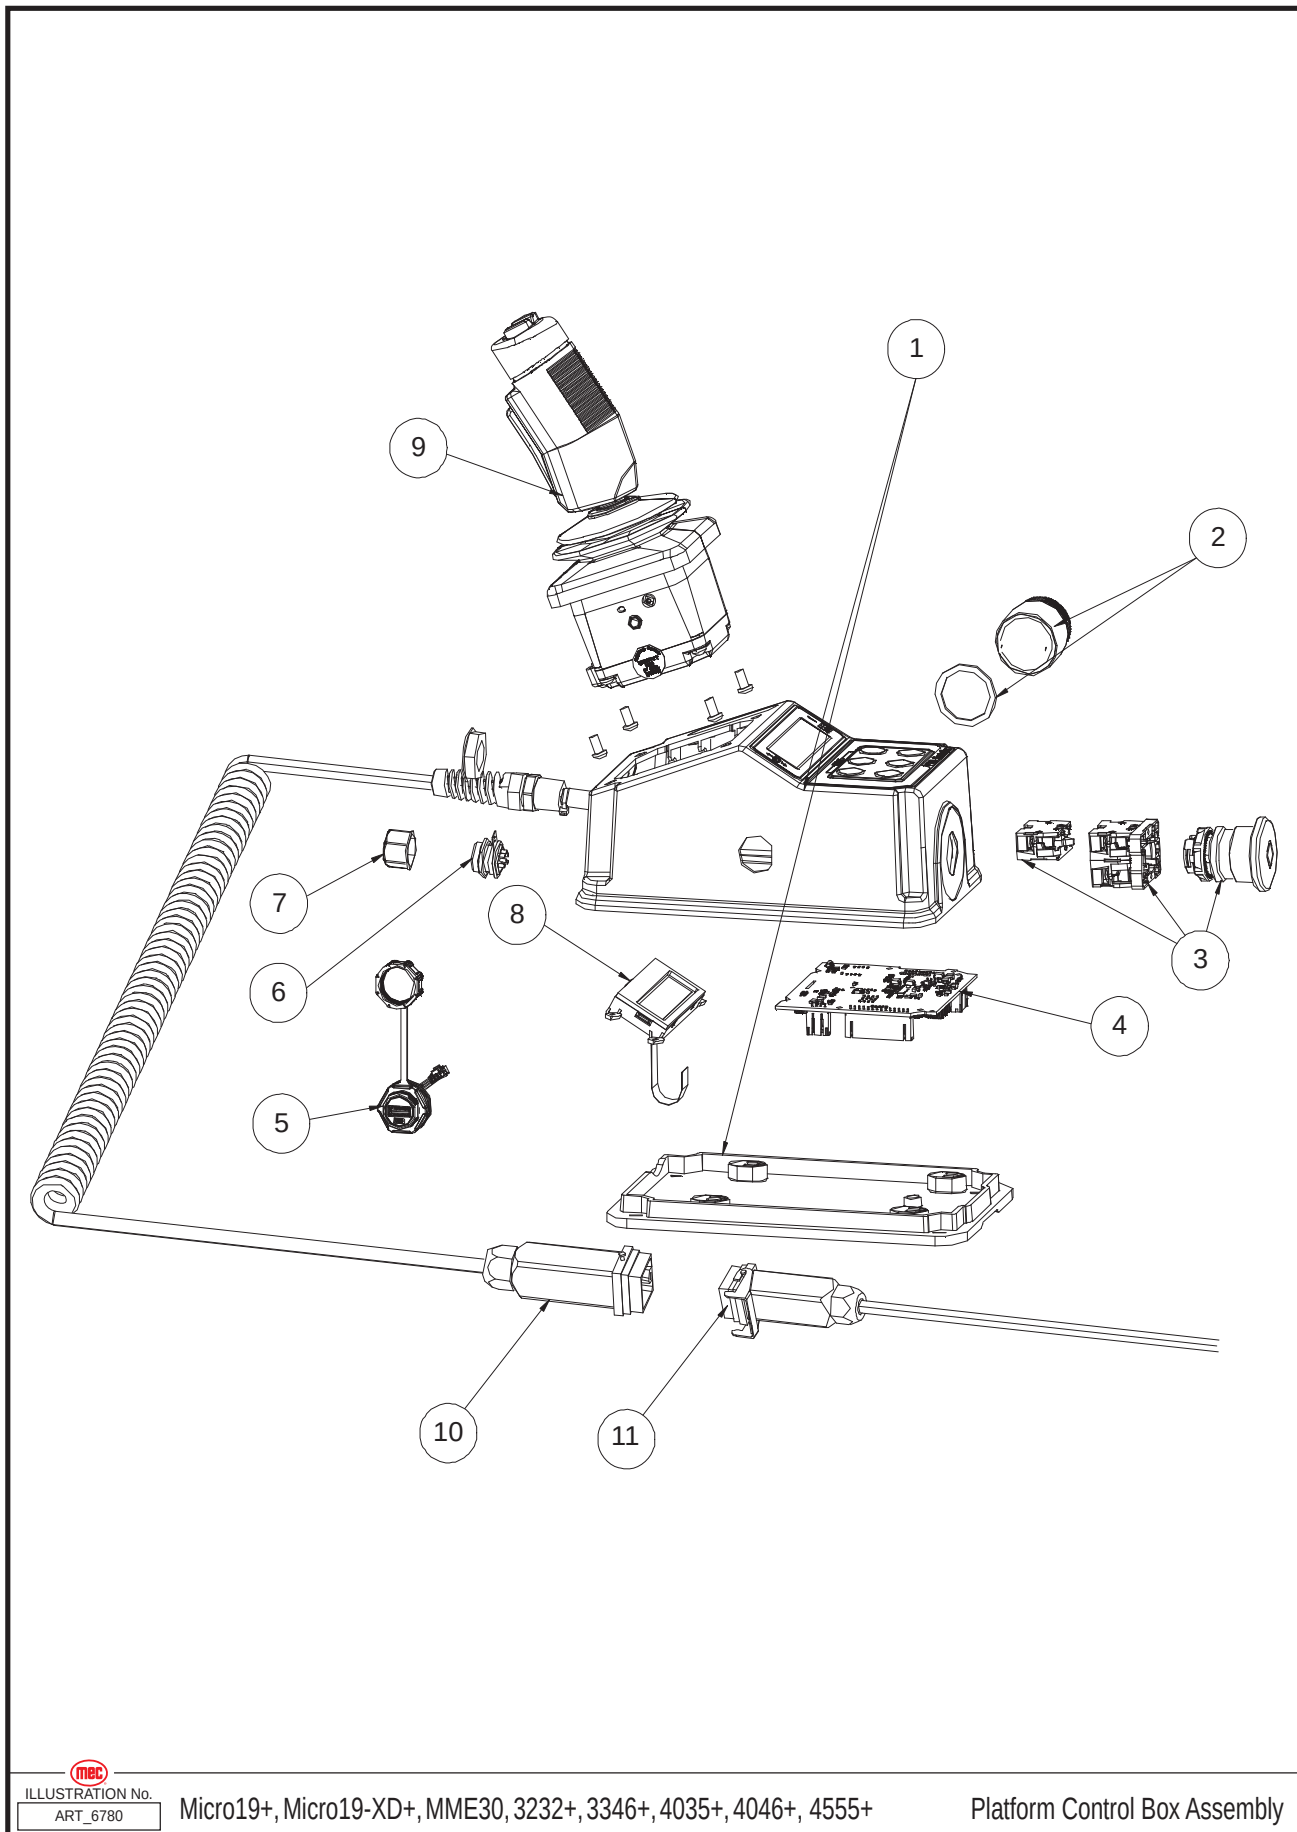


ILLUSTRATION No.
ART_6780

Micro19+, Micro19-XD+, MME30, 3232+, 3346+, 4035+, 4046+, 4555+

Platform Control Box Assembly



Item	Part No.	Description	Qty.
1	62752	Shell Components	1
--	61039	LED Display Cover, P750 Upper Control	1
--	49772	Decal - Upper Controls, LED Display	1
--	49773	Decal - Upper Controls, Buttons Overlay	1
2	41568	Alarm	1
3	62746	Emergency Stop Switch	1
4	62730	PCU Main Board	1
5	62720	USB Cable	1
6	62749	Connector	1
7	44771	Connector Cap	1
8	62803	Display	1
9	41149	Joystick	1
--	43621	Function Enable Switch	1
--	41150	Joystick Cover	1
--	43622	Joystick Steer Switch	1
--	43623	Switch Boot	1
10	62719	Coil Cord	1
--	44258	Female Plug Outer Hood Shell	1
--	44259	Female Plug Plastic Insert Body	1
--	44255	Terminal, Female Contacts	7
--	43627	Cable Gland	1
11	REF	Platform Control Box Harness (Refer to page 74, page 76, 502.1, 502.2, 502.3)	1
--	44257	Male Plug Housing Outer Shell	1
--	44256	Male Plug Plastic Insert Body	1
--	44254	Terminal, Male Contacts	7
--	43627	Cable Gland	1

REF - Reference

Lift Cylinder Assembly

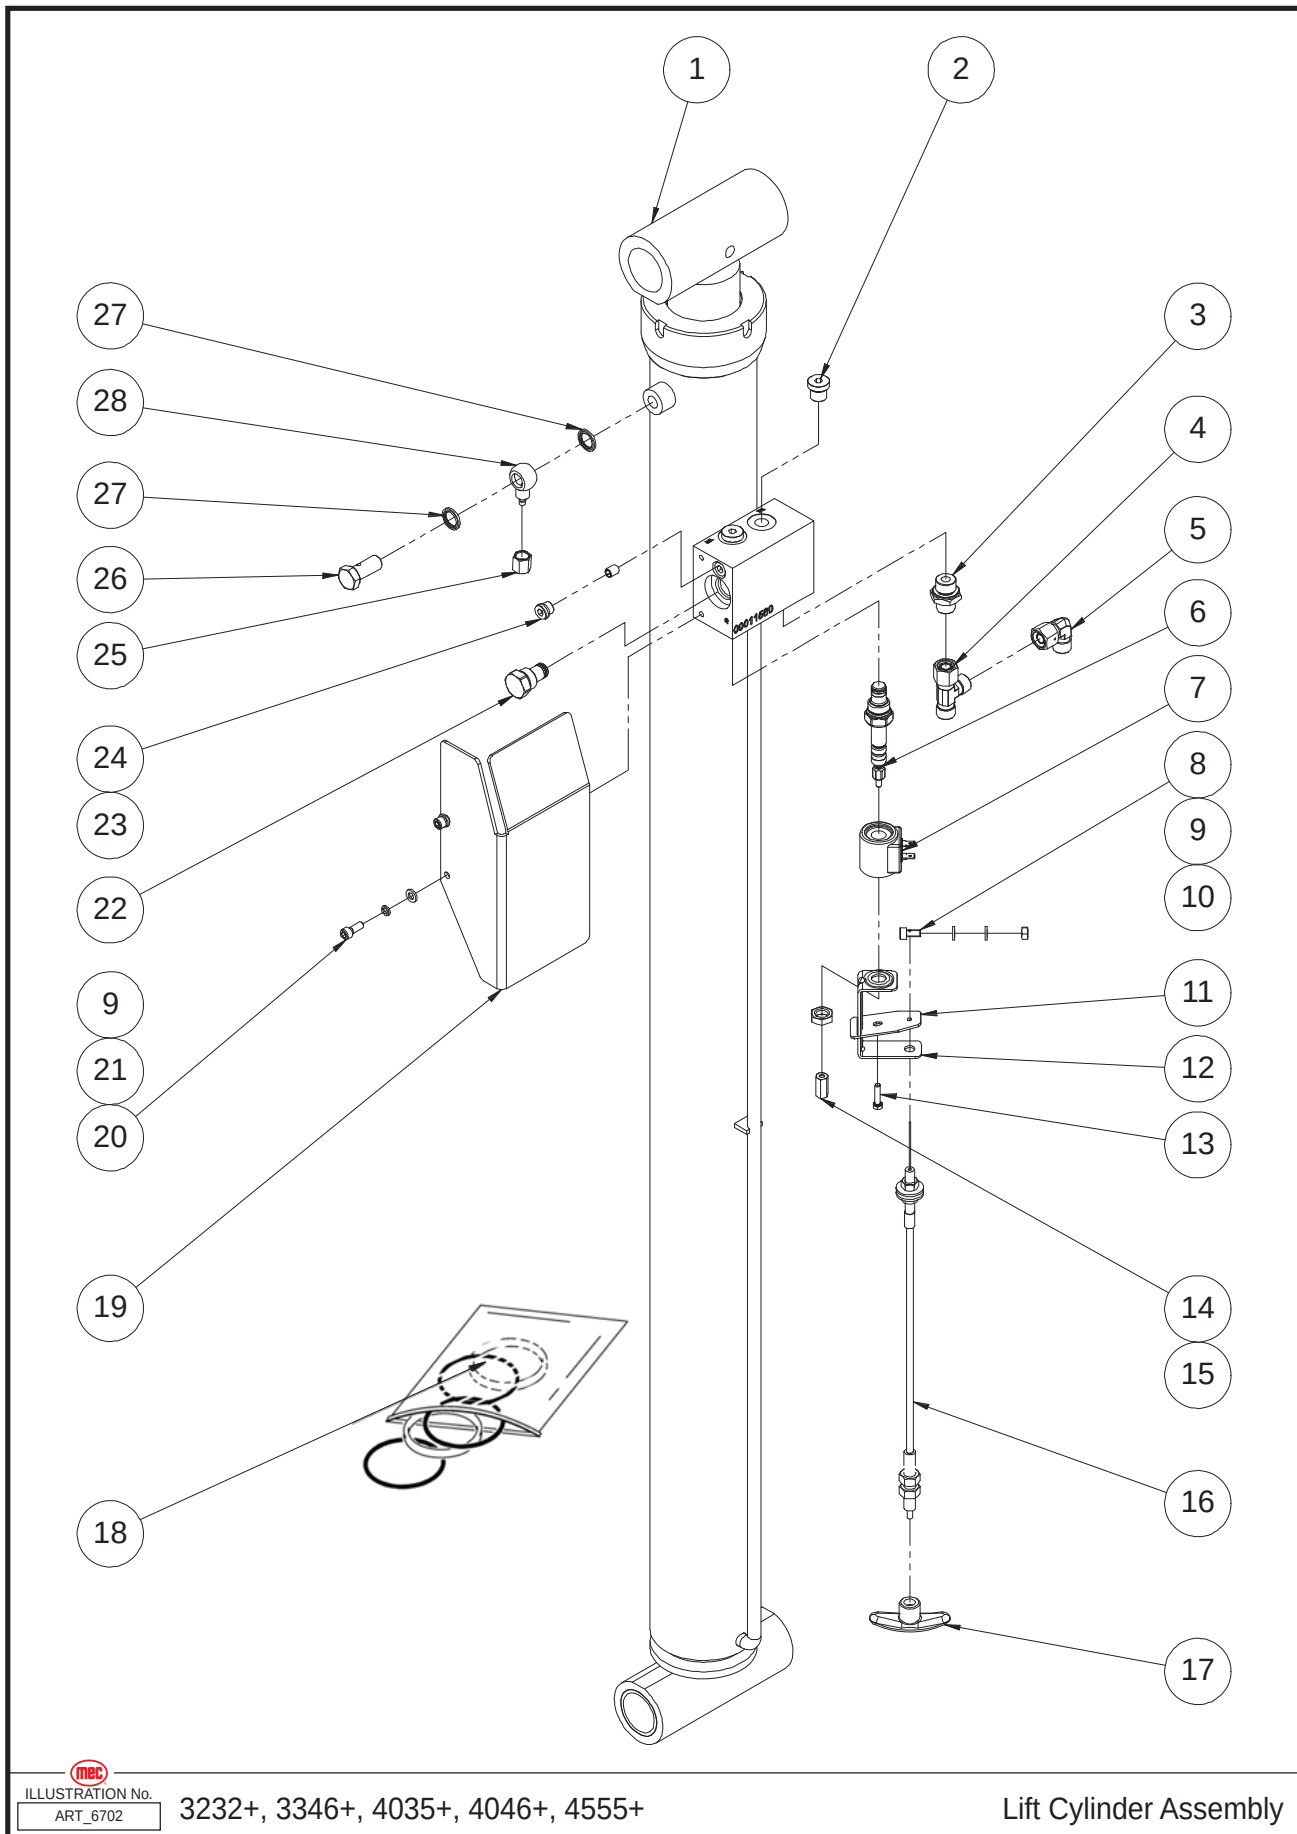


ILLUSTRATION No.
ART_6702

3232+, 3346+, 4035+, 4046+, 4555+

Lift Cylinder Assembly

Item	Part No.	Description	Qty.
1	62793	Lift Cylinder (3232+, 3346+, 4046+)	1
	62796	Lift Cylinder (4035+)	1
	62792	Lift Cylinder (4555+)	1
2	42480	Plug	2
3	43638	Straight Fitting	1
4	43640	Tee Fitting	1
5	43639	Elbow	1
6	44003	Solenoid Valve Spool	1
7	46764	Coil	1
8	42466	Set Screw	1
9	50000	WSHR M06 Standard Flat Washer ZP	4
10	53361	Nut NHEX M06-1.00 ZP	1
11	44833	Plate	1
12	44834	Support	1
13	53179	Screw HHCS M05-0.80 × 20 ZP	1
14	44004	Cable Connector	1
15	53362	Nut NHEX 1/2-20 UNF ZP	1
16	62775	Emergency Down Cable Assembly (3232+, 4035+)	1
	45387	Emergency Down Cable Assembly (3346+, 4046+)	1
	45388	Emergency Down Cable Assembly (4555+)	1
17	43367	Lowering Handle	1
18	41168	Seal Kit (3232+, 3346+, 4035+, 4046+)	1
	44989	Seal Kit (4555+)	1
19	45389	Cover	1
20	53138	Screw SHCS M06-1.00 × 16 ZP	2
21	53046	WSHR M06 Spring Washer ZP	2
22	49167	Check Valve	1
23	61040	Orifice, Lifting Cylinder (3232+, 3346+, 4046+, 4035+)	1
	43370	Orifice (4555+)	1
24	42821	Plug	2
25	41413	Nut	1
26	41166	Fitting, Pipeline Bolt	1
27	43361	Washer	2
28	41167	Fitting	1

Upper Lift Cylinder Assembly (3232+, 3346+, 4046+, 4035+, 4555+)

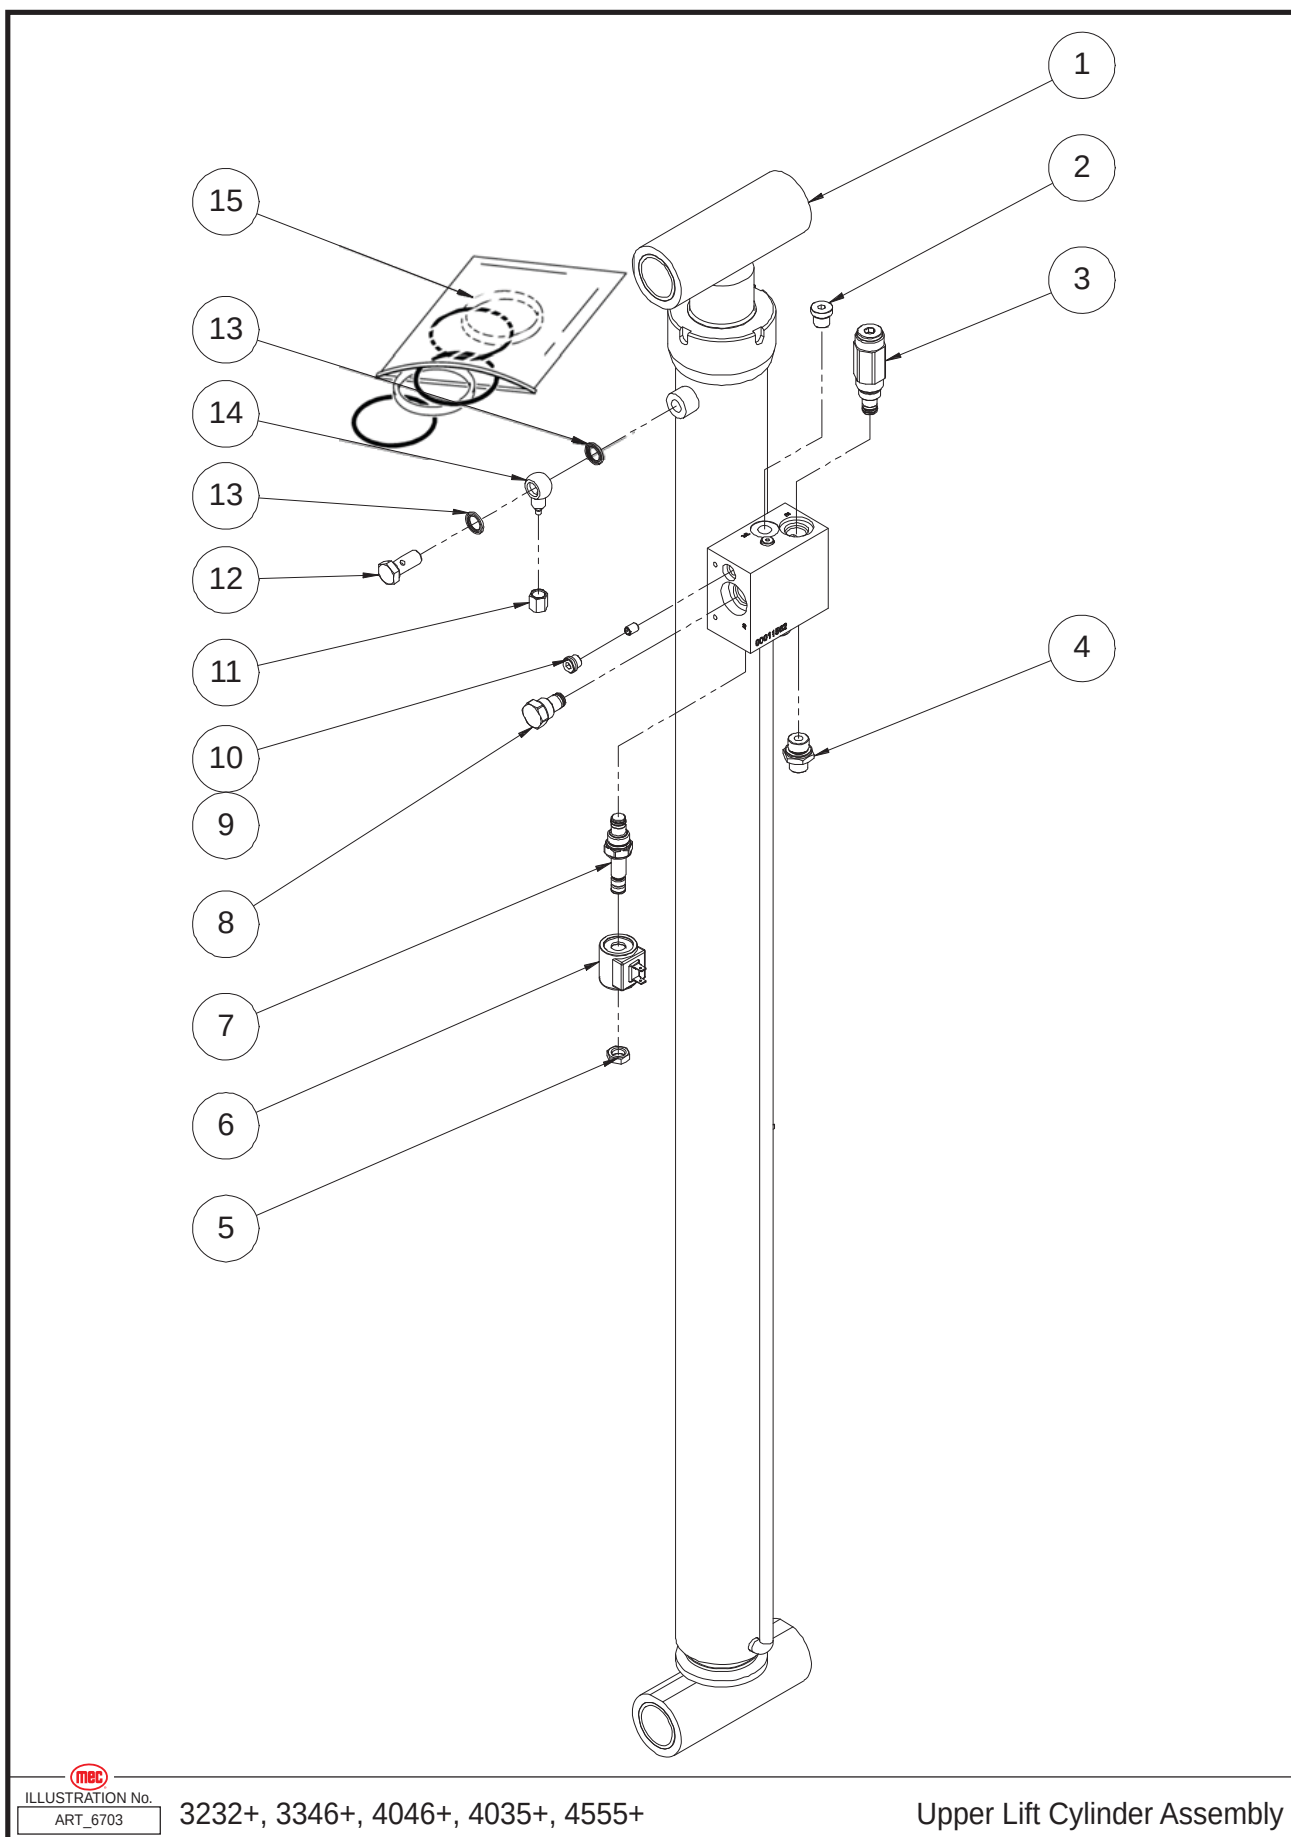


ILLUSTRATION No.
ART_6703


3232+, 3346+, 4046+, 4035+, 4555+

Upper Lift Cylinder Assembly



Item	Part No.	Description	Qty.
1	62794	Upper Lift Cylinder (3232+, 3346+, 4046+)	1
	62825	Upper Lift Cylinder (4035+)	1
	62795	Upper Lift Cylinder (4555+)	1
2	42480	Plug	1
3	41169	Pressure Relief Valve	1
4	43638	Straight Fitting	1
5	53362	Nut NHEX 1/2-20 UNF ZP	1
6	46764	Coil	1
7	45390	Solenoid Valve Spool	1
8	49167	Check Valve	1
9	43370	Orifice (3232+, 3346+, 4046+, 4035+)	1
	61041	Orifice, Upper LiftingCylinder (4555+)	1
10	42821	Plug	1
11	41413	Nut	1
12	41166	Fitting, Pipeline Bolt	1
13	43361	Washer	2
14	41167	Fitting	1
15	41173	Seal Kit	1

Hydraulic Hoses and Fittings (3232+, 3346+, 4046+, 4035+, 4555+)

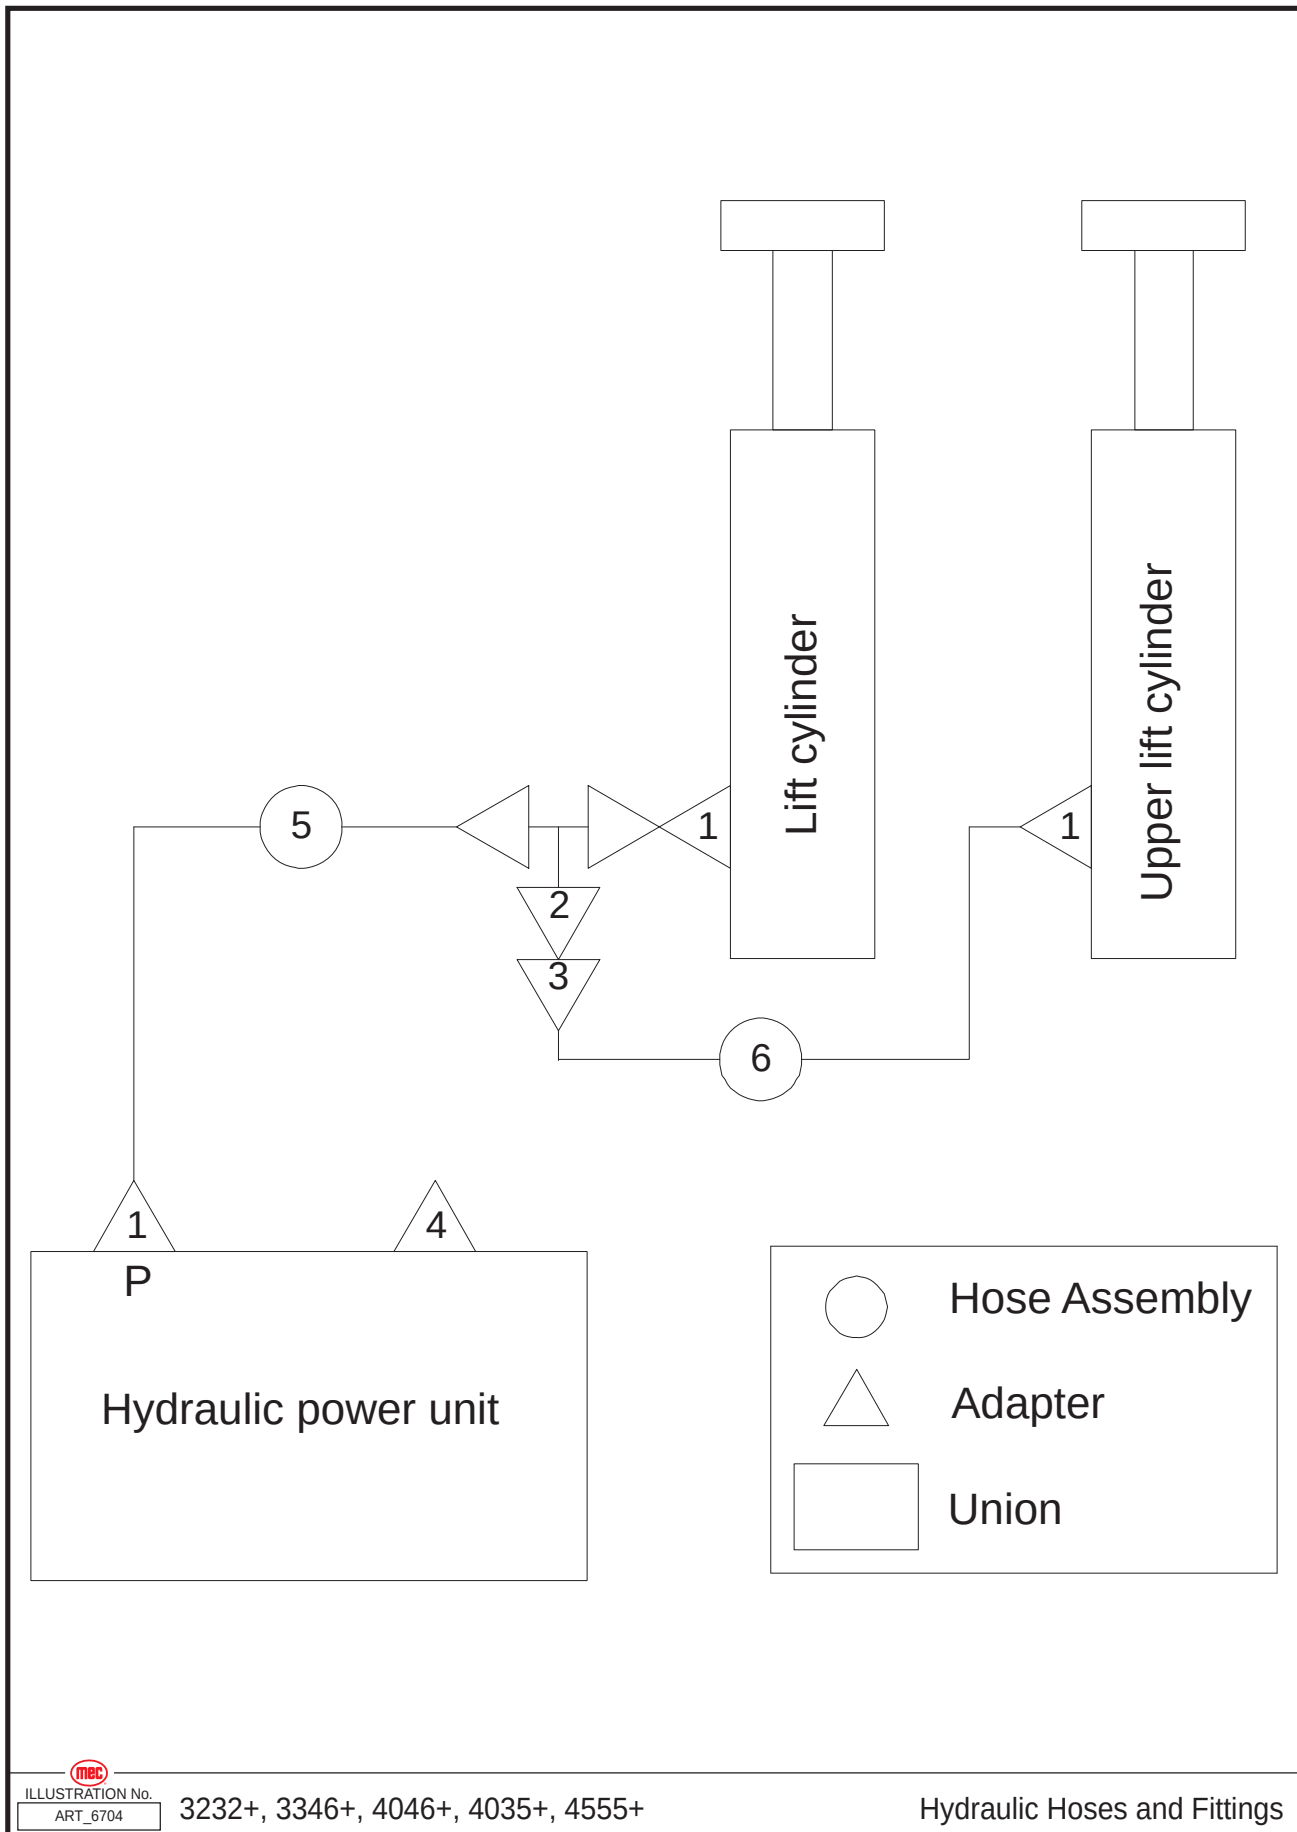

Item	Part No.	Description	Qty.
1	43638	Straight Fitting	3
2	43640	Tee Fitting	1
3	43639	Elbow	1
4	42480	Plug	1
5	61042	Hose Assembly, Lift Cylinder (3232+, 4035+)	1
	61043	Hose Assembly, Lift Cylinder (3346+, 4046+)	1
	61044	Hose Assembly, Lift Cylinder (4555+)	1
6	41545	Upper Lift Cylinder Hose Assembly (3232+, 3346+, 4046+, 4035+)	1
	44992	Hose Assembly (4555+)	1

Electrical Harness(3232+, 3346+)

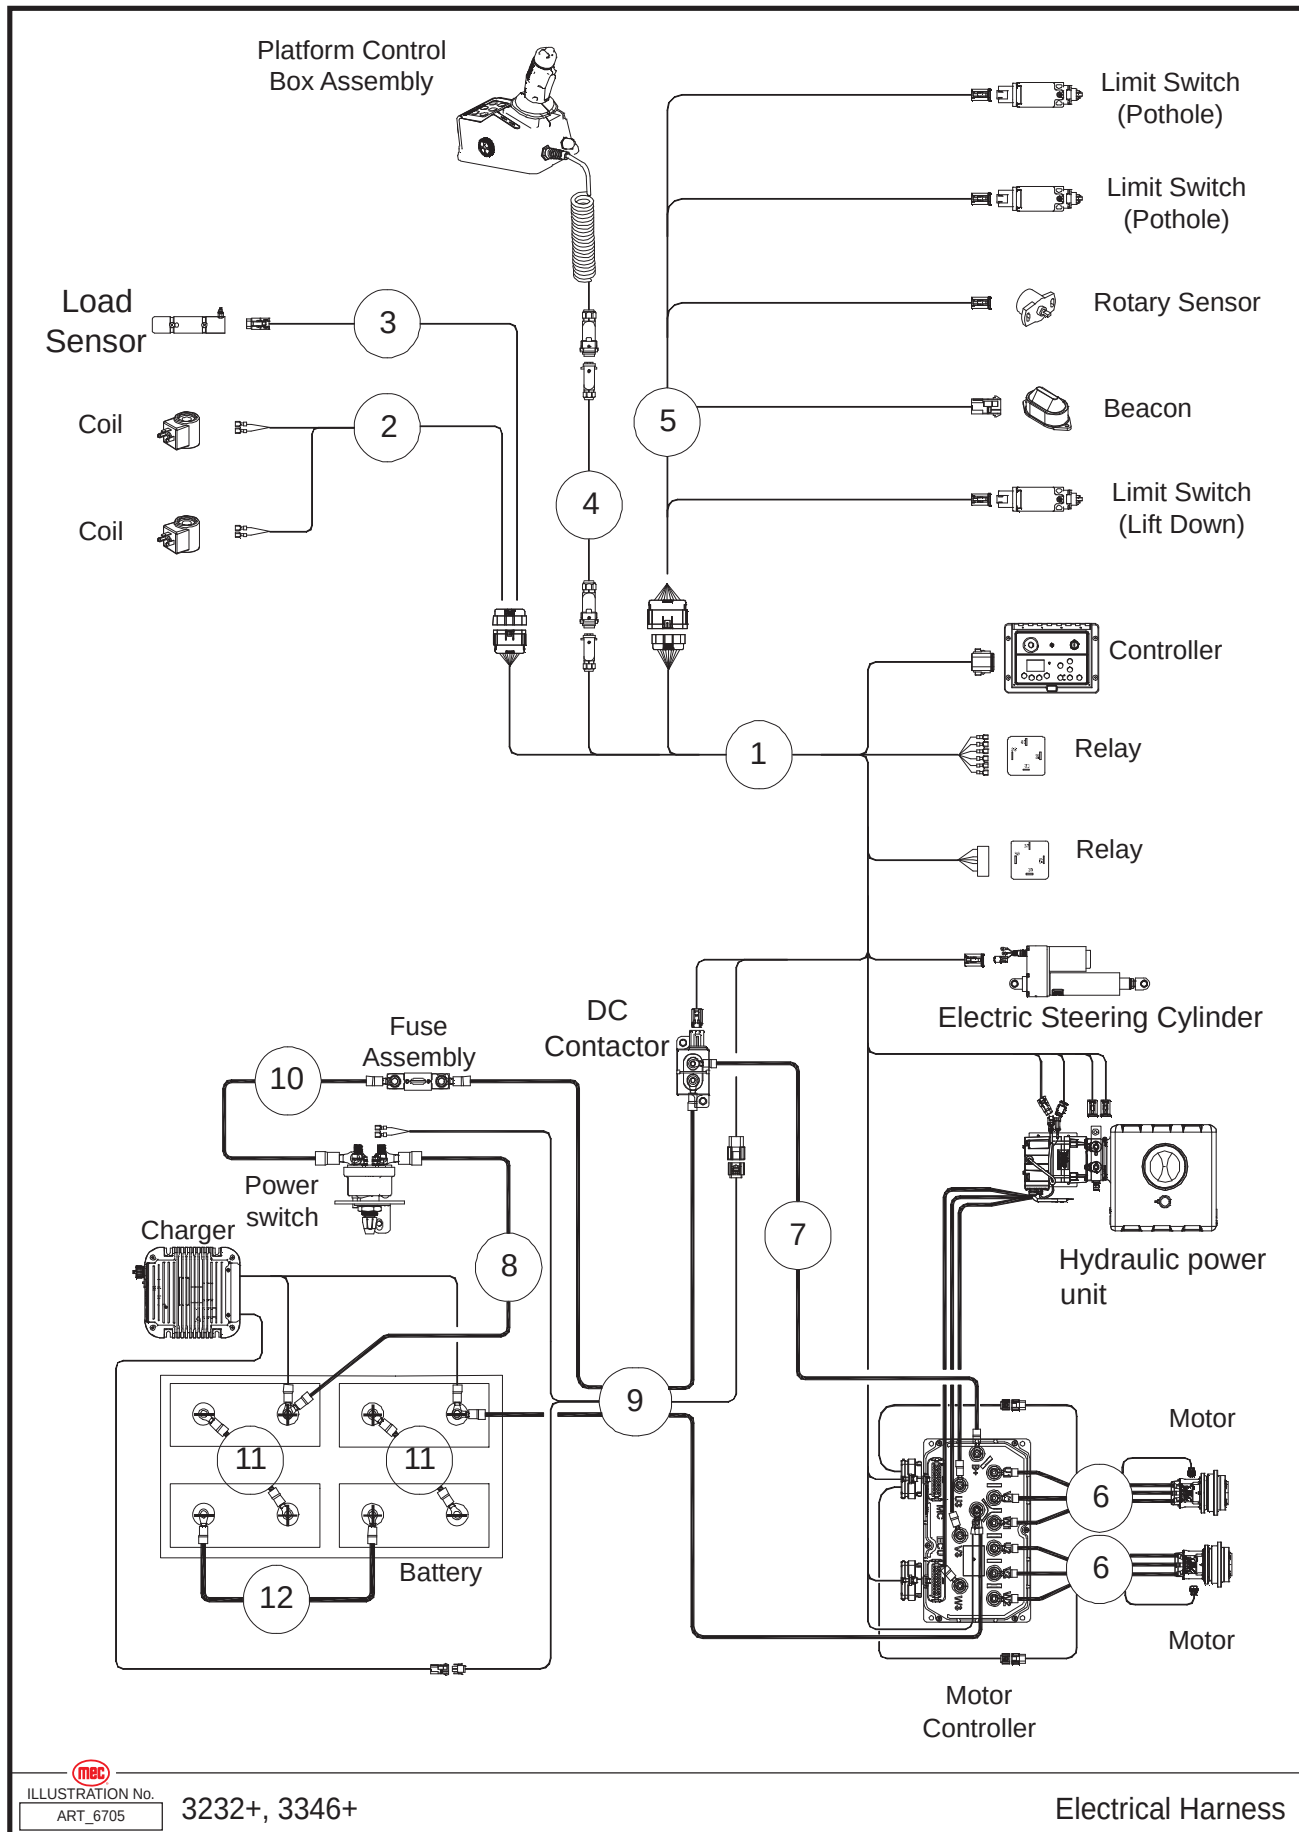


ILLUSTRATION No.
ART_6705

3232+, 3346+

Electrical Harness

Item	Part No.	Description	Qty.
1	62710	ECU Harness	1
2	62691	Lowering Valve Harness (3232+, 3346+)	1
3	62690	Load Cell Harness (3232+, 3346+)	1
4	62699	Platform Control Box Harness (3346+, 3232+)	1
5	62688	Limit Switch Harness (3232+)	1
	62687	Limit Switch Harness (3346+)	1
6	62714	Drive Motor Harness (3232+)	2
	62715	Drive Motor Harness (3346+)	2
7	62692	Power Harness	1
8	62783	Power Harness	1
9	62702	Power Harness (3232+)	1
	62698	Power Harness (3346+)	1
10	49176	Power Harness	1
11	45411	Battery Harness	2
12	45412	Battery Harness	1

Electrical Harness (4035+, 4046+, 4555+)

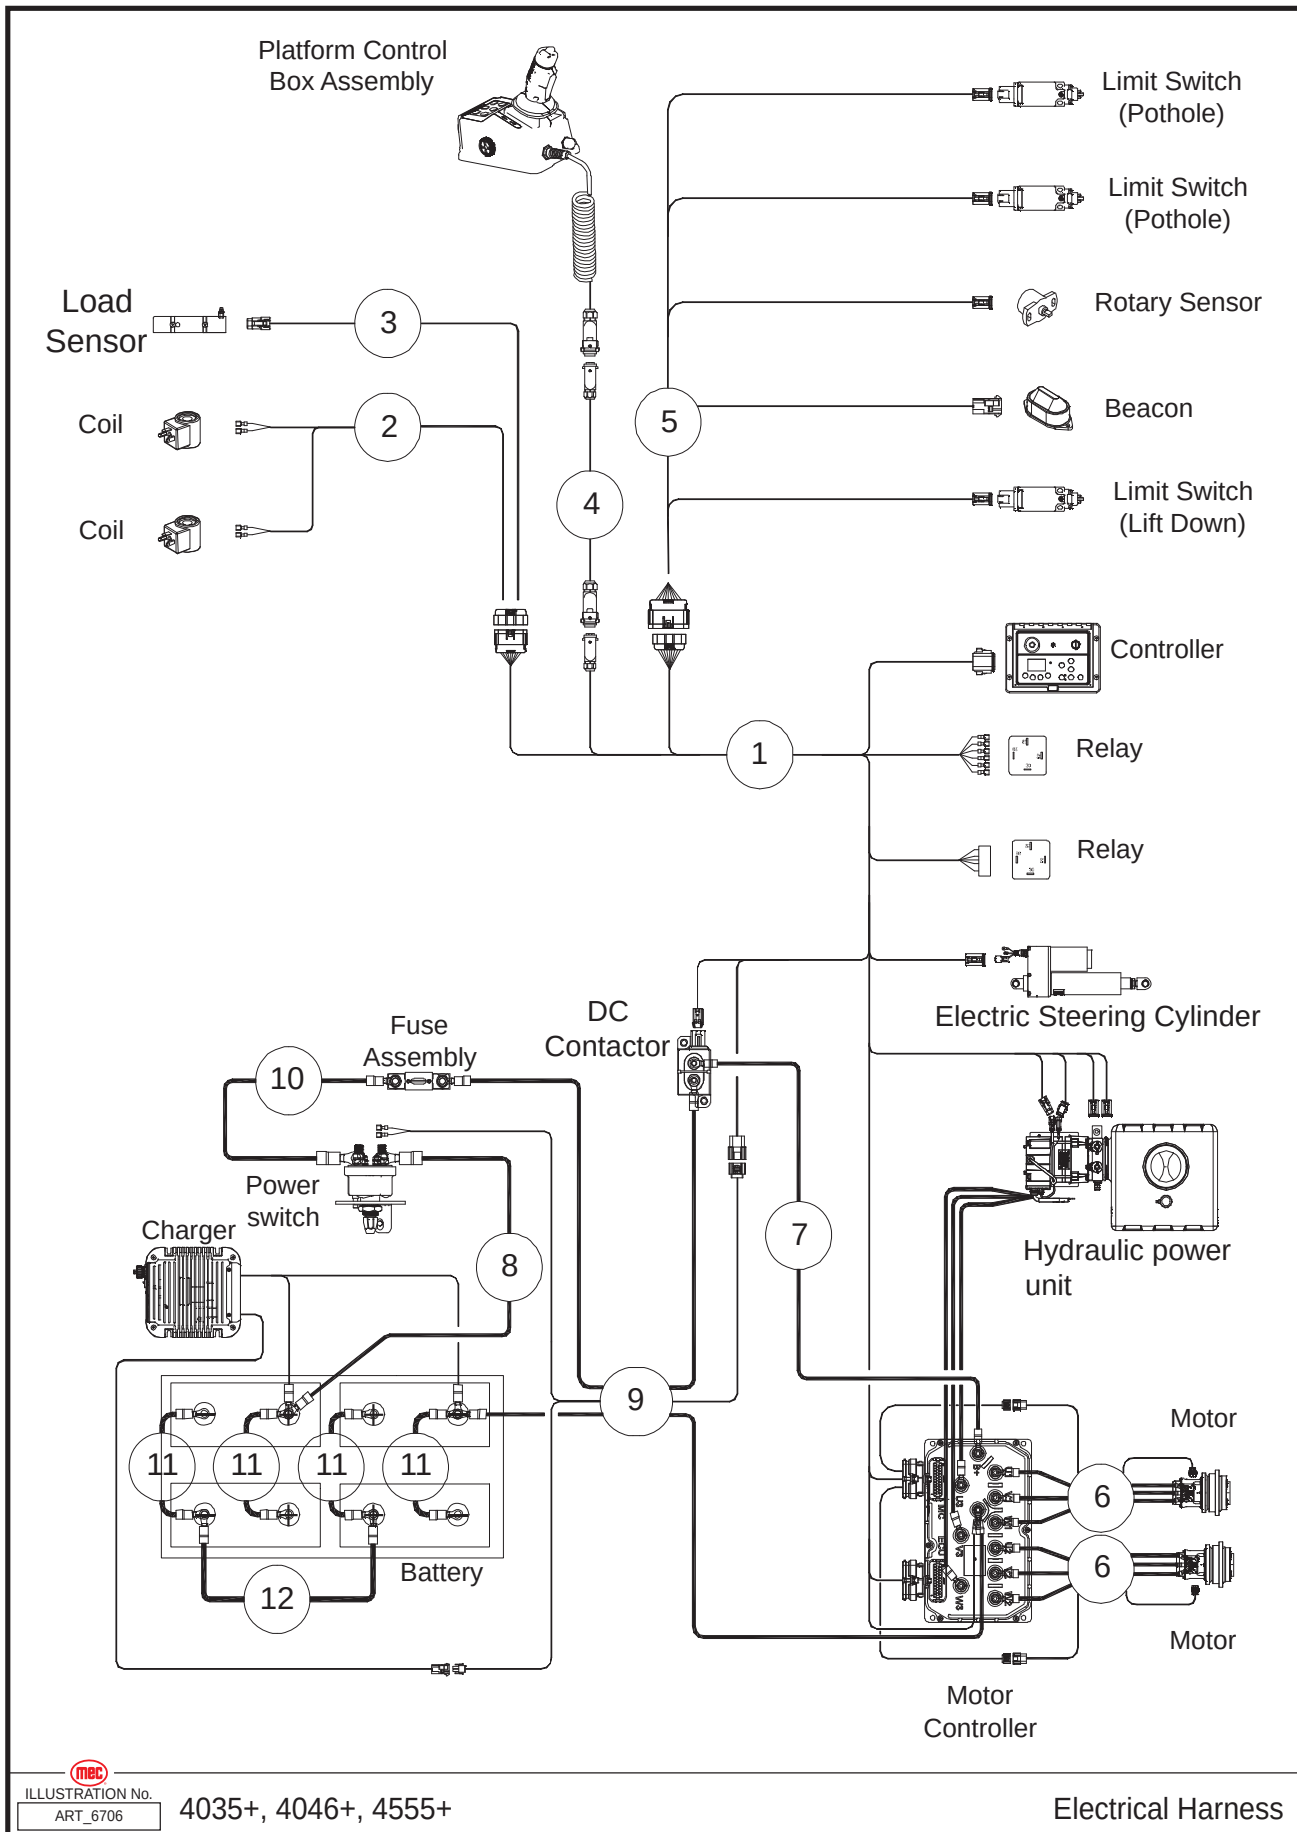



ILLUSTRATION No.
ART_6706

4035+, 4046+, 4555+

Electrical Harness



Item	Part No.	Description	Qty.
1	62710	ECU Harness	1
2	62691	Lowering Valve Harness (4035+ ,4046+)	1
	62693	Lowering Valve Harness (4555+)	1
3	62690	Load Cell Harness (4035+, 4046+)	1
	62694	Load Cell Harness (4555+)	1
4	62700	Platform Control Box Harness (4035+, 4046+)	1
	62695	Platform Control Box Harness (4555+)	1
5	62688	Limit Switch Harness (4035+)	1
	62687	Limit Switch Harness (4046+)	1
	62784	Limit Switch Harness (4555+)	1
6	62714	Drive Motor Harness (4035+)	2
	62715	Drive Motor Harness (4046+)	2
	62716	Drive Motor Harness (4555+)	2
7	62692	Power Harness	1
8	62783	Power Harness	1
9	62702	Power Harness (4035+)	1
	62698	Power Harness (4046+)	1
	62705	Power Harness (4555+)	1
10	49176	Power Harness	1
11	45414	Battery Harness	4
12	45415	Battery Harness	1

Power to Platform

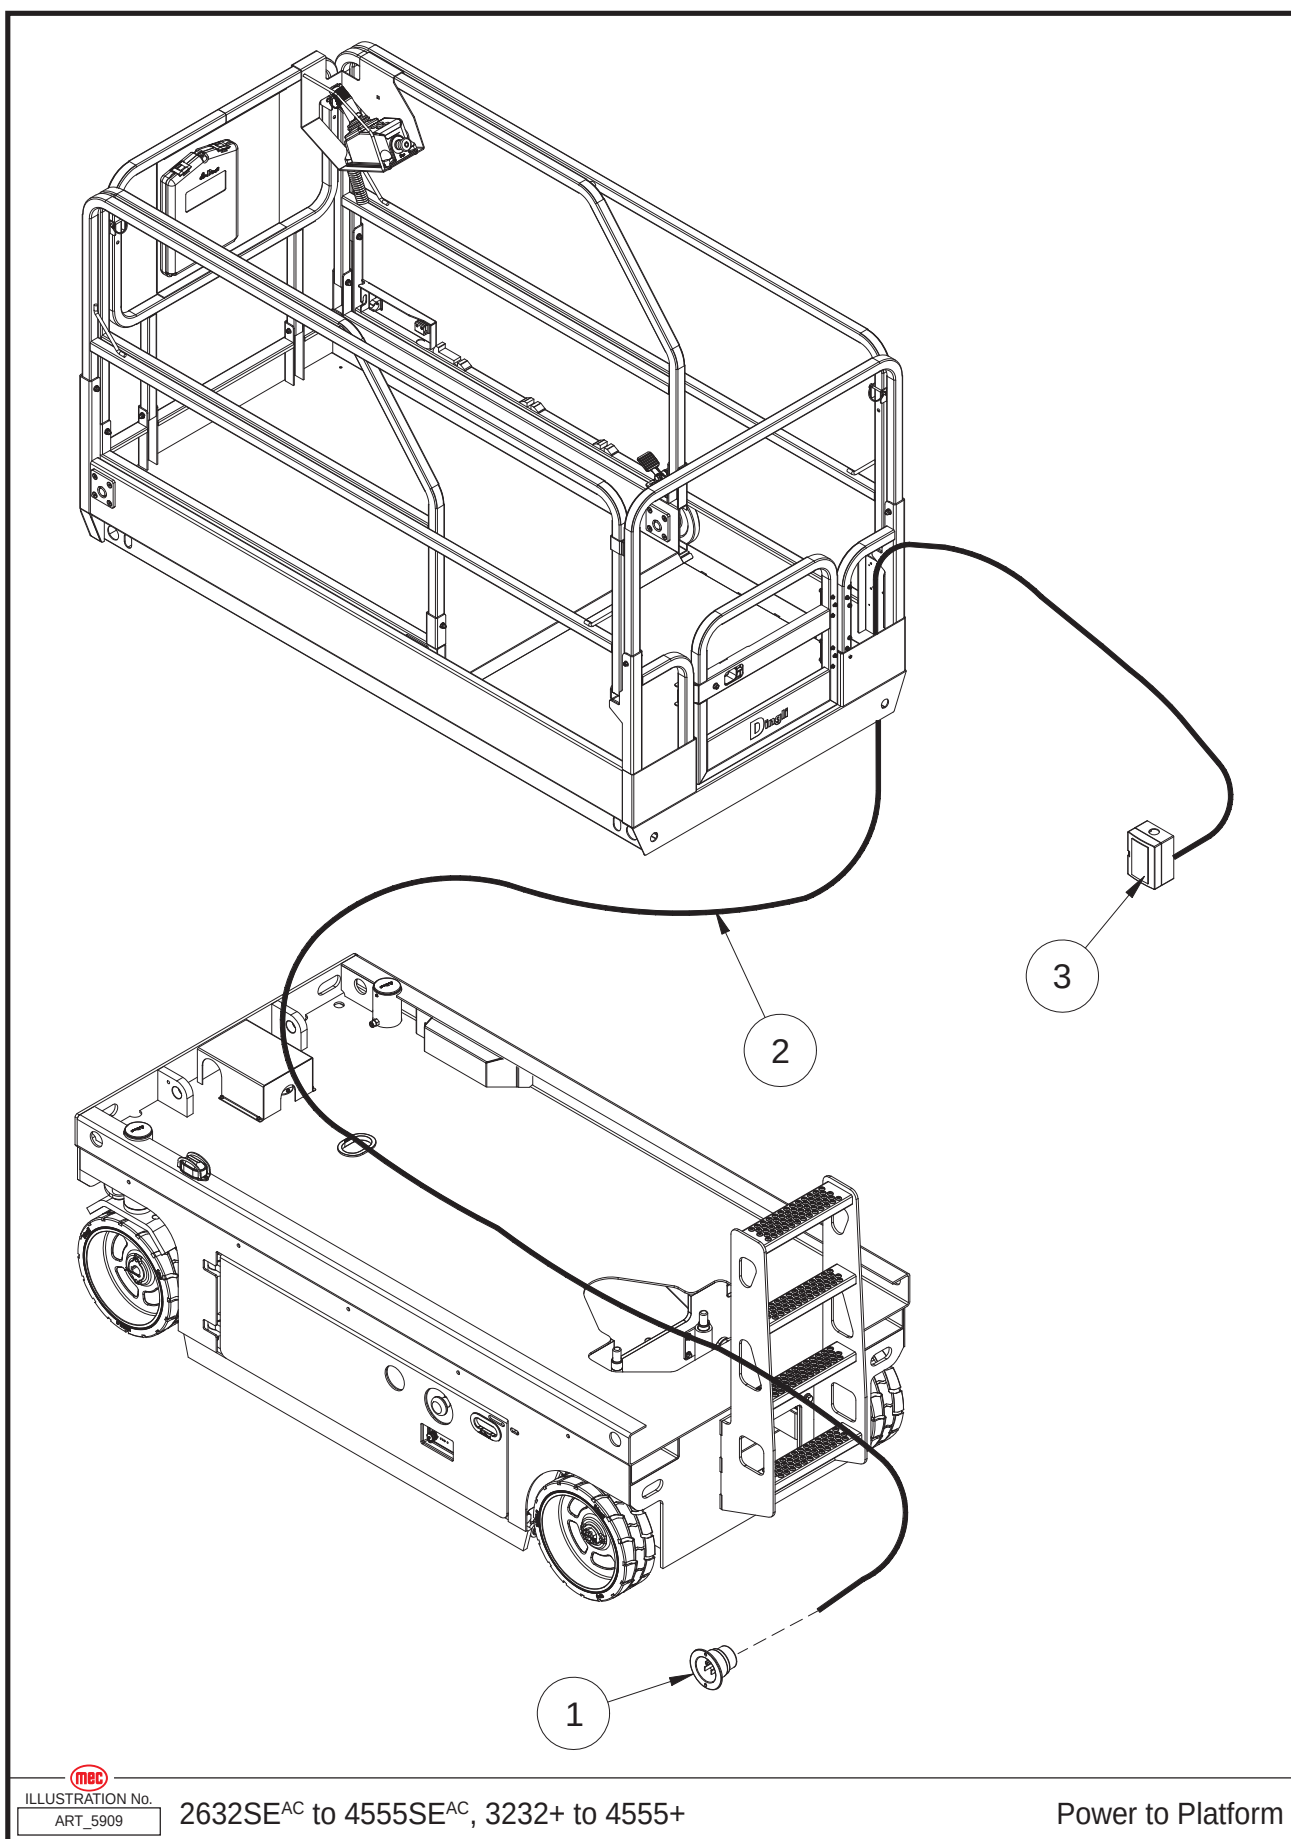



Item	Part No.	Description	Qty.
1	43690	AC Plug, 110V	1
2	62842	Wire Cable, Platform AC Power (3232+, 3346+)	1
	62843	Wire Cable, Platform AC Power (4046+, 4035+)	1
	62844	Wire Cable, Platform AC Power (4555+)	1
3	43694	AC Socket	1

Decals, 3232+

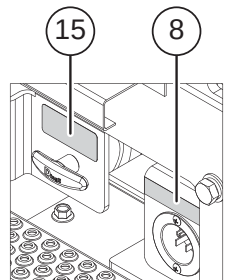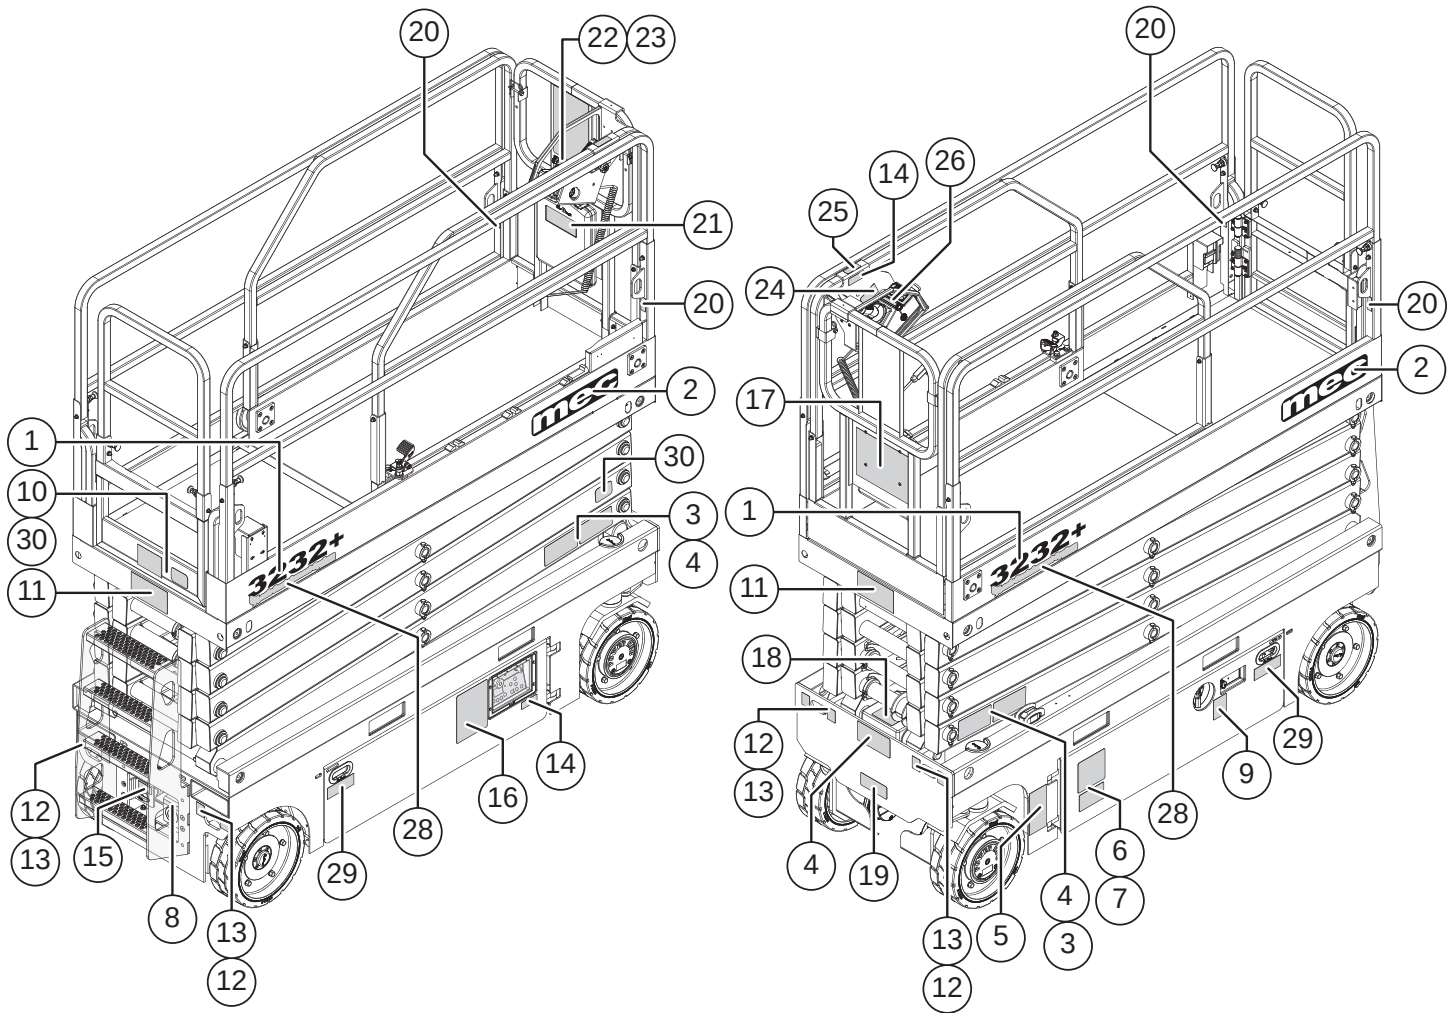

UNDER LADDER


CONTROL MODULE

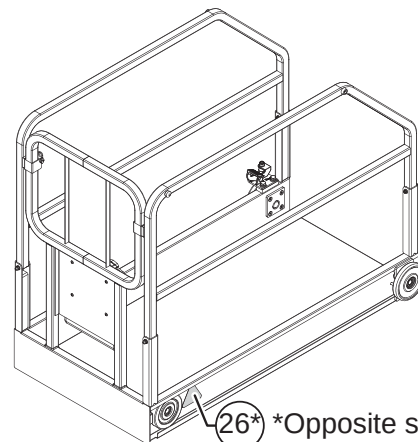
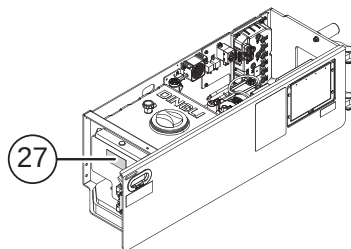


PLATFORM EXTENSION DECK
*Opposite side also.




Decals, 3346+

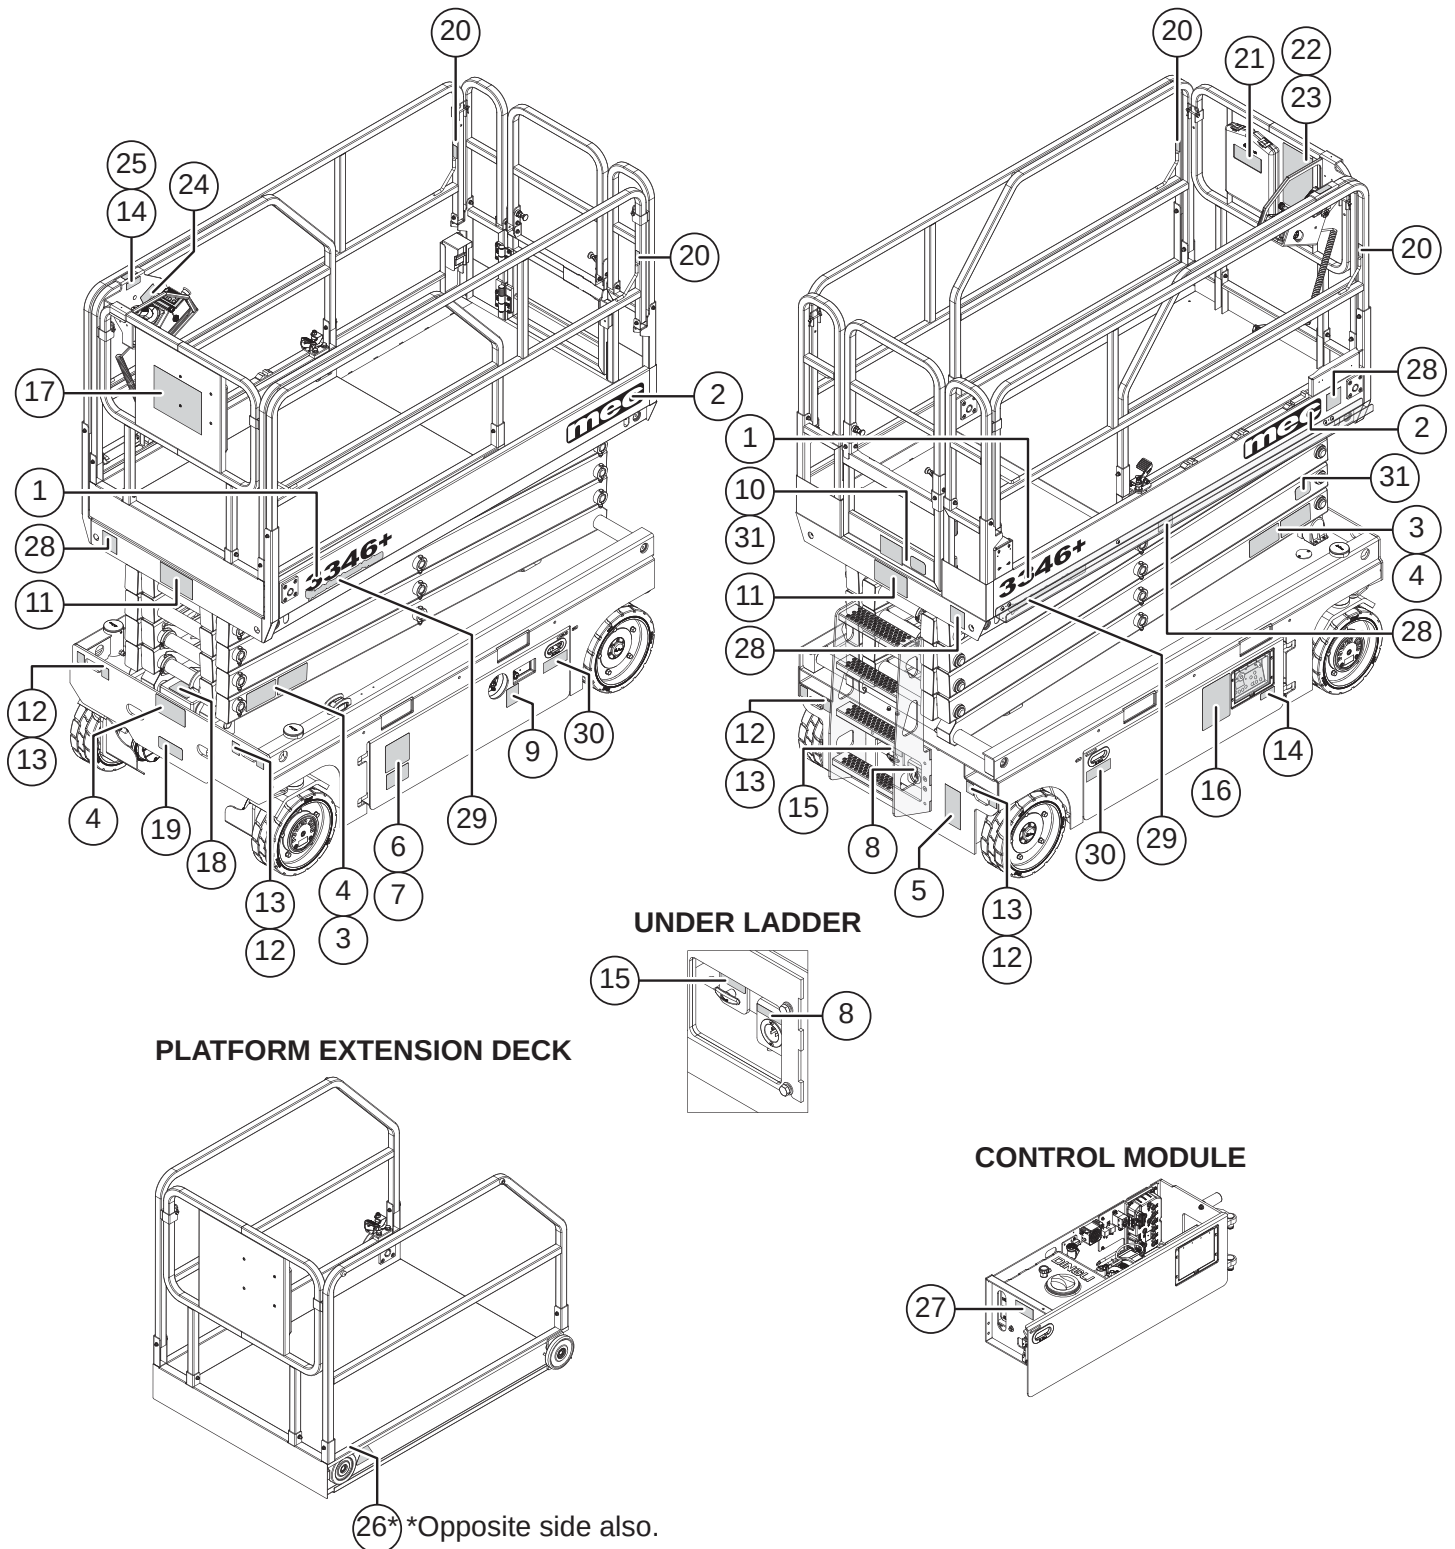


1  97347 Qty. - 2	2  94114 Qty. - 2	3  41748 Qty. - 2	4  41646 Qty. - 3	5  95215 Qty. - 1
6  41641 Qty. - 1	7  48419 Qty. - 1	8  94659 Qty. - 1	9  49749 Qty. - 1	10  95301 Qty. - 1
11  49617 Qty. - 2	12  49748 Qty. - 4	13  45899 Qty. - 4	14  41639 Qty. - 2	15  41636 Qty. - 1
16  41649 Qty. - 1	17  90719 Qty. - 1	18  41642 Qty. - 1	19  94423 Qty. - 1	20  41648 Qty. - 4
21  8911 Qty. - 1	22  41749 Qty. - 1	23  41647 Qty. - 1	24  94120 Qty. - 1	25  41640 Qty. - 1
26  91850 Qty. - 2	27  90732 Qty. - 1	28  46451 Qty. - 4	29  94866 Qty. - 2	30  94867 Qty. - 2
31  97414 Qty. - 2				



Decals, 4035+

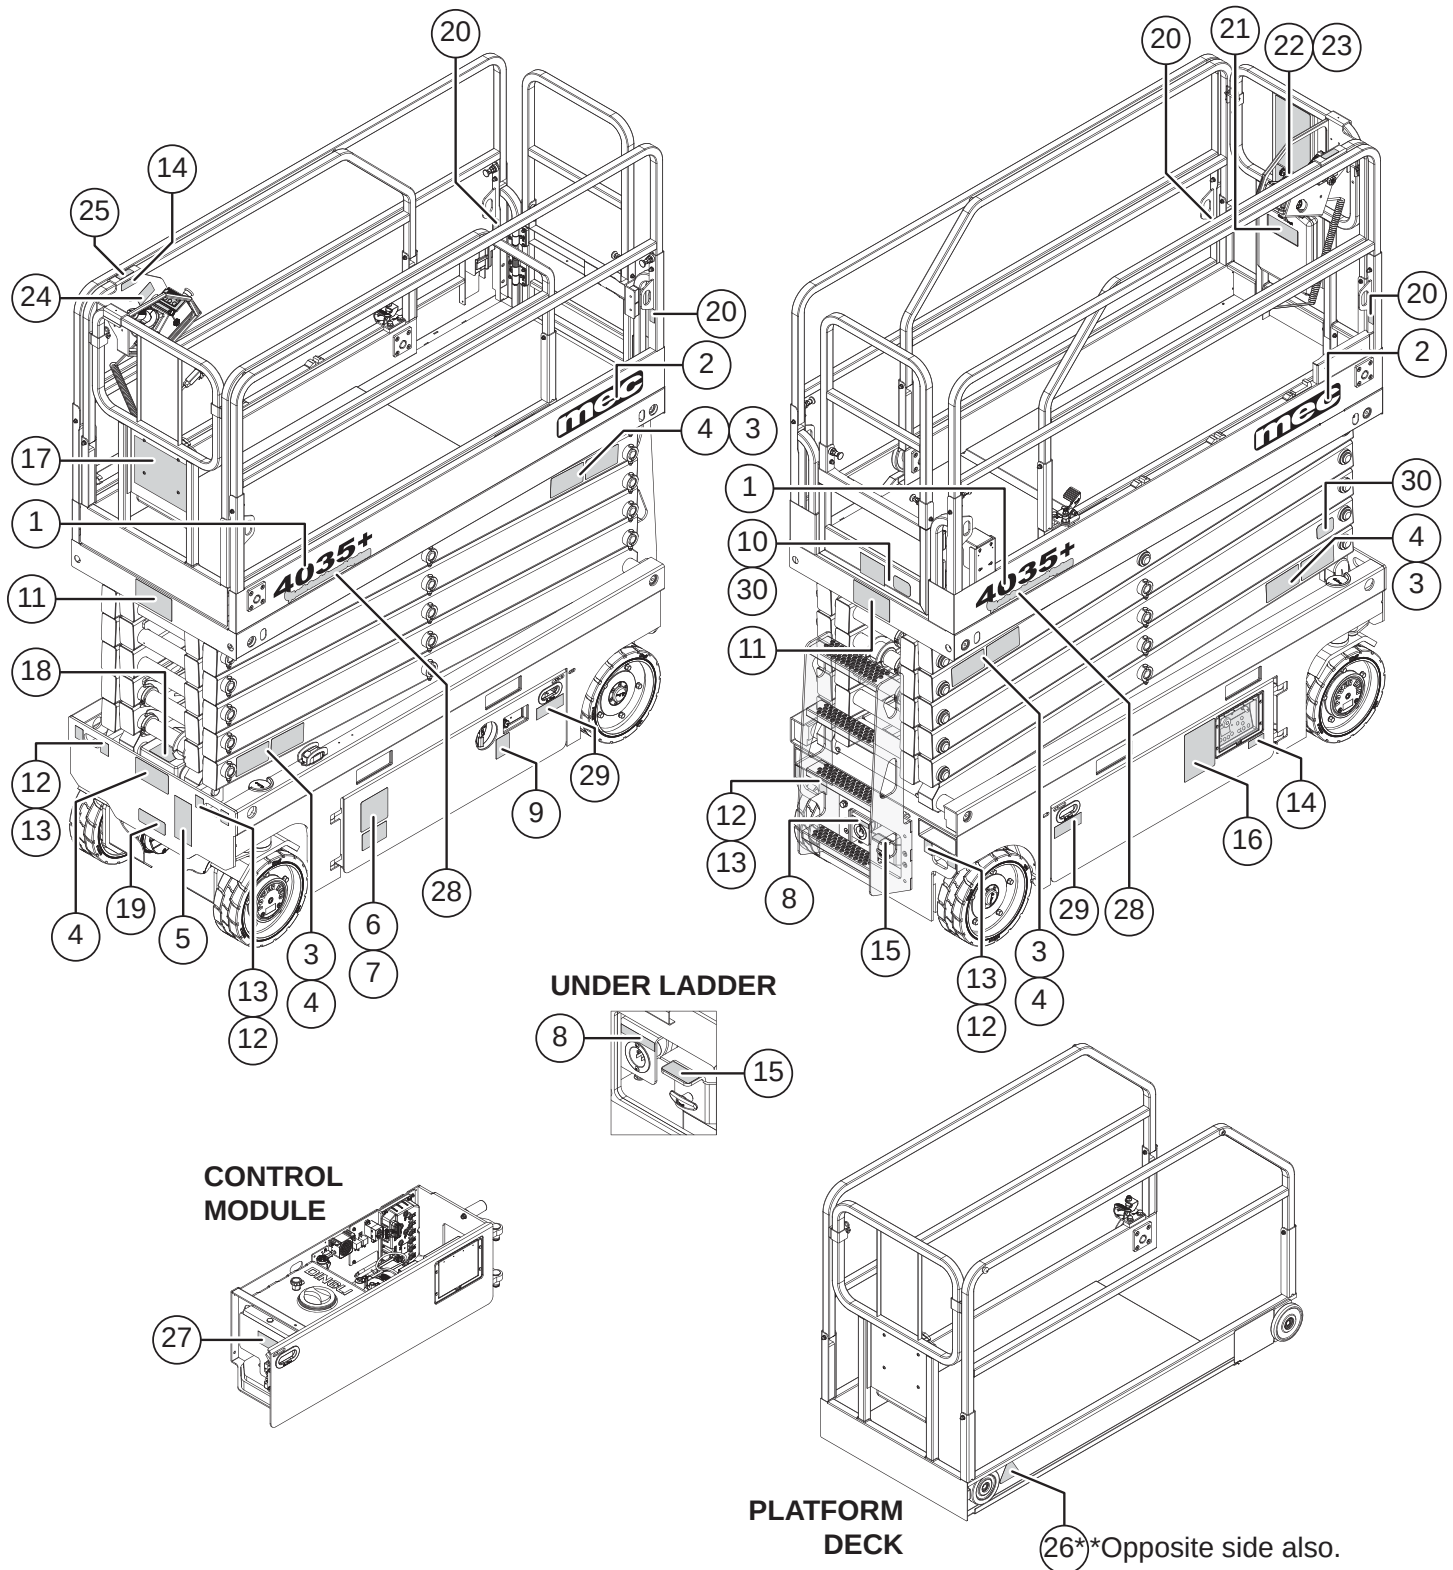


Page 85 +Series Slab Electric Scissors - Parts Manual - 97325 





Decals, 4046+

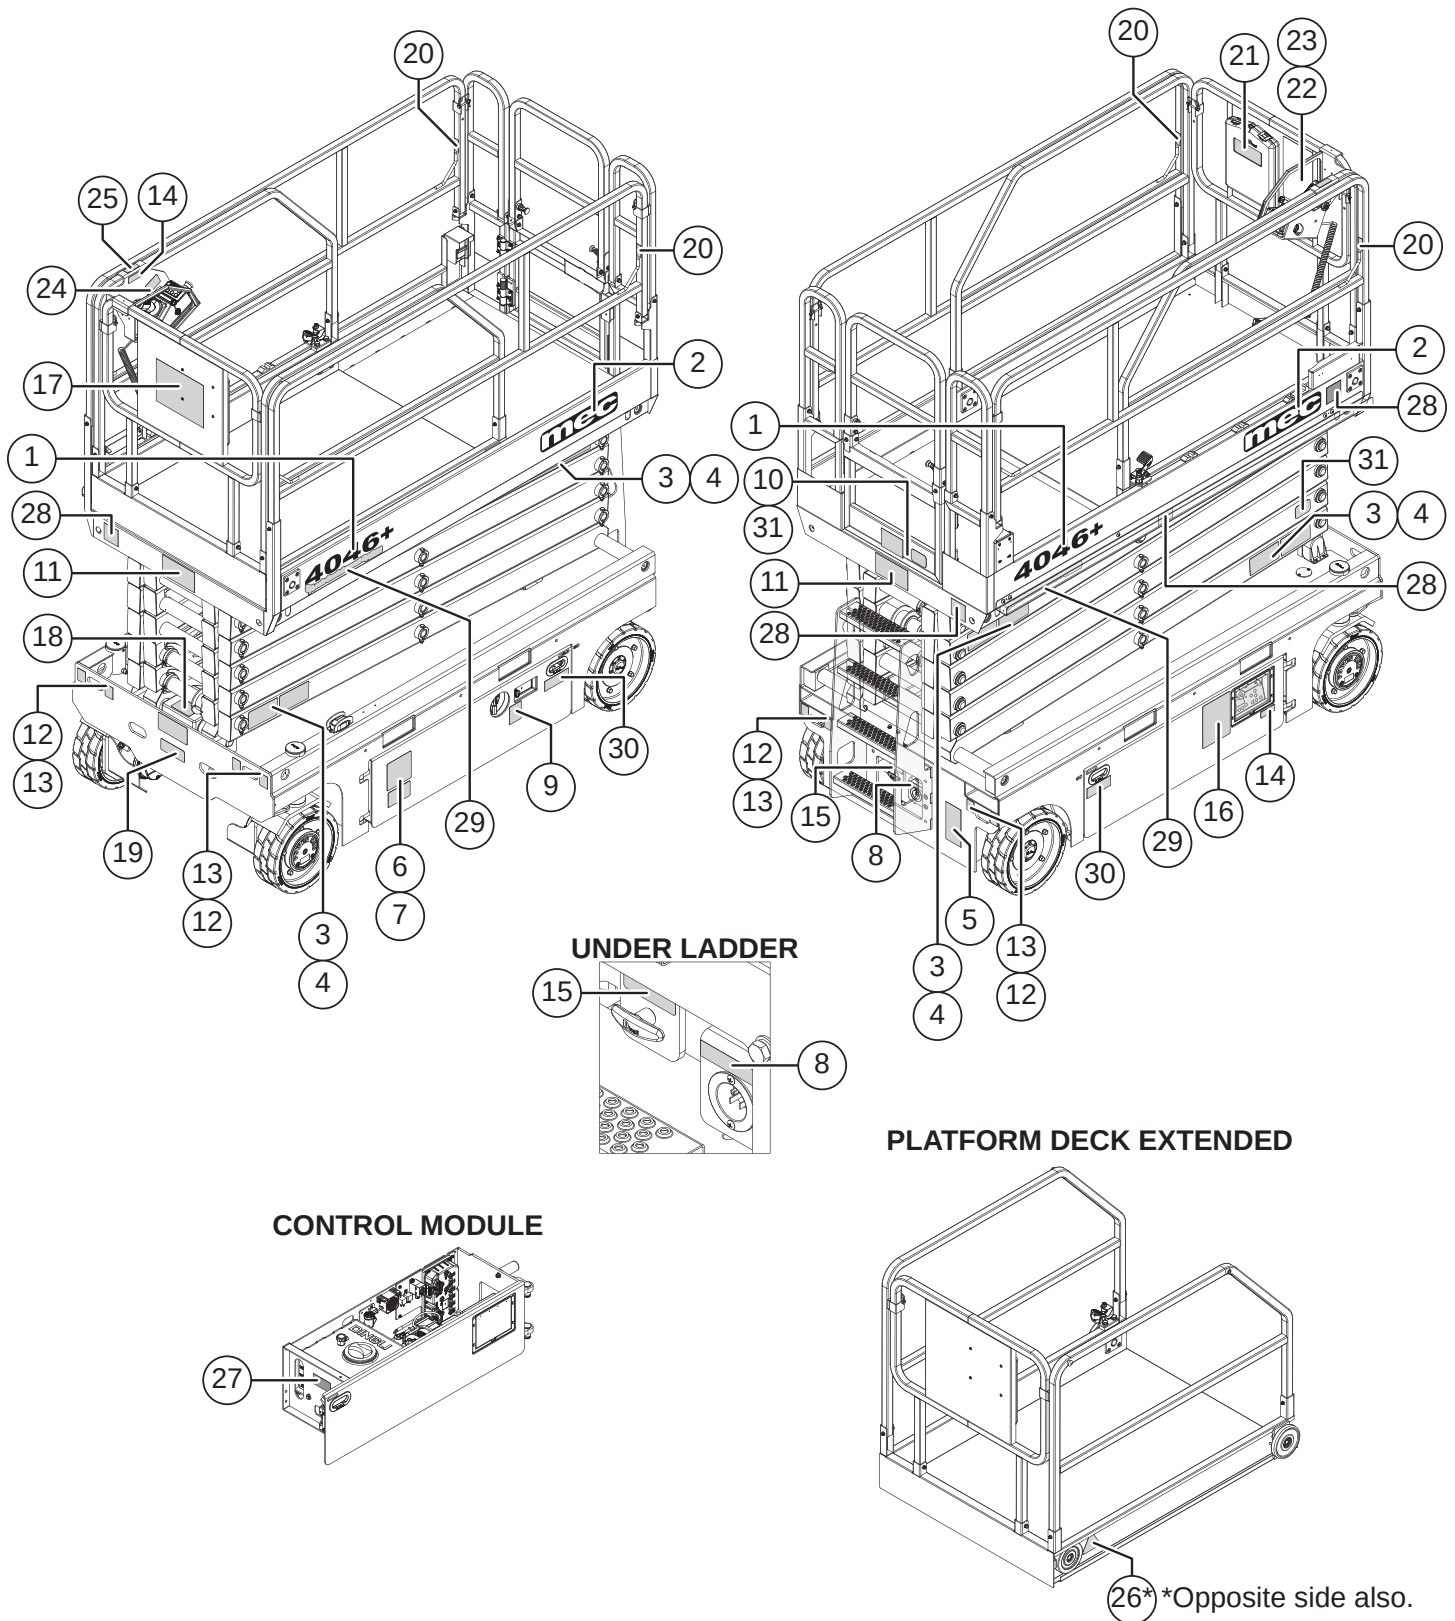

1  97344 Qty. - 2	2  94114 Qty. - 2	3  46773 Qty. - 4	4  41646 Qty. - 5	5  95215 Qty. - 1
6  41641 Qty. - 1	7  48419 Qty. - 1	8  94659 Qty. - 1	9  49749 Qty. - 1	10  95301 Qty. - 1
11  49617 Qty. - 2	12  49748 Qty. - 4	13  45899 Qty. - 4	14  41639 Qty. - 2	15  41636 Qty. - 1
16  41649 Qty. - 1	17  90719 Qty. - 1	18  41642 Qty. - 1	19  94423 Qty. - 1	20  41648 Qty. - 4
21  8911 Qty. - 1	22  41652 Qty. - 1	23  41647 Qty. - 1	24  94120 Qty. - 1	25  41640 Qty. - 1
26  91850 Qty. - 2	27  90732 Qty. - 1	28  49751 Qty. - 4	29  94866 Qty. - 2	30  94867 Qty. - 2
31  97416 Qty. - 2				

Decals, 4555+

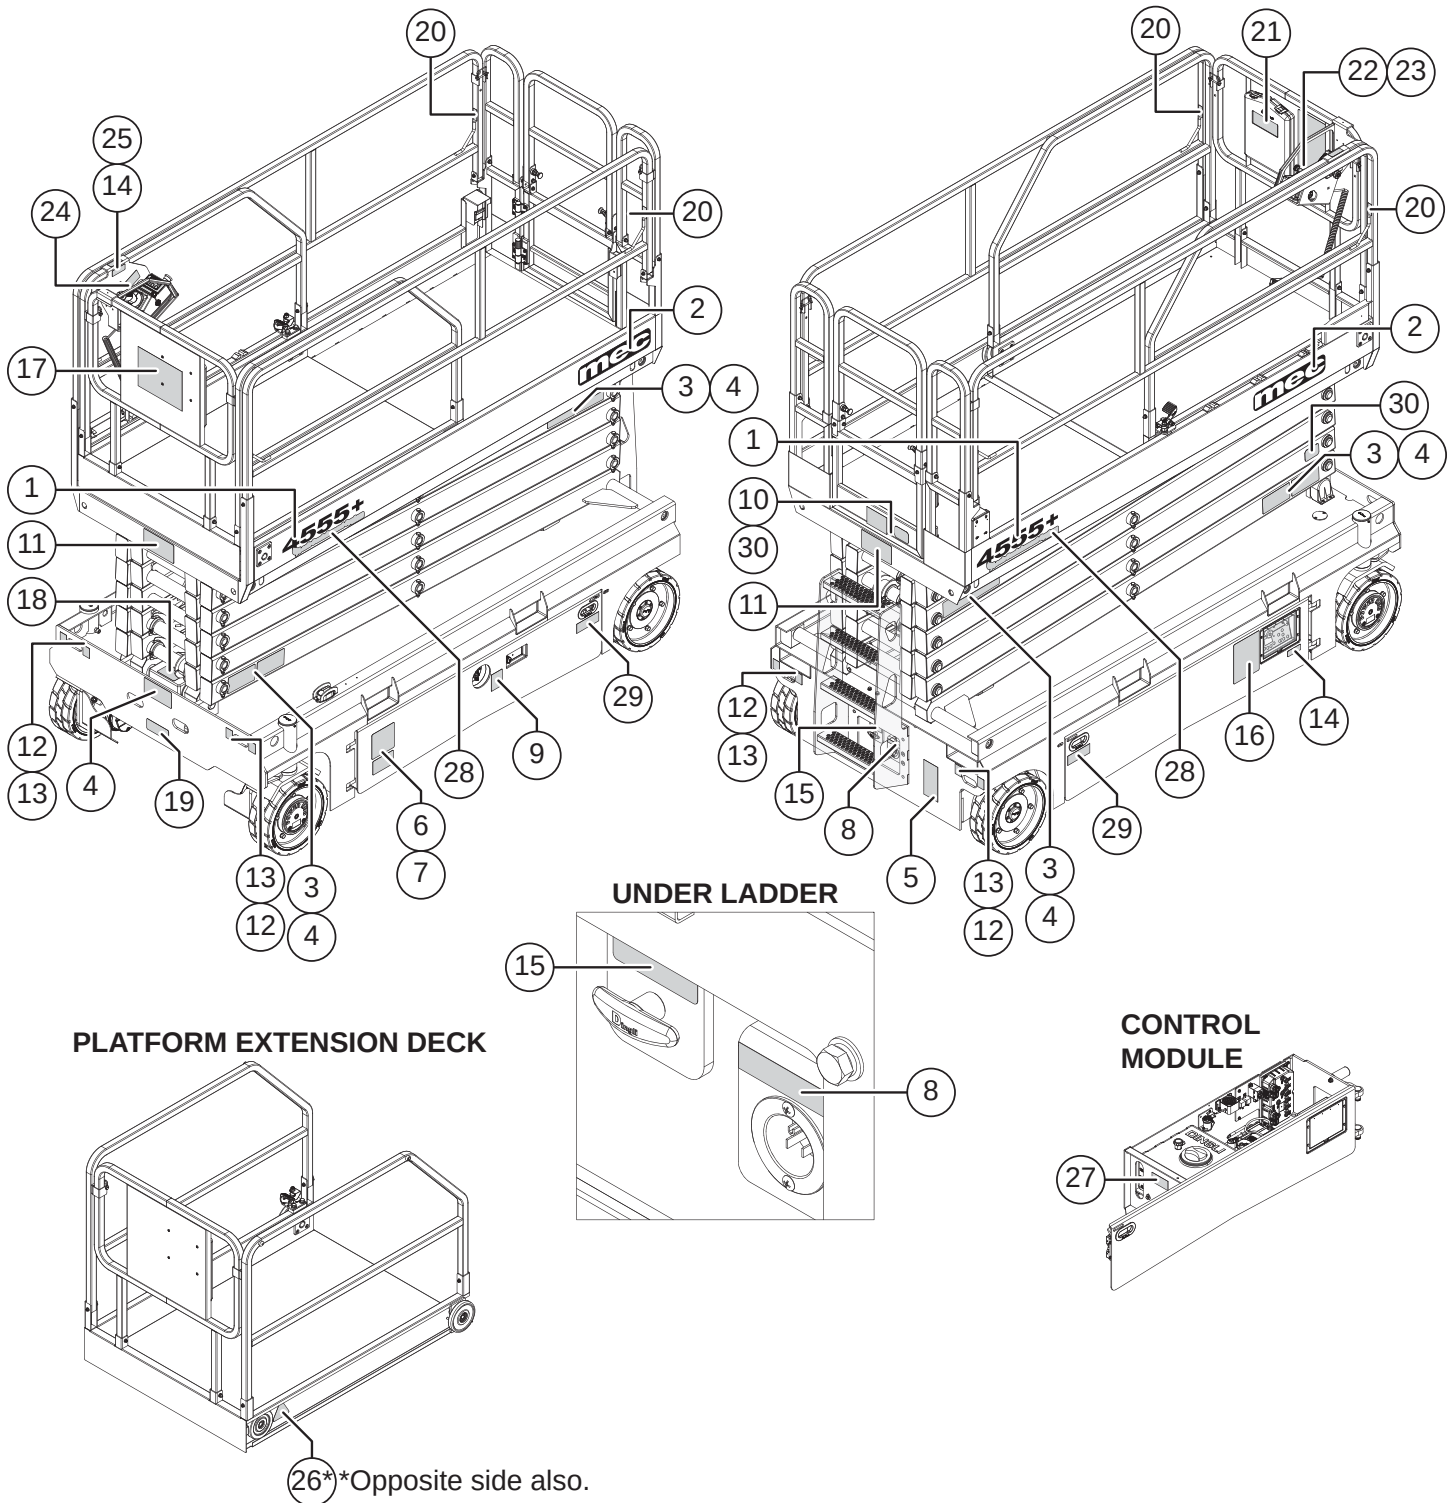

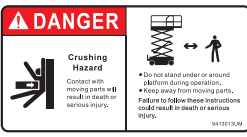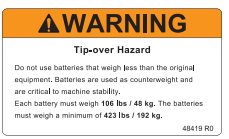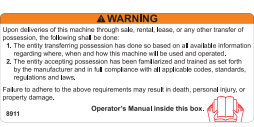1  97375 Qty. - 2	2  94114 Qty. - 2	3  46773 Qty. - 4	4  41646 Qty. - 5	5  95215 Qty. - 1
6  41641 Qty. - 1	7  48419 Qty. - 1	8  94659 Qty. - 1	9  49749 Qty. - 1	10  95301 Qty. - 1
11  49778 Qty. - 2	12  49748 Qty. - 4	13  45899 Qty. - 4	14  41639 Qty. - X	15  41636 Qty. - 1
16  41649 Qty. - 1	17  90719 Qty. - 1	18  41642 Qty. - 1	19  94423 Qty. - 1	20  41648 Qty. - 4
21  8911 Qty. - 1	22  41652 Qty. - 1	23  41647 Qty. - 1	24  94120 Qty. - 1	25  41640 Qty. - 1
26  91850 Qty. - 2	27  90732 Qty. - 1	28  94866 Qty. - 2	29  94867 Qty. - 2	30  97417 Qty. - 2



MEC Parts Order Form

Phone: 559-710-2405

Fax: 559-400-6723

Email: Parts@mecawp.com

Please Fill Out Completely:

Date: _____

Account: _____

Bill to: _____

Ordered By: _____

Your Fax No.: _____

Ship to: _____

Purchase Order Number _____

*** All orders MUST have a Purchase Order Number*

Ship VIA _____

***Fed Ex shipments require Fed Ex account number*

Part Number	Description	Quantity	Price

All back-ordered parts will be shipped when available via the same ship method as original order unless noted below:

_____ Ship complete order only - No Backorders

_____ Ship all available parts and contact customer on disposition of back-ordered parts

_____ Other (Please specify)

Signature _____



Limited Owner Warranty

MEC Aerial Platform Sales Corp. warrants its equipment to the original purchaser against defects in material and/or workmanship under normal use and service for one (1) year from date of registered sale or date the unit left the factory if not registered. MEC Aerial Platform Sales Corp. further warrants the structural weldments of the main frame and scissor arms to be free from defects in material or workmanship for five (5) years from date of registered sale or date unit left the factory if not registered. Excluded from such warranty is the battery(s) which carries a ninety (90) day warranty from described purchase date. Warranty claims within such warranty period shall be limited to repair or replacement, MEC Aerial Platform Sales Corp's option, of the defective part in question and labor to perform the necessary repair or replacement based on MEC Aerial Platform Sales Corp's then current flat rate, provided the defective part in question is shipped prepaid to MEC Aerial Platform Sales Corp. and is found upon inspection by MEC Aerial Platform Sales Corp. to be defective in material and/or workmanship. MEC Aerial Platform Sales Corp. shall not be liable for any consequential, incidental or contingent damages whatsoever. Use of other than factory authorized parts; misuse, improper maintenance, or modification of the equipment voids this warranty. The foregoing warranty is exclusive and in lieu of all other warranties, express or implied. All such other warranties, including implied warranties of merchantability and of fitness for a particular purpose, are hereby excluded. No Dealer, Sales Representative, or other person purporting to act on behalf of MEC Aerial Platform Sales Corp. is authorized to alter the terms of this warranty, or in any manner assume on behalf of MEC Aerial Platform Sales Corp. any liability or obligation which exceeds MEC Aerial Platform Sales Corp's obligations under this warranty.



MEC Aerial Work Platforms

1401 S. Madera Avenue, Kerman, CA 93630 USA

Toll Free: 1.877.MEC.LIFT or 1.877.632.5438

Phone: 1.559.710.2425

Fax: 1.559.710.2390

info@MECawp.com

www.MECawp.com