




Parts Manual

Micro26+/Micro26-XD+

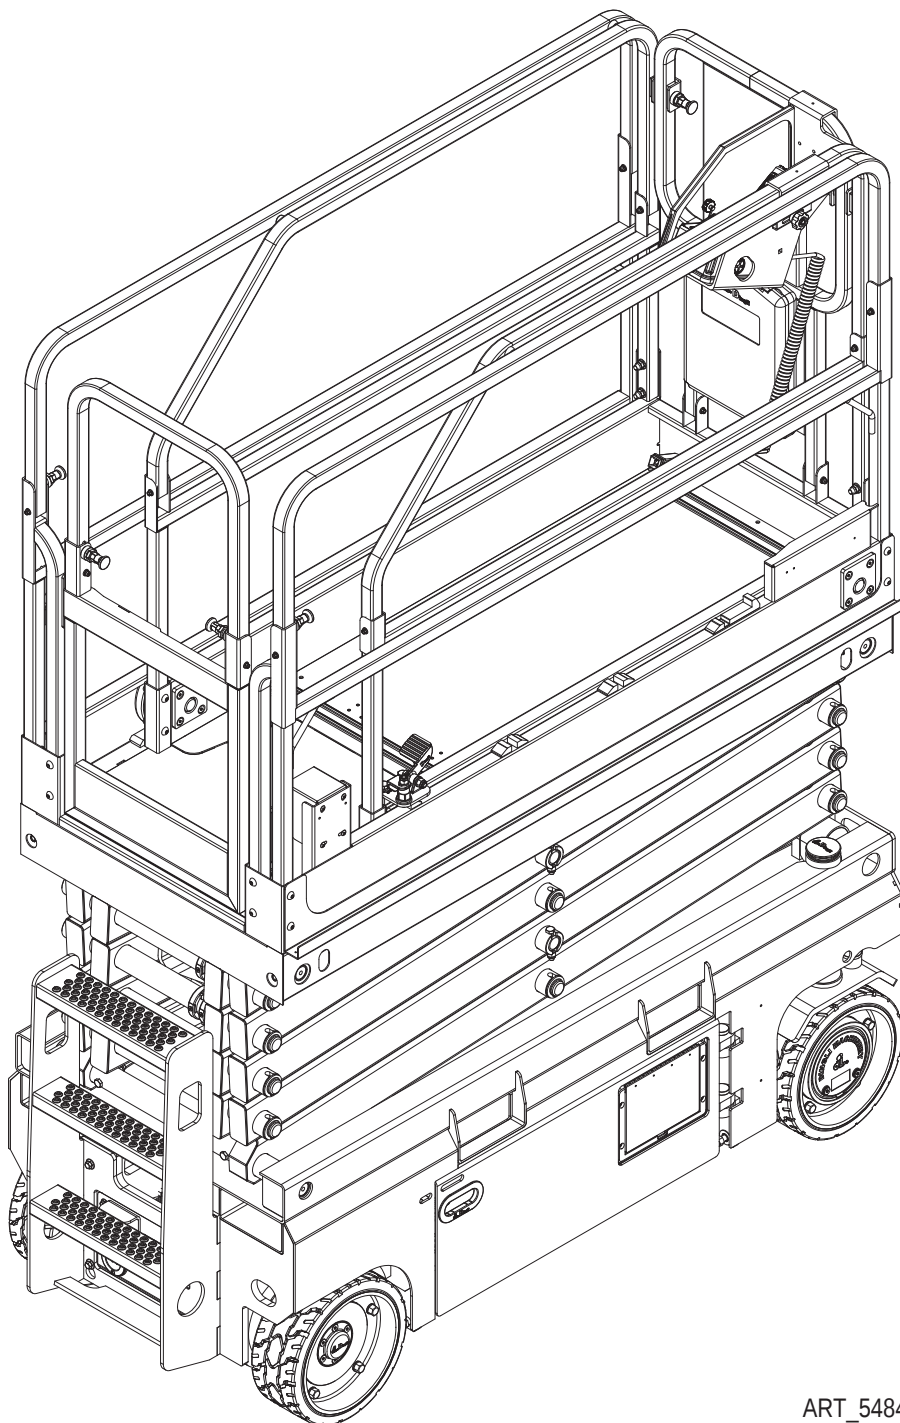

ART_5484

Meets requirements of ANSI A92.20-2020 and CSA B354.6:17.

Micro26+ Serial Number 23400100 - Up

Micro26-XD+ Serial Number 23100100 - Up

Part # 97411

August 2026

Revision History

Date	Reason for Update
August 2026	New Release



MEC Aerial Work Platforms

1401 S. Madera Avenue, Kerman, CA 93630 USA
Toll Free: 1.877.MEC.LIFT or 1.877.632.5438
Phone: 1.559.710.2425
Fax: 1.559.710.2390
info@MECawp.com
www.MECawp.com

Table of Contents

Chapter - Parts	1
<i>Parts Introduction</i>	1
Section 1 - Chassis	2
<i>Steer Linkage and Wheels Assembly</i>	2
<i>Pothole Protection Assembly</i>	4
<i>Battery Pack Module</i>	6
<i>Control Module</i>	8
<i>Lower Control (YILI)</i>	10
<i>Hydraulic Power Unit Assembly</i>	12
<i>Hydraulic Power Unit</i>	14
<i>Motor Controller Assembly</i>	16
<i>Rear Wheel and Ladder</i>	18
<i>Battery Charger Assembly</i>	20
<i>Chassis Accessory Installation</i>	22
<i>Leak Containment System®</i>	24
<i>Counterweight (Micro26+)</i>	26
Section 2 - Scissor	28
<i>Scissor Assembly</i>	28
Section 3 - Platform	32
<i>Main Platform Assembly</i>	32
<i>Platform Extension Assembly (Micro26+)</i>	34
<i>Xtra Deck® Platform Extension Assembly (Micro26-XD+)</i>	36
<i>Xtra Deck® Step Installation (Micro26-XD+)</i>	40
<i>Platform Locking Device Assembly</i>	42
<i>Platform Control Assembly</i>	44
<i>Platform Control Box Assembly</i>	46
Section 4 - Hydraulic System	48
<i>Lower Lift Cylinder Assembly</i>	48
<i>Upper Lift Cylinder Assembly</i>	50
<i>Hydraulic Hoses and Fittings</i>	52
Section 5 - Electrical System	54
<i>Electrical Harness</i>	54
<i>Power to Platform</i>	56
Section 6 - Decals	58
<i>Decals, Micro26+</i>	58
<i>Decals, Micro26-XD+</i>	60

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Parts Introduction

This Parts sections consists of illustrated parts sections and is designed to provide you, the customer, with illustrations and the list of associated parts needed to properly maintain the MEC self-propelled aerial work platform. When used in conjunction with the Service section in this manual and the Operator's Manual (provided separately), this manual will assist you in making necessary adjustments and repairs, and identifying and ordering the correct replacement parts.

All parts represented here are manufactured and supplied in accordance with MEC quality standards.

We recommend that you use genuine MEC parts to ensure proper operation and reliable performance.

To obtain maximum benefits from your MEC Aerial Work Platforms, always follow the proper operating and maintenance procedures. Only trained authorized personnel should be allowed to operate or service this machine. Service personnel should read and study the Operator's, and the Service and Parts Manuals in order to gain a thorough understanding of the unit prior to making any repairs.

Steer Linkage and Wheels Assembly

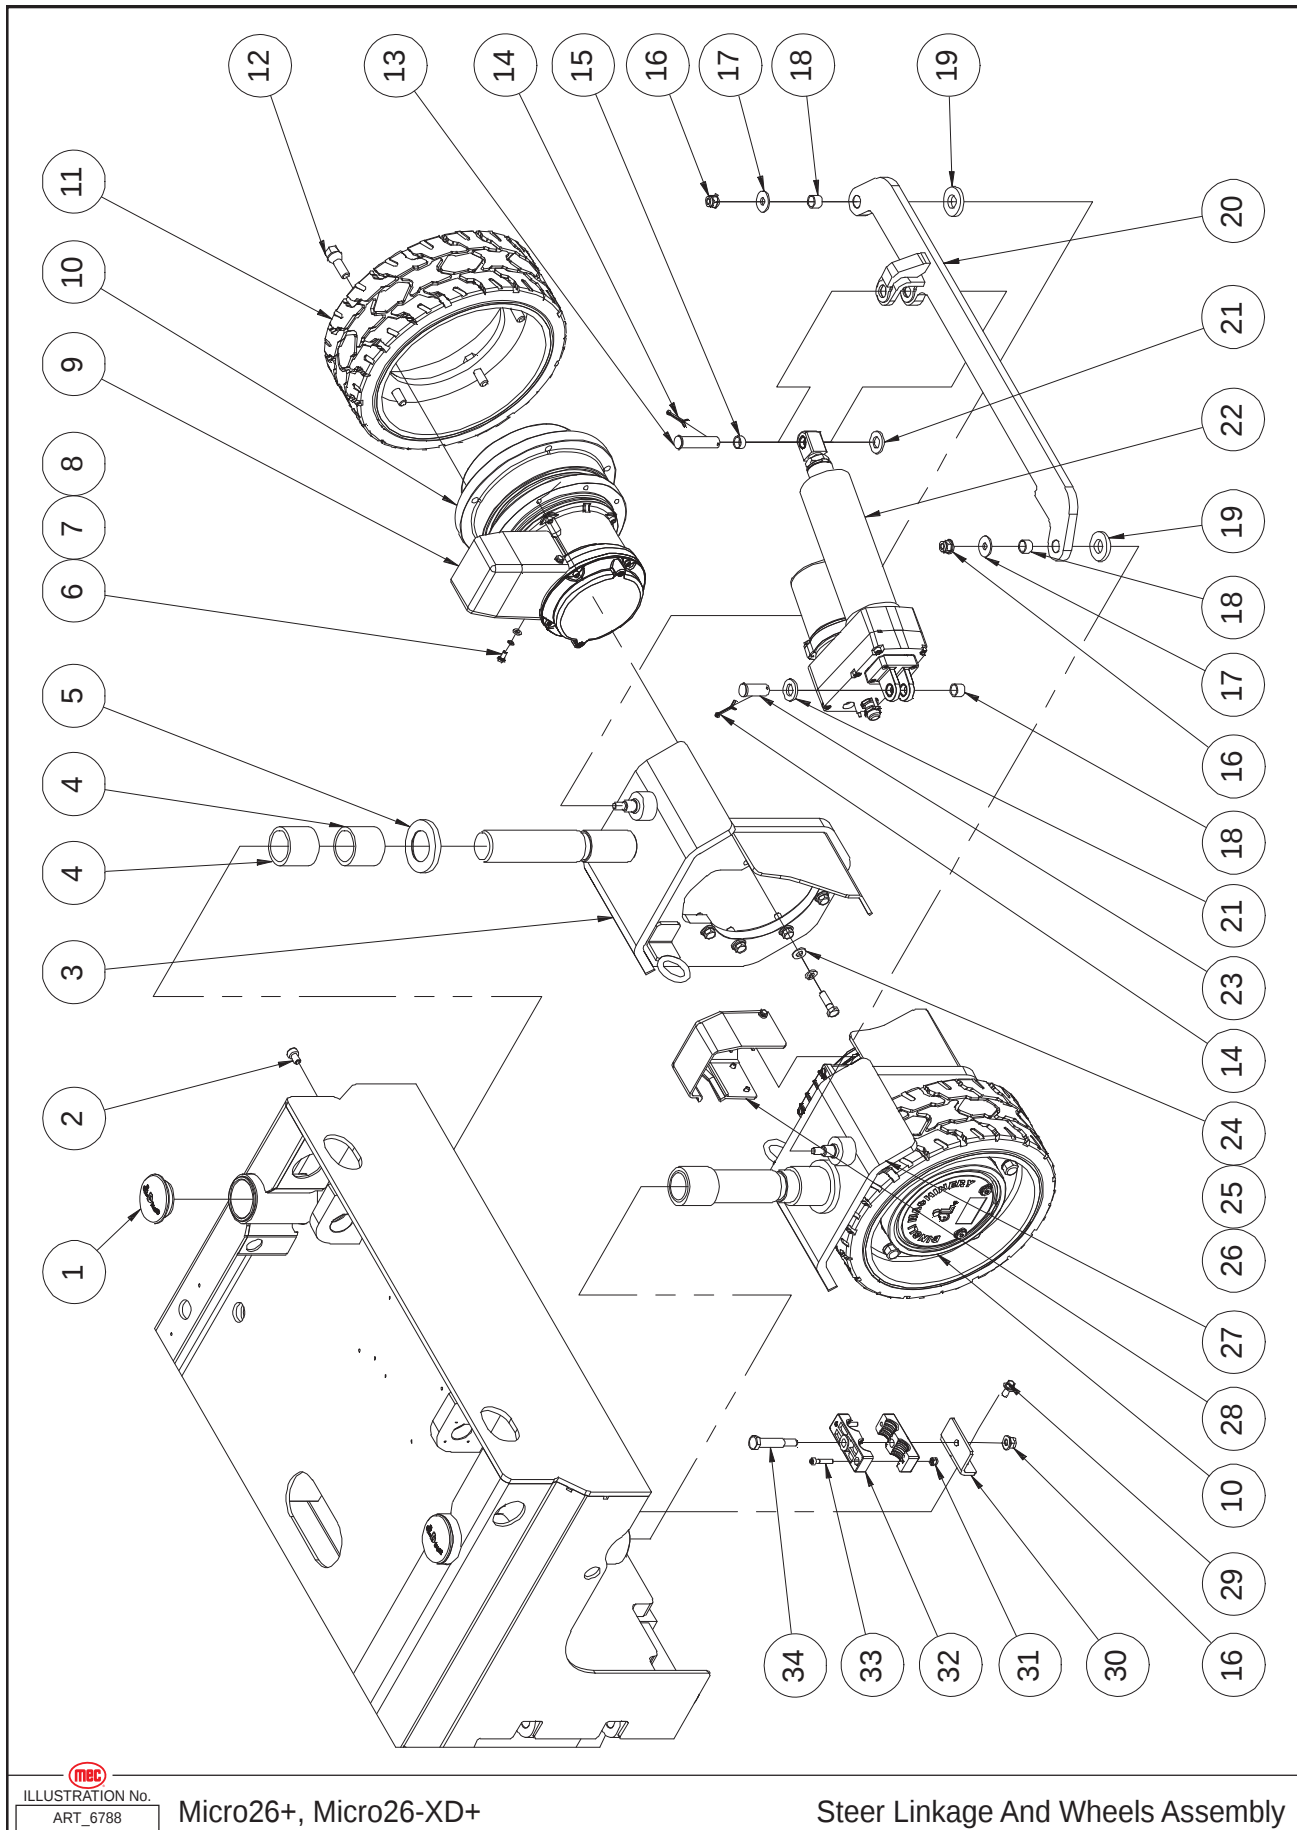



ILLUSTRATION No.
ART_6788

Micro26+, Micro26-XD+

Steer Linkage And Wheels Assembly

Item	Part No.	Description	Qty.
1	45422	Cover, Chassis Steer Yoke Weldment	2
2	41794	Screw, Steering Wheels	2
3	49191	Steer Yoke Weldment	1
4	49192	Bearing, Steer Yoke Weldment	4
5	49193	Washer, Steer Yoke Weldment	2
6	53104	Screw HHCS M06-1.00 × 12 ZP	6
7	53046	WSHR M06 Spring Washer ZP	6
8	50000	WSHR M06 Standard Flat Washer ZP	6
9	47486	Cover, Drive Motor Cable Left Hand	1
10	45948	Drive Motor Assembly, Black	2
--	46235	Reducer	1
--	62802	Motor (With Brake)	1
--	62753	Motor	1
--	62741	Brake	1
11	49786	Wheel, Front/Rear	2
12	46238	Tapered Wheel Lug Bolt	10
13	49385	Pin Long, Electric Steering Cylinder Support	1
14	60967	Cotter Pin, Electric Steering Cylinder Support	2
15	41225	Bearing, Steer Cylinder	1
16	50311	Nut NNYL M10-1.50 Flange ZP	3
17	53375	WSHR M10 Flat Fender Washer ZP	2
18	41210	Bearing, Axle	3
19	41814	Washer, Spacer	2
20	49386	Weldment, Steering Wheel Tie Rod	1
21	43564	Washer	2
22	49387	Assembly, Electric Steering Cylinder	1
--	49431	Electric Cylinder Unit	1
--	49432	Motor	1
23	41321	Pin Short, Electric Steering Cylinder Support	1
24	53317	WSHR 3/8 Standard Flat Narrow Washer ZP	14
25	53316	WSHR 3/8 Spring Washer ZP	14
26	53376	Screw HHCS 3/8-16 × 1 3/8 ZP	14
27	49195	Steer Yoke Weldment	1
28	47485	Cover, Drive Motor Cable Right Hand	1
29	53194	Screw HHCS M08-1.25 × 16 Serrated Flange ZP	2
30	44343	Hose Clamp Support	1
31	50047	Nut NNYL M06-1.00 ZP	2
32	45313	Hose Clamp	2
33	53207	Screw SHCS M06-1.00 × 30 ZP	2
34	45420	Bolt, Hose Clamp	1

Pothole Protection Assembly

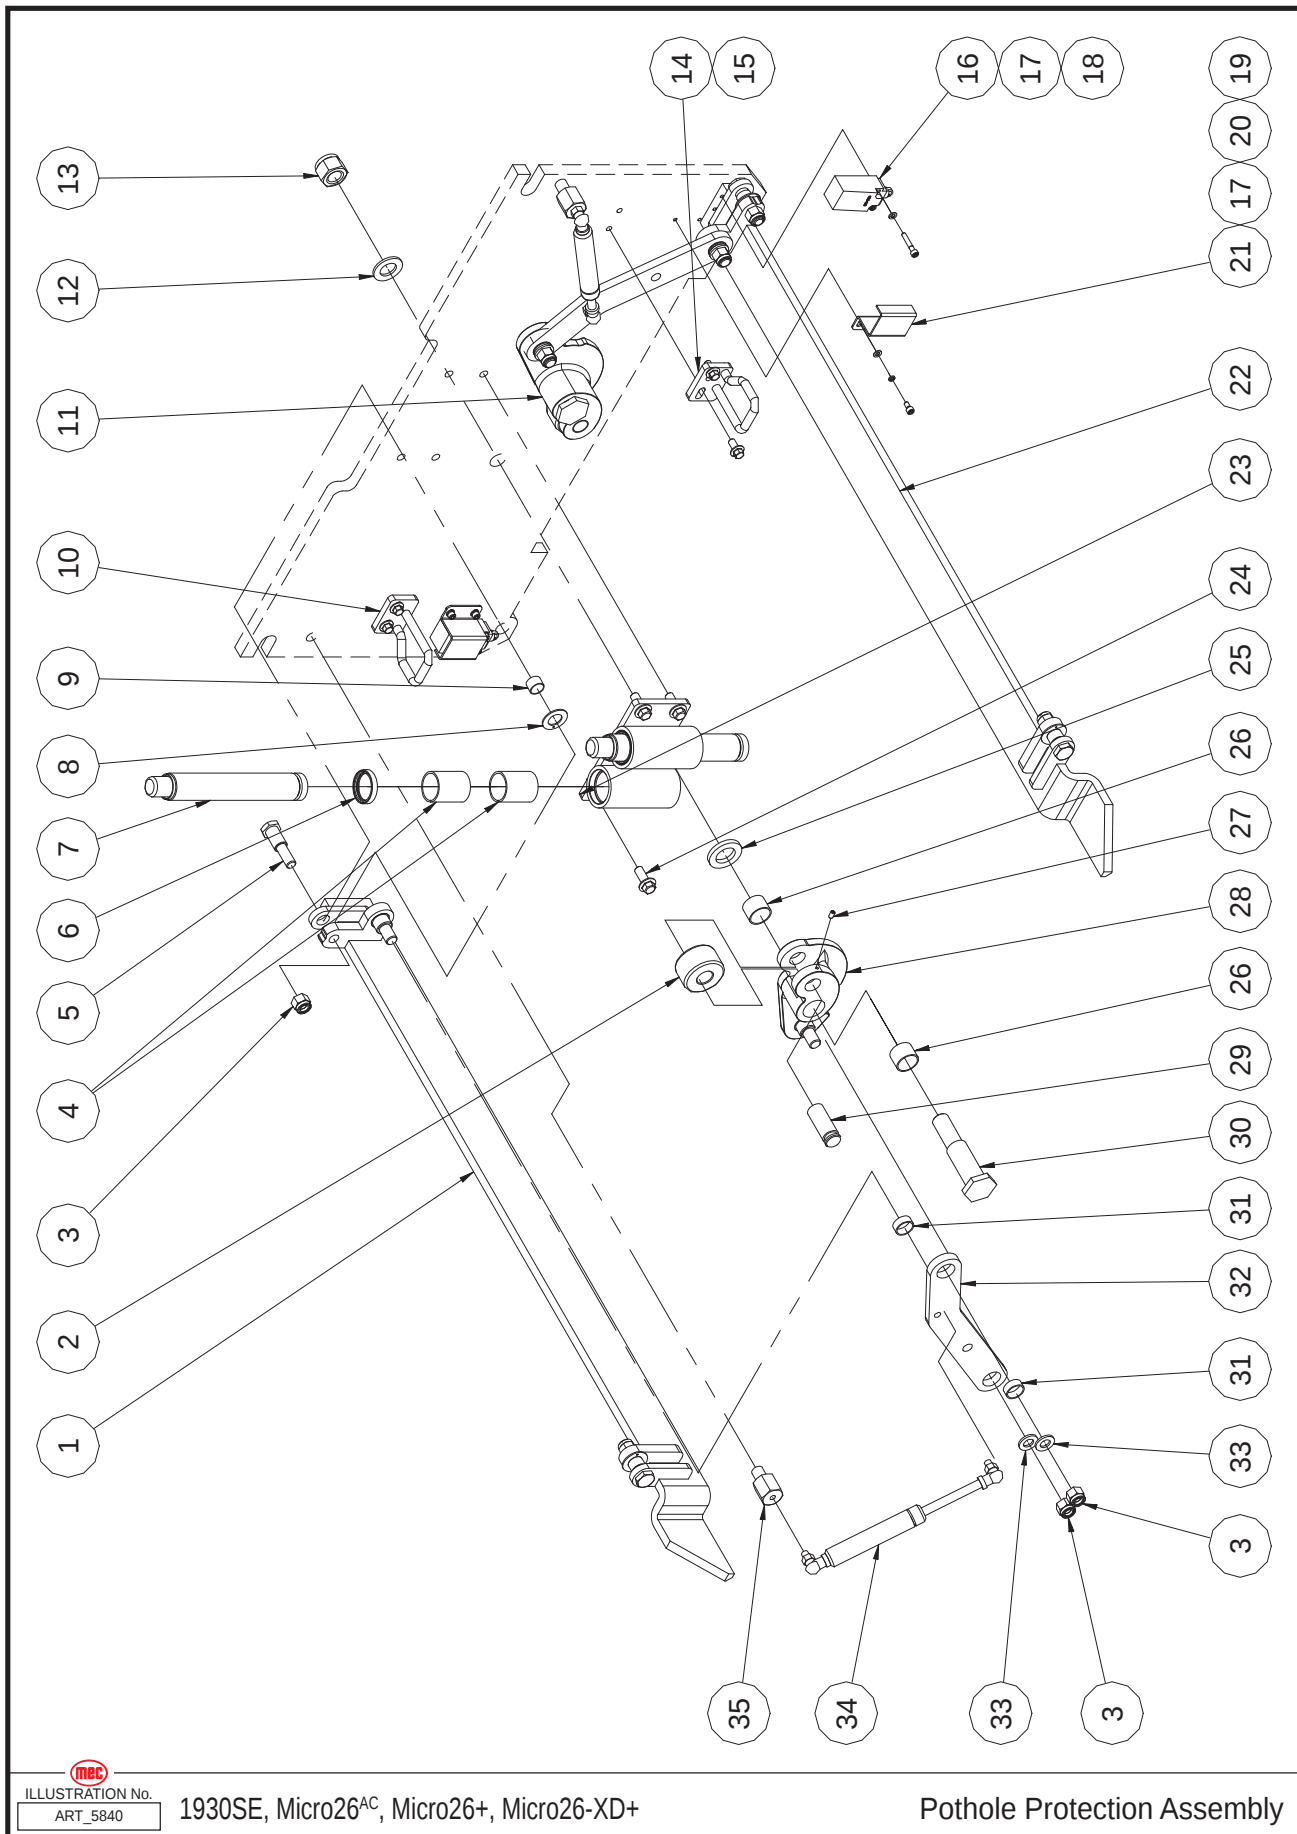

mec
ILLUSTRATION No.
ART_5840

1930SE, Micro26^{AC}, Micro26+, Micro26-XD+

Pothole Protection Assembly

Item	Part No.	Description	Qty.
1	49196	Pothole Guard Weldment	1
2	41049	Roller, Wheel	2
3	50050	Nut NNYL M12-1.75 ZP	8
4	43568	Bearing, Pothole Hole Pusher	4
5	41604	Pin, Shoulder Bolt	4
6	44889	Seal	2
7	61085	Pothole Protection, Hole Pusher Assembly	2
8	41222	Bearing, Thrust Washer	4
9	41210	Bearing, Axle	4
10	41807	Lock Clasp	1
11	47093	Pothole Midlinkage Weldment Left Hand	1
12	50005	WSHR M20 Standard Flat Washer ZP	2
13	50052	Nut NNYL M20-2.50 ZP	2
14	41808	Lock Clasp	1
15	53194	Screw HHCS M08-1.25 × 16 Serrated Flange ZP	4
16	46242	Limit Switch	2
17	53038	WSHR M05 Standard Flat Washer ZP	8
18	53171	Screw SHCS M05-0.80 × 30 ZP	4
19	53173	Screw SHCS M05-0.80 × 10 ZP	4
20	53043	WSHR M05 Spring Washer ZP	4
21	41035	Cover, Limit Switch	2
22	49197	Pothole Guard Weldment	1
23	44891	Pothole Guide	1
24	50429	Screw HHCS M10-1.50 × 25 Serrated Flange ZP	4
25	41040	Cushion, Thrust Washer	2
26	41046	Bearing, Orientation Pin	4
27	53283	Set Screw M05-0.80 × 10 Cone Point ZP	2
28	47092	Pothole Mid Linkage Weldment Right Hand	1
29	41048	Pin, Wheel	2
30	41047	Pin, Orientation	2
31	41214	Bearing, Pivot	4
32	49198	Pothole Link Plate	2
33	50003	WSHR M12 Standard Flat Washer ZP	4
34	41045	Gas Shock Spring	2
35	43573	Gas Shock Strut	2

Battery Pack Module

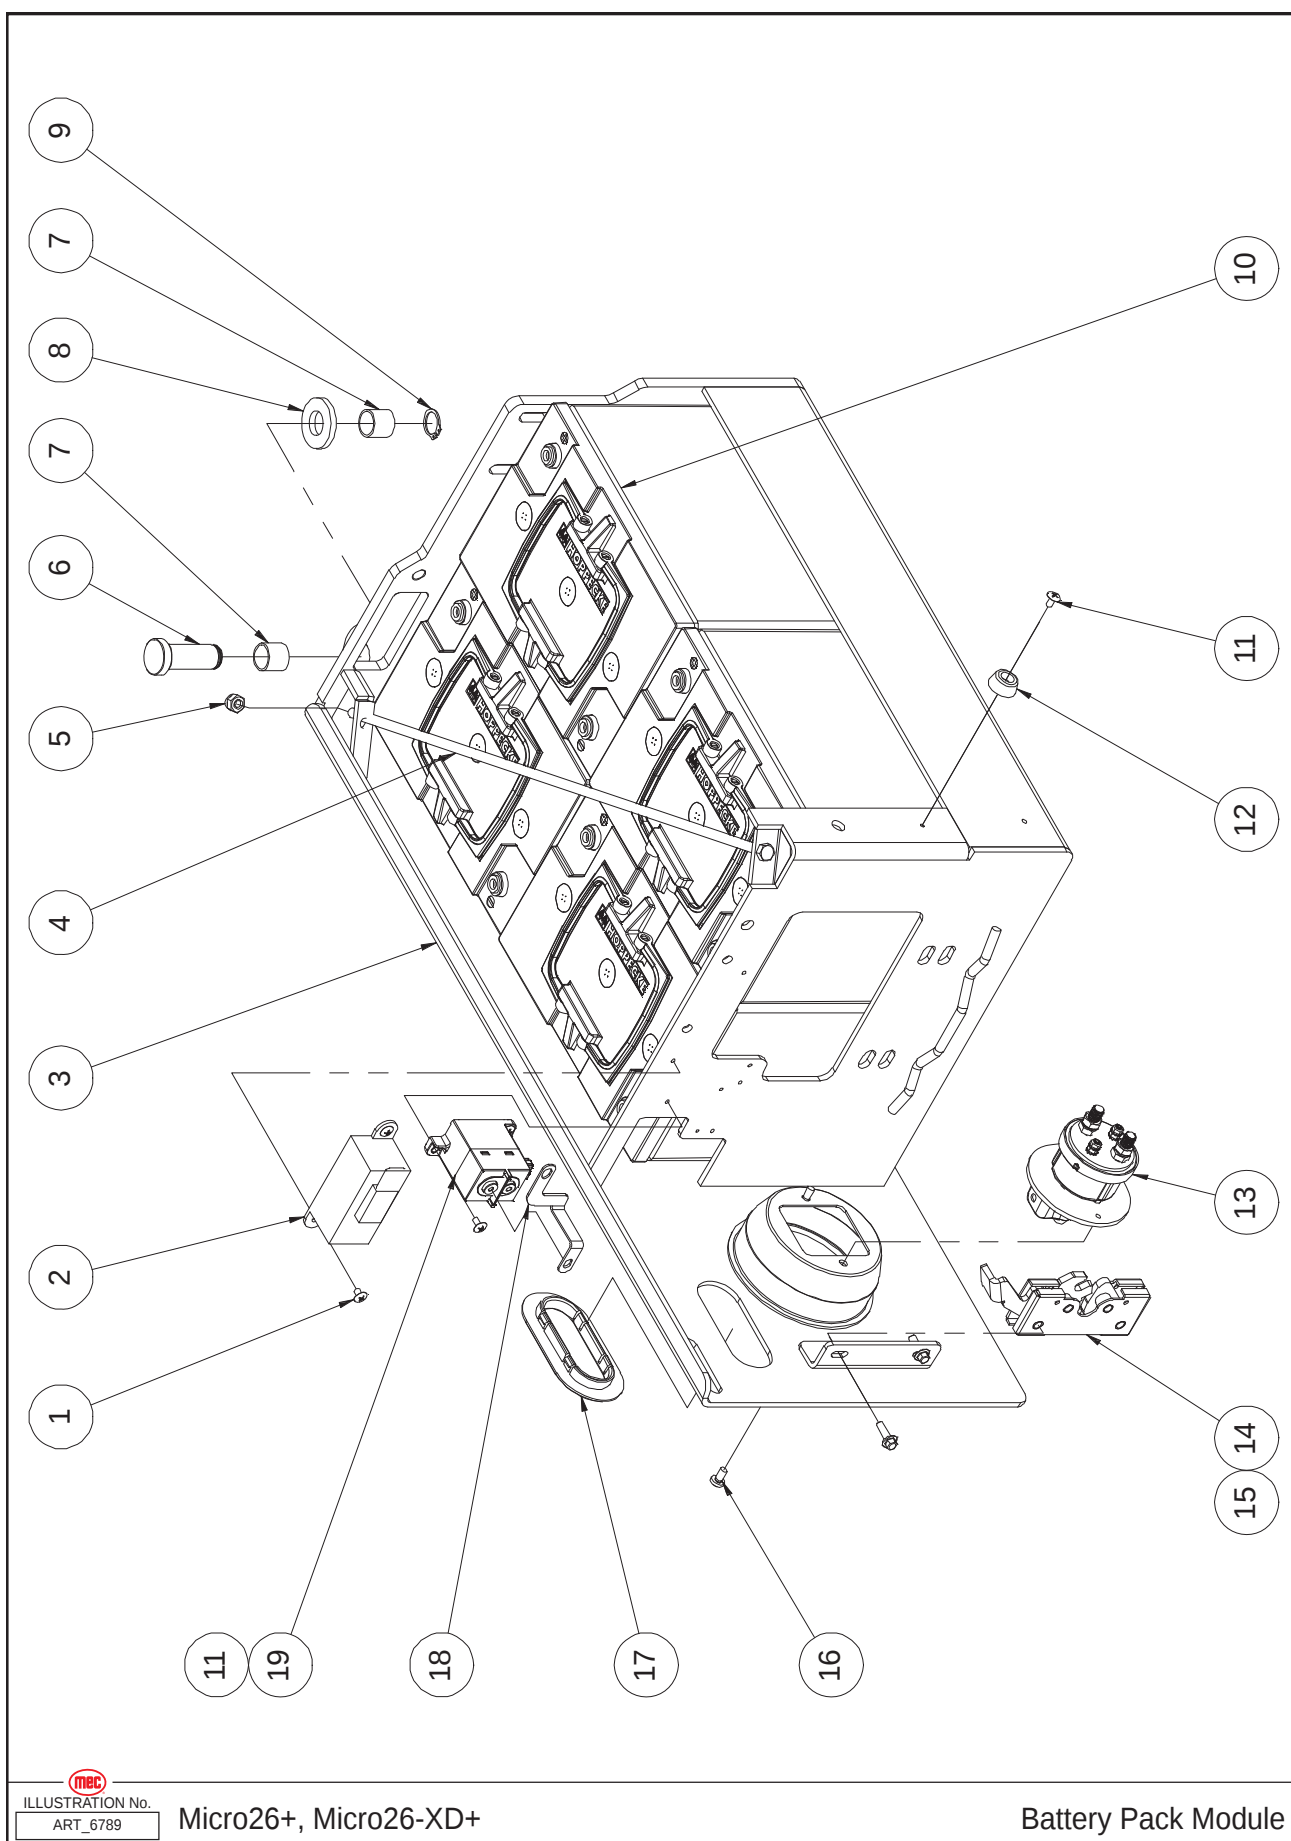


ILLUSTRATION No.
ART_6789

Micro26+, Micro26-XD+

Battery Pack Module

Item	Part No.	Description	Qty.
1	53451	Screw THMS M05-0.80 × 8 ZP	2
2	46246	250A Fuse Assembly	1
--	46247	250A Fuse	1
--	46248	Fuse Block	1
3	61086	Battery Module Weldment	1
4	41408	Threaded Rod, Battery Hold-Down	1
5	50048	Nut NNYL M08-1.25 ZP	1
6	41813	Hinge Pin	2
7	41037	Bearing, Hinge Pin	4
8	41814	Washer, Spacer	2
9	43574	Circlips, Hinge Pin	2
10	46244	Battery	4
11	53265	Screw THMS M05-0.80 × 10 ZP	3
12	41120	Bumper, Rubber Gasket	1
13	49899	Main Power Switch, Lockable	1
14	42896	Latch Lock, Battery Module	1
15	53255	Screw HHCS M06-1.00 × 20 Serrated Flange ZP	2
16	53318	Screw PHMS M06-1.00 × 12 ZP	2
17	41068	Handle Hole Ring	1
18	61087	Copper Row Connector, Contactor-250A Fuse Assembly	1
19	62748	Contactor	1

Control Module

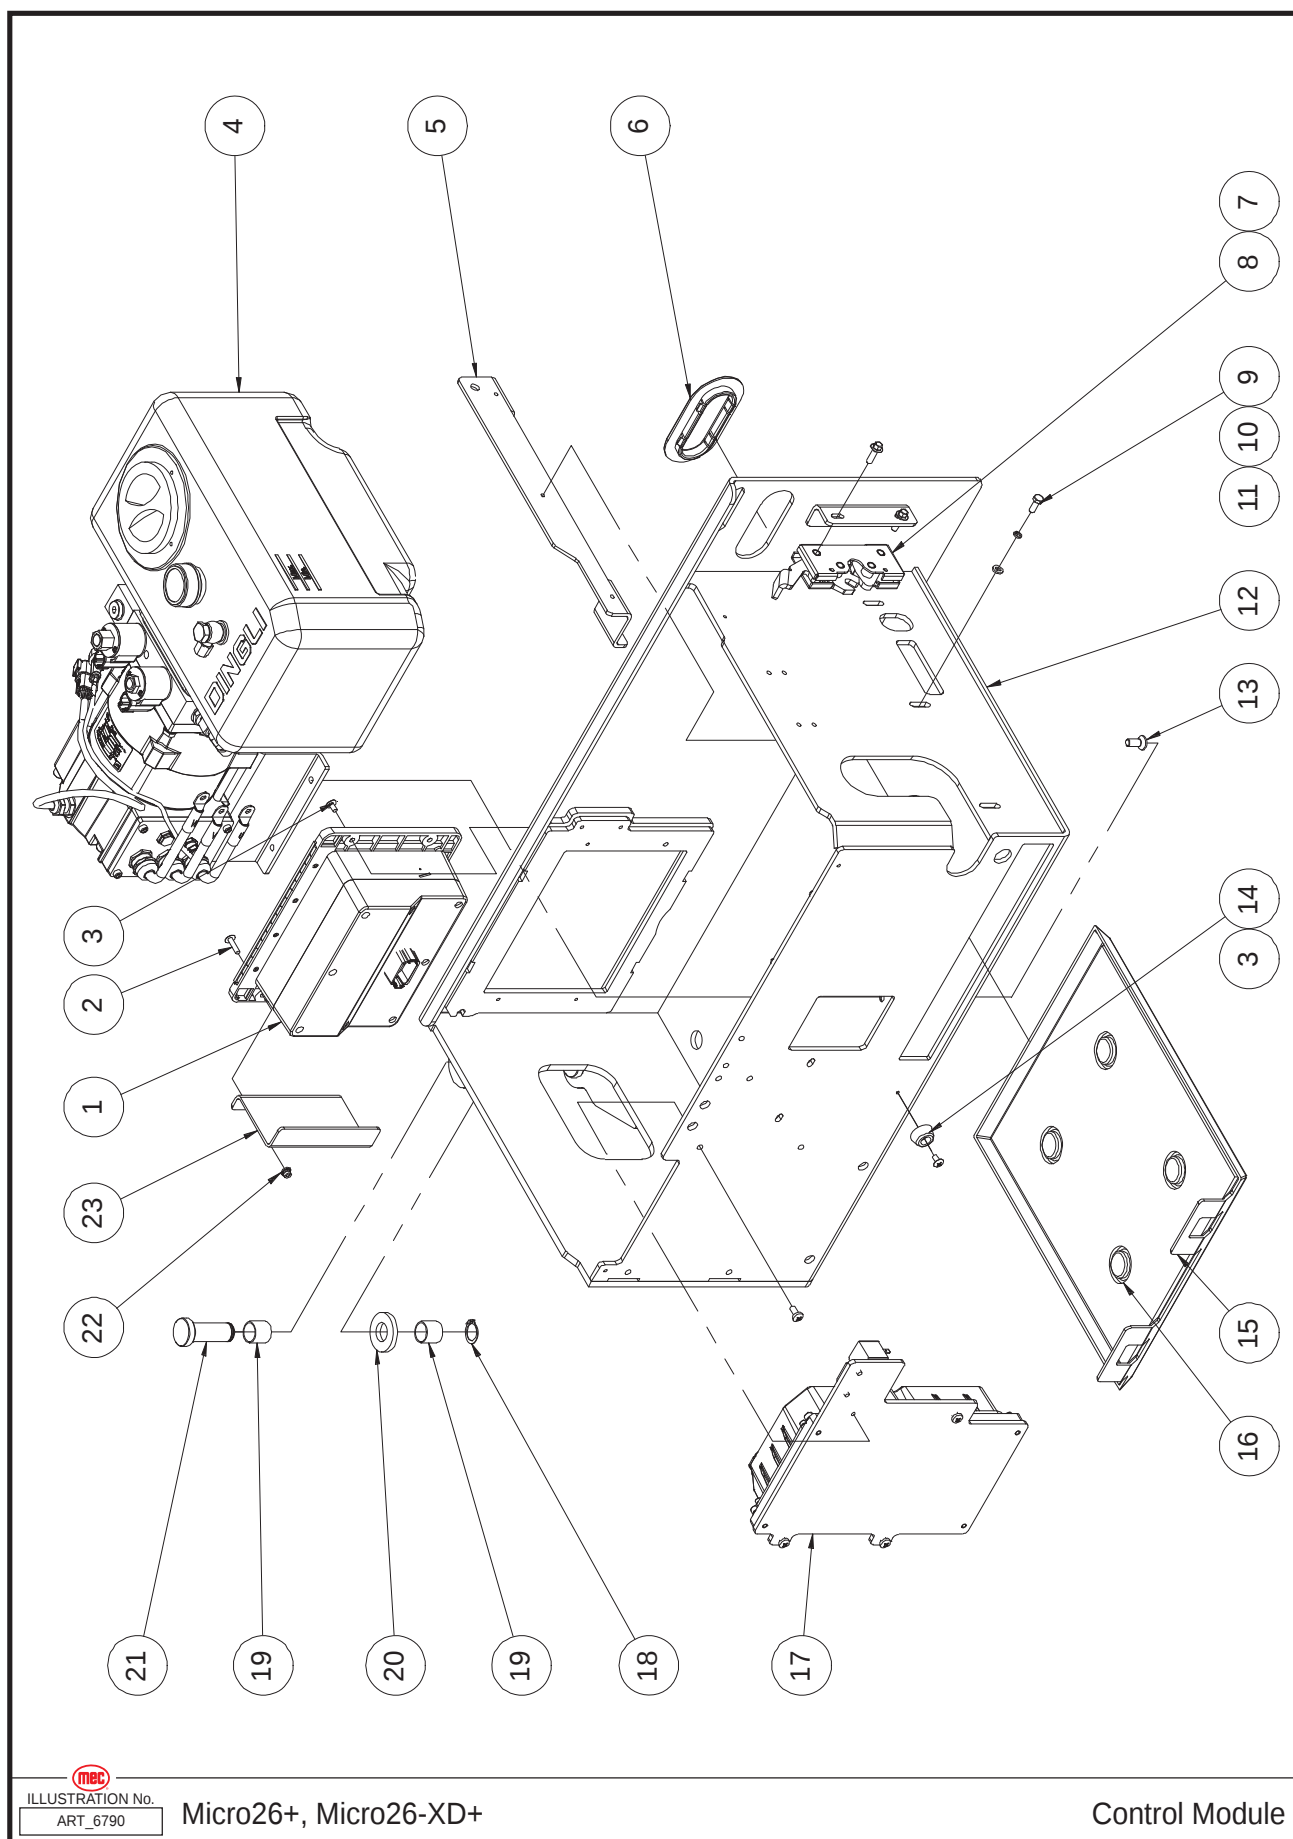


ILLUSTRATION No.
ART_6790

Micro26+, Micro26-XD+

Control Module

Item	Part No.	Description	Qty.
1	62723	Lower Control (YILI) (Refer to page 10)	1
2	53219	Screw THMS M05-0.80 × 20 ZP	2
3	53265	Screw THMS M05-0.80 × 10 ZP	5
4	REF	Hydraulic Power Unit Assembly (Refer to page 12)	1
5	62823	Hydraulic Tank Support	1
6	41068	Handle Hole Ring	1
7	53255	Screw HHCS M06-1.00 × 20 Serrated Flange ZP	2
8	41067	Latch Lock, Control Module	1
9	50445	Screw HHCS M06-1.00 × 16 ZP	3
10	53046	WSHR M06 Spring Washer ZP	7
11	50000	WSHR M06 Standard Flat Washer ZP	7
12	61088	Hydraulic Tray Weldment, Control Module	1
13	53282	Screw CPCS M08-1.25 × 20 ZP	4
14	41120	Bumper, Rubber Gasket	1
15	61089	LCS Drip Pan, Control Module (Pad Is 61090)	1
16	61090	Oil Absorbent Pad (For 61089)	1
17	REF	Motor Controller Assembly (Refer to page 16)	1
18	43574	Circlips, Hinge Pin	2
19	41037	Bearing, Hinge Pin	4
20	41814	Washer, Spacer	2
21	41813	Hinge Pin	2
22	53281	Nut NNYL M05-0.80 Flange ZP	2
23	61091	Cover Side, Lower Control	1

REF - Reference

Lower Control (YILI)

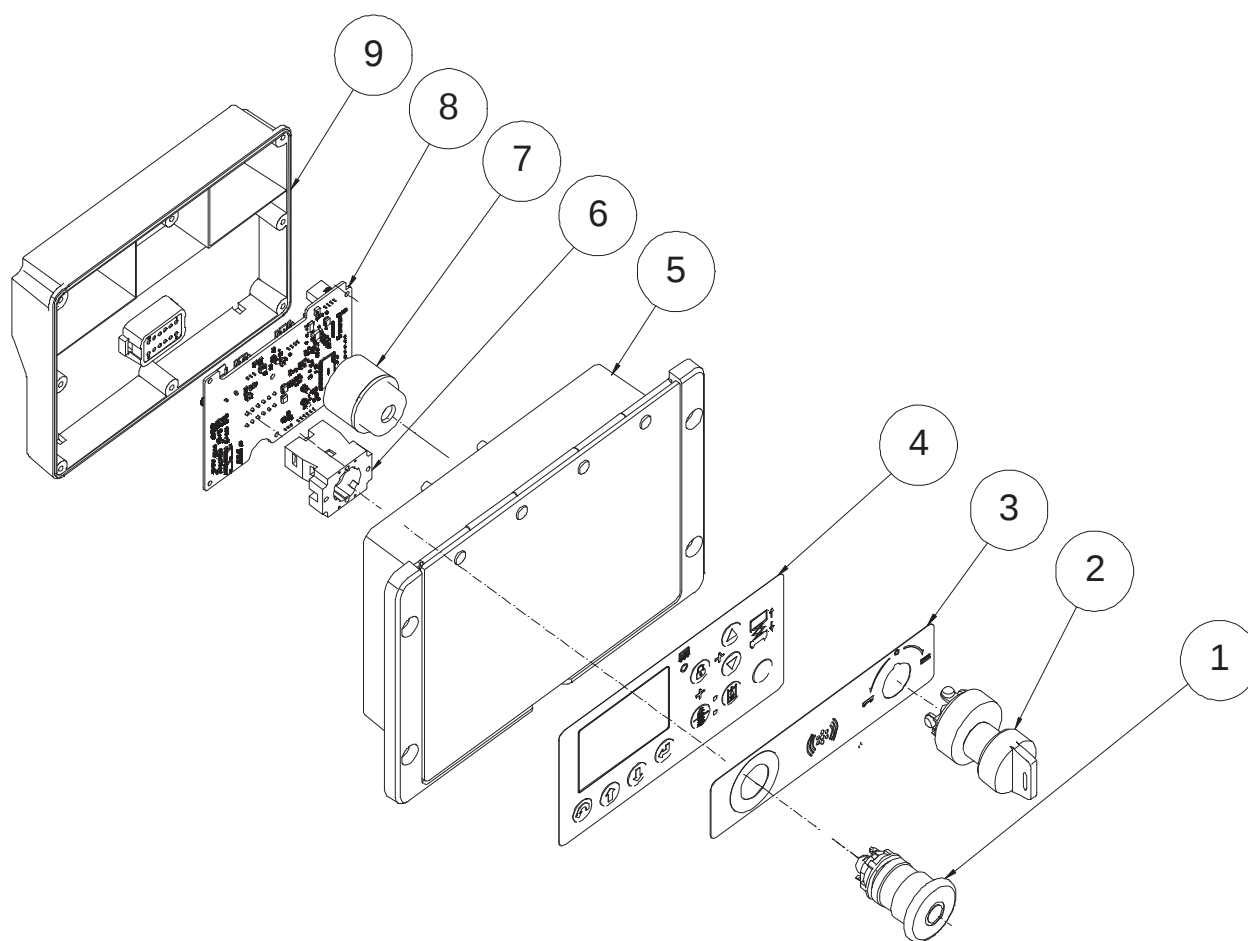


ILLUSTRATION No.
ART_6677


PLUS (+) Series

Ground Control (YILI)



Item	Part No.	Description	Qty.
1	43632	Red Mushroom Head	1
2	62781	Key Switch	1
3	49776	Decal - Lower Controls Top Half, E-Stop & Key Switch	1
4	49777	Decal - Lower Controls Bottom Half, LED Display & Buttons	1
5	61015	Lower Control Housing Components, Upper Half	1
--	61016	Lower Control Clear Cover Assembly	1
6	43633	Base With 1 NO Contact	1
7	61017	Alarm, Lower Control	1
8	61018	Main Board, Lower Control	1
9	61019	Lower Control Housing Components, Lower Half	1

Hydraulic Power Unit Assembly

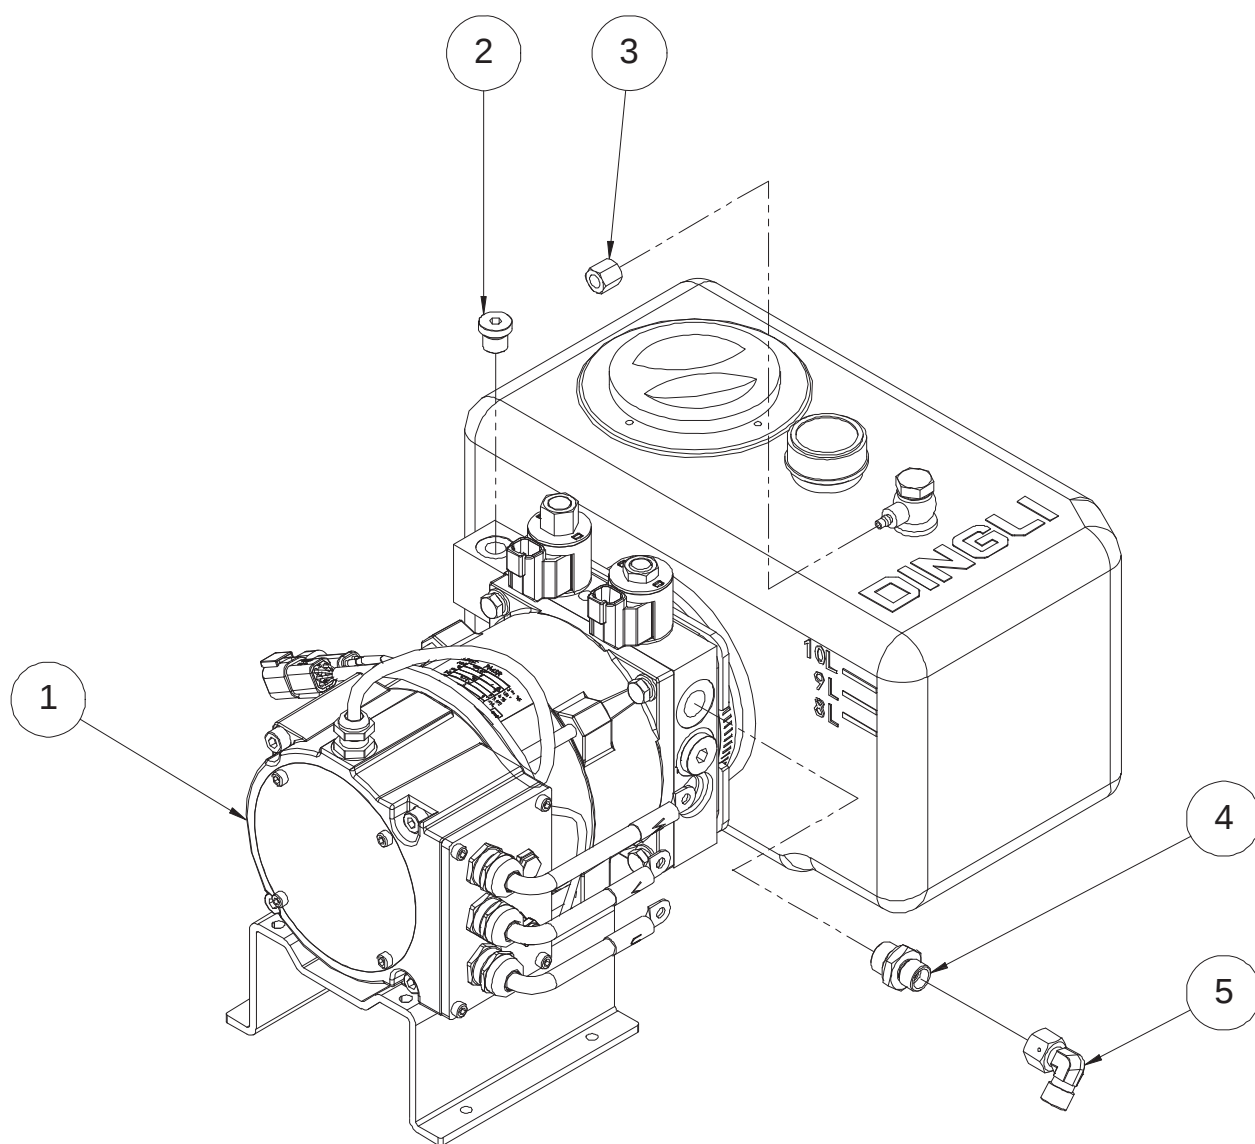

Item	Part No.	Description	Qty.
1	62756	Hydraulic Power Unit (Refer to page 14)	1
2	42480	Plug	1
3	41413	Nut	1
4	43638	Straight Fitting	1
5	43639	Elbow	1

Hydraulic Power Unit

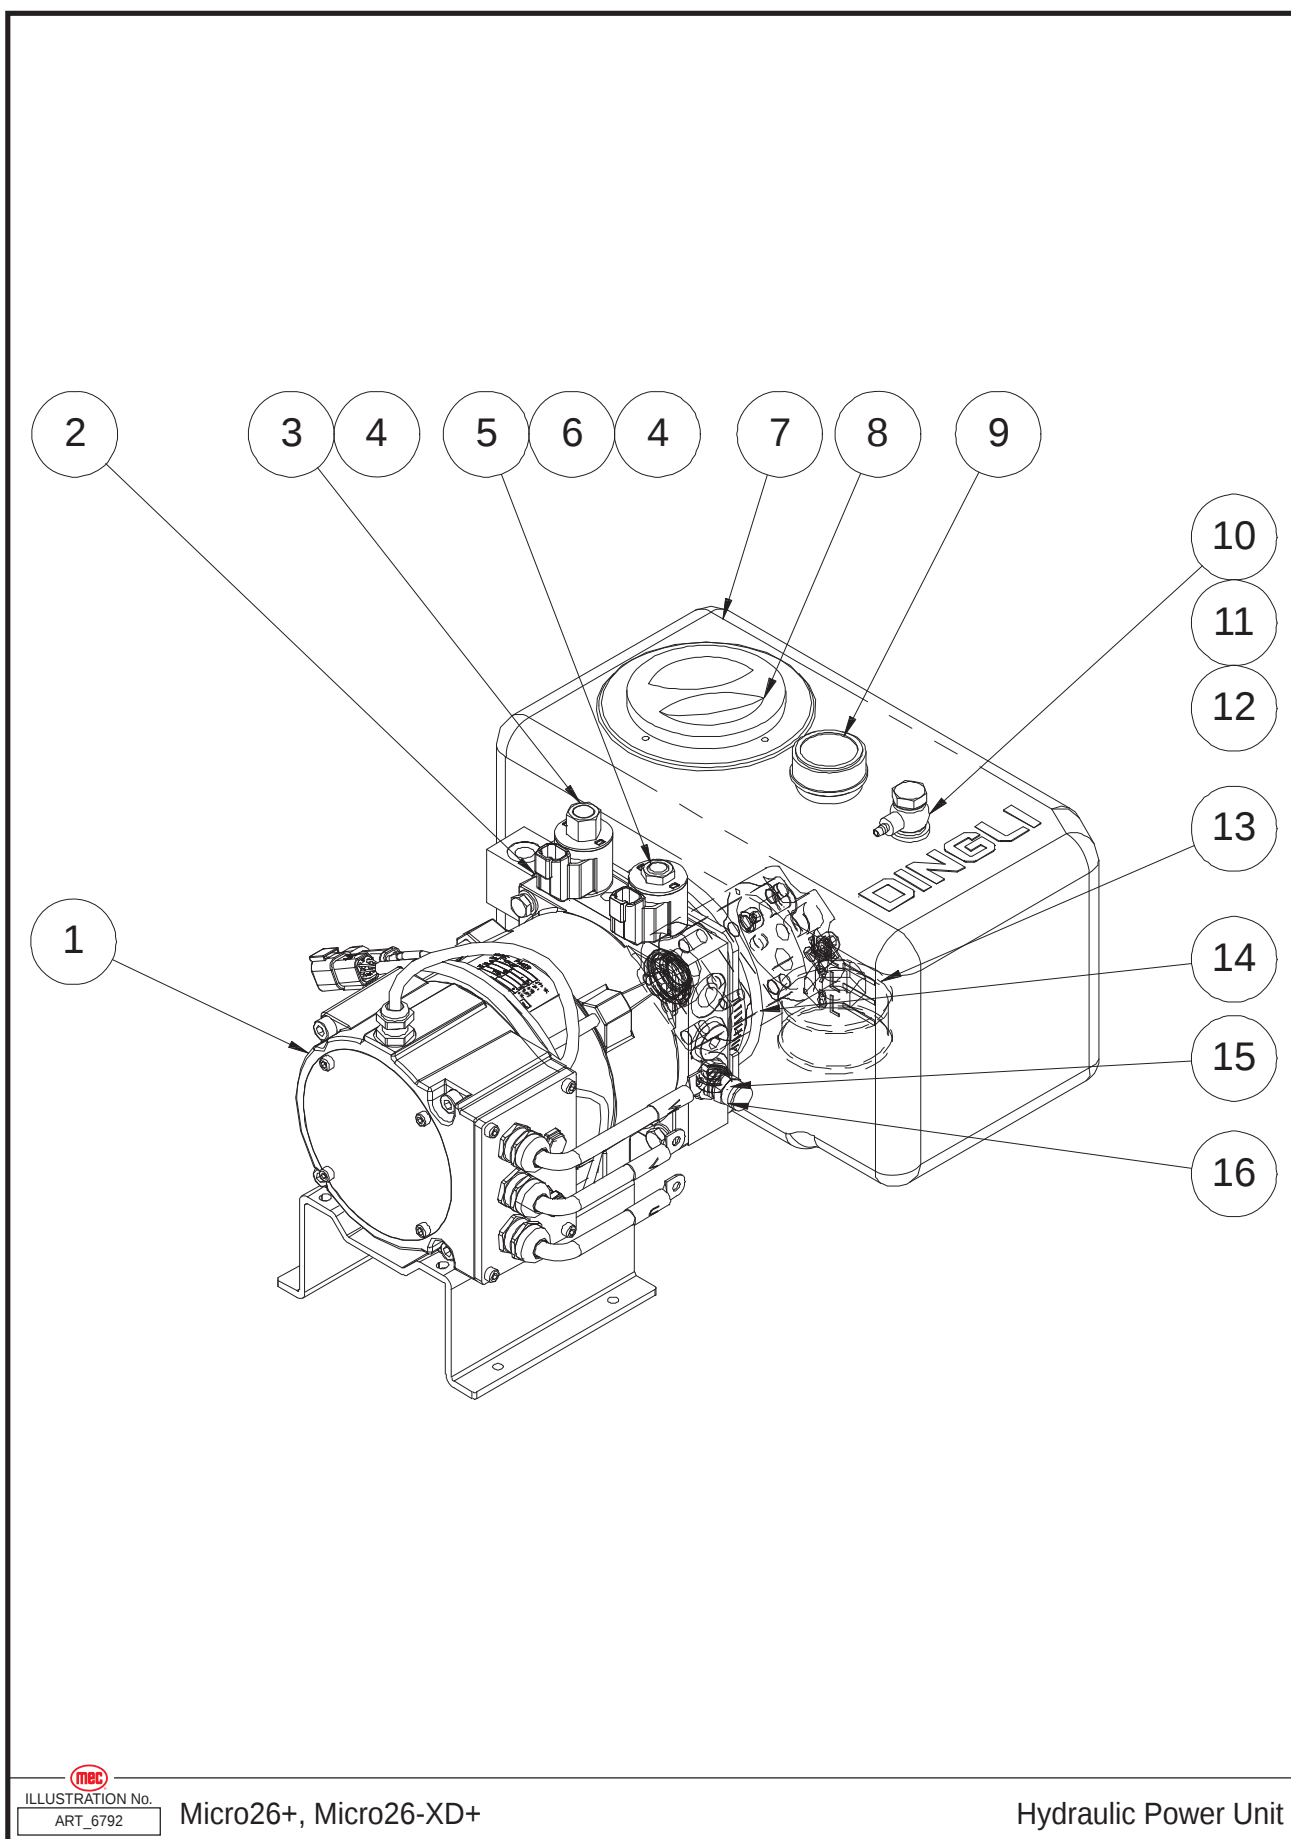



ILLUSTRATION No.
ART_6792

Micro26+, Micro26-XD+

Hydraulic Power Unit

Item	Part No.	Description	Qty.
1	62799	Motor, Pump	1
--	62740	Coupling	1
2	61020	Valve Body, Hydraulic Power Unit	1
3	62800	Solenoid Valve Spool	1
4	62845	Coil	2
5	62801	Solenoid Valve Spool	1
6	53362	Nut NHEX 1/2-20 UNF ZP	1
7	61092	Tank, Hydraulic	1
8	61093	Cover, Hydraulic Tank	1
9	62734	Tank Cover	1
10	41167	Fitting, Piecing Devices	1
11	41166	Fitting, Pipeline Bolt	1
12	44002	Washer	2
13	62739	Filter Web	1
14	62757	Pump	1
15	41087	Plug Screw	1
16	61094	Relief Valve, Hydraulic Tank	1

Motor Controller Assembly

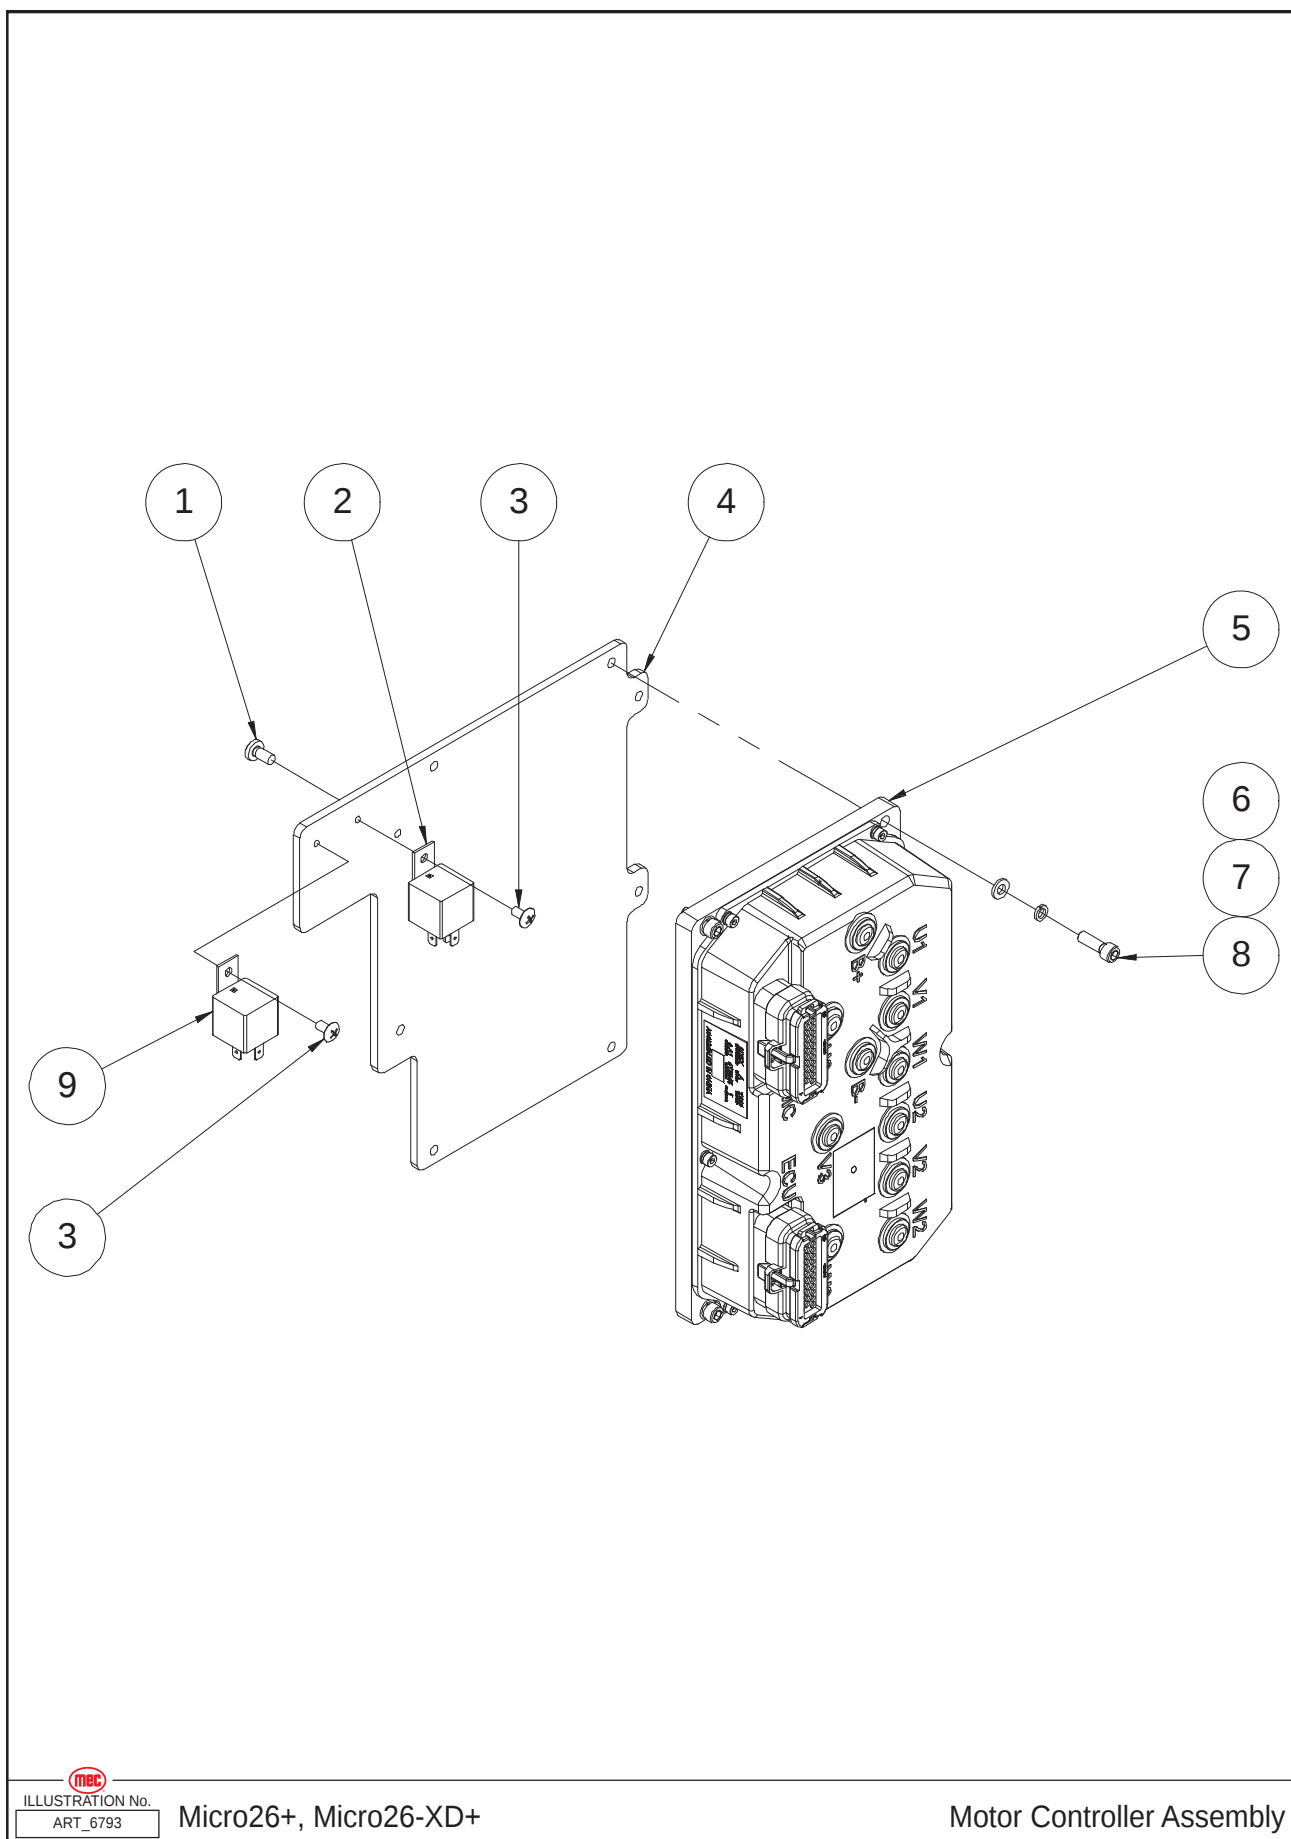

Item	Part No.	Description	Qty.
1	53318	Screw PHMS M06-1.00 × 12 ZP	4
2	62747	Relay	1
3	53265	Screw THMS M05-0.80 × 10 ZP	2
4	61095	Mounting Plate, Motor Controller	1
5	62728	Motor Controller (Santrol)	1
6	50000	WSHR M06 Standard Flat Washer ZP	4
7	53046	WSHR M06 Spring Washer ZP	4
8	53124	Screw SHCS M06-1.00 × 20 ZP	4
9	46252	Relay	1

Rear Wheel and Ladder

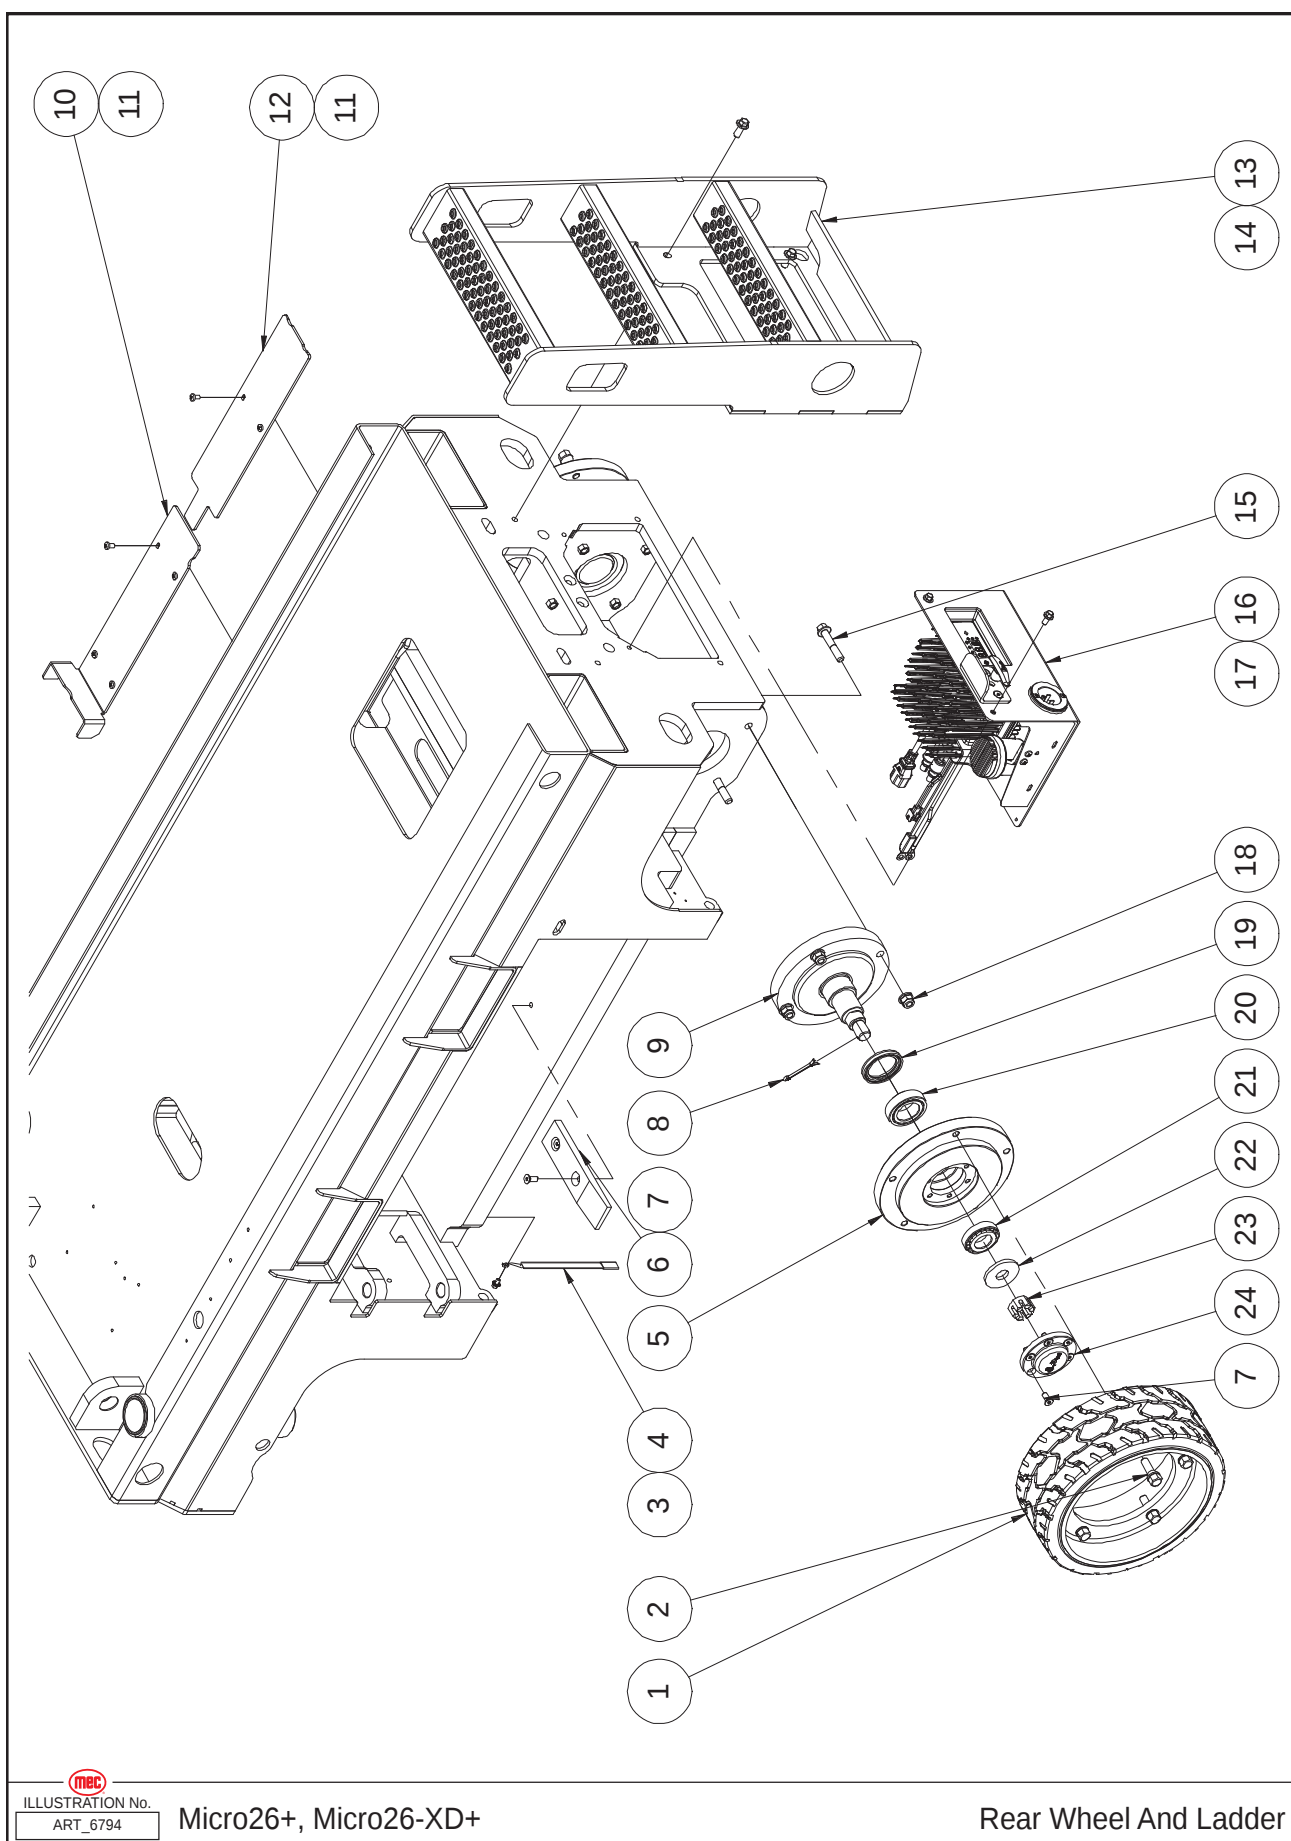


ILLUSTRATION No.
ART_6794

Micro26+, Micro26-XD+

Rear Wheel And Ladder

Item	Part No.	Description	Qty.
1	49786	Wheel, Front/Rear	1
2	46238	Tapered Wheel Lug Bolt	10
3	53260	Screw HHCS M06-1.00 × 10 Serrated Flange ZP	1
4	41003	Ground Strap, Electrical Static	1
5	41025	Bearing Seat	2
6	41002	Spacer, Bearing Seat	2
7	53282	Screw CSCS M08-1.25 × 20 ZP	16
8	43585	Cotter Pin, Spindle	2
9	43586	Spindle	2
10	61096	Baffle 1 Upper, Bottom	1
11	53318	Screw PHMS M06-1.00 × 12 ZP	6
12	61097	Baffle 2 Lower, Bottom	1
13	43587	Ladder	1
14	50429	Screw HHCS M10-1.50 × 25 Serrated Flange ZP	4
15	53290	Screw HHCS M12-1.75 × 65 Flange ZP	8
16	REF	Battery Charger Assembly (Refer to page 20)	1
17	53194	Screw HHCS M08-1.25 × 16 Serrated Flange ZP	2
18	53261	Nut NNYL M12-1.75 Flange ZP	8
19	43588	Seal	2
20	41029	Bearing, Inner	2
21	41024	Bearing, Outer	2
22	41304	Washer, Outer Bearing	2
23	53262	Castle Nut M22-1.50 ZP	2
24	41237	Cap, Shaft End Cover Plate	2

REF - Reference

Battery Charger Assembly

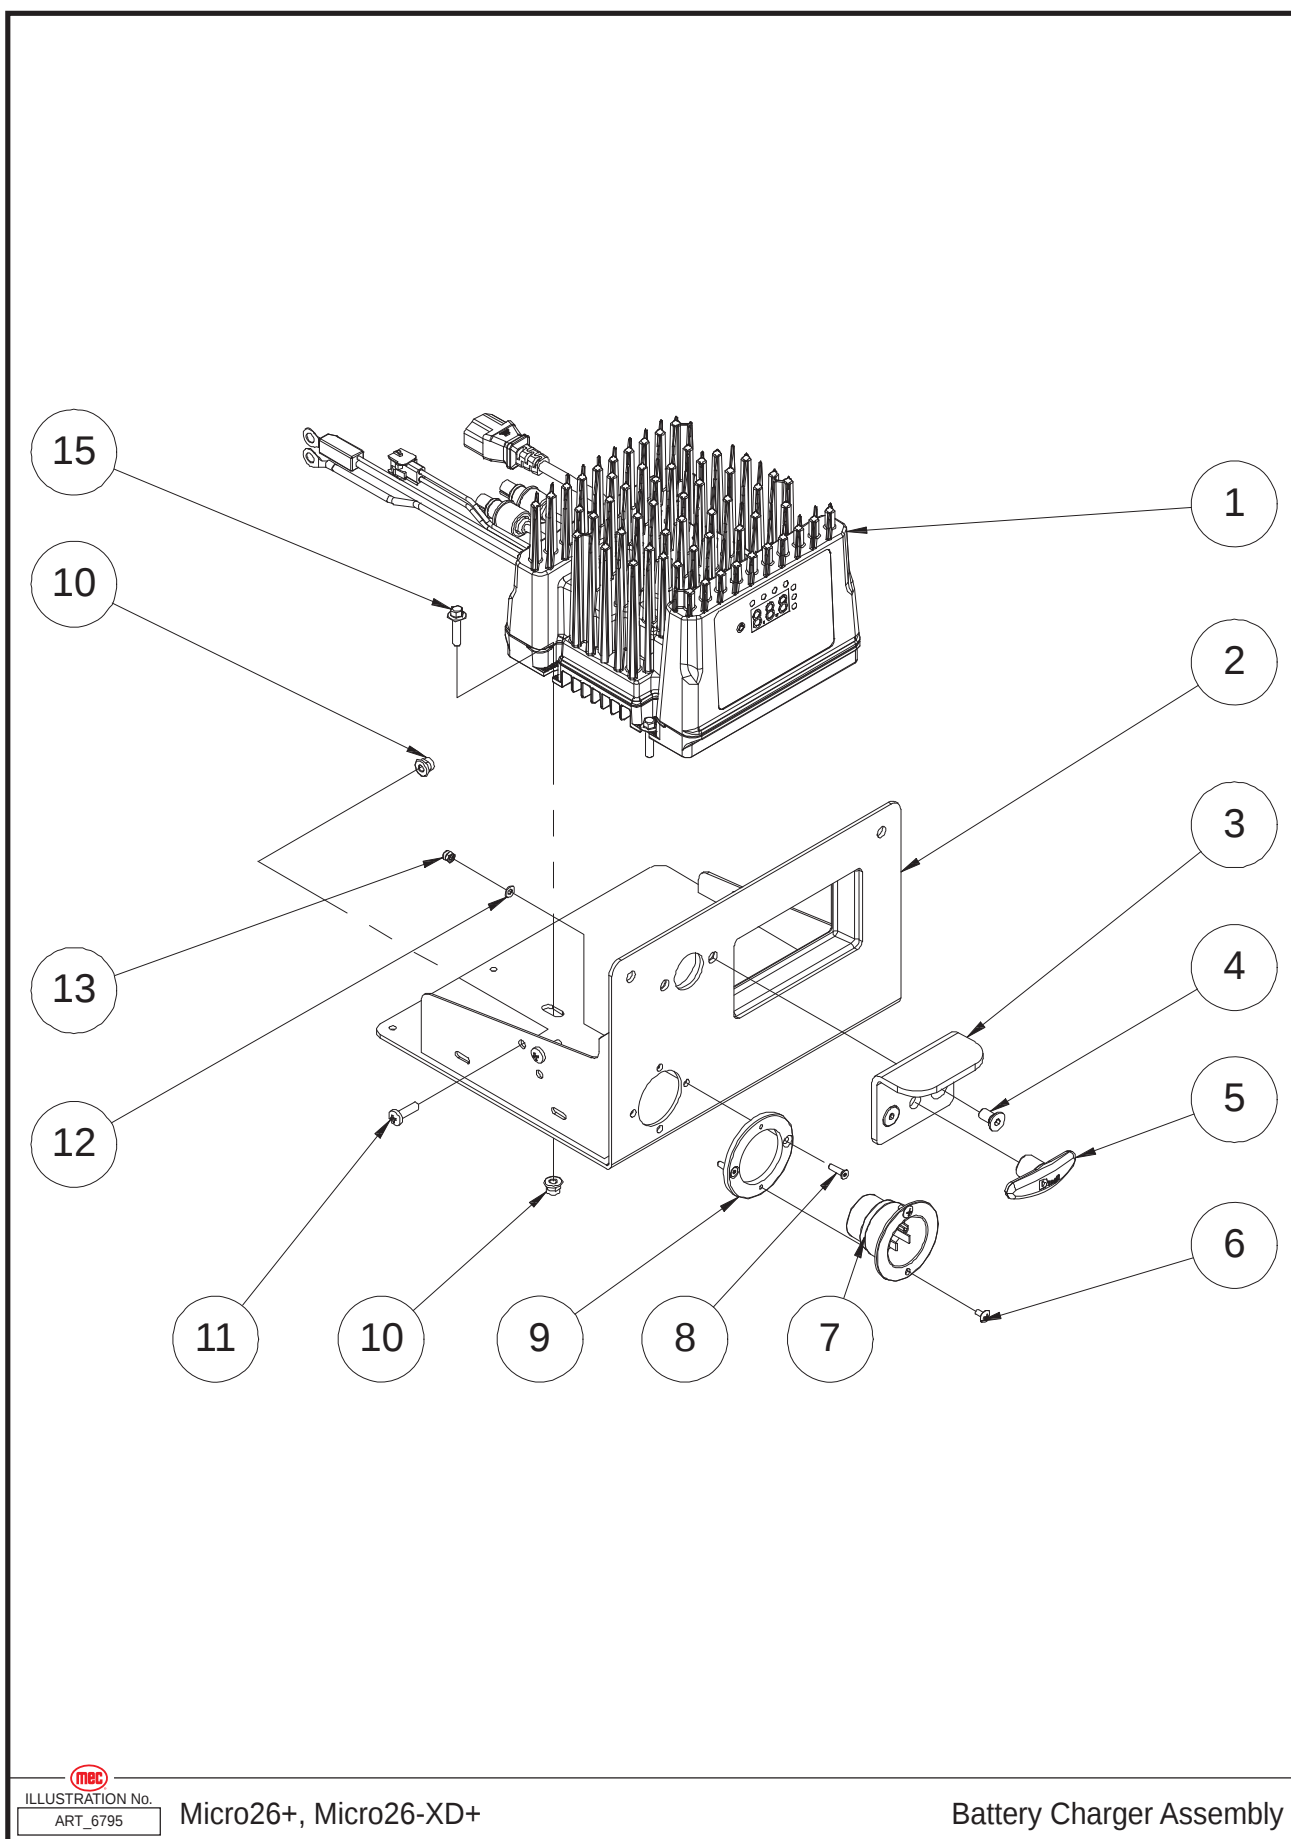


ILLUSTRATION No.
ART_6795

Micro26+, Micro26-XD+

Battery Charger Assembly

Item	Part No.	Description	Qty.
1	49189	Charger, Battery	1
2	62758	Battery Charger Bracket	1
3	62824	Lowering Handle Bracket	1
4	53434	Screw CSCS M08-1.25 × 16 ZP	2
5	43367	Lowering Knob	1
6	53263	Screw THMS M04-0.70 × 8 ZP	2
7	41575	AC Plug, Input Socket	1
8	53221	Screw CSCS M04-0.70 × 16 ZP	2
9	43591	Bracket, AC Plug	1
10	50568	Nut NNYL M06-1.00 Flange ZP	6
11	53264	Screw PHMS M06-1.00 × 20 ZP	2
12	50284	WSHR M04 Standard Flat Washer ZP	2
13	50285	Nut NNYL M04-0.70 ZP	2
14	--	--	--
15	53432	Screw HHCS M06-1.00 × 25 Serrated Flange ZP	4

Chassis Accessory Installation

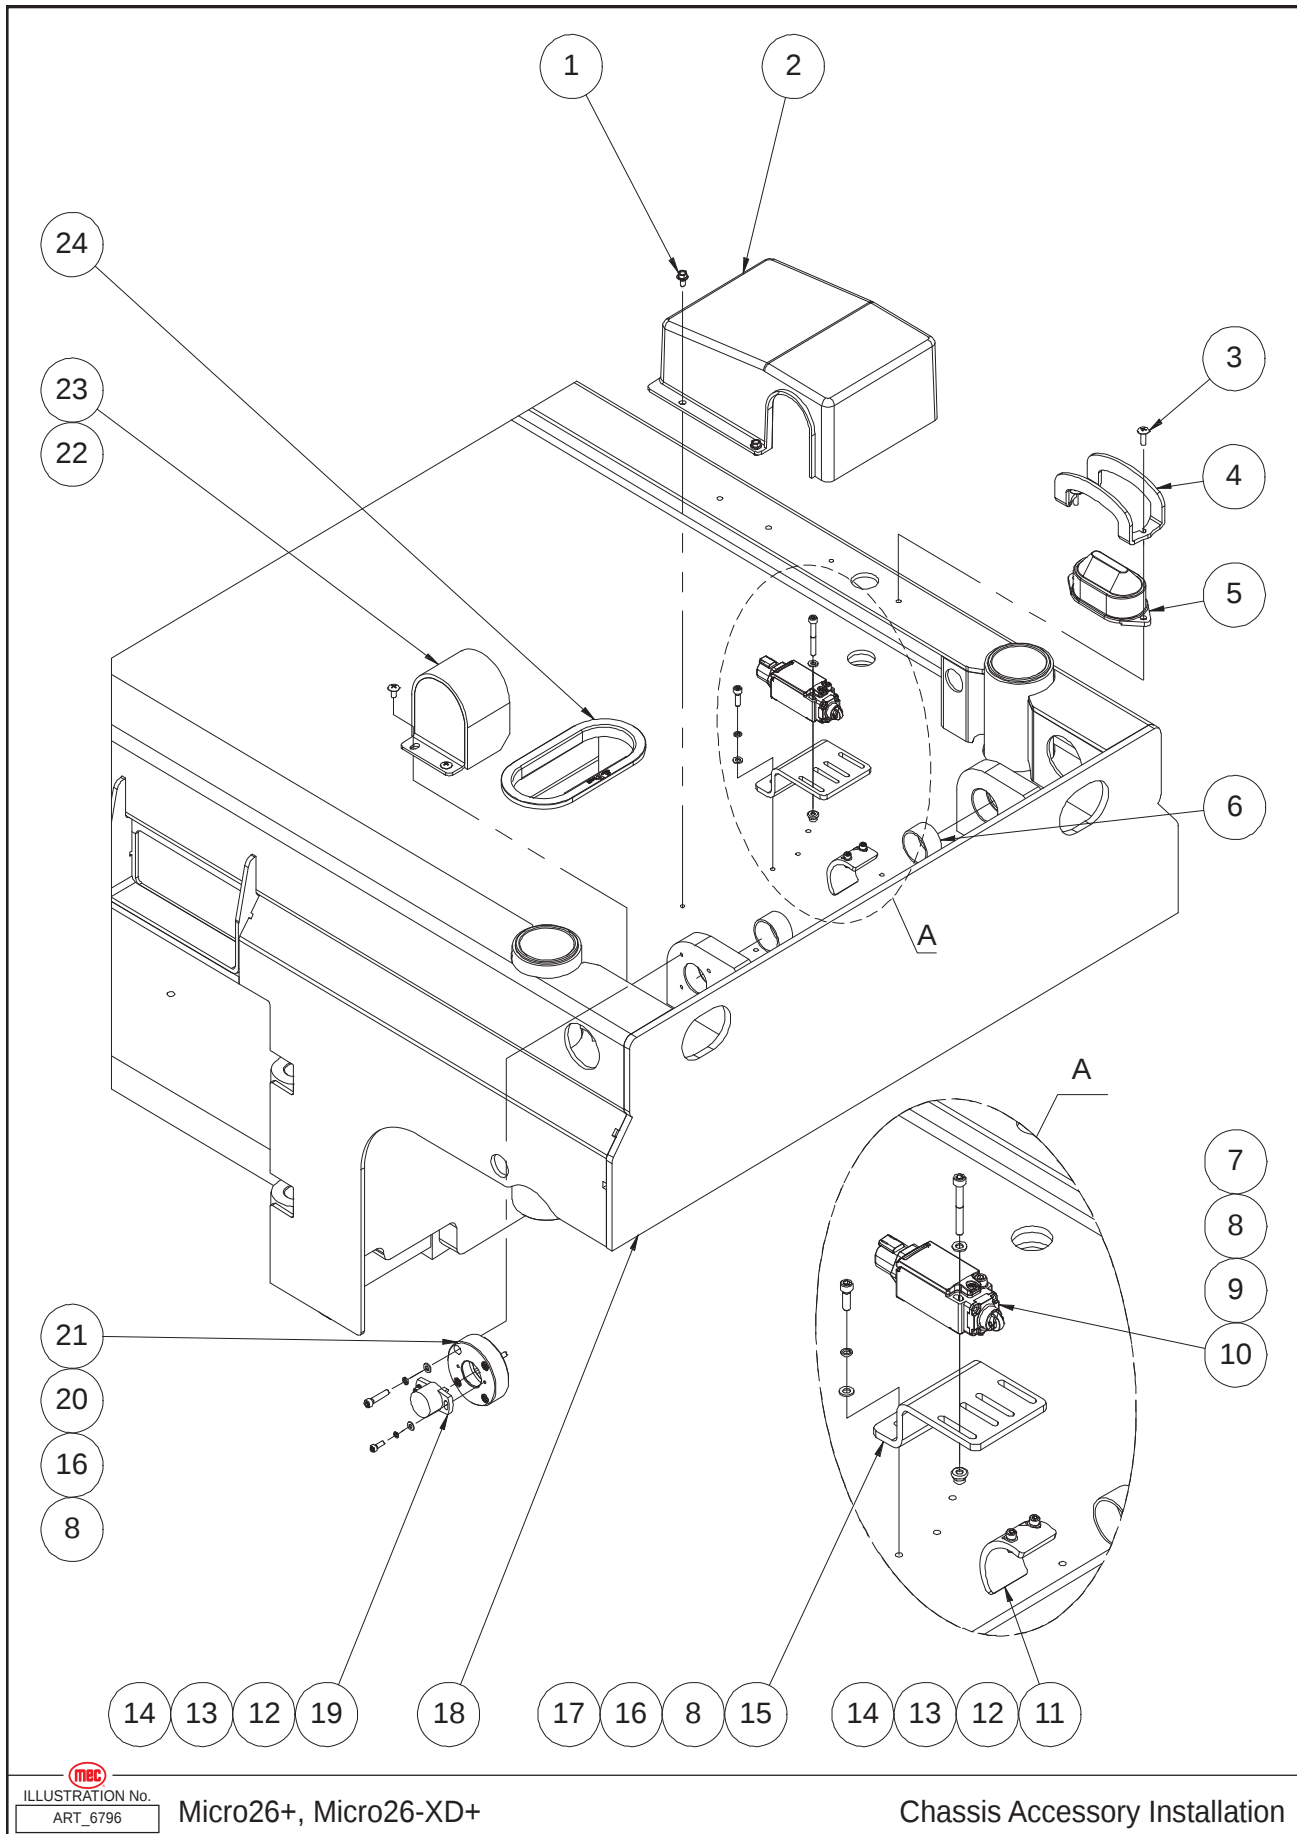



ILLUSTRATION No.
ART_6796

Micro26+, Micro26-XD+

Chassis Accessory Installation


Item	Part No.	Description	Qty.
1	53449	Screw HHCS M05-0.80 × 10 Flange ZP	4
2	44895	Cover	1
3	53223	Screw THMS M05-0.80 × 16 ZP	2
4	41309	Beacon Cover	1
5	41310	Beacon	1
6	41051	Bearing	2
7	53067	Screw SHCS M05-0.80 × 40 ZP	2
8	53038	WSHR M05 Standard Flat Washer ZP	8
9	53281	Nut NNYL M05-0.80 Flange ZP	2
10	46265	Limit Switch	1
11	49201	Signal Plate 2	1
12	50423	Screw SHCS M04-0.70 × 12 ZP	4
13	53062	WSHR M04 Spring Washer ZP	4
14	50284	WSHR M04 Standard Flat Washer ZP	4
15	43593	Switch Bracket	1
16	53043	WSHR M05 Spring Washer ZP	6
17	50359	Screw SHCS M05-0.80 × 16 ZP	2
18	61098	Weldment, Chassis Frame	1
19	49921	Rotary Sensor, Chassis	1
20	53356	Screw SHCS M05-0.80 × 25 ZP	4
21	46268	Sensor Bracket	1
22	53265	Screw THMS M05-0.80 × 10 ZP	2
23	49203	Sensor Cover	1
24	46270	Sheath	1

Leak Containment System®

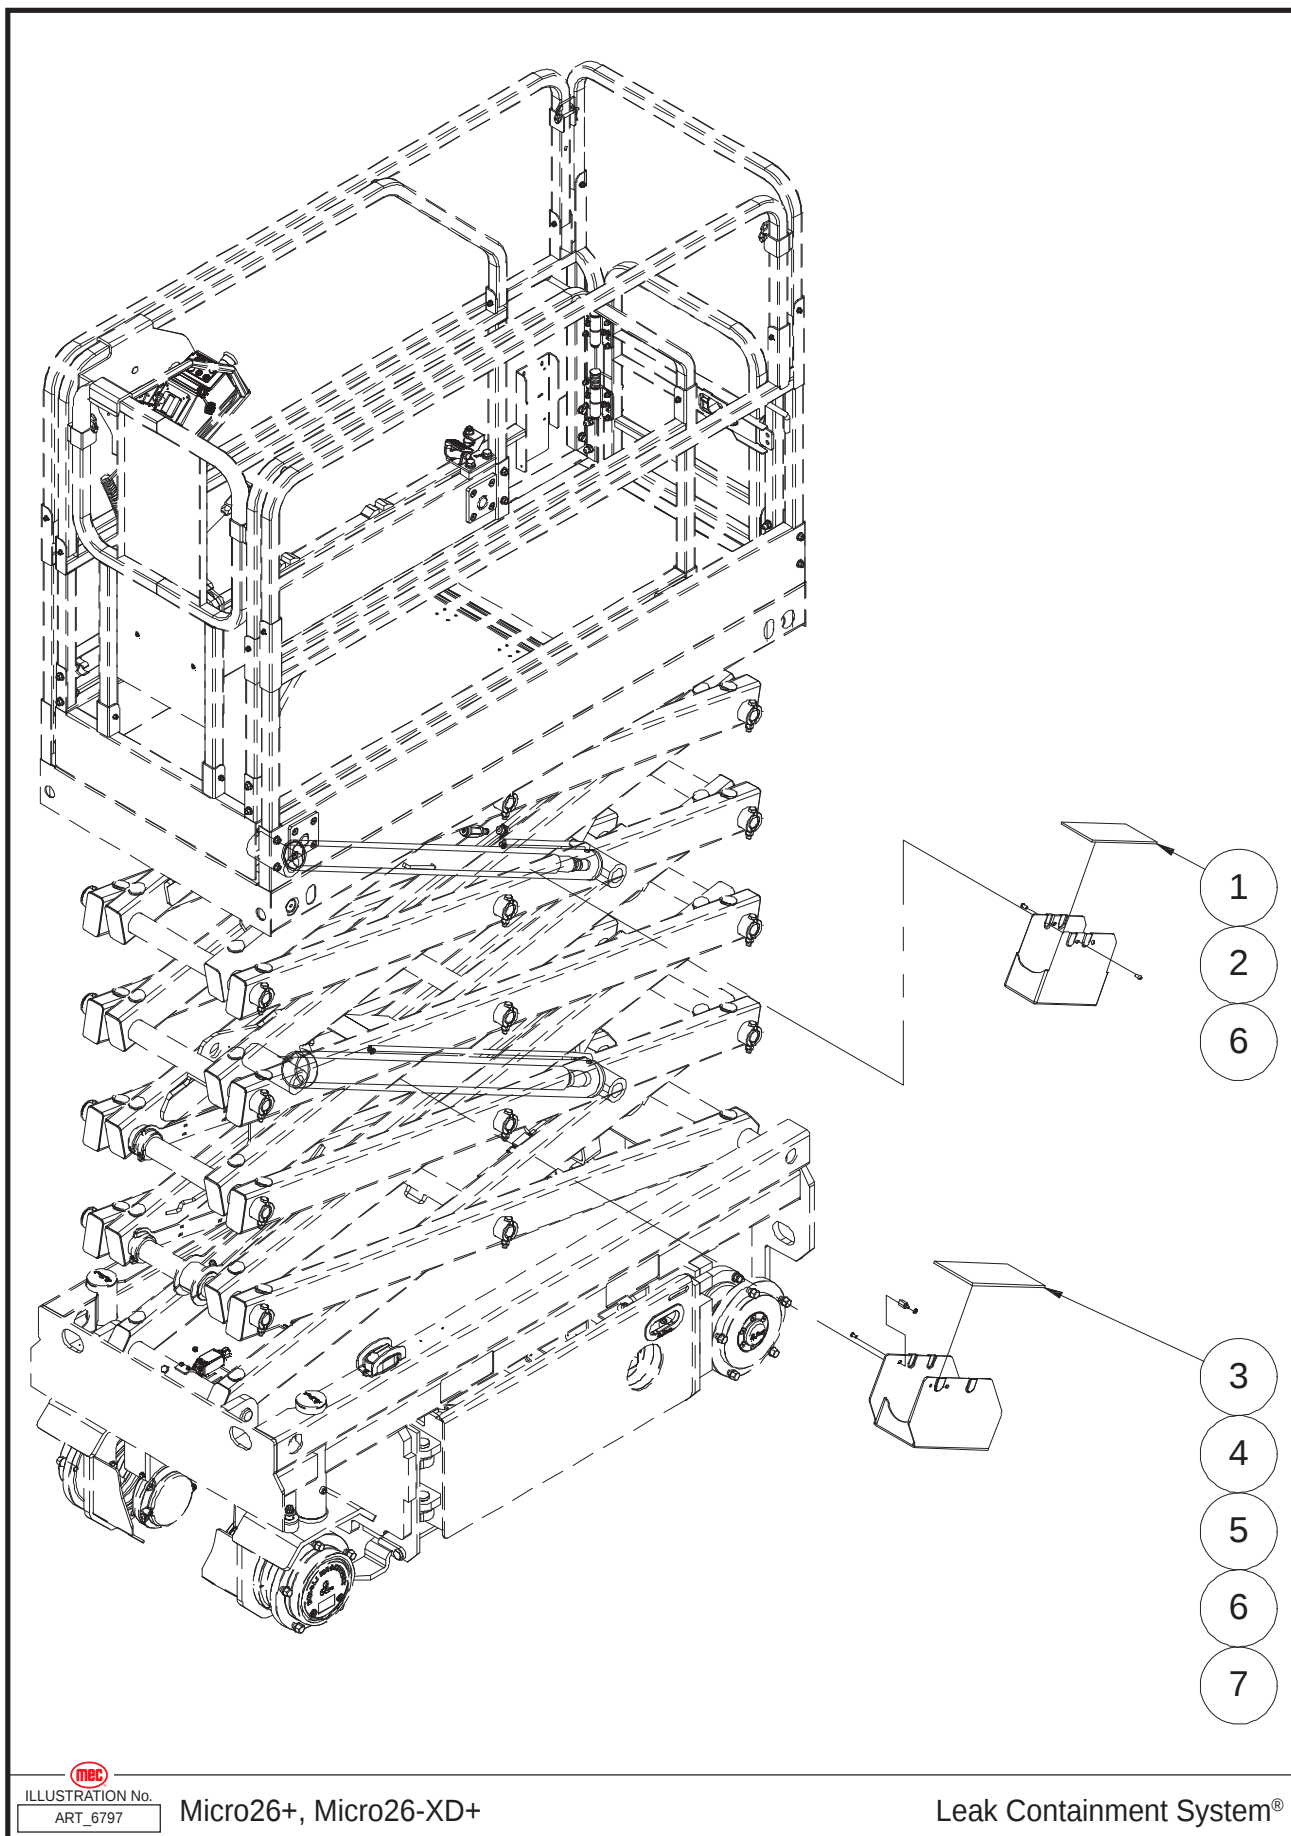

Item	Part No.	Description	Qty.
1	61056	Oil-Absorbent Cotton Pad (For 62761)	1
2	62761	LCS Cylinder Guard, Upper Lift Cylinder	1
3	62851	Oil-Absorbent Cotton Pad (For 62762)	1
4	62771	Linking Pole	1
5	50000	WSHR M06 Standard Flat Washer ZP	1
6	53026	Screw BHCS M06-1.00 × 12 ZP	4
7	62762	LCS Cylinder Guard, Lower Lift Cylinder (Pad is 62851)	1

Counterweight (Micro26+)

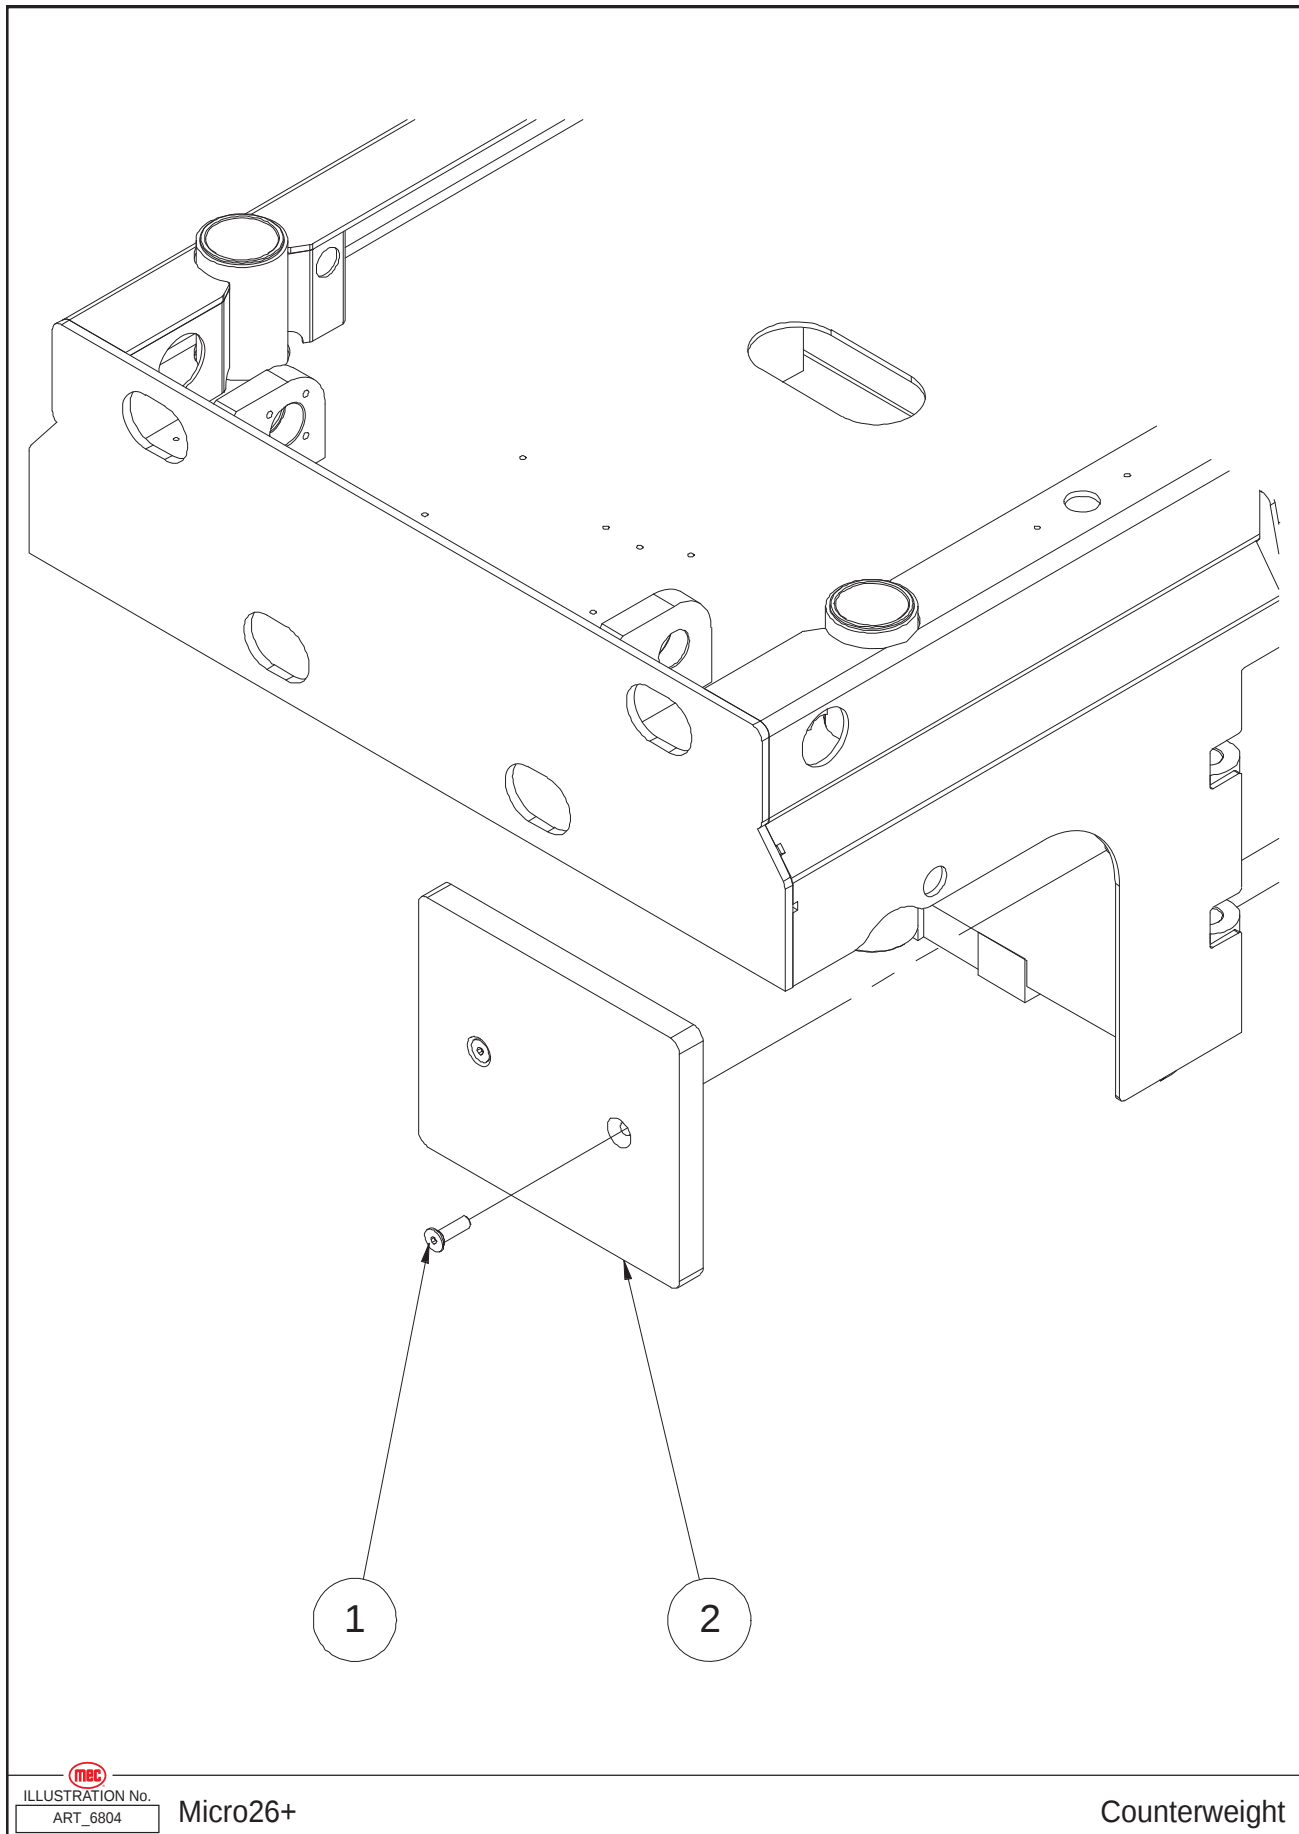

Item	Part No.	Description	Qty.
1	53388	Screw CSCI M10-1.50 × 35 ZP	2
2	62840	Counterweight, Thin Block	1

Scissor Assembly

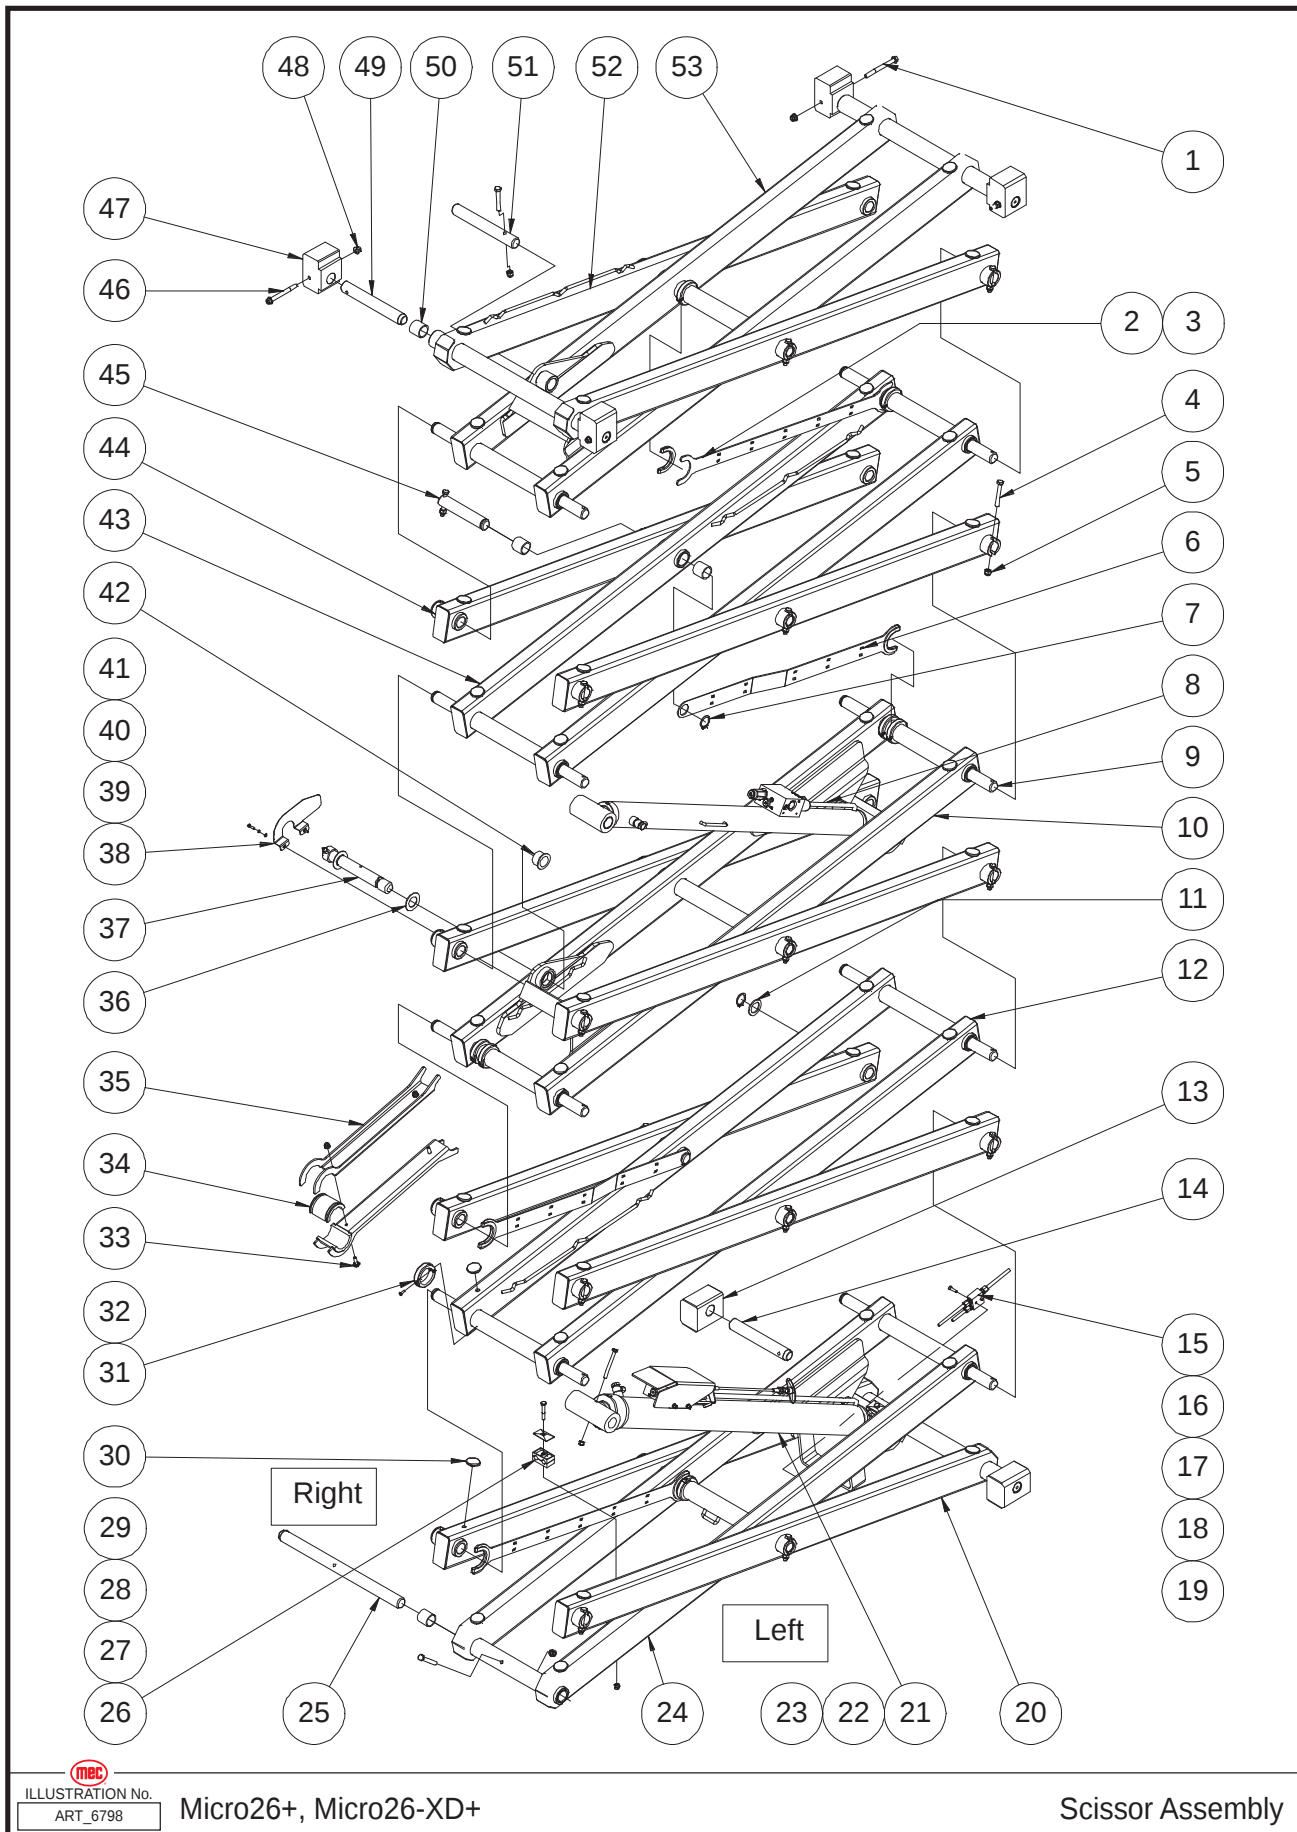


ILLUSTRATION No.
ART_6798

Micro26+, Micro26-XD+

Scissor Assembly


Item	Part No.	Description	Qty.
1	53267	Screw HHCS M10-1.50 × 110 Flange ZP	2
2	43595	Cable Bridge	2
3	44533	Clamp, Bushing Insert	6
4	50022	Screw HHCS M10-1.50 × 70 ZP	22
5	50049	Nut NNYL M10-1.50 ZP	22
6	43596	Cable Bridge 2	2
7	48859	Circlips, Washer	15
8	REF	Upper Lift Cylinder Assembly (Refer to page 50)	1
9	49407	Pin, Inner Scissor Arm	11
10	61099	Inner Arm 3, Scissor Linkage	1
11	41688	Washer	13
12	61100	Inner Arm 2, Scissor Linkage	1
13	41710	Chassis Slider, Bottom	2
14	41692	Pin, Chassis Bottom Slider	2
15	41112	Hydraulic Hoses Manifolds	1
16	50386	Screw CSCS M06-1.00 × 25 ZP	2
17	43600	Hose (To Lower Lift Cylinder)	1
18	43601	Hose (To Hydraulic Tank)	1
19	46274	Hose (To Upper Lift Cylinder)	1
20	43602	Outer Arm 1	1
21	REF	Lower Lift Cylinder Assembly (Refer to page 48)	1
22	50018	Screw HHCS M08-1.25 × 80 ZP	1
23	50048	Nut NNYL M08-1.25 ZP	1
24	61101	Inner Arm 1, Scissor Linkage	1
25	46276	Pin	1
26	46277	Hose Clamp	2
27	50015	Screw HHCS M08-1.25 × 50 ZP	2
28	41415	Base Plate	2
29	50313	Nut NNYL M08-1.25 Flange ZP	4
30	41114	Block	40
31	44884	Collar	8
32	53269	Screw CSCS M05-0.80 × 16 ZP	8
33	53270	Screw HHCS M08-1.25 × 25 Serrated Flange ZP	2
34	41616	Safety Arm Bushing	2
35	41615	Safety Arm	2
36	61102	Washer, Scissor Linkage Load Sensing Pin	2
37	62780	Pin, Load Sensing	1
38	45739	Cable Bridge, Cover	1
39	50359	Screw SHCS M05-0.80 × 16 ZP	2
40	53043	WSHR M05 Spring Washer ZP	2
41	53038	WSHR M05 Standard Flat Washer ZP	2
42	45740	Bearing	2
43	61103	Inner Arm 4, Scissor Linkage	1
44	43606	Outer Arm 2	3

45	41689	Pin, Short Axle	4
46	53271	Screw HHCS M10-1.50 × 100 Flange ZP	2
47	43607	Platform Slider	4
48	50311	Nut NNYL M10-1.50 Flange ZP	4
49	41685	Pin, Top Slider Axle	4
50	49148	Bearing	36
51	41687	Pin, Cylinder Axle	3
52	61104	Outer Arm 4, Scissor Linkage	1
53	49922	Inner Arm 5	1

REF - Reference

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Main Platform Assembly

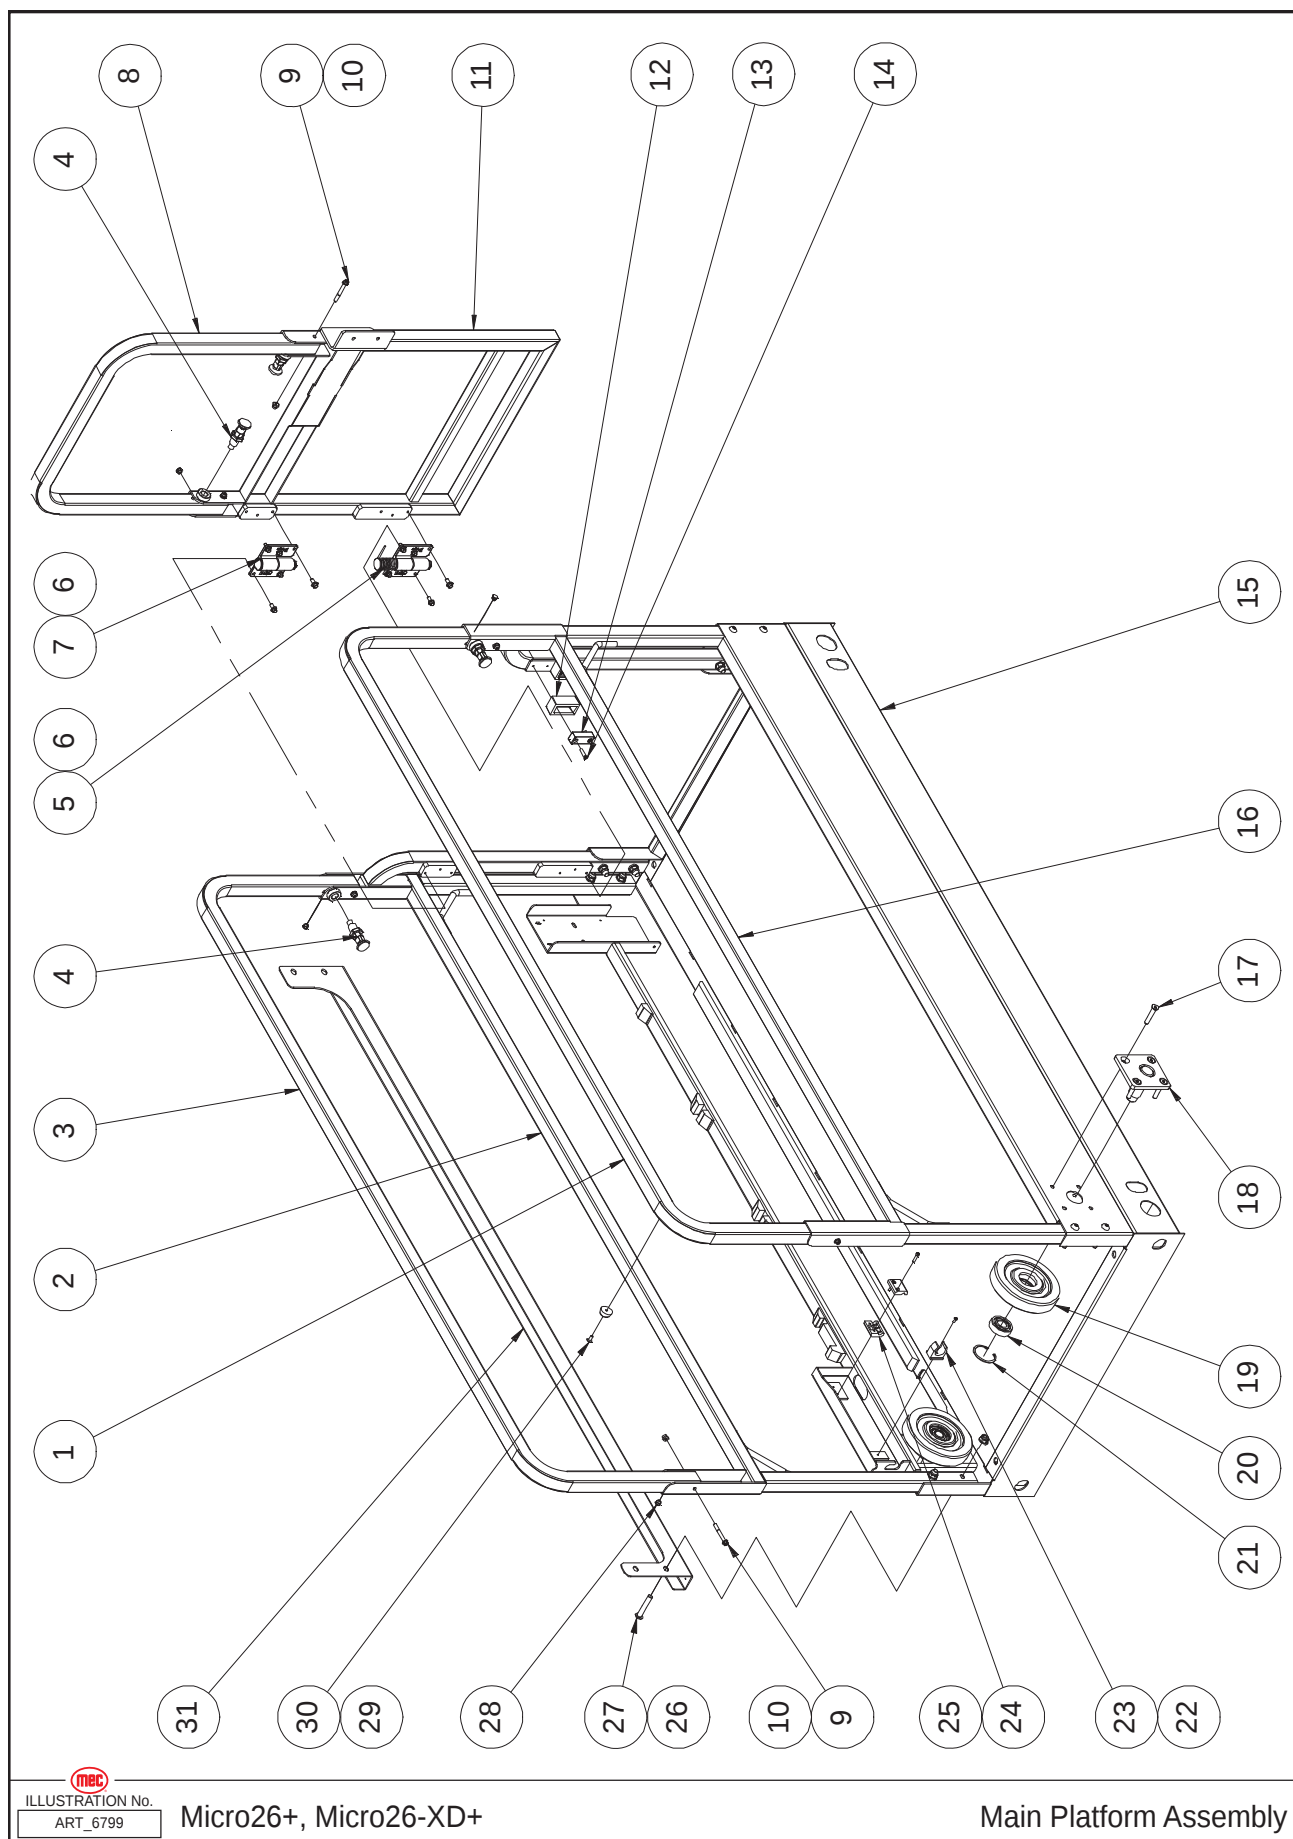

Item	Part No.	Description	Qty.
1	61105	Upper Main Rail Left, Main Platform	1
2	61106	Lower Main Rail Right, Main Platform	1
3	62818	Upper Main Rail, Right	1
4	43337	Inserted Lock Pin	4
5	41128	Hinge B	1
6	53273	Screw HHCS M06-1.00 × 14 Serrated Flange ZP	12
7	41127	Hinge A	1
8	62819	Door Rail, Upper Main Rail	1
9	53274	Screw HHCS M06-1.00 × 50 Flange ZP	6
10	50568	Nut NNYL M06-1.00 Flange ZP	6
11	62838	Entry Gate	1
12	62764	Cover, Magnet	2
13	62776	Magnet	2
14	50386	Screw CSCS M05-0.80 × 25 ZP, Phillips	4
15	46283	Main Deck Weldment	1
16	62837	Lower Main Rail, Left	1
17	53275	Screw CSCS M08-1.25 × 45 ZP	8
18	41270	Roller Installation Bracket	2
19	43617	Roller	2
20	41131	Bearing	2
21	43618	Circlips, Bearing Roller	2
22	53276	Screw PHMS M04-0.70 × 8 ZP	1
23	41134	Clip	1
24	41059	Wire Clip, Single	2
25	53278	Screw SHCS M04-0.70 × 20 ZP	2
26	50311	Nut NNYL M10-1.50 Flange ZP	12
27	53277	Screw BHCS M10-1.50 × 55 ZP	12
28	45339	Hole Plug	6
29	41120	Bumper, Rubber Gasket	1
30	53224	Screw THMS M05-0.80 × 12 ZP	1
31	48387	Sheet Material Tray	1

Platform Extension Assembly (Micro26+)

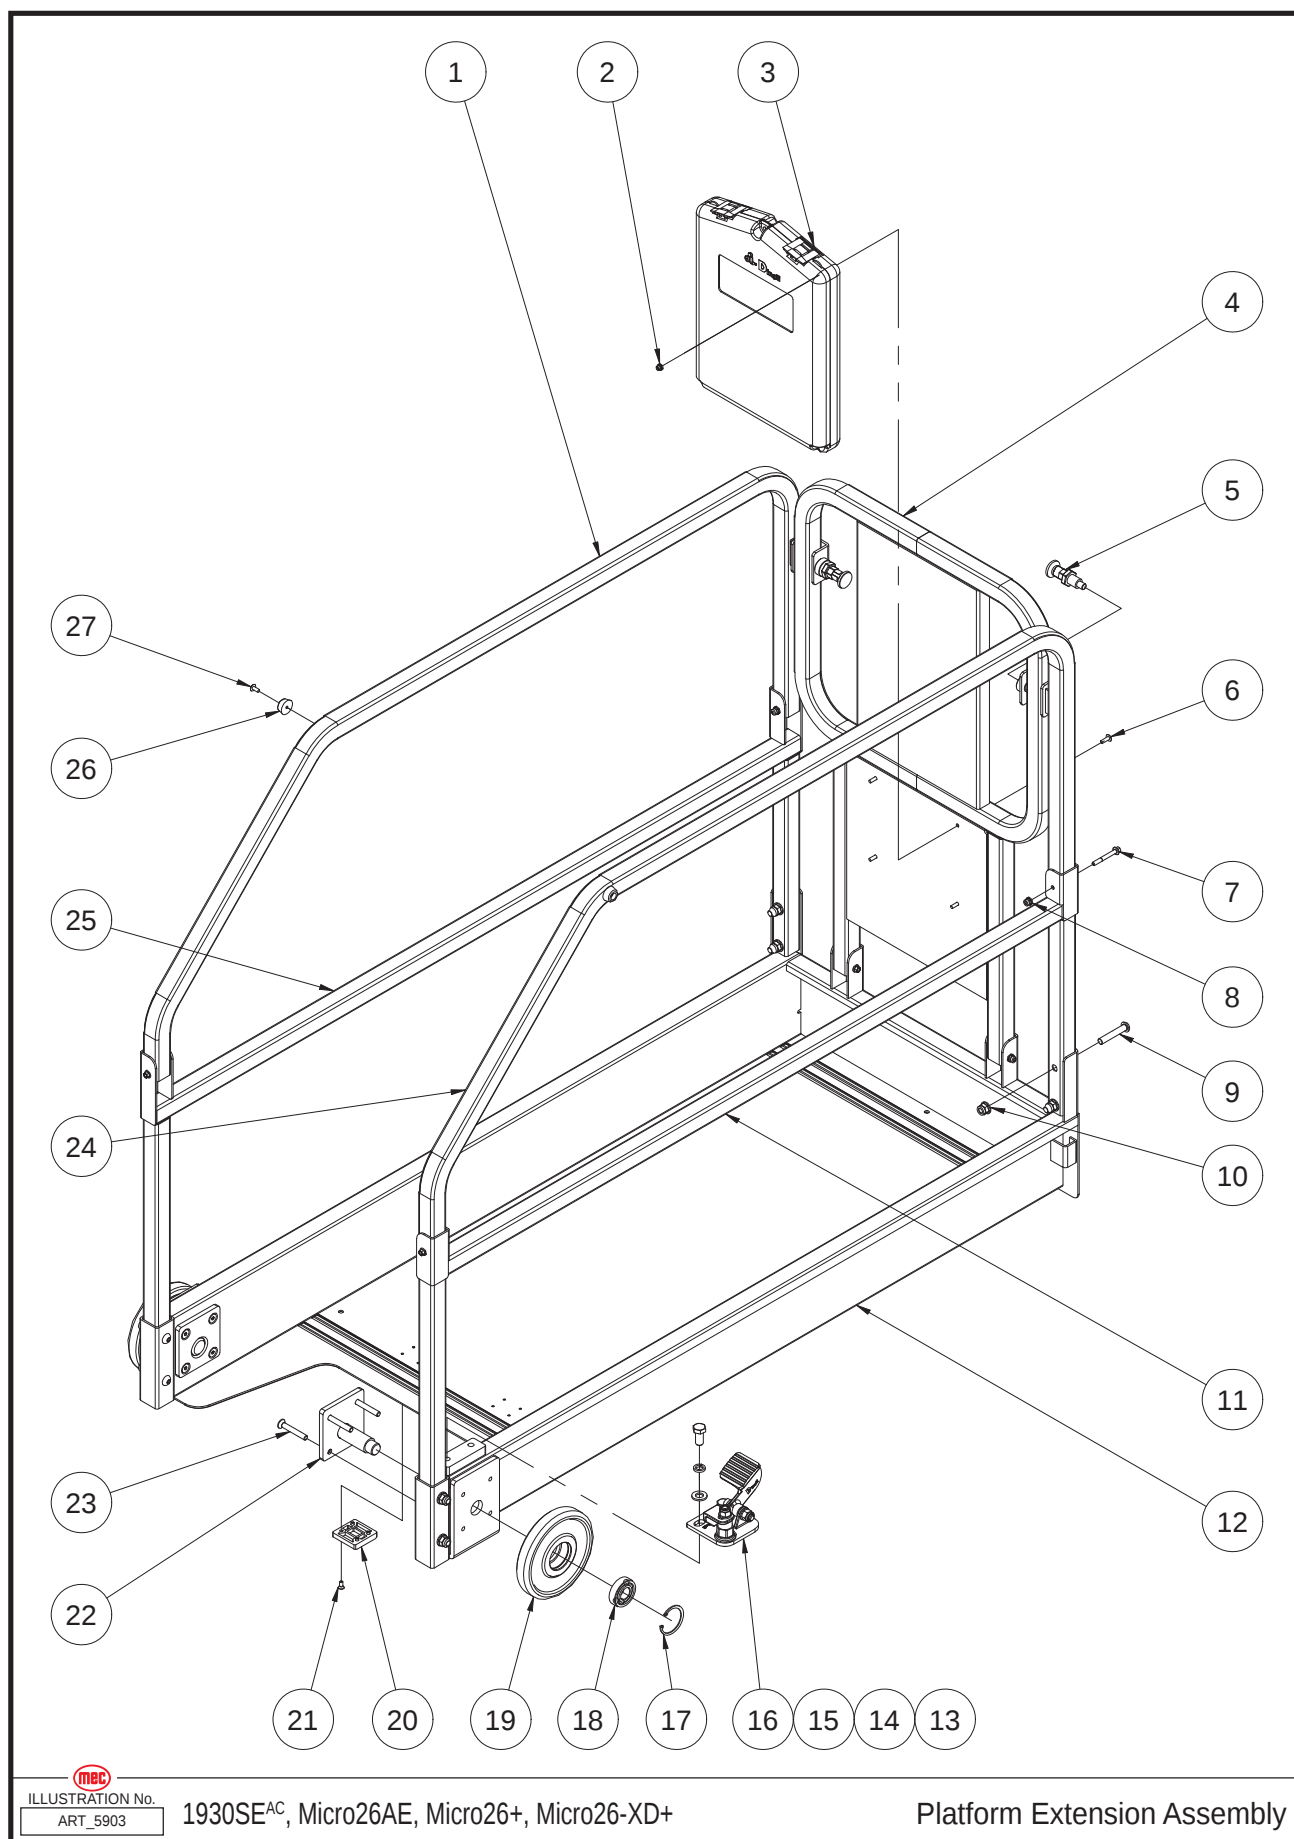


ILLUSTRATION No.
ART_5903

1930SE^{AC}, Micro26AE, Micro26+, Micro26-XD+

Platform Extension Assembly

Item	Part No.	Description	Qty.
1	46285	Upper Extension Rail, Left	1
2	53281	Nut NNYL M05-0.80 Flange ZP	4
3	61038	Manual Box, Platform Extension	1
4	46286	Front Rail	1
5	43337	Inserted Lock Pin	2
6	53223	Screw THMS M05-0.80 × 16 ZP	4
7	53274	Screw HHCS M06-1.00 × 50 Flange ZP	7
8	50568	Nut NNYL M06-1.00 Flange ZP	7
9	53277	Screw BHCS M10-1.50 × 55 ZP	8
10	50311	Nut NNYL M10-1.50 Flange ZP	8
11	44881	Lower Extension Rail, Right	1
12	46287	Extension Deck Weldment	1
13	50038	Screw HHCS M12-1.75 × 25 ZP	2
14	53148	WSHR M12 Spring Washer ZP	2
15	50003	WSHR M12 Standard Flat Washer ZP	2
16	44599	Platform Locking Device Assembly (Refer to page 42)	1
17	43618	Circlips, Bearing Roller	2
18	41131	Bearing	2
19	41141	Roller, Platform Extension	2
20	41284	Slide Pad	2
21	53480	Screw CSCS M05-0.80 × 14 ZP	8
22	41270	Roller Installation Bracket	2
23	53280	Screw CSCS M08-1.25 × 55 ZP	8
24	46288	Upper Extension Rail, Right	1
25	44883	Lower Extension Rail, Left	1
26	41120	Bumper, Rubber Gasket	3
27	53224	Screw THMS M05-0.80 × 12 ZP	3

Xtra Deck® Platform Extension Assembly (Micro26-XD+)

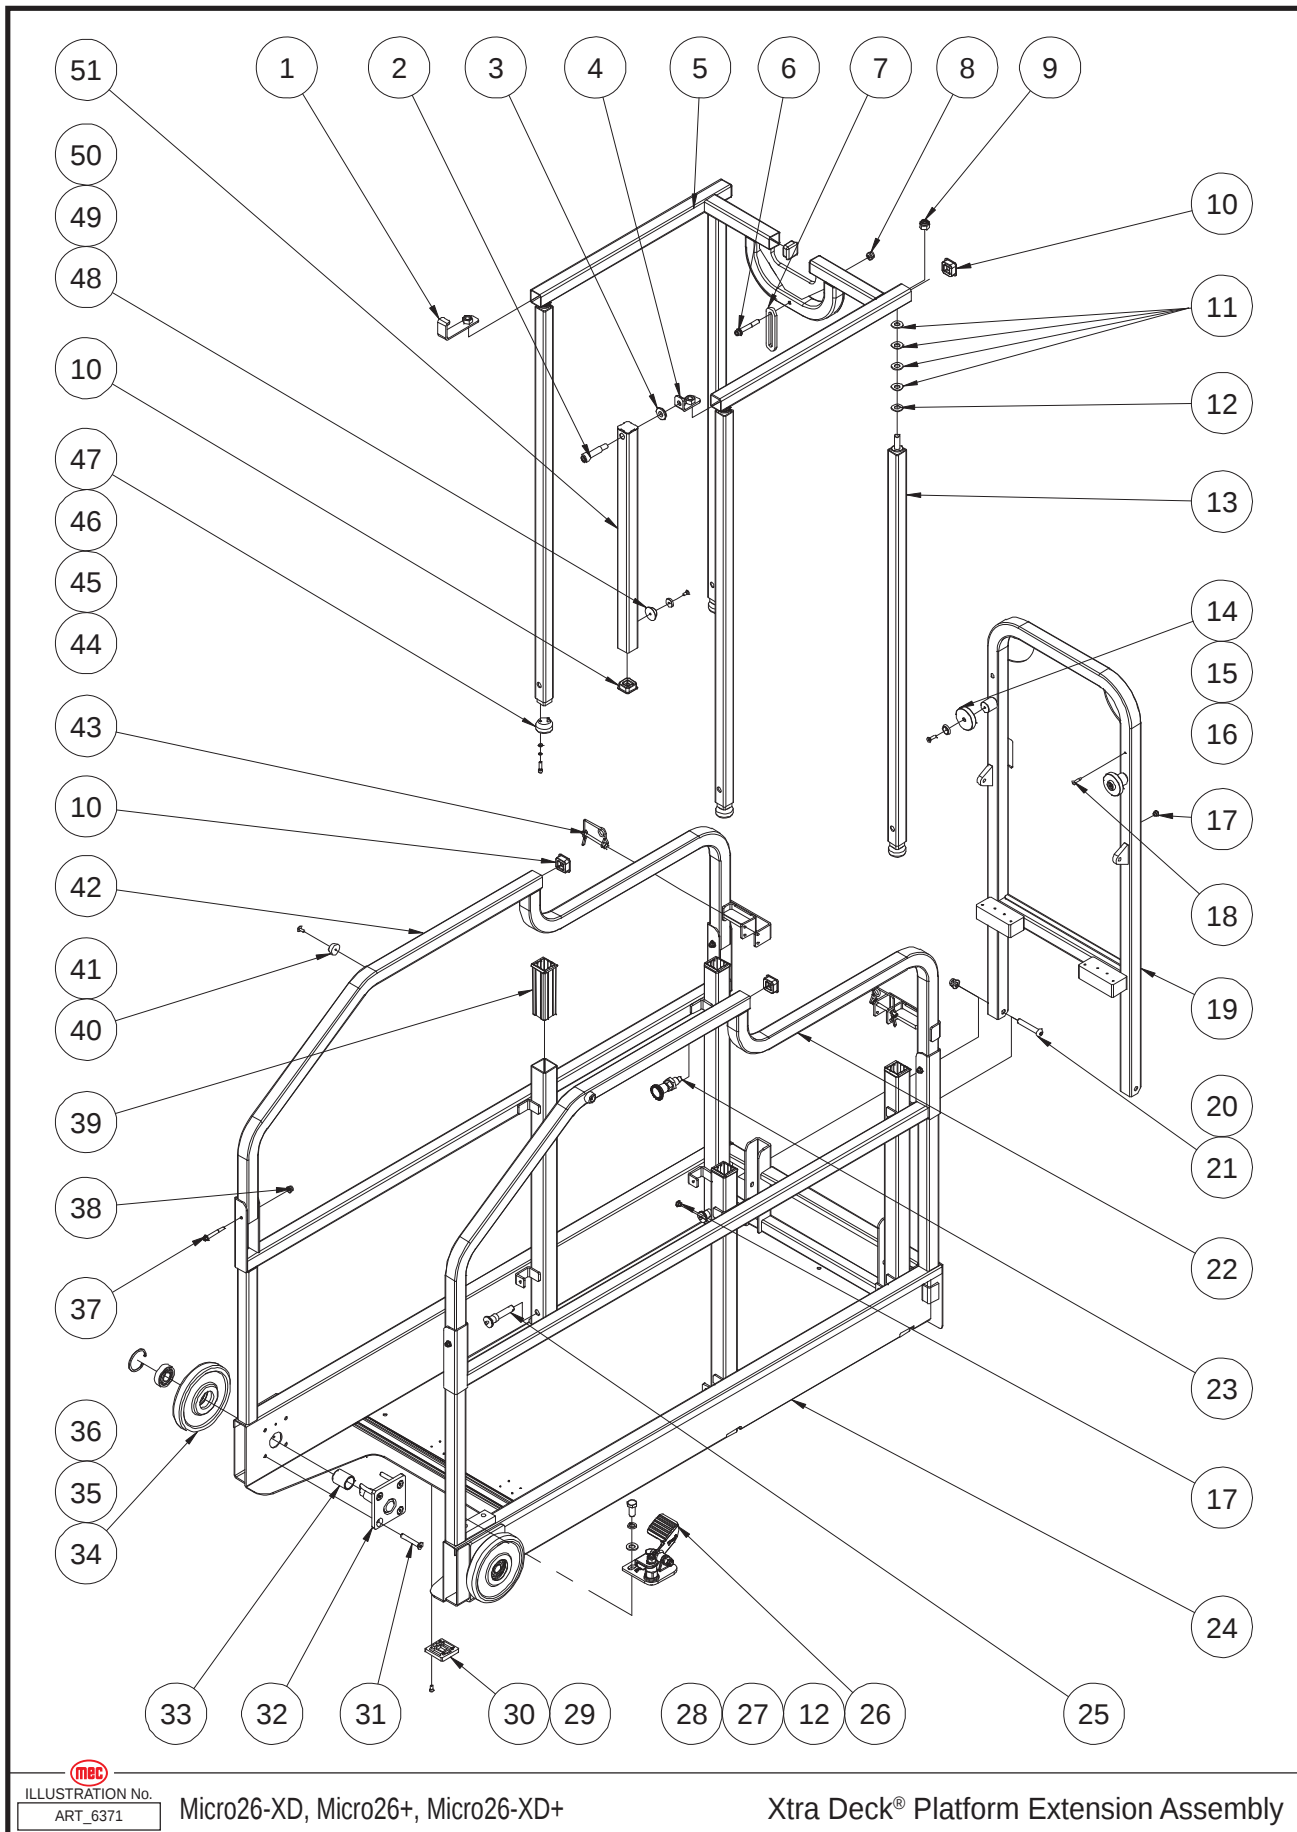


ILLUSTRATION No.
ART_6371

Micro26-XD, Micro26+, Micro26-XD+

Xtra Deck® Platform Extension Assembly

Item	Part No.	Description	Qty.
1	44227	Deck Guard Latch Rest Weldment	1
2	49223	Pin	1
3	44823	Washer	1
4	44237	Deck Guard Hinge Weldment	1
5	61107	Upper Extension Rail, Xtra Deck®	1
6	53359	Screw HHCS M08-1.25 × 55 Flange ZP	1
7	44223	Step Inhibitor	1
8	50313	Nut NNYL M08-1.25 Flange ZP	1
9	50050	Nut NNYL M12-1.75 ZP	2
10	60919	Square Plug, Snap-In, Plastic, 29mm X 29mm	7
11	49210	Disc Spring	16
12	50003	WSHR M12 Standard Flat Washer ZP	6
13	49211	Telescopic Rail	4
14	49212	Magnet	2
15	49213	Washer	2
16	50561	Screw CPCS M06-1.00 × 20 ZP	2
17	45339	Hole Plug	4
18	43301	Rivet	2
19	61108	Front Rail, Platform Extension	1
20	50311	Nut NNYL M10-1.50 Flange ZP	2
21	53295	Screw BHCS M10-1.50 × 60 ZP	2
22	62822	Upper Extension Rail, Right	1
23	44016	Lock Pin, Pull Type	4
24	62820	Extension Deck Weldment	1
25	49217	Inserted Pin	4
26	44599	Platform Locking Device Assembly (Refer to page 42)	1
27	53148	WSHR M12 Spring Washer ZP	2
28	50038	Screw HHCS M12-1.75 × 25 ZP	2
29	53480	Screw CPCS M05-0.80 × 14 ZP	8
30	41284	Slide Pad	2
31	53280	Screw CPCS M08-1.25 × 55 ZP	8
32	41270	Roller Installation Bracket	4
33	46393	Bearing	2
34	41141	Roller, Platform Extension	2
35	41131	Bearing	4
36	43618	Circlips, Bearing Roller	4
37	53274	Screw HHCS M06-1.00 × 50 Flange ZP	4
38	50568	Nut NNYL M06-1.00 Flange ZP	4
39	49218	Upper Guide Sleeve	4
40	41120	Bumper, Rubber Gasket	2
41	53224	Screw THMS M05-0.80 × 12 ZP	2
42	61109	Left Extension Rail, Platform Extension	1
43	41357	Inserted Pin	2
44	53150	Screw SHCS M05-0.80 × 20 ZP	8

45	53043	WSHR M05 Spring Washer ZP	8
46	53038	WSHR M05 Standard Flat Washer ZP	8
47	49220	Bottom Guide Block	4
48	44239	Deck Guard Arm Magnet Bushing	1
49	49221	Magnet 2	1
50	53279	Screw CSCS M05-0.80 × 12 ZP	1
51	62821	Rear Extension Rail	1

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK

Xtra Deck® Step Installation (Micro26-XD+)

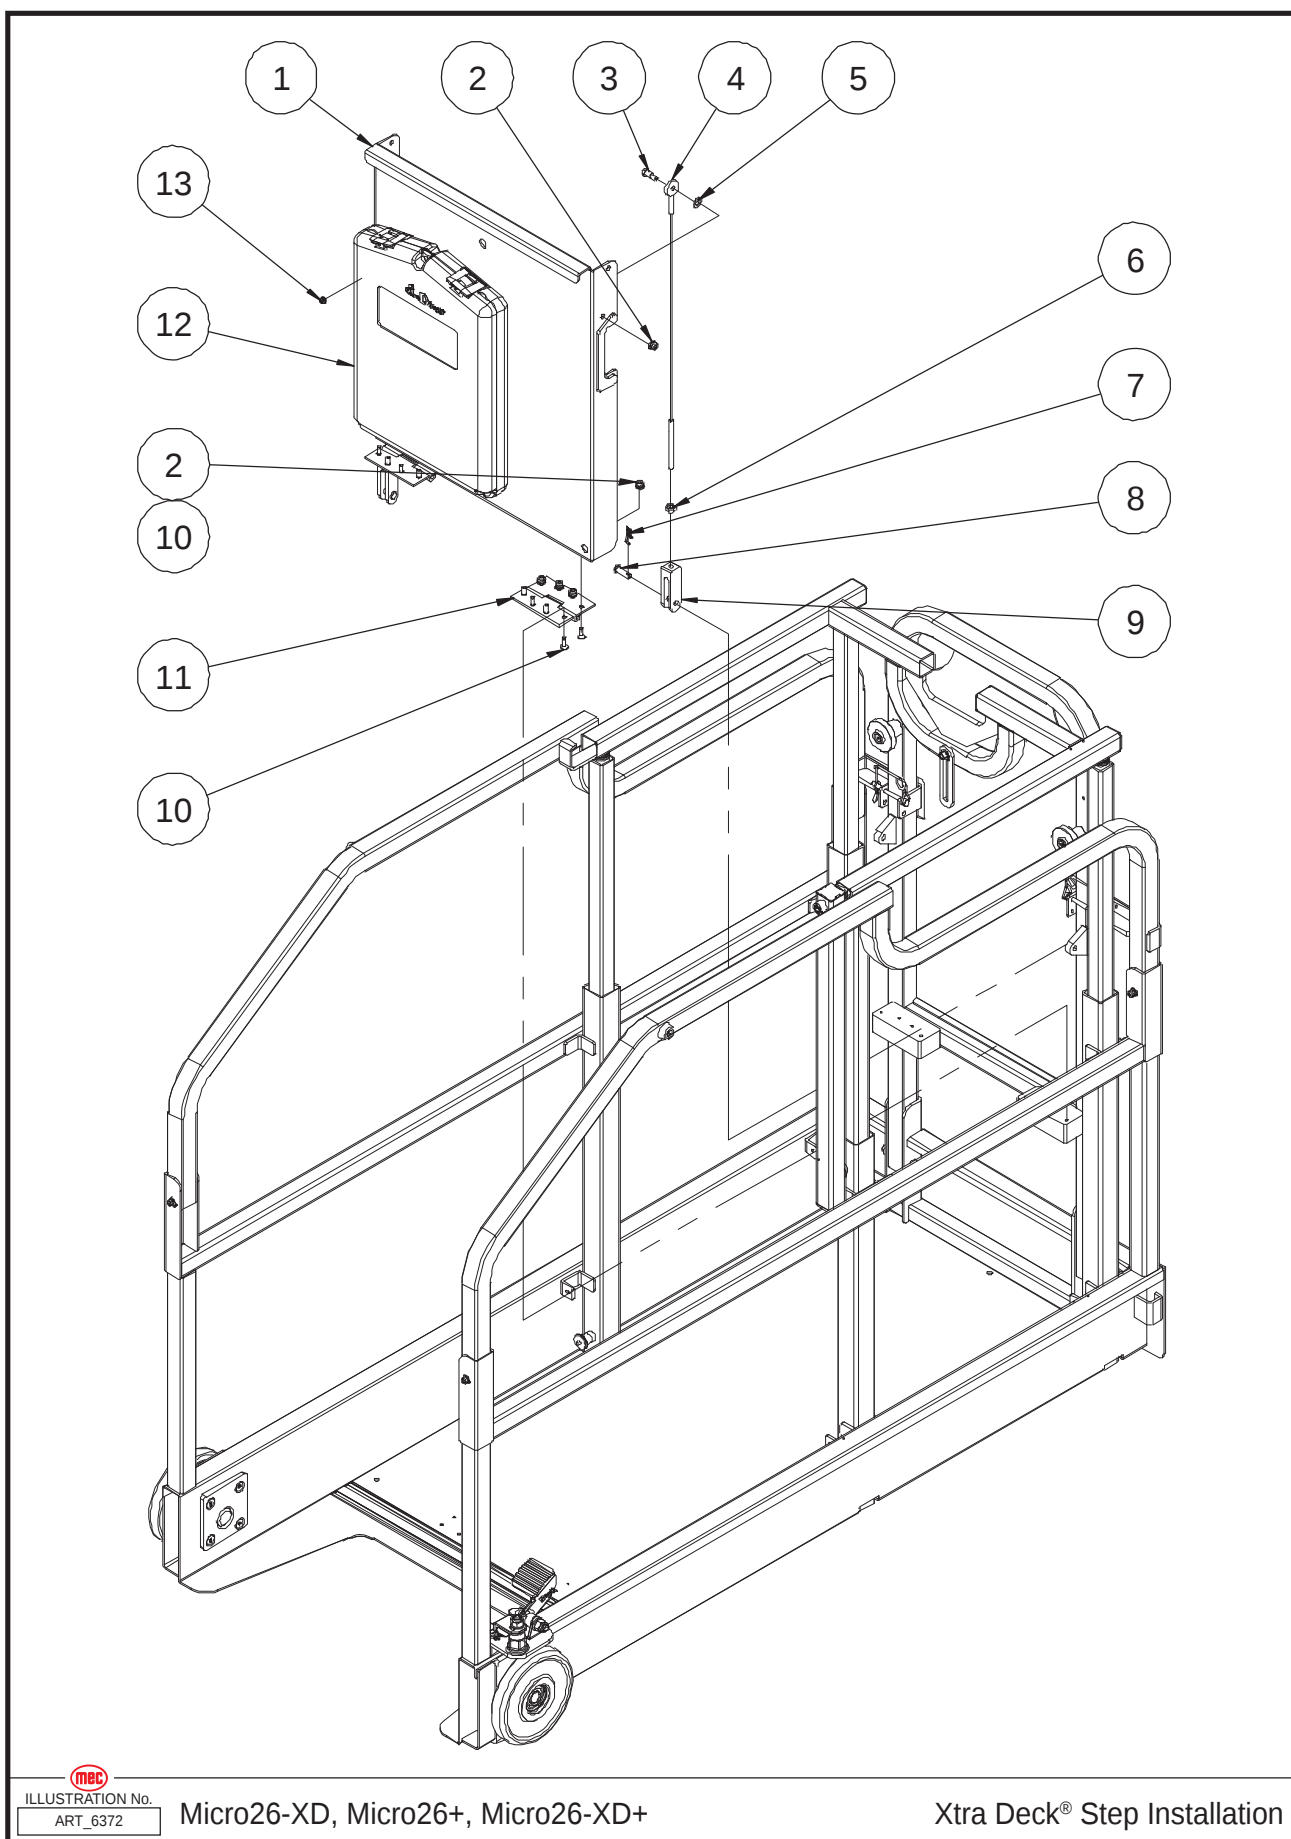


ILLUSTRATION No.
ART_6372

Micro26-XD, Micro26+, Micro26-XD+

Xtra Deck® Step Installation

Item	Part No.	Description	Qty.
1	49225	Xtra Step Weldment	1
2	50568	Nut NNYL M06-1.00 Flange ZP	18
3	46772	Pin	2
4	46771	Wire Rope	2
5	50001	WSHR M08 Standard Flat Washer ZP	2
6	53014	Nut NHEX M08-1.25 ZP	2
7	46541	Cotter Pin	2
8	49226	Pin	2
9	49227	Adjustment Joint	2
10	53226	Screw CSCS M06-1.00 × 16 ZP	16
11	49228	Hinge	2
12	61038	Manual Box, Platform Extension	1
13	53281	Nut NNYL M05-0.80 Flange ZP	4

Platform Locking Device Assembly

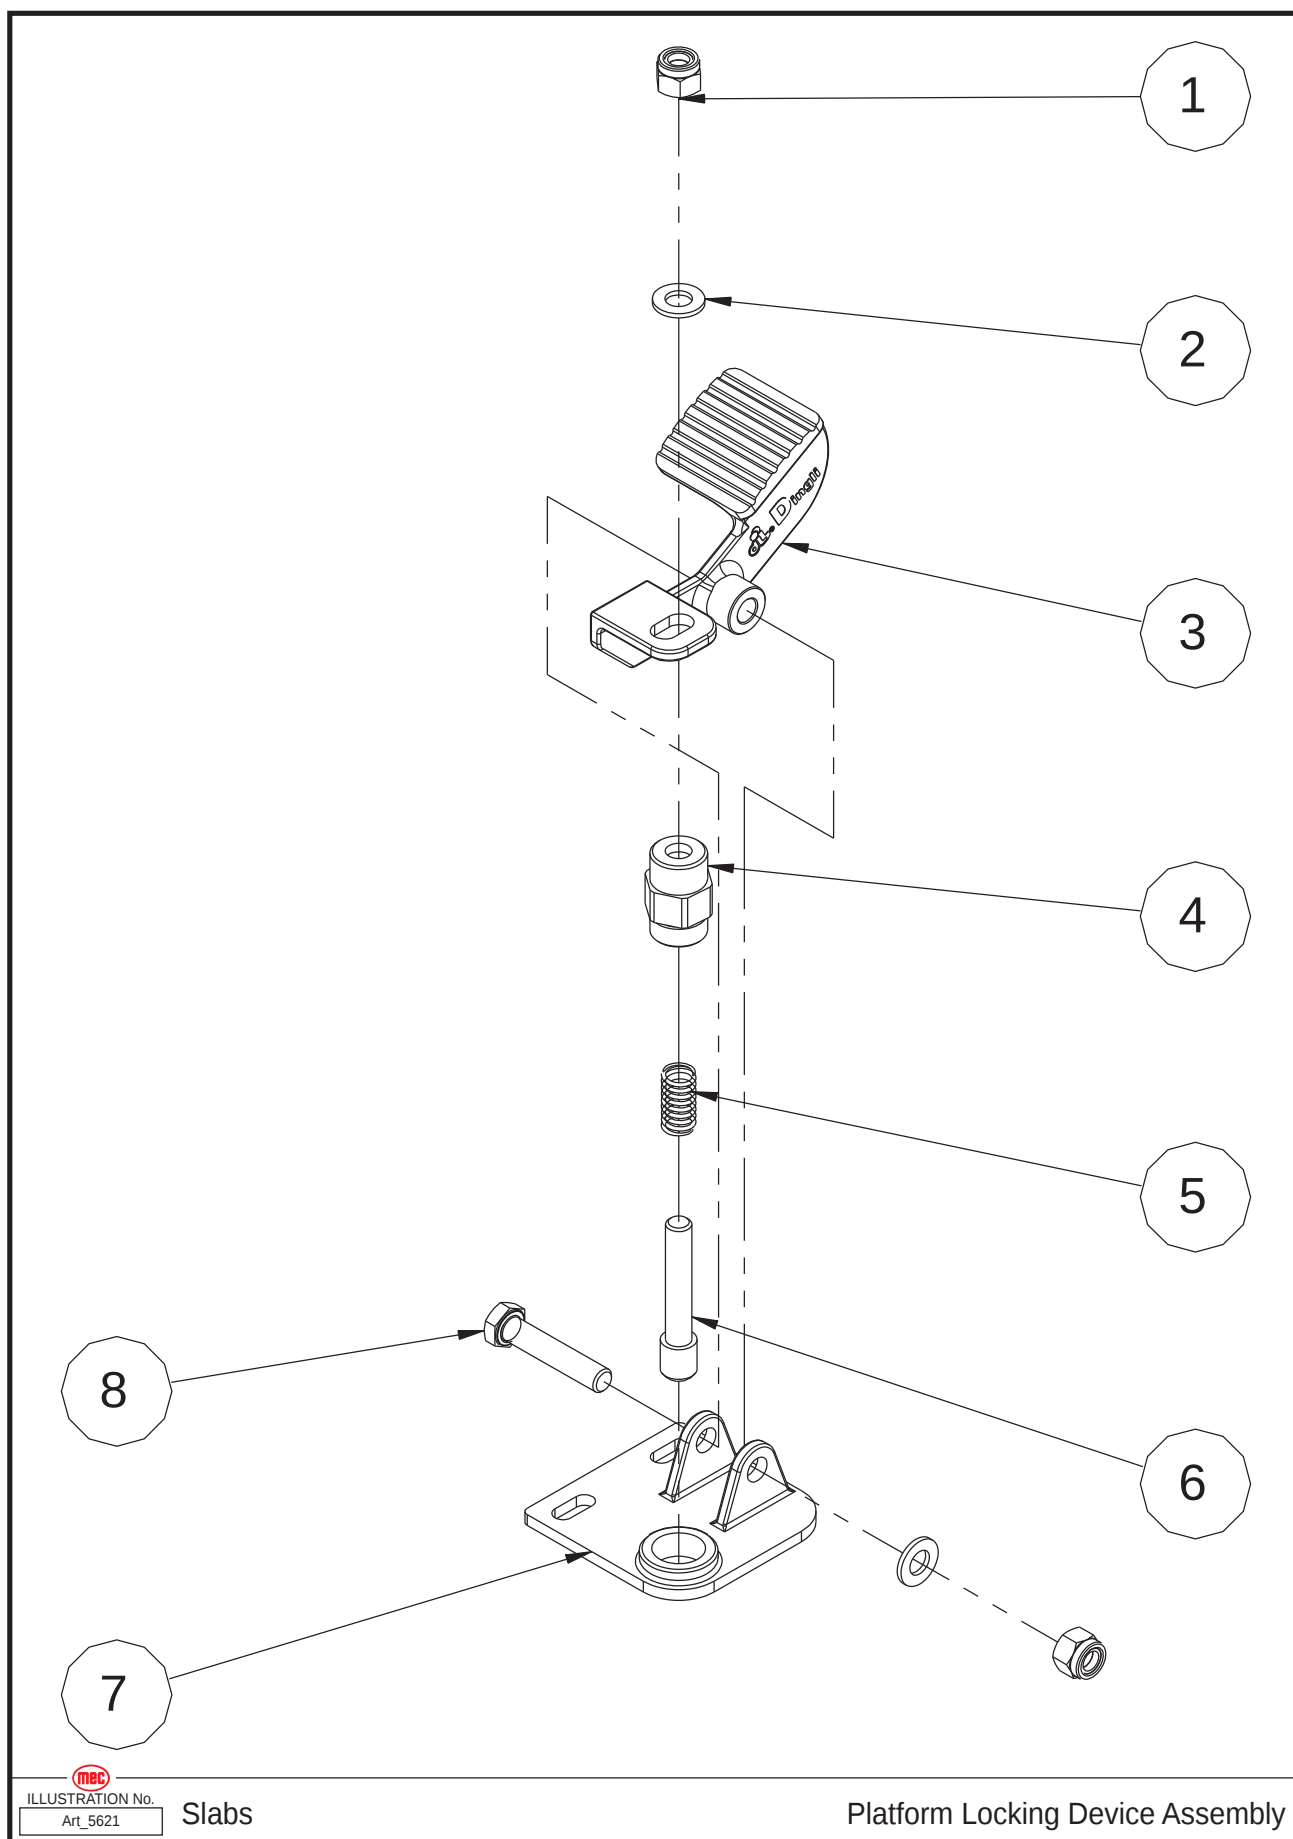


ILLUSTRATION No.
Art_5621

Slabs

Platform Locking Device Assembly

Item	Part No.	Description	Qty.
1	50049	Nut NNYL M10-1.50 ZP	2
2	50002	WSHR M10 Standard Flat Washer ZP	2
3	41143	Foot Pedal	1
4	41144	Lock Pin Housing	1
5	41145	Spring	1
6	41146	Lock Pin	1
7	44767	Bracket	1
8	50020	Screw HHCS M10-1.50 × 50 ZP	1

Platform Control Assembly

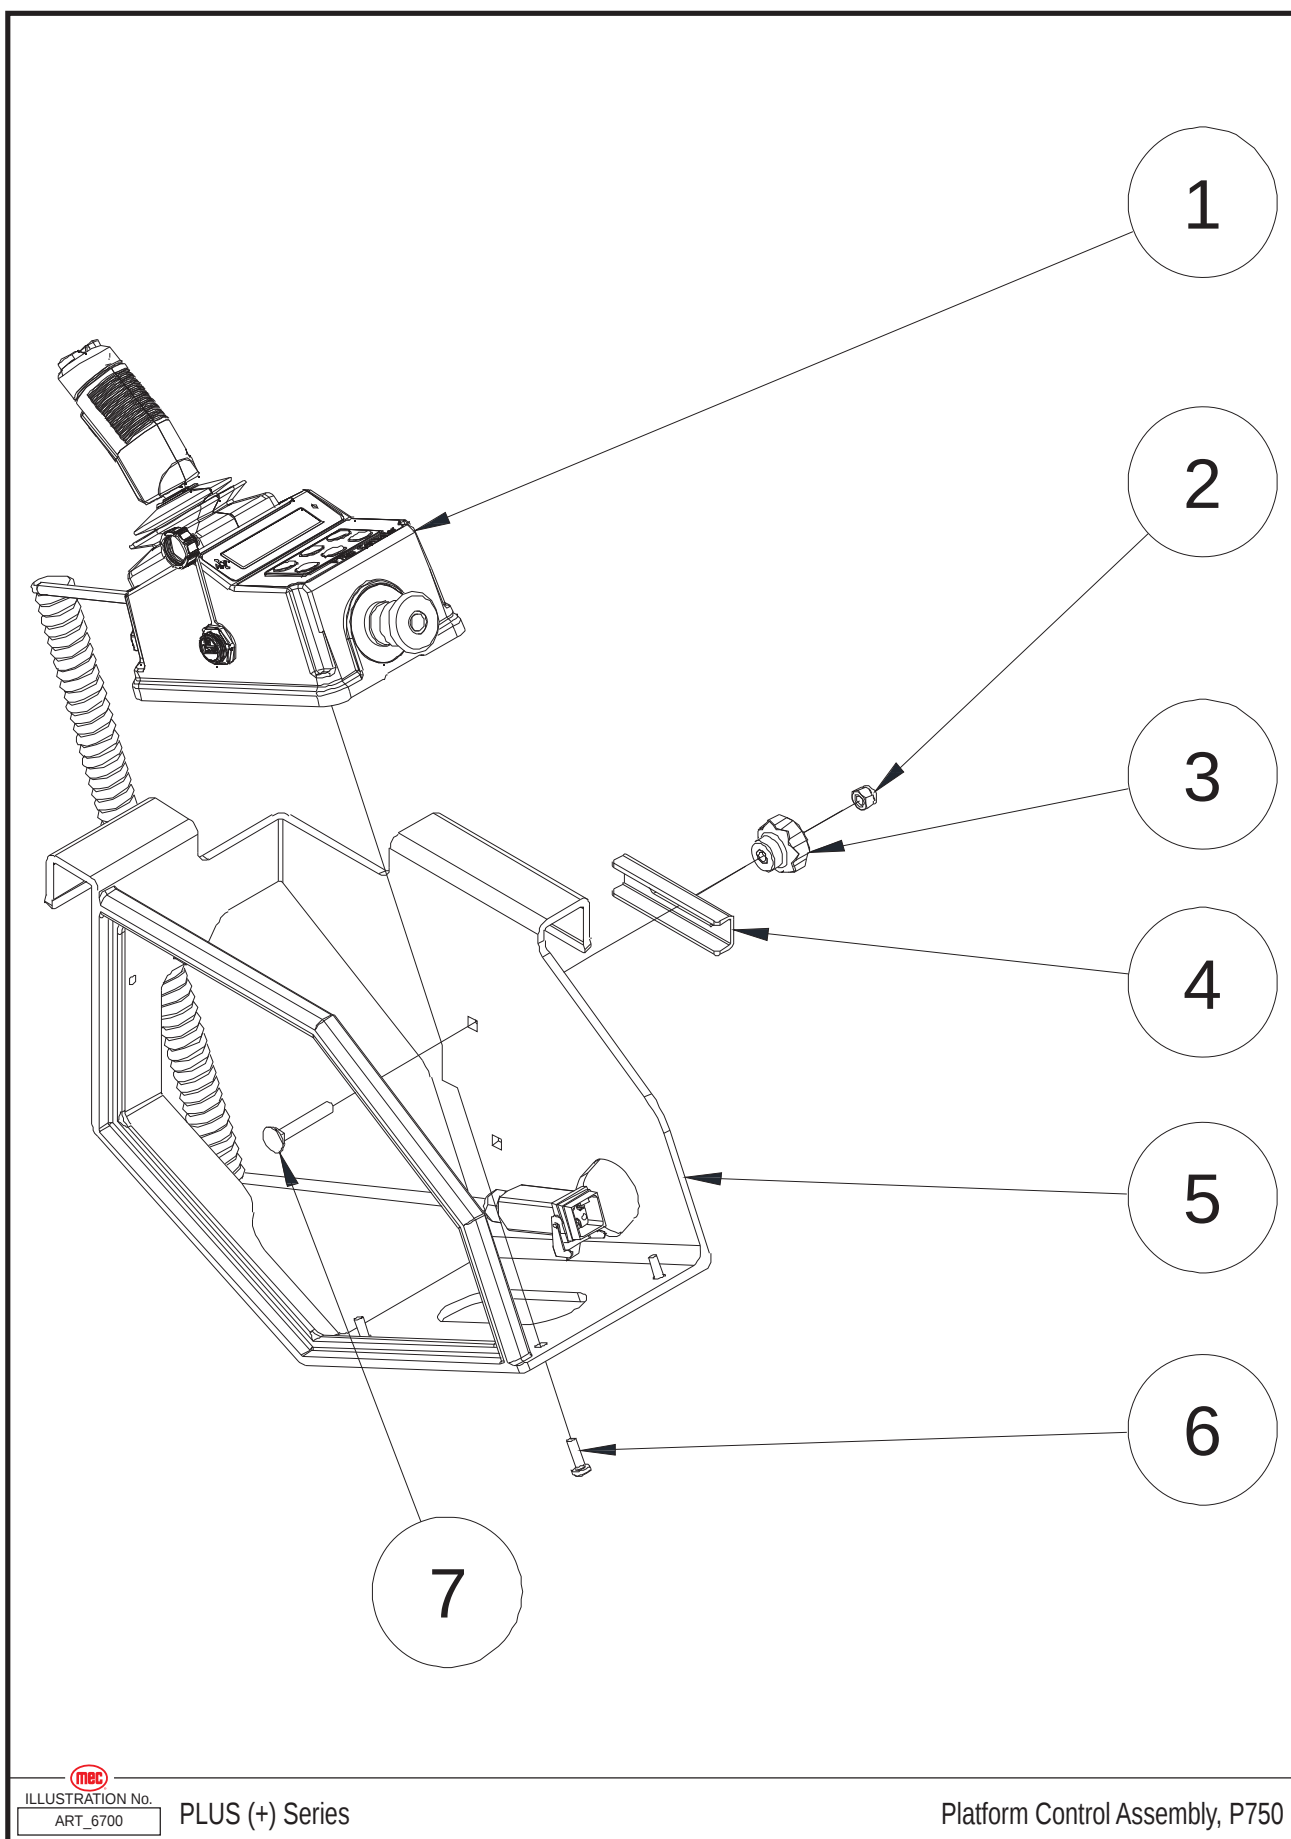


ILLUSTRATION No.
ART_6700

PLUS (+) Series

Platform Control Assembly, P750



Item	Part No.	Description	Qty.
1	60992	Platform Control Box Assembly, P750	1
2	50048	Nut NNYL M08-1.25 ZP	1
3	42501	Handle, Star	1
4	42500	Locating Fixed Plate	1
5	49024	Platform Control Box Mount Bracket, Tilted	1
6	53264	Screw PHMS M06-1.00 × 20 ZP	4
7	53610	Screw CARB M08-1.25 × 50 ZP	1

Platform Control Box Assembly

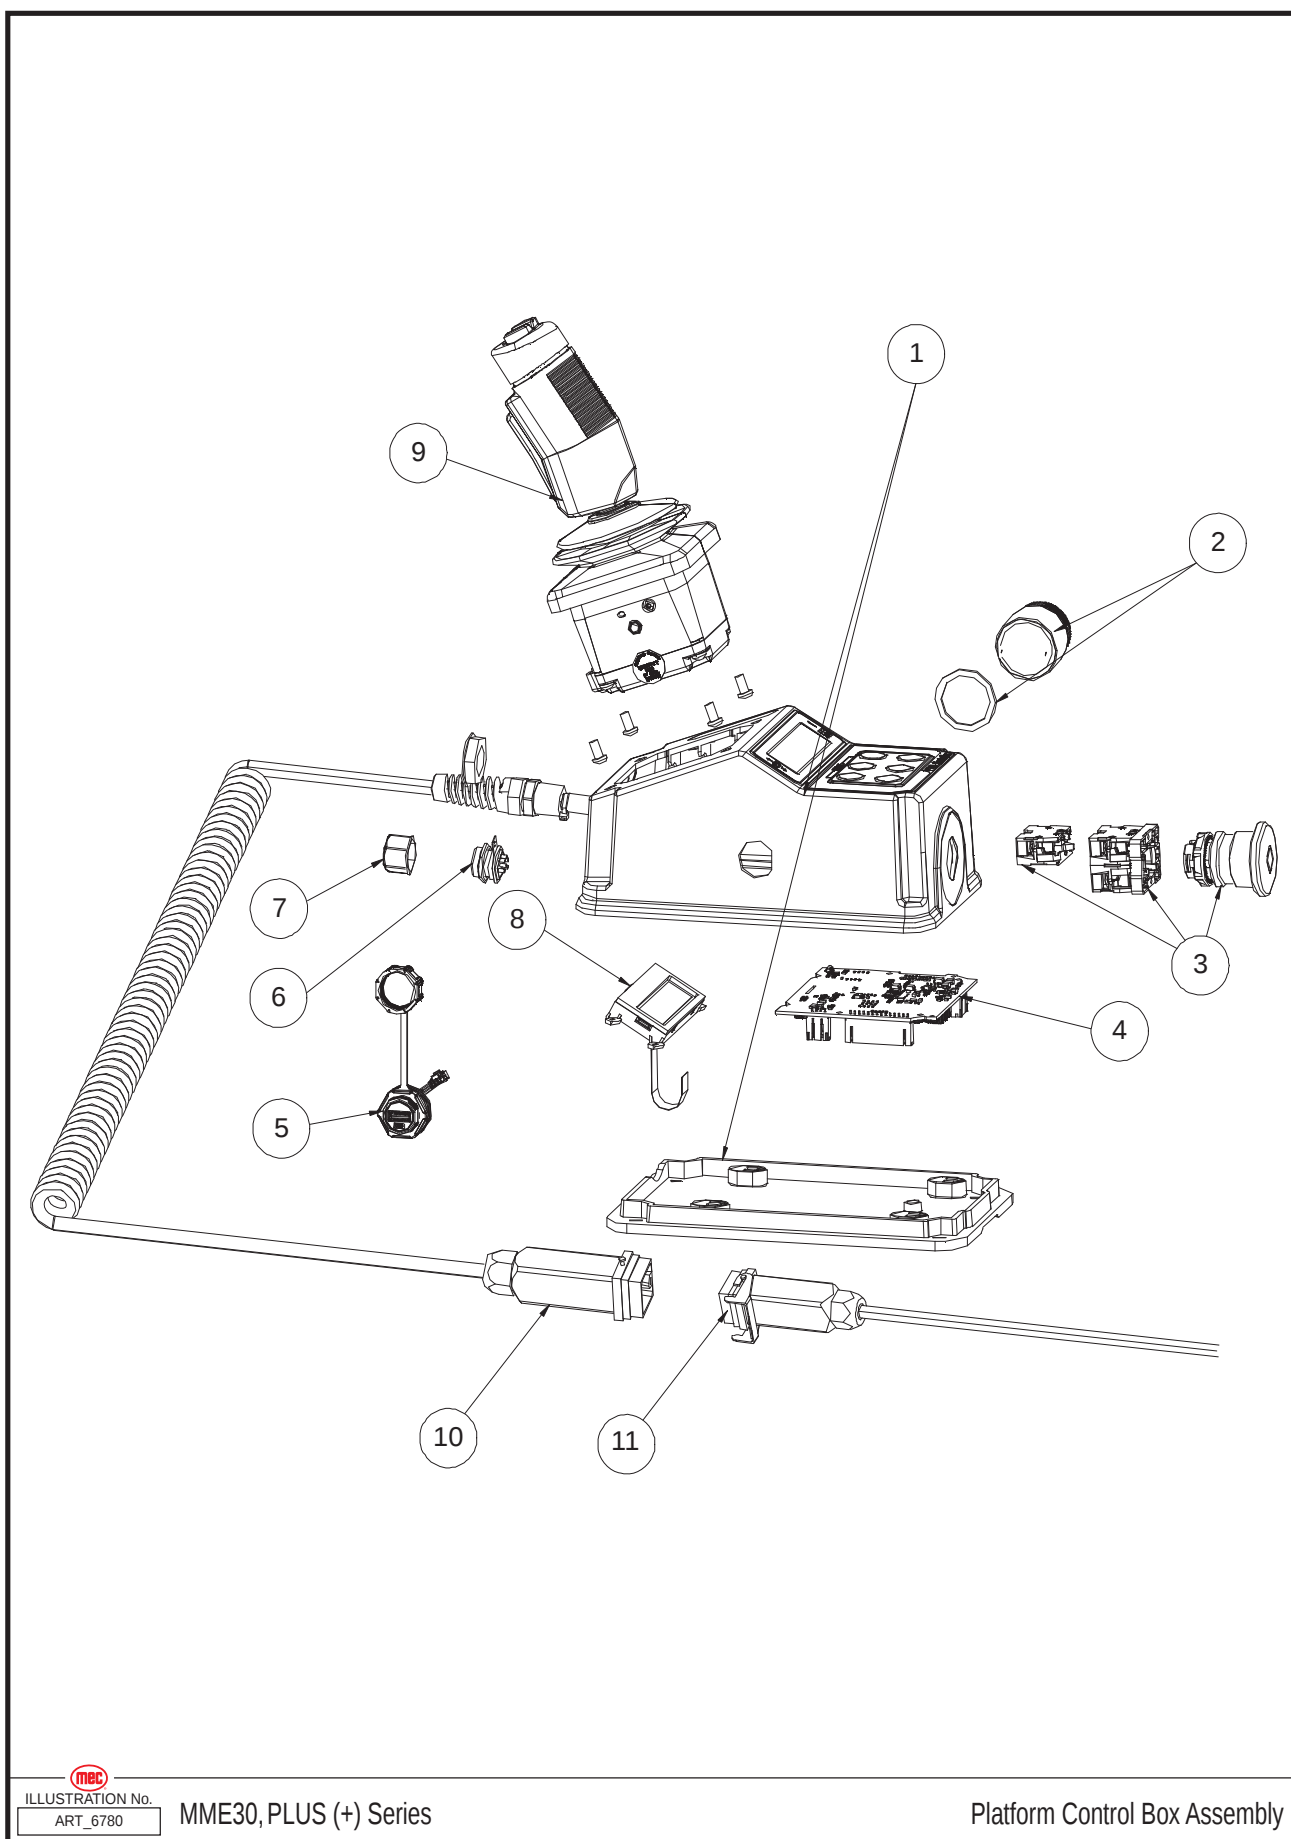


ILLUSTRATION No.
ART_6780

MME30, PLUS (+) Series

Platform Control Box Assembly

Item	Part No.	Description	Qty.
1	62752	Shell Components	1
--	61039	LED Display Cover, P750 Upper Control	1
--	49772	Decal - Upper Controls, LED Display	1
--	49773	Decal - Upper Controls, Buttons Overlay	1
2	41568	Alarm	1
3	62746	Emergency Stop Switch	1
4	62730	PCU Main Board	1
5	62720	USB Cable	1
6	62749	Connector	1
7	44771	Connector Cap	1
8	62803	Display	1
9	41149	Joystick	1
--	43621	Function Enable Switch	1
--	41150	Joystick Dustproof Cover	1
--	43622	Joystick Steer Switch	1
--	43623	Switch Boot	1
10	62719	Coil Cord	1
--	44258	Female Plug Outer Hood Shell	1
--	44259	Female Plug Plastic Insert Body	1
--	44255	Terminal, Female Contacts	7
--	43627	Cable Gland	1
11	REF	Platform Control Box Harness (Refer to page 54)	1
--	44257	Male Plug Housing Outer Shell	1
--	44256	Male Plug Plastic Insert Body	1
--	44254	Terminal, Male Contacts	7
--	43627	Cable Gland	1

REF - Reference

Lower Lift Cylinder Assembly

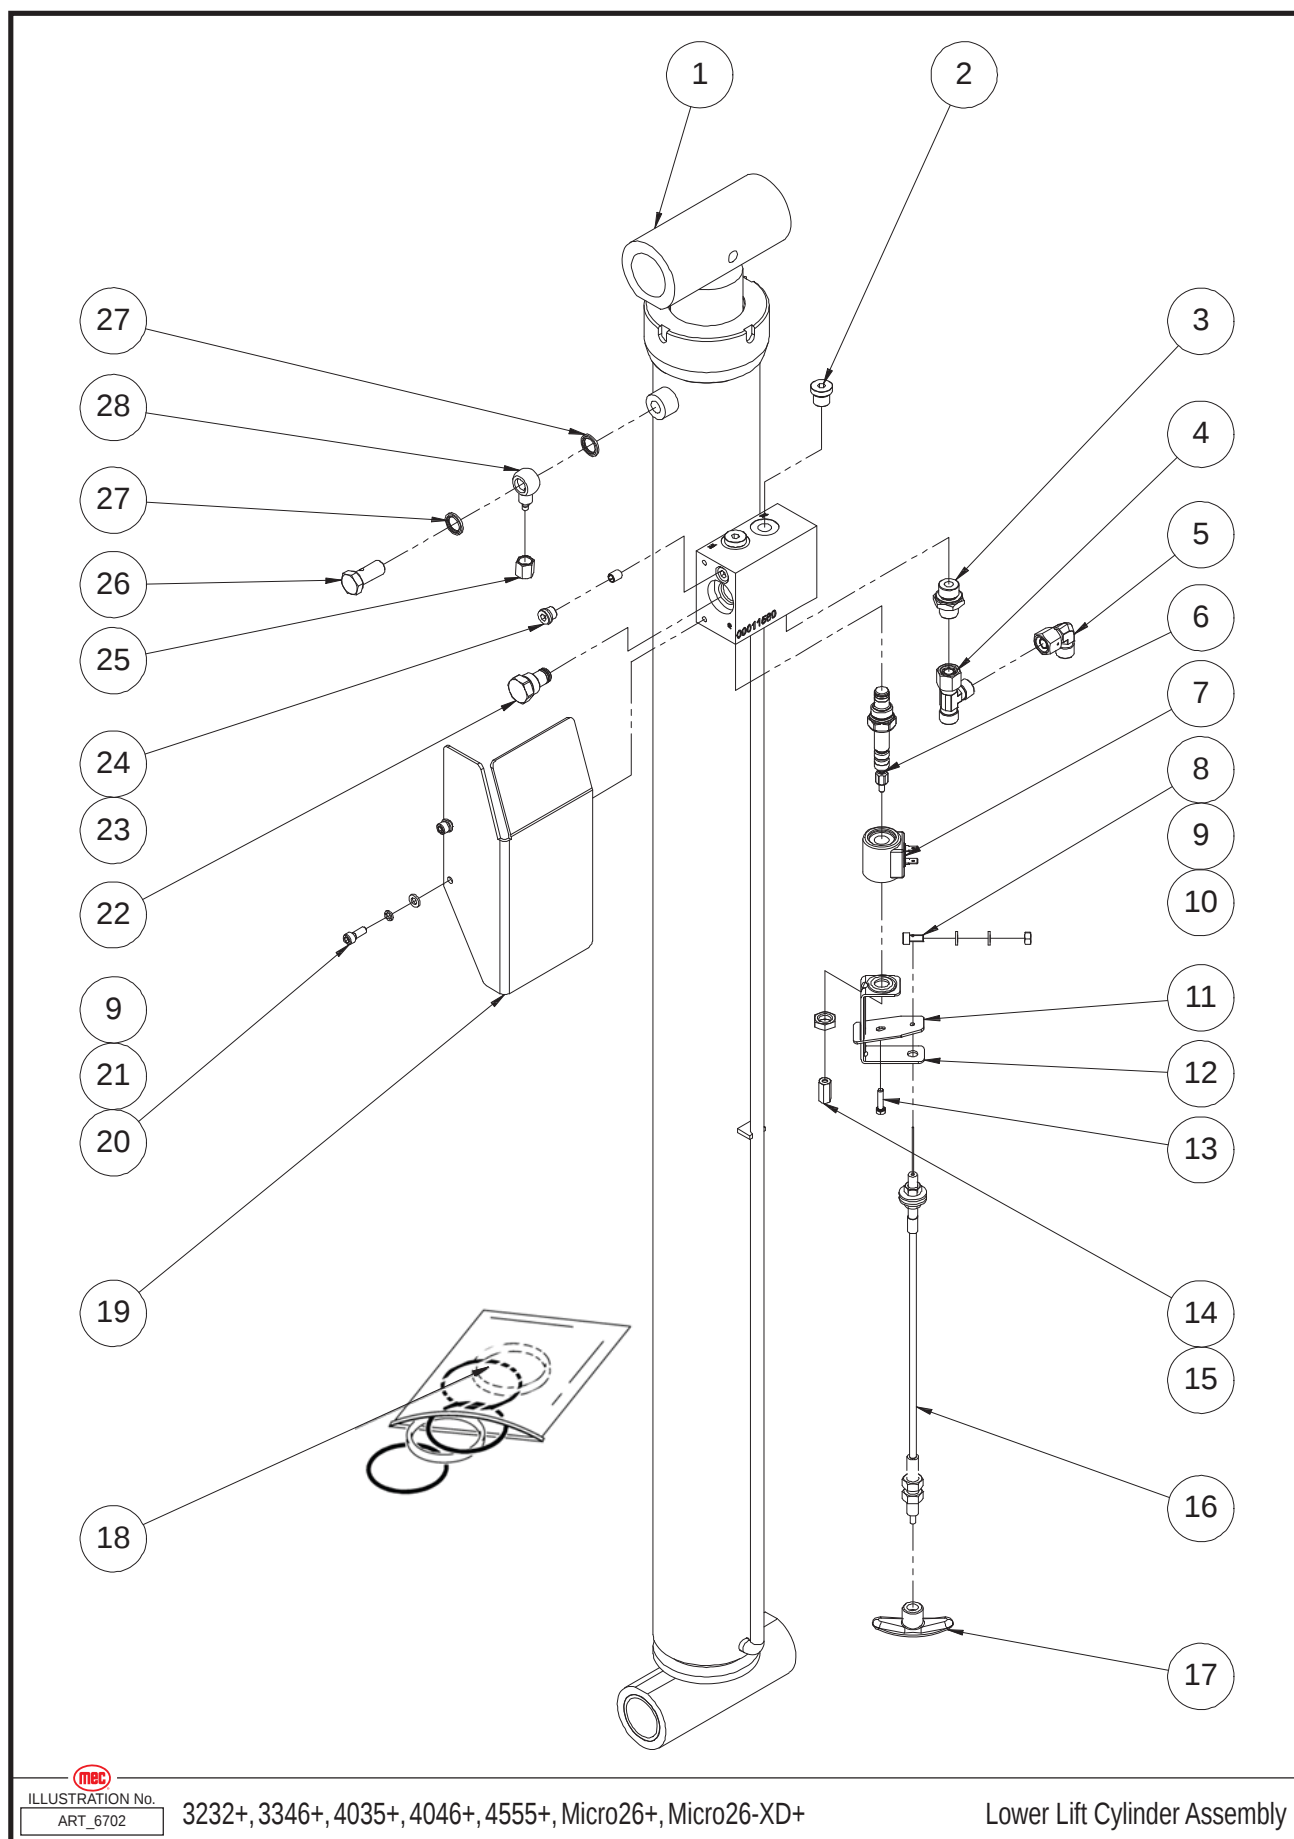


ILLUSTRATION No.
ART_6702

3232+, 3346+, 4035+, 4046+, 4555+, Micro26+, Micro26-XD+

Lower Lift Cylinder Assembly



Item	Part No.	Description	Qty.
1	62797	Lower Lift Cylinder	1
2	42480	Plug	2
3	43638	Straight Fitting	1
4	43640	Tee Fitting	1
5	43639	Elbow	1
6	44003	Solenoid Valve Spool	1
7	46764	Coil	1
8	42466	Set Screw	1
9	50000	WSHR M06 Standard Flat Washer ZP	4
10	53361	Nut NHEX M06-1.00 ZP	1
11	44833	Plate	1
12	44834	Support	1
13	53179	Screw HHCS M05-0.80 × 20 ZP	1
14	44004	Cable Connector	1
15	53362	Nut NHEX 1/2-20 UNF ZP	1
16	62774	Emergency Down Cable Assembly	1
17	43367	Lowering Knob	1
18	61110	Seal Kit (For 62797)	1
19	45389	Cover	1
20	53138	Screw SHCS M06-1.00 × 16 ZP	2
21	53046	WSHR M06 Spring Washer ZP	2
22	49167	Check Valve	1
23	61040	Orifice, Lifting Cylinder	1
24	42821	Plug	2
25	41413	Nut	1
26	41166	Fitting, Pipeline Bolt	1
27	43361	Washer	2
28	41167	Fitting, Piecing Devices	1

Upper Lift Cylinder Assembly

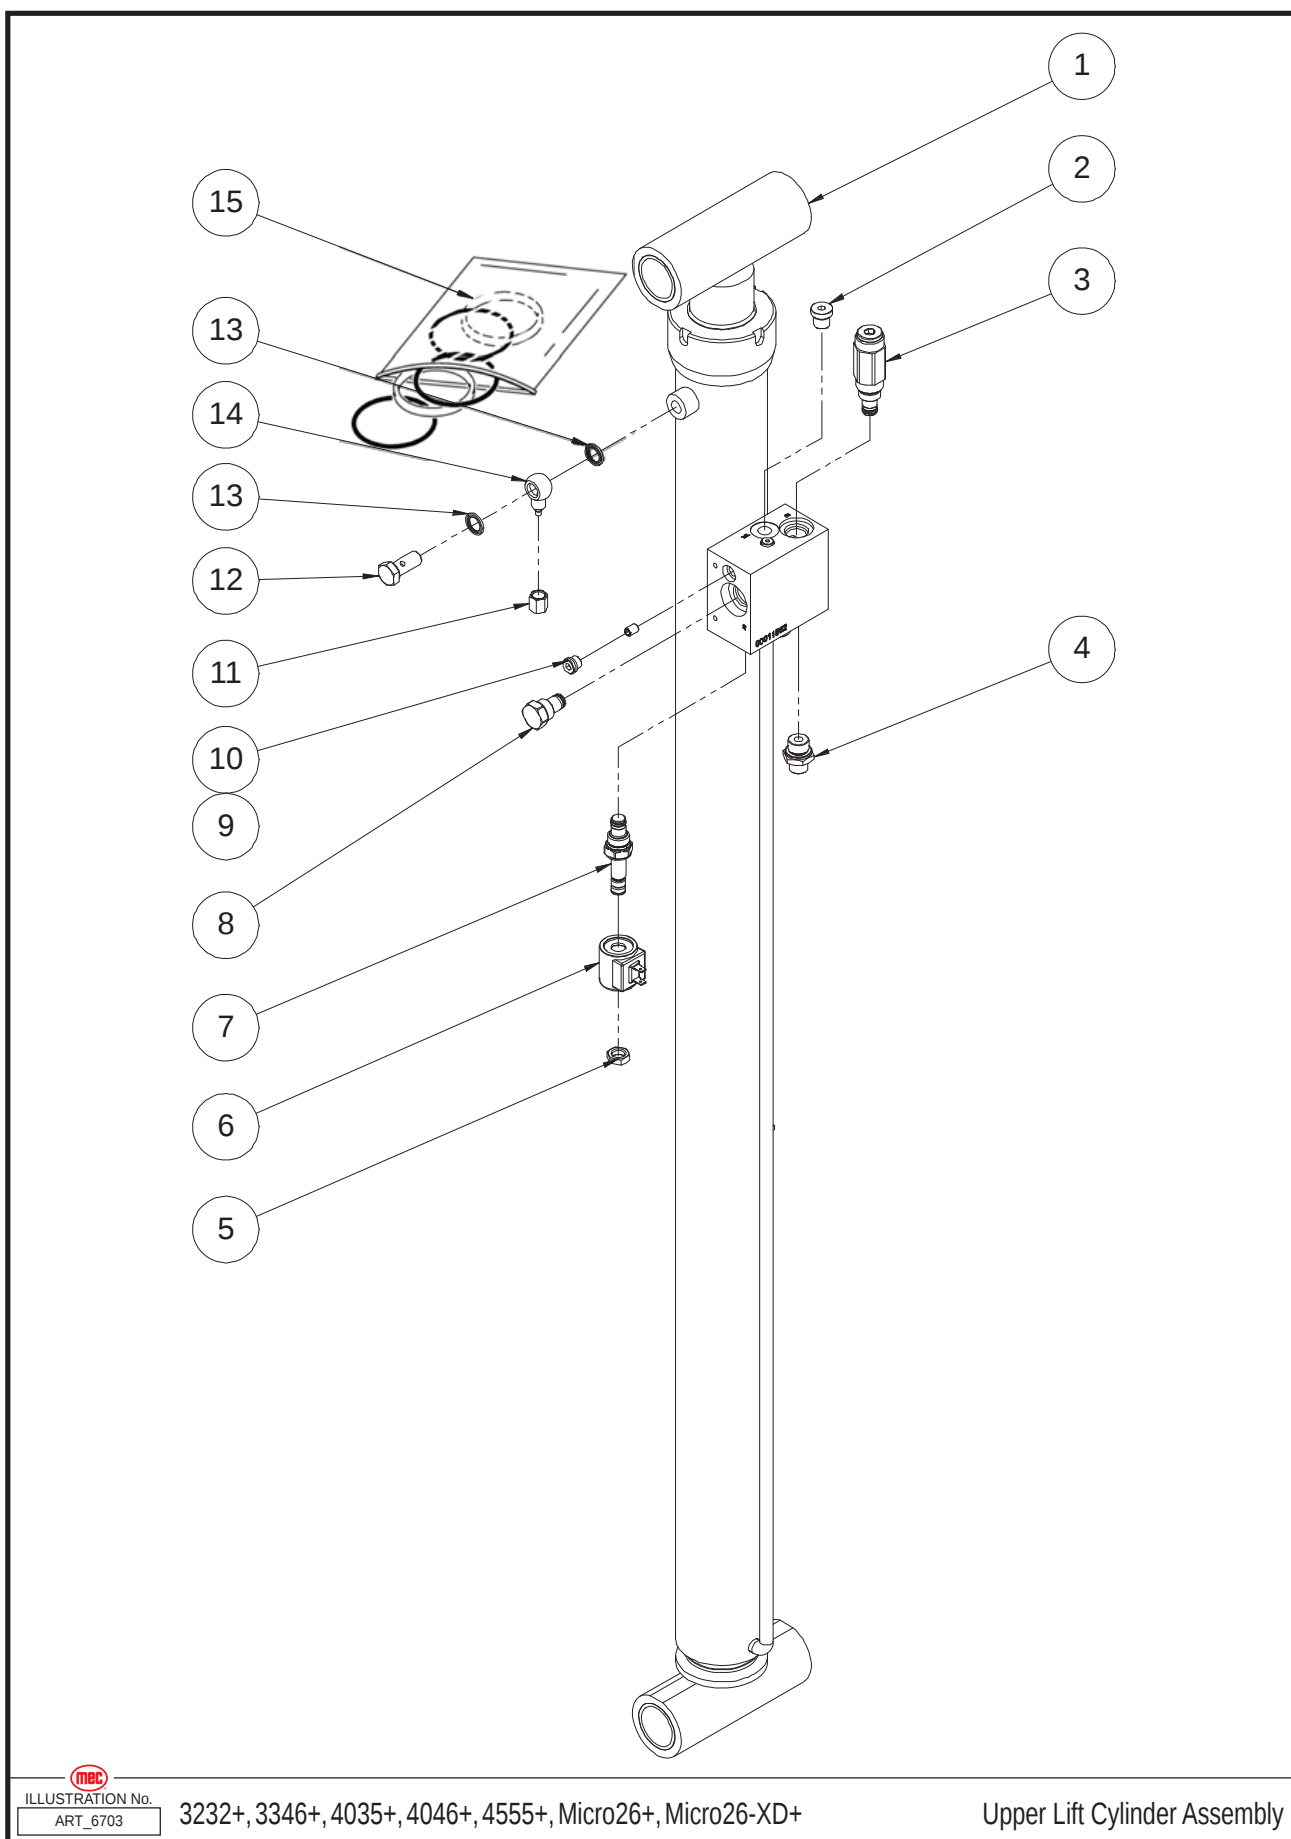



ILLUSTRATION No.
ART_6703

3232+, 3346+, 4035+, 4046+, 4555+, Micro26+, Micro26-XD+

Upper Lift Cylinder Assembly

Item	Part No.	Description	Qty.
1	62798	Upper Lift Cylinder	1
2	42480	Plug	1
3	41169	Relief Valve, Pressure	1
4	43638	Straight Fitting	1
5	53362	Nut NHEX 1/2-20 UNF ZP	1
6	46764	Coil	1
7	45390	Solenoid Valve Spool	1
8	49167	Check Valve	1
9	61111	Orifice, Upper Lift Cylinder	1
10	42821	Plug	1
11	41413	Nut	1
12	41166	Fitting, Pipeline Bolt	1
13	43361	Washer	2
14	41167	Fitting, Piecing	1
15	43642	Seal Kit	1

Hydraulic Hoses and Fittings

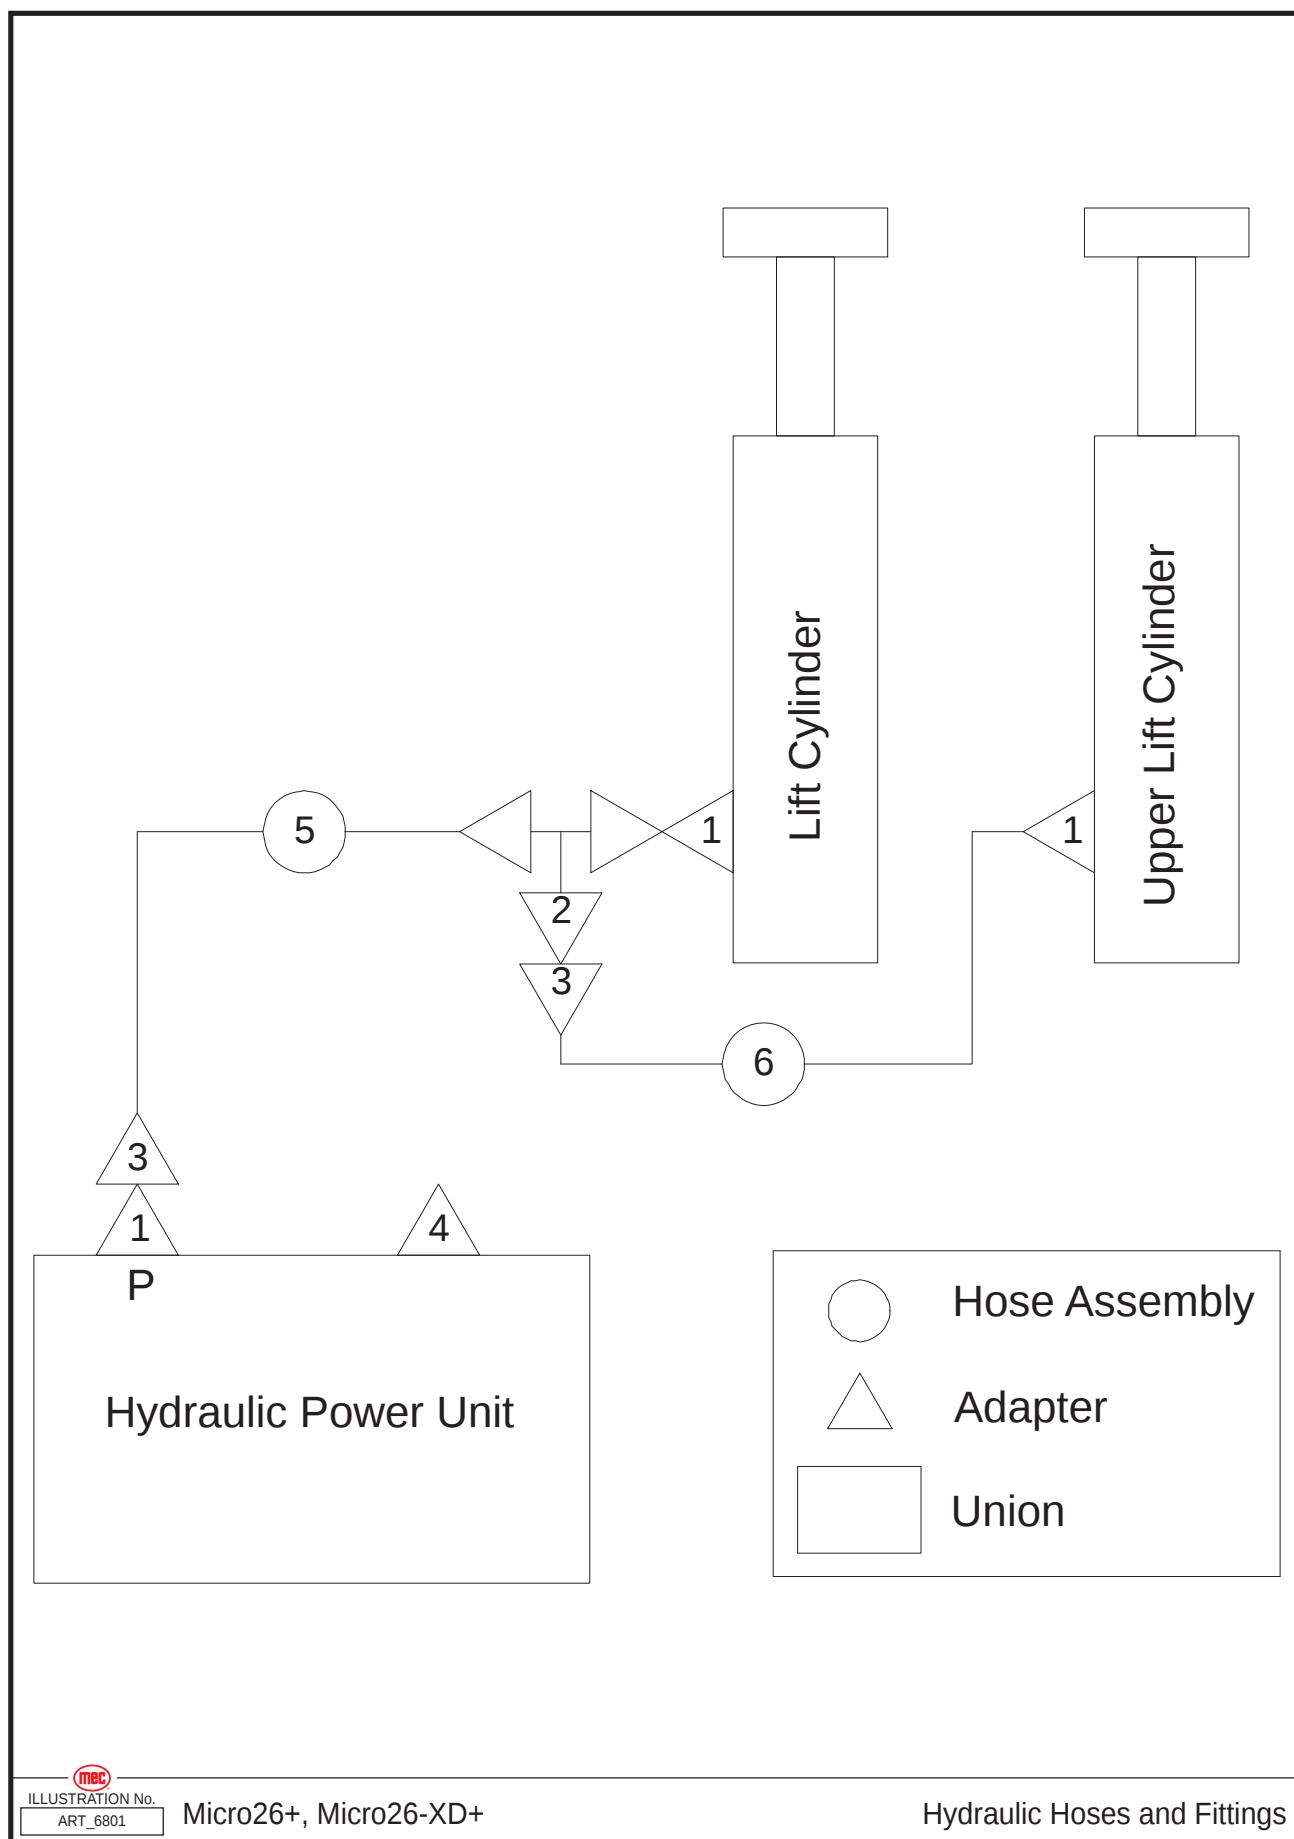

Item	Part No.	Description	Qty.
1	43638	Straight Fitting	3
2	43640	Tee Fitting	1
3	43639	Elbow	2
4	42480	Plug	1
5	61112	Hose Assembly, Lower Lift Cylinder	1
6	44249	Hose Assembly, Upper Lift Cylinder	1

Electrical Harness

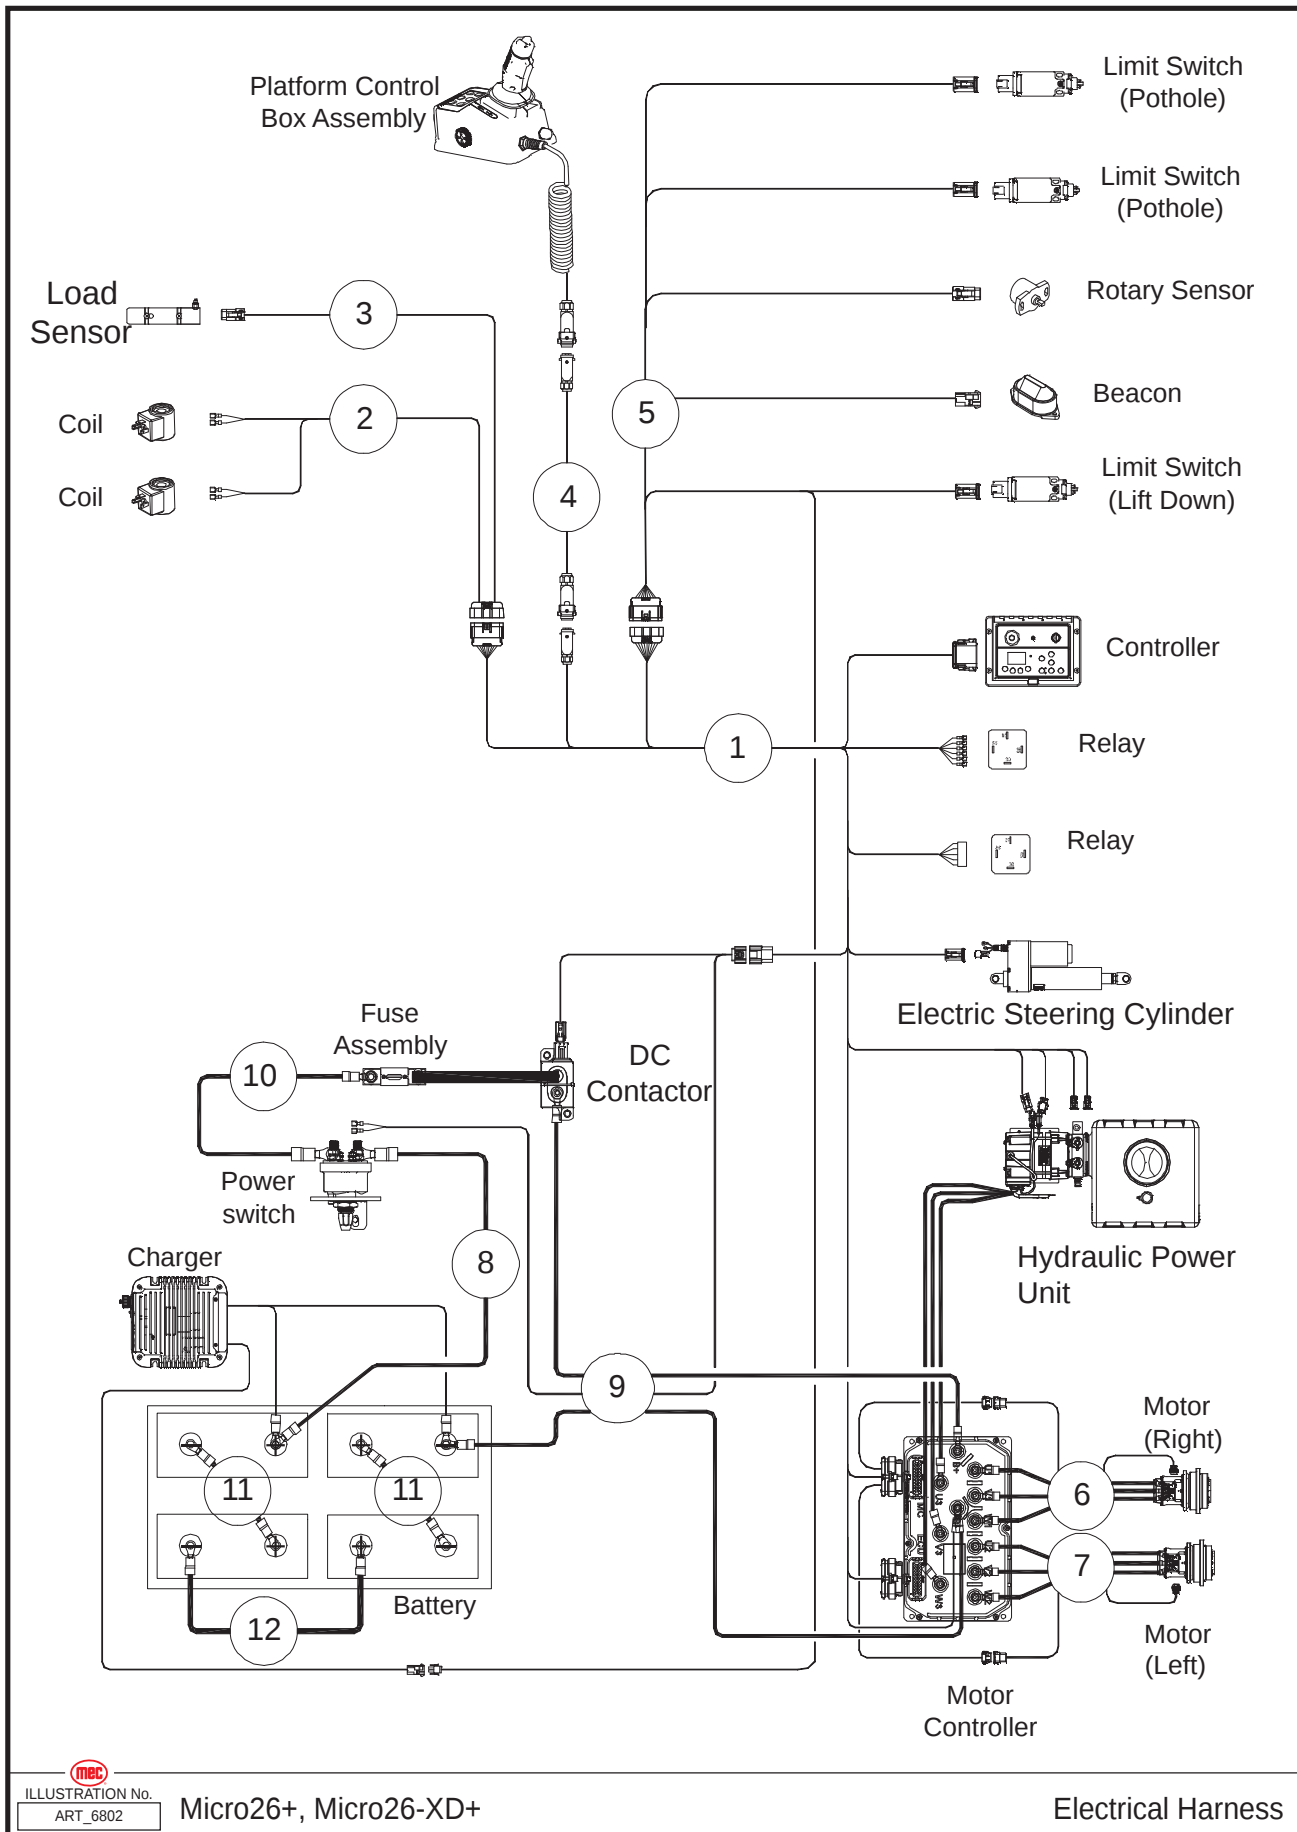



ILLUSTRATION No.
ART_6802

Micro26+, Micro26-XD+

Electrical Harness


Item	Part No.	Description	Qty.
1	62709	ECU Harness	1
2	62718	Lowering Valve Harness	1
3	62689	Load Cell Harness	1
4	62717	Platform Control Box Harness	1
5	62696	Limit Switch Harness	1
6	62721	Drive Motor Harness (Right)	1
7	62722	Drive Motor Harness (Left)	1
8	46311	Power Harness	1
9	62697	Power Harness	1
10	46309	Power Harness	1
11	45411	Battery Harness	2
12	45412	Battery Harness	1

Power to Platform

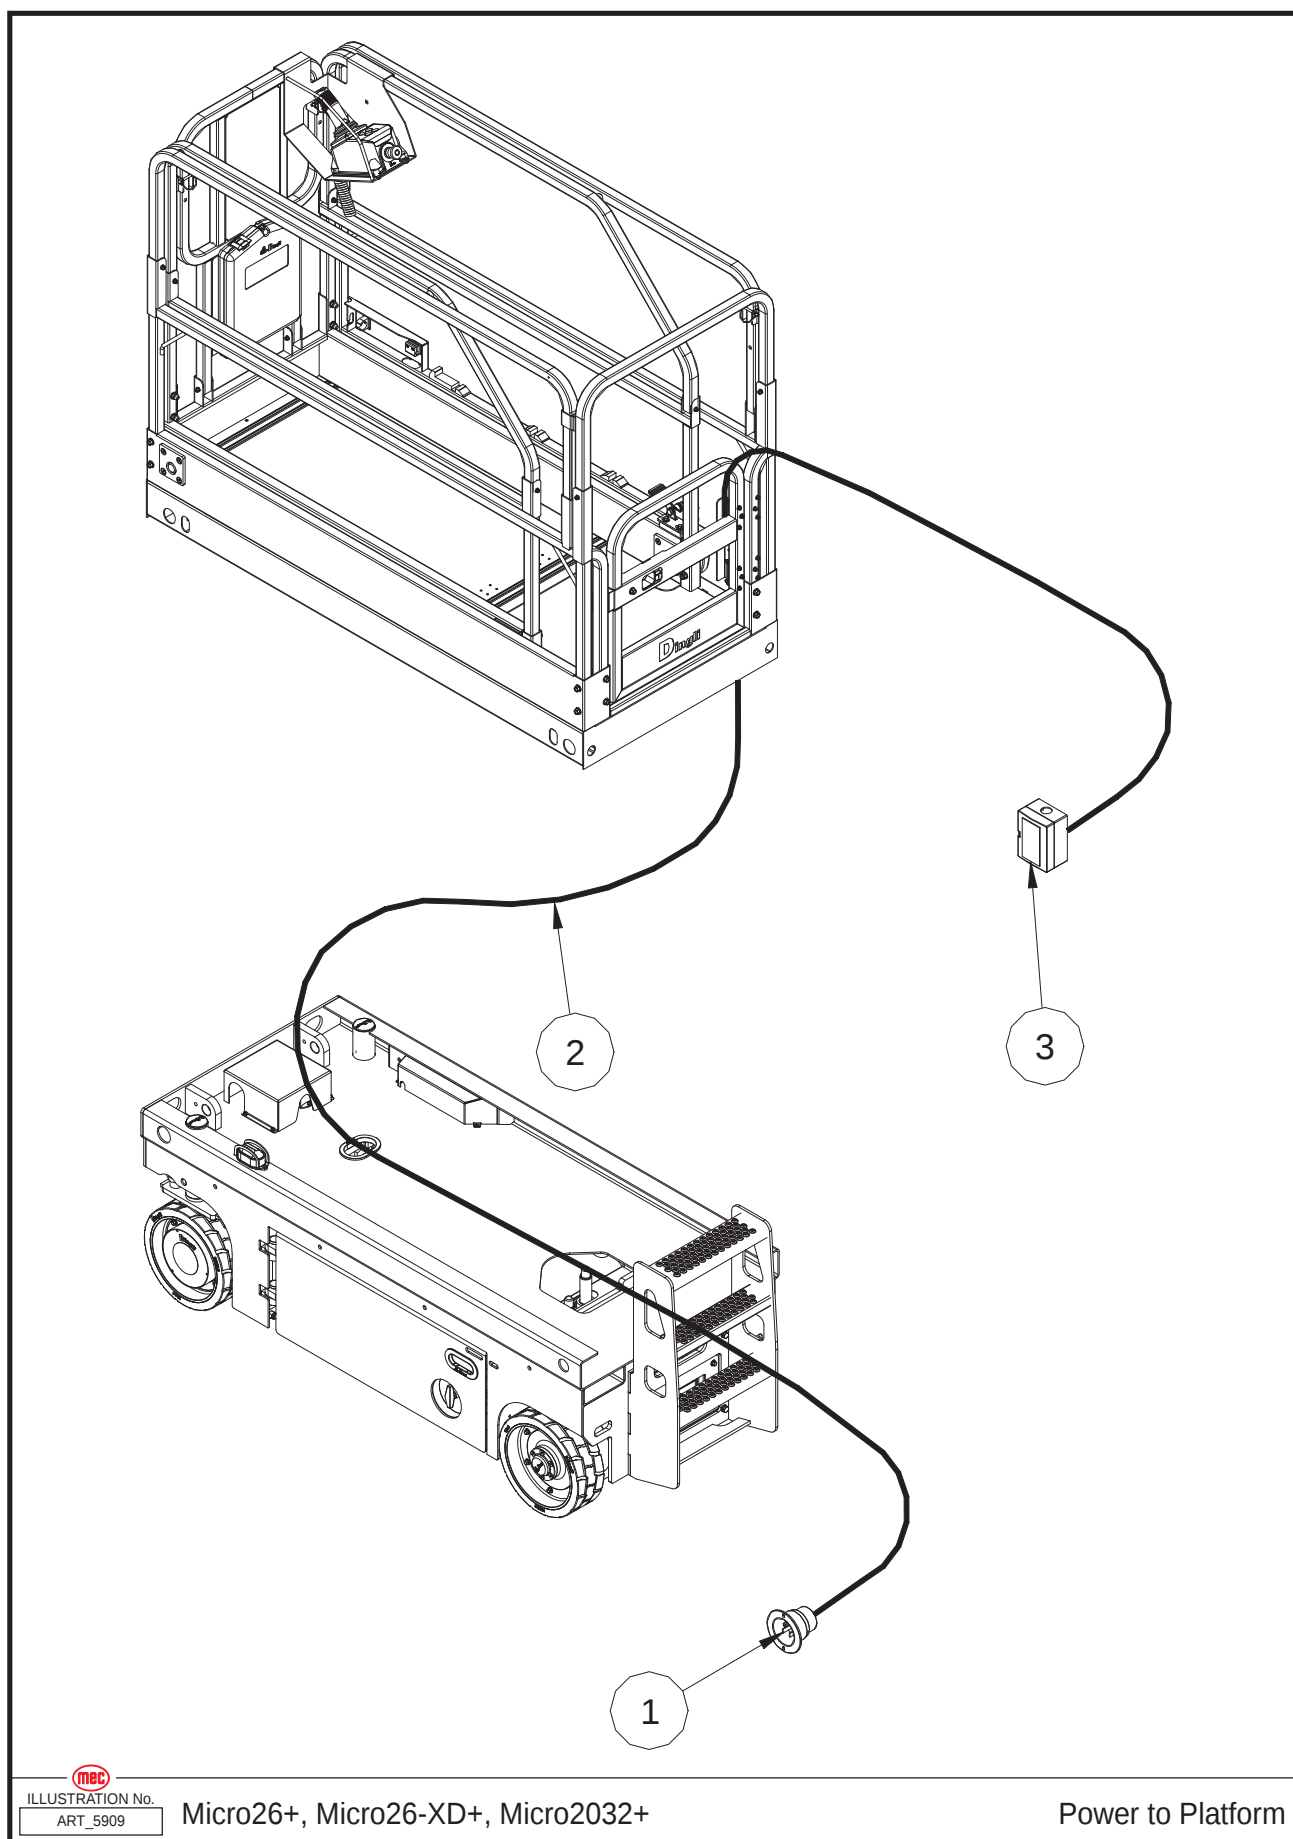


Item	Part No.	Description	Qty.
1	41575	AC Plug, Input Socket	1
2	43721	Wire Cable, Platform AC Power	1
3	42613	AC Outlet Socket Assembly, Platform	1
--	91598	Cover, (Outlet Box) Weatherproof	1
--	91597	Outlet Box, 1/2" Weatherproof	1
--	92007	Outlet, 15A 120V GFCI	1



Decals, Micro26+

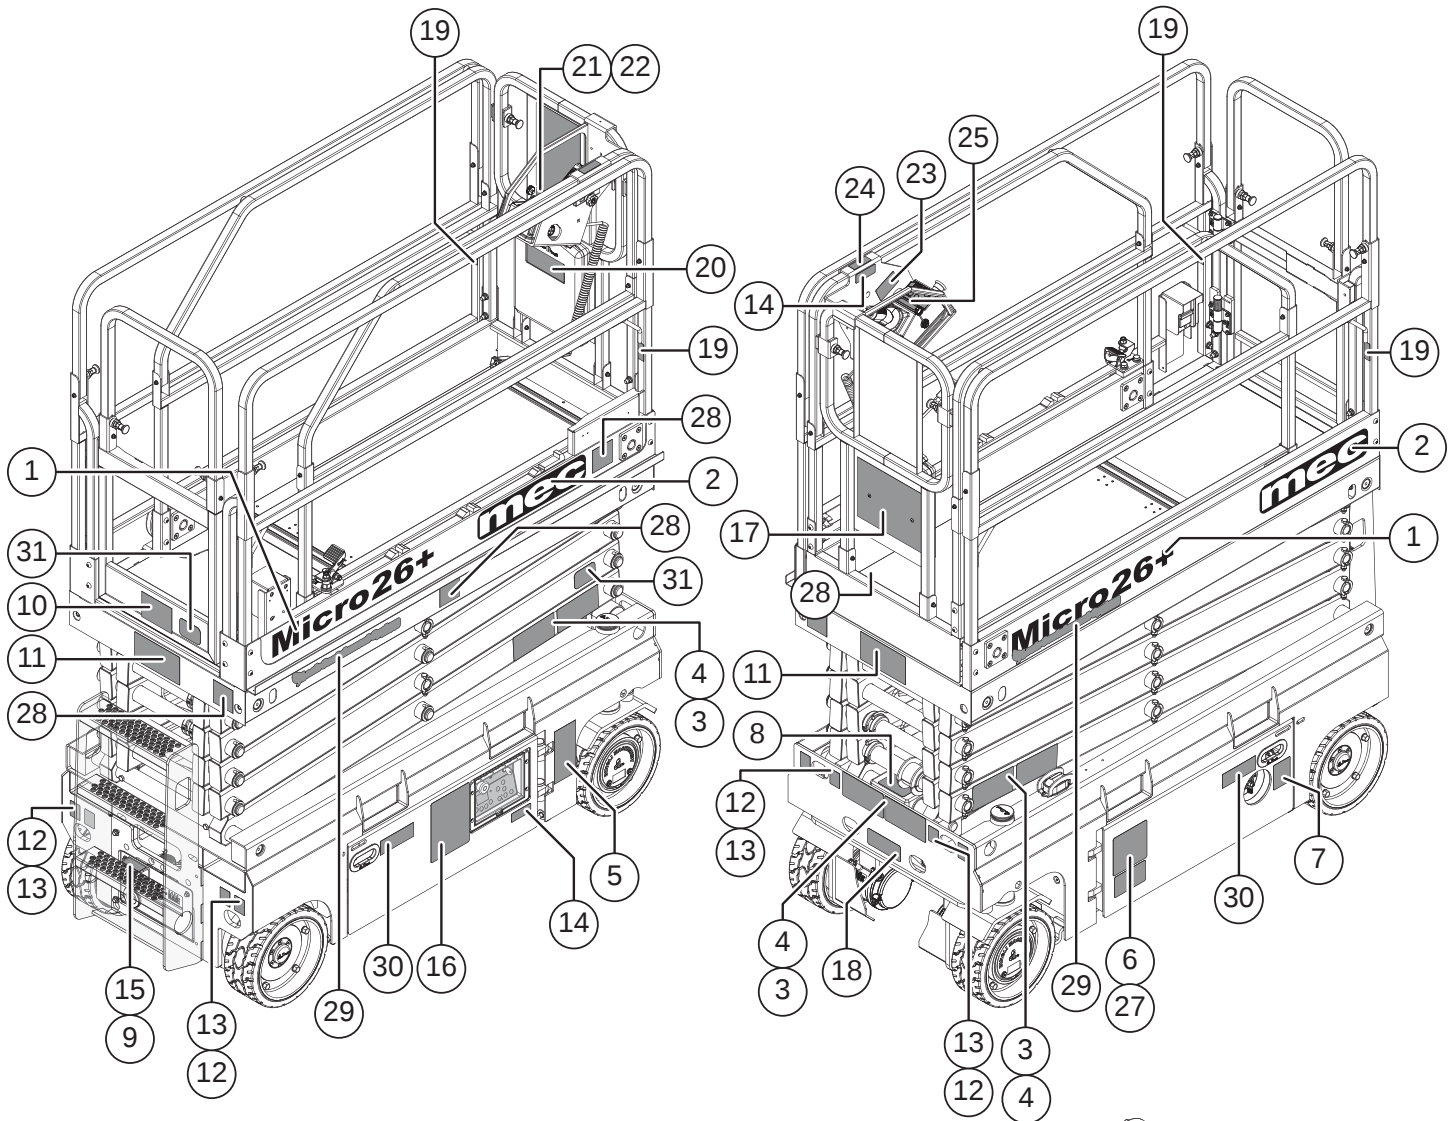








UNDER LADDER

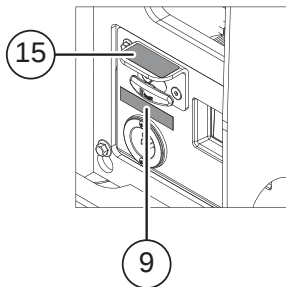


CONTROL MODULE

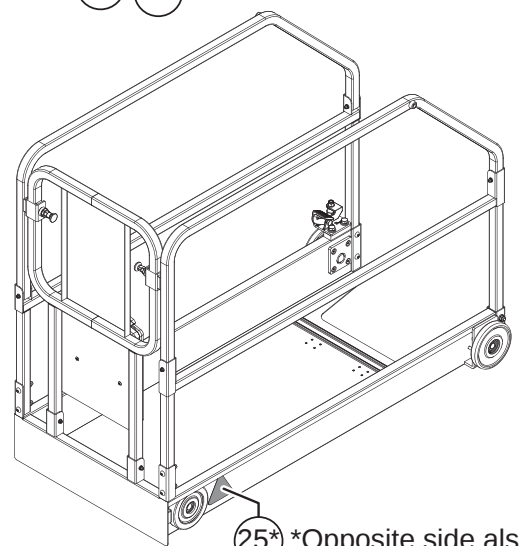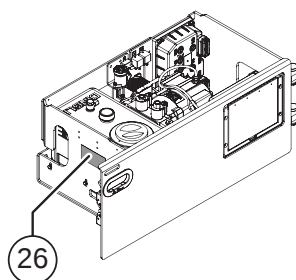

PLATFORM DECK EXTENDED

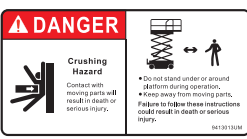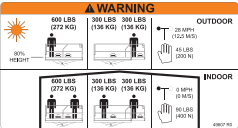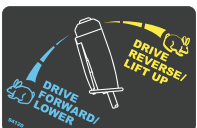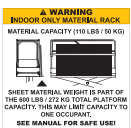1 Micro26+ 97345 Qty. - 2	2  94114 Qty. - 2	3  41748 Qty. - 3	4  41646 Qty. - 3	5  95215 Qty. - 1
6  41641 Qty. - 1	7  49749 Qty. - 1	8  41642 Qty. - 1	9 BATTERY CHARGER AND POWER TO PLATFORM 94659 Qty. - 1	10  95301 Qty. - 1
11  49607 Qty. - 2	12  49748 Qty. - 4	13  45899 Qty. - 4	14  41639 Qty. - 2	15 EMERGENCY LOWER Pull knob to lower platform 9311017
16  41649 Qty. - 1	17  90719 Qty. - 1	18  94423 Qty. - 1	19  41648 Qty. - 4	20  8911 Qty. - 1
21  41749 Qty. - 1	22  41647 Qty. - 1	23  94120 Qty. - 1	24  41640 Qty. - 1	25  91850 Qty. - 2
26  90732 Qty. - 1	27  48485 Qty. - 1	28  49750 Qty. - 4	29  94866 Qty. - 2	30  94867 Qty. - 2
31  97413 Qty. - 2				

Decals, Micro26-XD+

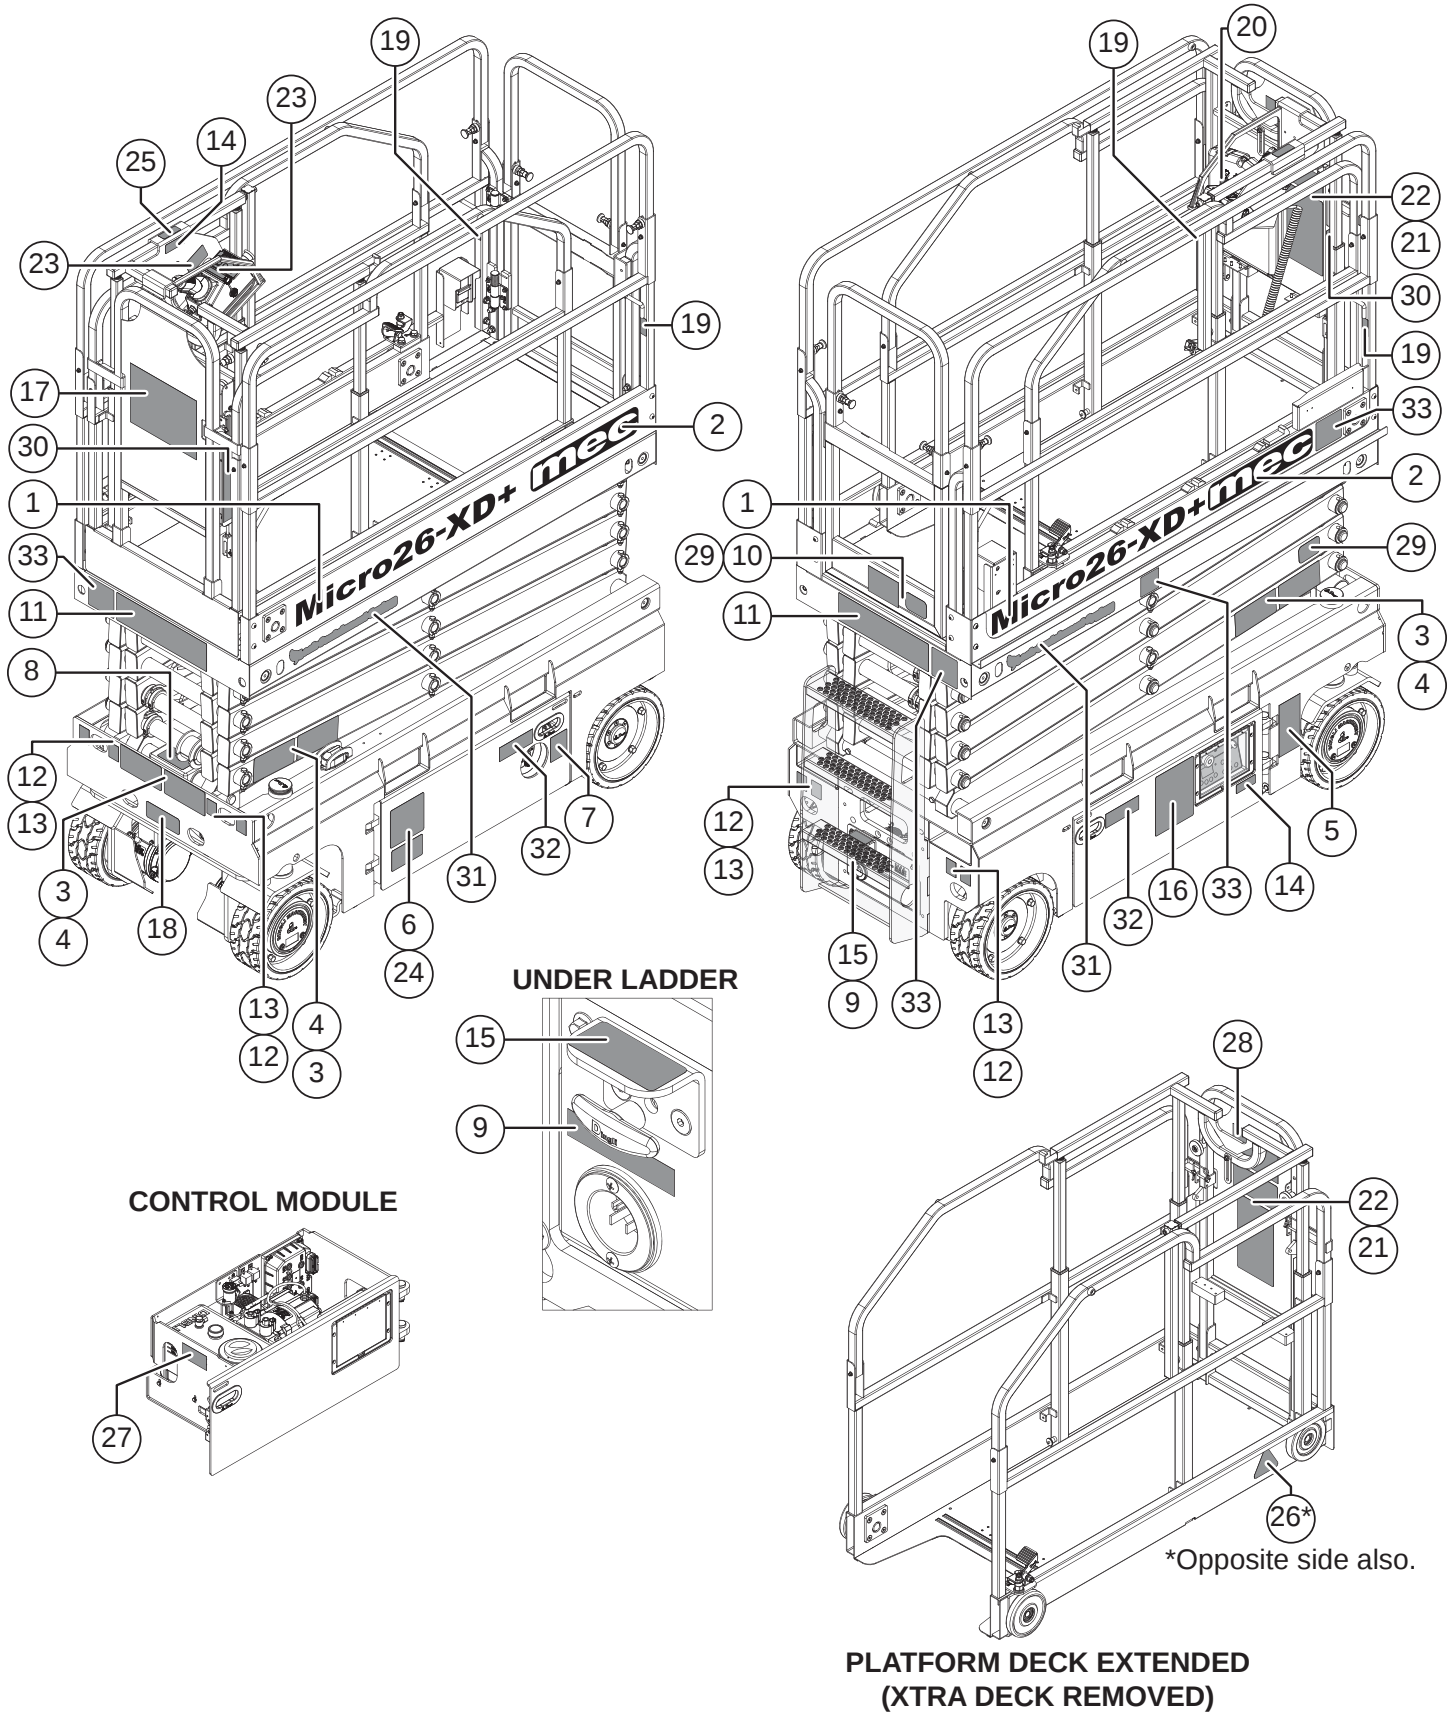

1 Micro26-XD+ 97224 Qty. - 2	2 mec 94114 Qty. - 2	3 ⚠ DANGER Crushing Hazard Contact with moving parts will result in death or serious injury. Do not stand under or around platform during operation. Keep away from moving parts. Failure to follow these instructions could result in death or serious injury. 941301302 41646 Qty. - 3	4 ⚠ DANGER Crushing Hazard Crushing or serious injury can result from contact with moving scissor arms. Don't engage safety arms unless scissor platform is fully retracted. Engage safety arms before performing maintenance or repair. 941301104 41748 Qty. - 3
5 95215 Qty. - 1	6 ⚠ DANGER Crushing Hazard Crushing or serious injury can result from contact with moving scissor arms. Do not engage safety arms unless scissor platform is fully retracted. Engage safety arms before performing maintenance or repair. 941301104 41641 Qty. - 1	7 NOTICE Cut off the power when the machine is repaired or not used for long period. ON OFF 941301104 49749 Qty. - 1	8 ⚠ DANGER Tip-over Hazard Acting or disabling limit switches can result in machine tip-over. Machine tip-over will result in death or serious injury. Do not alter or disable limit switch(es). 9411015UM 41642 Qty. - 1
9 BATTERY CHARGER AND POWER TO PLATFORM 94659 Qty. - 1	10 mec 95301 Qty. - 1	11 ⚠ WARNING Do not stand under or around platform during operation. Keep away from moving parts. Failure to follow these instructions could result in death or serious injury. 941301302 49608 Qty. - 2	12 ⚠ WARNING Do not stand under or around platform during operation. Keep away from moving parts. Failure to follow these instructions could result in death or serious injury. 941301302 49748 Qty. - 4
13 ↑ 9311013 45899 Qty. - 4	14 Refer the operator to the instructions for use. 9314013 41639 Qty. - 2	15 EMERGENCY LOWER Pull knob to lower platform 9311017 41636 Qty. - 1	16 ⚠ WARNING Do not stand under or around platform during operation. Keep away from moving parts. Failure to follow these instructions could result in death or serious injury. 941301302 41649 Qty. - 1
17 mec MEC AERIAL WORK PLATFORMS 1401 S. MADISON AVE. KERRVILLE, CA 93529 USA 1-800-845-1100 www.meccorp.com 90719 Qty. - 1	18 mec DIRECT ELECTRIC DRIVE 94423 Qty. - 1	19 Restraint only 1 Occurrence 9414123UM 41648 Qty. - 4	20 XTRA DECK® INSTRUCTIONS MAXIMUM CAPACITY (3000 lbs / 1360 kg) EXTEND TELESCOPIC GUARDRAILS UNTIL THE PIN SNAP INTO HOLE WHEN THE GUARDRAILS REACH THE EXTENDED POSITION. FOLD DOWN THE XTRA DECK®. LIFT UP AND DISengage THE BRIMMING TUBE GUARDRAIL ACROSS THE XTRA DECK® GUARDRAIL ENTRANCE. TO STOP: FIRST FOLD UP THE XTRA DECK®. PULL THE PLUNGER PINS, THEN LOWER THE GUARDRAILS TO THE STOWED POSITION. 3000lbs (1360kg) 97402 RD 97495 Qty. - 1
21 ⚠ DANGER Tip-over Hazard Do not use the machine on uneven or slippery surfaces. Failure to follow these instructions could result in death or serious injury. 941301302 43885 Qty. - 2	22 ⚠ DANGER Tip-over Hazard Do not use the machine on uneven or slippery surfaces. Failure to follow these instructions could result in death or serious injury. 941301302 41647 Qty. - 2	23 DRIVE FORWARD/LOWER 94528 Qty. - 1	24 ⚠ WARNING Tip-over Hazard Do not use batteries that weigh less than the original equipment. Batteries are used as counterweight and are critical to machine stability. Each battery must weigh 80 lbs / 36.3 kg. The batteries must weigh a minimum of 320 lbs / 145.2 kg. 48485 RD 48485 Qty. - 1
25 Platform controller normal position. 9314015 41640 Qty. - 1	26 ⚠ WARNING Do not use the machine on uneven or slippery surfaces. Failure to follow these instructions could result in death or serious injury. 941301302 91850 Qty. - 2	27 ⚠ WARNING DO NOT POWERWASH OR SPRAY ELECTRONIC COMPONENTS OR CONNECTORS. MOISTURE MAY CAUSE DAMAGE AND/OR ERRATIC OPERATION. 90732 Qty. - 1	28 OPERATOR'S MANUAL AND SAFE WORKING INSTRUCTIONS LOCATED UNDER STEP 95389 Qty. - 1
29 MEC - Model Info Text MICRO26XDPLUS to 1 (844) 483-4669 Manuals Brochures Warranty & More 97466 Qty. - 2	30 XTRA DECK® 95188 Qty. - 2	31 Leak Containment System 94866 Qty. - 2	32 Leak Containment System 94867 Qty. - 2
33 ⚠ WARNING INDOOR ONLY WATERBELL RACK MATERIAL CAPACITY (110 LBS / 50 KG) SHEET MATERIAL WEIGHT IS PART OF THE TOTAL 272 KG TOTAL PLATFORM CAPACITY. THIS MAY LIMIT CAPACITY TO ONE OCCUPANT. SEE MANUAL FOR SAFE USE 49750 Qty. - 4			



MEC Parts Order Form

Phone: 559-710-2405

Fax: 559-400-6723

Email: Parts@mecawp.com

Please Fill Out Completely:

Date: _____

Account: _____

Bill to: _____

Ordered By: _____

Your Fax No.: _____

Ship to: _____

Purchase Order Number _____

Ship VIA _____

*** All orders MUST have a Purchase Order Number*

***Fed Ex shipments require Fed Ex account number*

Part Number	Description	Quantity	Price

All back-ordered parts will be shipped when available via the same ship method as original order unless noted below:

_____ Ship complete order only - No Backorders

_____ Ship all available parts and contact customer on disposition of back-ordered parts

_____ Other (Please specify)

Signature _____



Limited Owner Warranty

MEC Aerial Platform Sales Corp. warrants its equipment to the original purchaser against defects in material and/or workmanship under normal use and service for one (1) year from date of registered sale or date the unit left the factory if not registered. MEC Aerial Platform Sales Corp. further warrants the structural weldments of the main frame and scissor arms to be free from defects in material or workmanship for five (5) years from date of registered sale or date unit left the factory if not registered. Excluded from such warranty is the battery(s) which carries a ninety (90) day warranty from described purchase date. Warranty claims within such warranty period shall be limited to repair or replacement, MEC Aerial Platform Sales Corp's option, of the defective part in question and labor to perform the necessary repair or replacement based on MEC Aerial Platform Sales Corp's then current flat rate, provided the defective part in question is shipped prepaid to MEC Aerial Platform Sales Corp. and is found upon inspection by MEC Aerial Platform Sales Corp. to be defective in material and/or workmanship. MEC Aerial Platform Sales Corp. shall not be liable for any consequential, incidental or contingent damages whatsoever. Use of other than factory authorized parts; misuse, improper maintenance, or modification of the equipment voids this warranty. The foregoing warranty is exclusive and in lieu of all other warranties, express or implied. All such other warranties, including implied warranties of merchantability and of fitness for a particular purpose, are hereby excluded. No Dealer, Sales Representative, or other person purporting to act on behalf of MEC Aerial Platform Sales Corp. is authorized to alter the terms of this warranty, or in any manner assume on behalf of MEC Aerial Platform Sales Corp. any liability or obligation which exceeds MEC Aerial Platform Sales Corp's obligations under this warranty.



MEC Aerial Work Platforms

1401 S. Madera Avenue, Kerman, CA 93630 USA

Toll Free: 1.877.MEC.LIFT or 1.877.632.5438

Phone: 1.559.710.2425

Fax: 1.559.710.2390

info@MECawp.com

www.MECawp.com