

3072 4WD

OPERATOR'S MANUAL

This Operator's Manual
MUST BE READ AND UNDERSTOOD
prior to operating your
MEC Aerial Work Platform

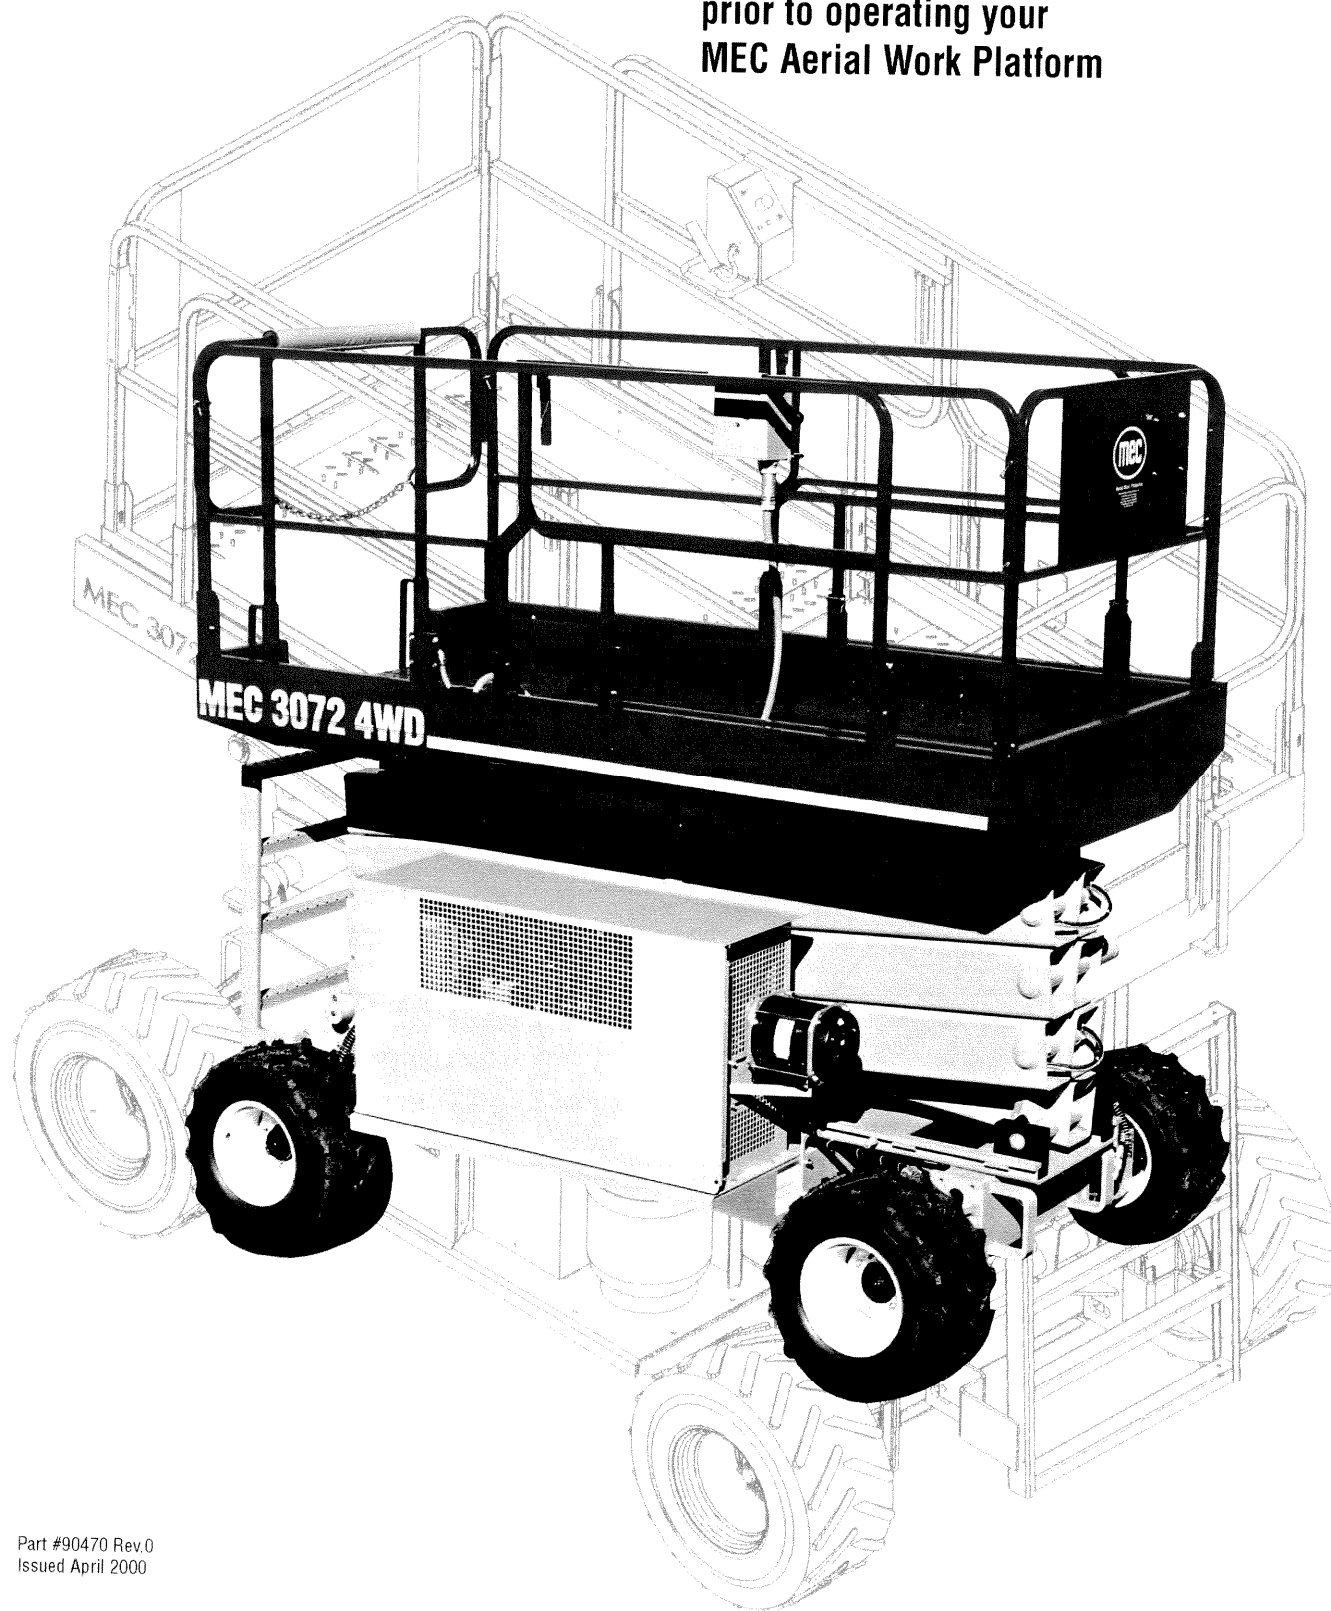


Table Of Contents

Introduction	iii
Machine Specifications	
3072 4WD	iv
 Section 1: Safety	
Safety Symbols	1-2
Safety Rules And Precautions	1-3
Fall Protection Notice	1-5
Safety And Control Decal Locations	1-6
Safety Related Decals	1-8
 Section 2: Operation	
Unloading Procedures	2-2
Primary Machine Components	2-3
Operator Controls	2-4
Base Controls	2-5
Platform Controls	2-7
PreStart Inspection	2-8
Starting Dual Fuel Engine	2-9
Starting A Diesel Engine	2-10
Base Control Operation And Checks	2-11
Platform Control Operation And Checks	2-12
Operation	2-13
Driving And Steering	2-13
Braking	2-14
Elevating The Platform	2-15
Lowering The Platform	2-15
Extending The Roll-Out Extension Deck	2-16
Lowering The Platform Railings	2-16
Shut Down Procedure	2-17
Moving The Machine	2-18
Emergency Systems And Procedures	2-19
Emergency Lowering	2-19
Emergency Lowering Decal	2-19

Section 3: Maintenance

General Maintenance Tips	3-2
Shift Operational Checklist	3-4
Weekly Operational Checklist	3-6
Monthly Operational Checklist	3-7
Quarterly Operational Checklist	3-8
Semi-Annual Operational Checklist	3-9
Troubleshooting	3-11
What To Check If Machine Will Not Start	3-11
What To Check If Functions Will Not Operate	3-11
Lubrication Diagram	3-12
Lubrication Chart	3-13

Warranty



Introduction

This Operations and Safety manual has been designed to provide you, the customer, with the instructions and operating procedures essential to properly and safely operate your MEC Self-Propelled Scissors for its intended purpose of positioning personnel, along with their necessary tools and materials to overhead work locations.



THE OPERATOR'S MANUAL MUST BE READ AND UNDERSTOOD PRIOR TO OPERATING YOUR MEC SELF-PROPELLED SCISSORS. THE USER/OPERATOR SHOULD NOT ACCEPT OPERATING RESPONSIBILITY UNTIL THE OPERATOR'S MANUAL HAS BEEN READ AND UNDERSTOOD AS WELL AS HAVING OPERATED THE MEC SCISSORLIFT UNDER SUPERVISION OF AN EXPERIENCED AND QUALIFIED OPERATOR.

MODIFICATIONS OF THIS MACHINE FROM THE ORIGINAL DESIGN AND SPECIFICATIONS WITHOUT WRITTEN PERMISSION FROM MEC ARE STRICTLY FORBIDDEN. A MODIFICATION MAY COMPROMISE THE SAFETY OF THE MACHINE, SUBJECTING OPERATOR(S) TO SERIOUS INJURY OR DEATH.

Your MEC Scissor Lift has been designed, built, and tested to provide many years of safe, dependable service. Only trained, authorized personnel should be allowed to operate or service the machine.

MEC, As Manufacturer, Has No Direct Control Over Machine Application And Operation. Proper Safety Practices Are The Responsibility Of The User And All Operating Personnel.

If There Is A Question On Application And/Or Operation Contact:



**Aerial Work Platforms
Mayville Engineering Co., Inc.**

An Employee Owned Company

210 Corporate Drive-Box 990 • Beaver Dam, WI 53916-0990 USA

Ph: 1-800-387-4575 • 920-887-2518 • Fax: 920-887-2480

E-mail: awp@mayvl.com • Web: www.mayvl.com

"3072 4WD" Operator's Manual



*Page iii
April 2000*

Machine Specifications - 3072 4WD

Working Height	36.0 ft	11.0 m
Platform Height	30.0 ft	9.1 m
Stowed Height	108.5 in	2.75 m
Folded Down Rails	78.75 in	2.00 m
Lift Capacity (Evenly Distributed):	800 lbs	362 kg
Roll-out Deck Capacity	400 lbs	181 kg
Platform Dimensions:		
With Roll-Out Deck	60.0 in x 110.0 in	1.52 m x 2.79 m
Guard Rail Height	43.5 in	1.10 m
Toe Board Height	6.0 in	15.0 cm
Roll-out Deck Length	48.0 in	1.22 m
Overall Length	10.0 ft	3.05 m
Overall Width	72.0 in	1.83 m
Wheel Base	86.0 in	2.18 m
Wheel Track	60.5 in	1.54 m
Turning Radius:		
Inside	73.25 in	1.86 m
Outside	14.0 ft 2.5 in	4.43 m
Ground Clearance	8.375 in	21.3 cm
Machine Weight (Unloaded) (Approx.)	6,570 lbs	2,981 kg
Drive System:		
Max Drive Height with 800 LBS. Capacity	30.0 ft	9.12 m
with 1,000 LBS. Capacity	27.0 ft	8.21 m
Drive Speed (Platform Elevated) - Slow	0 - 0.40 mph	0 - 0.6 km/hr
Drive Speed (Platform Lowered) - Medium	0 - 1.05 mph	0 - 1.7 km/hr
Drive Speed (Platform Lowered) - Fast	0 - 2.00 mph	0 - 3.2 km/hr
2 Speed Lift/Lower Speed (Approx.)	26 & 54 sec / 28 sec	
Gradeability	35% / 19.6°	
Ground Pressure/Wheel (Maximum)	33 psi	2.28 bar
Wind Speed (Maximum)	28 mph	12.5 m/sec
Tire Size-Standard (Ditch Digger)	26.0 x 12.0 x 12.0 in	66.0 x 30.5 x 30.5 cm
Tire Pressure (10 Ply Pneumatic / Foam Filled Tires)	60 psi / N/A	4.14 bar / N/A
Wheel Lug Nut Torque	75-85 ft lbs	102-115 Nm
Hydraulic Pressure:		
Main System	3,000 psi	207 bar
Lift System (800#/1000#)	2,050 / 2,200 psi	141 / 152 bar
Steer	1,500 psi	103 bar
Hydraulic Fluid Capacity	17.0 gal	64.0 liters
Fuel Capacity	10.6 gal	40.3 liters
Power System – Voltage	12 Volts DC	
Alternator (Lighting Coil)	20 Amp	
Engine Availability:		
Standard - Kawasaki FD620D, 20 HP (14.9 kW), Dual Fuel, Liquid Cooled		
Optional - Isuzu 3LB1, 25 HP (18.6 kW), Diesel, Liquid Cooled		
- Kubota DF750E, 22 HP (16.4 kW), Dual Fuel, Liquid Cooled		





SECTION 1: SAFETY

Safety Symbols

This section of the manual contains important information of the safe use of your MEC Scissors. Failure to read, understand, and follow all safety rules, warnings, and instructions will unnecessarily expose you and others to dangerous situations. For your safety and the safety of those around you, you must operate your machine as instructed in this manual.

You, the operator, are the single most important factor for safety when using any piece of equipment. Learn to operate your machine in a safe manner.


To help you recognize important safety information, we have identified warnings and instructions that directly impact on safety with the following signals:



“DANGER” INDICATES AN IMMINENTLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN DEATH OR SERIOUS INJURY. THIS SIGNAL WORD IS LIMITED TO THE MOST EXTREME SITUATIONS.



“WARNING” INDICATES A POTENTIALLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, COULD RESULT IN DEATH OR SERIOUS INJURY.



“CAUTION” indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. “Caution” is used for property-damage only accidents.

NOTE: The best method to protect yourself and others from injury or death is to use common sense. If you are unsure of any operation, don't start until you are satisfied that it is safe to proceed and have discussed the situation with your supervisor.

Safety Rules And Precautions

- ◆ MEC designs self-propelled scissor lifts to be safe and reliable. They are intended to position personnel, along with their necessary tools and materials to overhead work locations.
- ◆ The owner/user/operator of the machine should not accept responsibility for the operation of the machine, unless properly trained.
- ◆ ANSI A92.6 and other applicable standards identify requirements of all parties who may be involved with self-propelled elevating work platforms. A copy of the ANSI Standard is considered a part of this machine and can be found in the manual compartment, located at the platform control station.



- ◆ **ELECTROCUTION HAZARD!!! THIS MACHINE IS NOT INSULATED!!** Maintain safe clearance from electrically charged conductors (power lines) and apparatus. You must allow for machine sway (side to side movement) when elevated and electrical line movement. This machine does not provide protection from contact with, or proximity to, an electrically charged conductor.

You must maintain a **CLEARANCE OF AT LEAST 10 FEET (3.05 m)** between any part of the machine, or its load, and any electrical line or apparatus carrying over 300 volts up to 50,000 volts. One foot (30.5cm) additional clearance is required for every additional 30,000 volts.

DEATH OR SERIOUS INJURY will result from contact with or inadequate clearance from any electrically charged conductor.

- ◆ Read and understand all safety and control information found on the machine and in this manual before operating the machine.
- ◆ Only trained, competent personnel should operate the scissorlift.
- ◆ NEVER fasten safety belt to an adjacent structure while on the platform.
- ◆ Make sure that entry chain/gate (if so equipped to platform) is secured before operating machine from the platform.
- ◆ Exceeding the platform rated capacity in any configuration is prohibited. Review the section titled "Machine Specifications" (earlier in this manual) regarding model capacities and dimensions.


- ◆ Evenly distribute loads placed on the platform.
- ◆ SECURE all tools and other loose items to prevent injury to persons working on or below the platform.
- ◆ Use of scaffolding, ladders or similar items to extend your reach while on the platform is prohibited.
- ◆ Climbing down the beams assembly (armset), if the machine fails, while the platform is raised is prohibited.
- ◆ Precautions should be taken to prevent unauthorized personnel from operating the platform with the ground controls while the platform is in use.



- ◆ The “Moving the Machine” section (described later in this manual) requires that the brake be released. After performing this procedure, there is no means to stop the machine’s travel. MEC recommends using this procedure only in cases of emergency, and only for a short distance. Be on guard against machine runaway on sloping surfaces. Movement speed shall not exceed 5 MPH (8.0 kph).
- ◆ DO NOT attempt to open any hydraulic line or component without first relieving all system pressure.
- ◆ Altering, modifying, or disabling any safety devices or interlocks is prohibited.
- ◆ Recharging the battery near sparks or open flames is prohibited. Lead-acid batteries generate EXPLOSIVE HYDROGEN GAS. Always wear safety glasses.
- ◆ Use of the machine outdoors during electrical storms or in high wind situations is not recommended.
- ◆ Raise the platform when the machine is on a firm, level surface only.



- ◆ Unassisted loading or unloading of scissorlift from a truck or trailer is not recommended.
- ◆ Before disengaging or disconnecting hydraulic motors with brake assembly from a towing vehicle, ensure that the machine cannot roll.
- ◆ Complete the “Operational Checklist” at designated intervals.



- ◆ Use of scissorlift as a crane to lift oversized or hanging loads is prohibited.
- ◆ Raising, lowering or driving the scissorlift into stationary objects is prohibited.
- ◆ It is recommended to avoid sudden braking or steering. Go slowly and leave more maneuvering room during cold weather operation.

Fall Protection Notice

The **Guardrail** System around the perimeter of the platform is the **fall protection system** for self-propelled elevating work platforms per the American National Standards Institute ANSI/SIA A92.6 Standard. It is **prohibited** to use an Aerial Work Platform manufactured by Mayville Engineering Company, Inc. with any portion, or all, of the guardrails **removed**.


Lanyard anchorage points on this type of equipment are not required to conform to the applicable ANSI/SIA Standard.

However, if anchorage points for lanyard attachments are required by site authorities or other regulations, the anchorage points on all equipment manufactured by Mayville Engineering Company, Inc. are recommended to be used for **work positioning restraints** of personnel only. Lanyard lengths are to be determined by operator/owner to restrict the operator to the confines within the **Guardrail** System.



**USE OF FALL ARREST SYSTEMS ATTACHED TO ANCHORAGE
POINTS ON MOBILE EQUIPMENT MAY CAUSE MACHINE TO
TIP RESULTING IN SERIOUS INJURY OR DEATH.**

Safety and Control Decal Locations

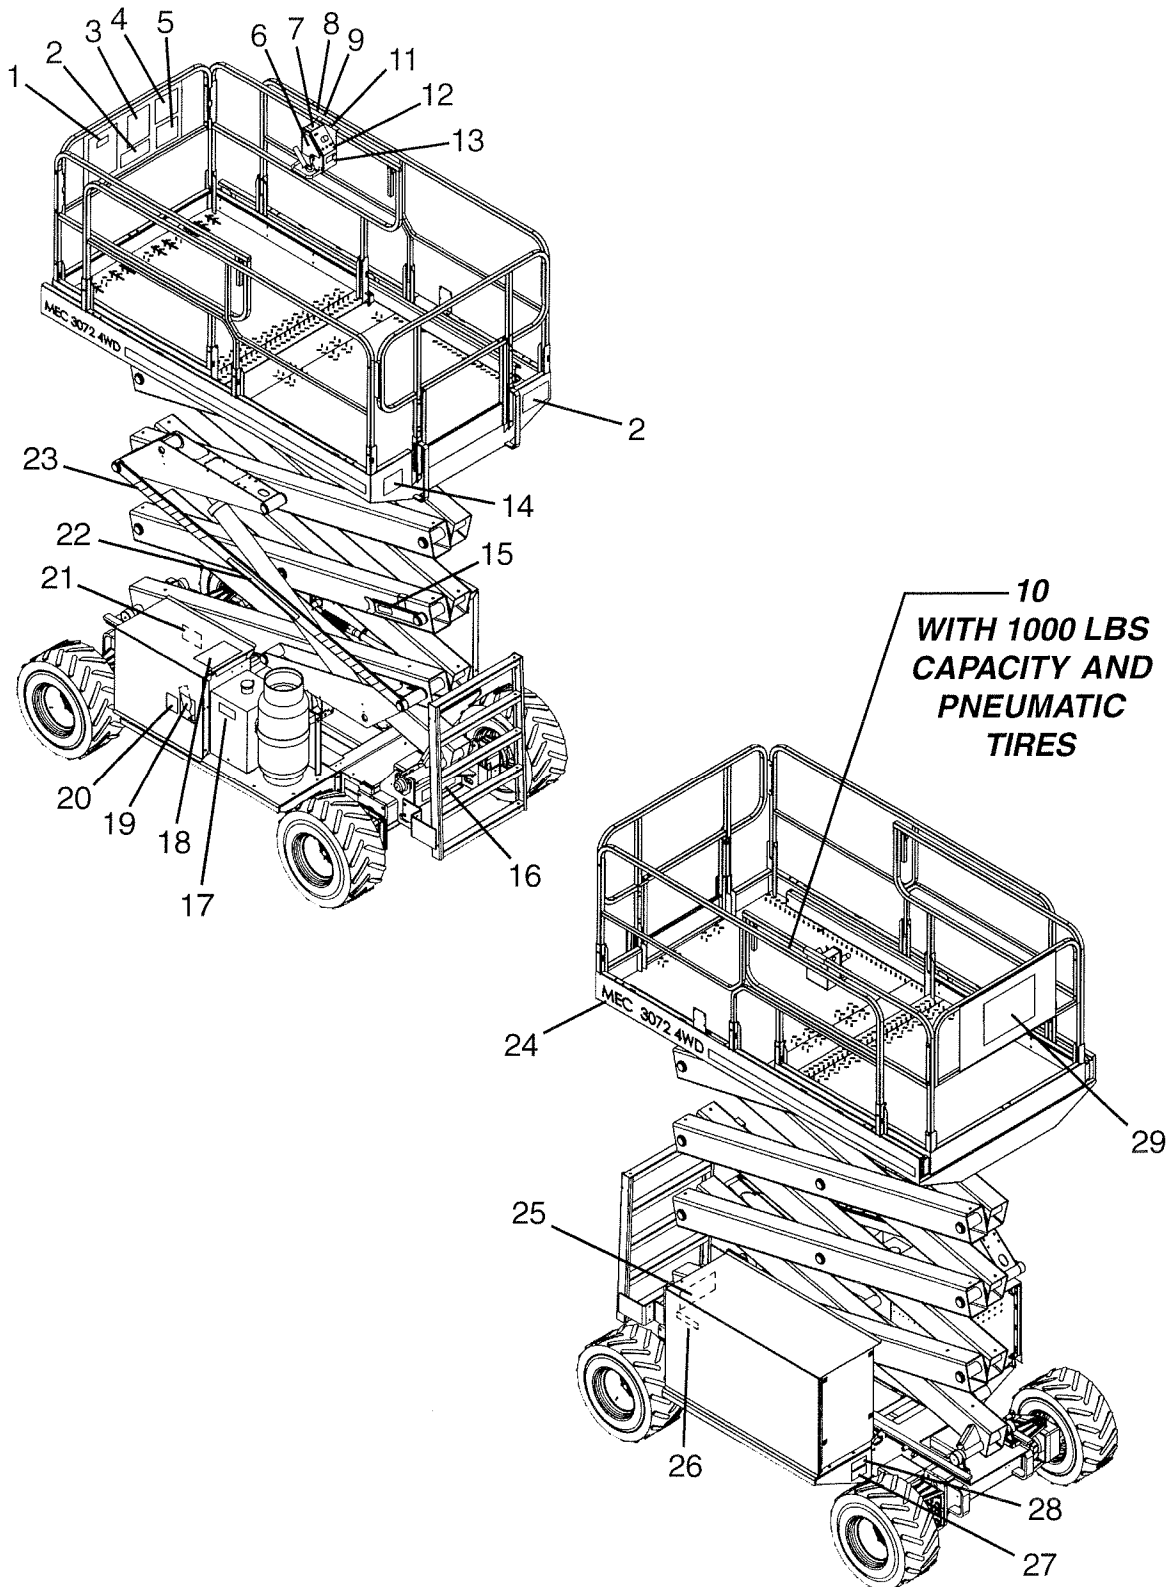






Safety and Control Decal Locations


Item #	Part #	Description	Qty
1	8911	Manual Compartment	1
2	90356	Platform Capacity - 800 LBS, Large	2
	8822	Platform Capacity - 1,000 LBS, Large	2
3	7527	Warning	1
4	7523	Danger - Elec/Tip Hazards	1
5	8767	Lock Warning	1
6	8635	Directions - Joystick	1
7	7827	Warning Light	1
8	7155	Locate Control Box	1
9	90348	Platform Capacity - 800 LBS, Small	2
	9932	Platform Capacity - 1,000 LBS, Small	2
10	90504	Drive Cutout at 27 Feet - w/1,000 LBS Capacity & Pneumatic Tires	1
11	7156	Direction - "Front"	1
12	8517	Control Box - Dual Fuel	1
	90337	Control Box - Diesel	1
13	9239	Control Box - I.D.	1
14	9458	Made in USA	1
15	6794	Maintenance Lock	1
16	6556	Fork Lift Pocket	1
17	6872	Gasoline Only	1
	9378	Diesel	1
18	6948	Fuel Changeover Instructions	1
19	8867	Brake Lockout Tag	1
20	8866	Emergency Down	1
21	8815	Electrical Moisture Warning	1
22	8503	Keep Clear	1
23	8402	Stripe	A/R
24	9186	MEC 3072 4WD	2
25	N/A	Serial Plate	1
26	6873	Hydraulic Oil	1
27	8502	Inflate To Tire Mfg. Spec.	4
28	8519	Tire Replacement Warning	4
29	8811	MEC Aerial Work Platform	1

Safety Related Decals


7523

 DANGER	
<p>YOU MUST NOT OPERATE THIS MACHINE</p> <p>UNLESS YOU HAVE BEEN TRAINED IN THE SAFE OPERATION OF THIS MACHINE.</p> <p>TRAINING INCLUDES COMPLETE KNOWLEDGE OF THE SAFETY AND OPERATING INSTRUCTIONS CONTAINED IN THE MANUFACTURER'S MANUAL, YOUR EMPLOYER'S WORK RULES AND APPLICABLE GOVERNMENTAL REGULATIONS.</p> <p>AN UNTRAINED OPERATOR SUBJECTS HIMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.</p>	<p>TIP-OVER HAZARDS</p> <div style="display: flex; justify-content: space-around;">   </div> <p>DO NOT DRIVE NEAR DROP-OFFS, HOLES, OPEN ELEVATOR SHAFTS, AND LOADING DOCKS</p> <div style="display: flex; justify-content: space-around;">   </div> <p>DO NOT ELEVATE PLATFORM ON UNEVEN OR SOFT SURFACES. DO NOT DRIVE ONTO UNEVEN OR SOFT SURFACES WHEN ELEVATED</p> <div style="display: flex; justify-content: space-around;">   </div> <p>DO NOT RAISE PLATFORM ON SLOPE, OR DRIVE ONTO SLOPE WHEN ELEVATED</p> <div style="display: flex; justify-content: space-around;">   </div> <p>DO NOT RAISE PLATFORM IN WINDY OR GUSTY CONDITIONS</p>
<p> ELECTROCUTION HAZARD THIS MACHINE IS NOT INSULATED</p> <p>MAINTAIN SAFE CLEARANCE FROM ELECTRICAL LINES AND APPARATUS. YOU MUST ALLOW FOR MACHINE SWAY, ROCK OR SAG AND ELECTRICAL LINES SWAYING.</p> <p>THIS MACHINE DOES NOT PROVIDE PROTECTION FROM CONTACT WITH OR PROXIMITY TO AN ELECTRICALLY CHARGED CONDUCTOR.</p> <p>YOU MUST MAINTAIN A CLEARANCE OF AT LEAST TEN (10) FEET BETWEEN ANY PART OF THIS MACHINE OR ITS LOAD AND ANY ELECTRICAL LINE OR APPARATUS CARRYING UP TO 50,000 VOLTS. ONE FOOT OF ADDITIONAL CLEARANCE IS REQUIRED FOR EVERY ADDITIONAL 30,000 VOLTS OR LESS.</p>	<p>DEATH OR SERIOUS INJURY WILL RESULT FROM IMPROPER USE OF THIS EQUIPMENT</p>
<p>DEATH OR SERIOUS INJURY WILL RESULT FROM CONTACT OR INADEQUATE CLEARANCE</p>	<p>DEATH OR SERIOUS INJURY WILL RESULT FROM IMPROPER USE OF THIS EQUIPMENT</p>


7527

 WARNING	
<p>INSPECT MACHINE AND MAKE SURE THAT IT IS OPERATING PROPERLY, THAT ALL NAME PLATE AND HAZARD SIGNS ARE IN PLACE AND LEGIBLE, AND THAT THE MACHINE IS IN ACCORDANCE WITH THE MANUFACTURER'S MAINTENANCE REQUIREMENTS CONTAINED IN THE OPERATION AND MAINTENANCE MANUAL AND THE DAILY SAFETY CHECKLIST.</p> <p>OPERATE MACHINE WITH EXTREME CAUTION. WATCH FOR OBSTRUCTIONS WHICH MAY STRIKE PLATFORM, PERSONNEL, CONTROLS, OR MACHINE. OPERATE CONTROLS SLOWLY FOR SMOOTH PLATFORM MOTION.</p>	
<p>FOR DRIVING ON ANY GRADE OR SIDE SLOPE:</p> <ul style="list-style-type: none"> PLATFORM MUST BE FULLY LOWERED. DO NOT EXCEED MAXIMUM PLATFORM OR EXTENSION LOAD LIMIT CAPACITY. LOAD TO BE UNIFORMLY DISTRIBUTED. PLACE LOAD NEAR CENTER OF PLATFORM WHEN POSSIBLE. DO NOT DRIVE ON SIDE SLOPE IF OVER 5%. DO NOT DRIVE UP OR DOWN A GRADE OF OVER 25%. MACHINE MUST BE TOWED UP OR DOWN ANY GRADE EXCEEDING 25%. 	<p>OTHER HAZARDS</p> <ol style="list-style-type: none"> DO NOT OVERLOAD. DO NOT USE WITHOUT RAILINGS AND ENTRY GATE IN PLACE. DO NOT USE IF WORK PLATFORM IS NOT WORKING PROPERLY OR IF ANY PART IS DAMAGED OR WORN. DO NOT USE NEAR MOVING VEHICLES OR CRANES. DO NOT STAND OR SIT ON GUARDRAILS. PERSONNEL SHALL MAINTAIN FIRM FOOTING ON PLATFORM FLOOR. DO NOT USE WHILE UNDER THE INFLUENCE OF ALCOHOL OR DRUGS. DO NOT OVERRIDE SAFETY DEVICES. DO NOT LEAVE MACHINE UNATTENDED WITH KEY IN THE SWITCH. DO NOT RAISE PLATFORM WHILE MACHINE IS ON A TRUCK, FORK LIFT, OR OTHER DEVICE OR VEHICLE. DO NOT USE LADDER, SCAFFOLDING, OR OTHER DEVICES TO INCREASE SIZE OR WORKING HEIGHT OF PLATFORM. DO NOT ENTER OR EXIT PLATFORM WHILE IN MOTION.
<p>IMPROPER OPERATION OF THIS MACHINE COULD CAUSE DEATH OR SERIOUS INJURY.</p>	

8519

 WARNING
<ul style="list-style-type: none"> REPLACE TIRES WITH MANUFACTURER'S EQUIPMENT ONLY. FAILURE TO USE MANUFACTURER'S TIRES MAY CAUSE MACHINE INSTABILITY. REFER TO MAINTENANCE MANUAL FOR REPLACEMENT PART NUMBER.

7827

 WARNING
<ul style="list-style-type: none"> LIGHT INDICATES UNSAFE LEVEL CONDITION, LOWER PLATFORM AND REPOSITION MACHINE.




Safety Related Decals (Continued).....


8767



8866

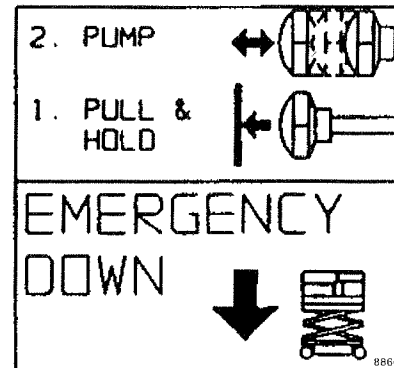

8815

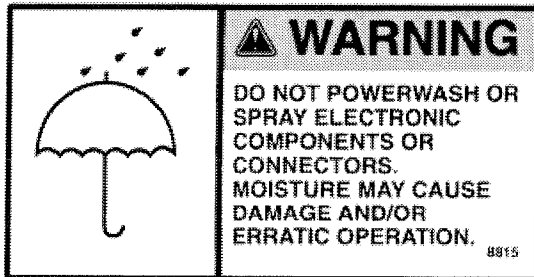

8503


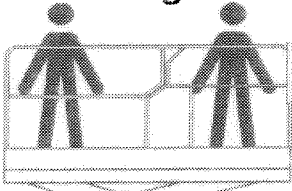
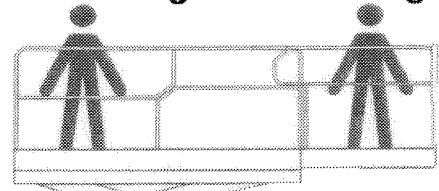
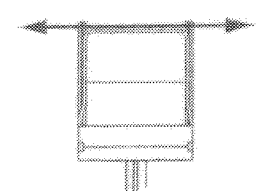


8402



Safety Related Decals (Continued).....


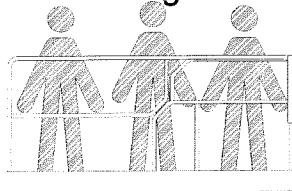
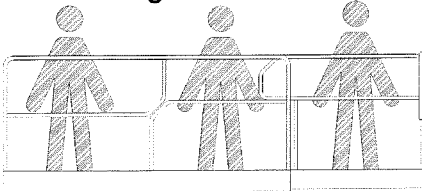
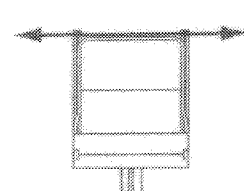
90356

 MAXIMUM PLATFORM CAPACITY - EVENLY DISTRIBUTED		
EXTENSION RETRACTED	EXTENSION EXTENDED	SIDE LOAD
800 LBS 362 kg  2-PERSONS	400 LBS 181 kg  1-PERSON	120 LBS 534 N 

90348

PLATFORM CAPACITY
800 LBS (362 kg)

8822

 MAXIMUM PLATFORM CAPACITY - EVENLY DISTRIBUTED		
EXTENSION RETRACTED	EXTENSION EXTENDED	SIDE LOAD
1000 LBS 454 kg  3-PERSONS	600 LBS 272 kg  2-PERSONS	150 LBS 667 N 

9932

PLATFORM CAPACITY
1000 LBS (454 kg)



SECTION 2: OPERATION

Unloading Procedures

- ◆ Inspect the outside of the machine for damage. Inspect all hoses, beam assemblies (armset), and cables for chafing or road damage. Confirm that all wheel lug nuts are tight (refer to the "Machine Specifications").
- ◆ Unlock and open side compartments. Inspect all fuel, electrical, and hydraulic connections for damage and security.
- ◆ Turn battery switch to "ON" position. Check electrolyte level.
- ◆ Check engine oil level and add as required per engine manufacturer's recommendations.
- ◆ Check that fluid level is to the fill mark on the hydraulic tank and add fluid as required (see "Lubrication Chart").
- ◆ Close side compartments.



ALWAYS ATTACH THE MACHINE TO A WINCH WHEN LOADING OR UNLOADING FROM A TRUCK OR TRAILER IF DRIVEN OFF. WE DO NOT RECOMMEND UNASSISTED LOADING OR UNLOADING OF ANY SCISSOR LIFT.

READ AND UNDERSTAND ALL SAFETY, CONTROL, AND OPERATING INFORMATION FOUND ON MACHINE AND IN THIS MANUAL BEFORE OPERATING THE MACHINE.


- ◆ Attach the machine to a winch for the unloading.
- ◆ Perform Machine Start-up procedures in this section. Refer to Operator Controls Descriptions, as necessary. Turn off engine.
- ◆ Remove all machine tie downs. Remove wheel chocks, if used. Turn the Base/Platform selector switch to the "PLATFORM" position.
- ◆ Enter the platform, and start the engine using the platform controls. Test all platform functions.
- ◆ Carefully drive the machine off the truck or trailer with the winch still attached.

NOTE: The brakes are automatically released for driving and will automatically apply when the machine stops.


- ◆ **Before placing the machine into service, all operators must read and understand the contents of this Operator's Manual.**




Primary Machine Components

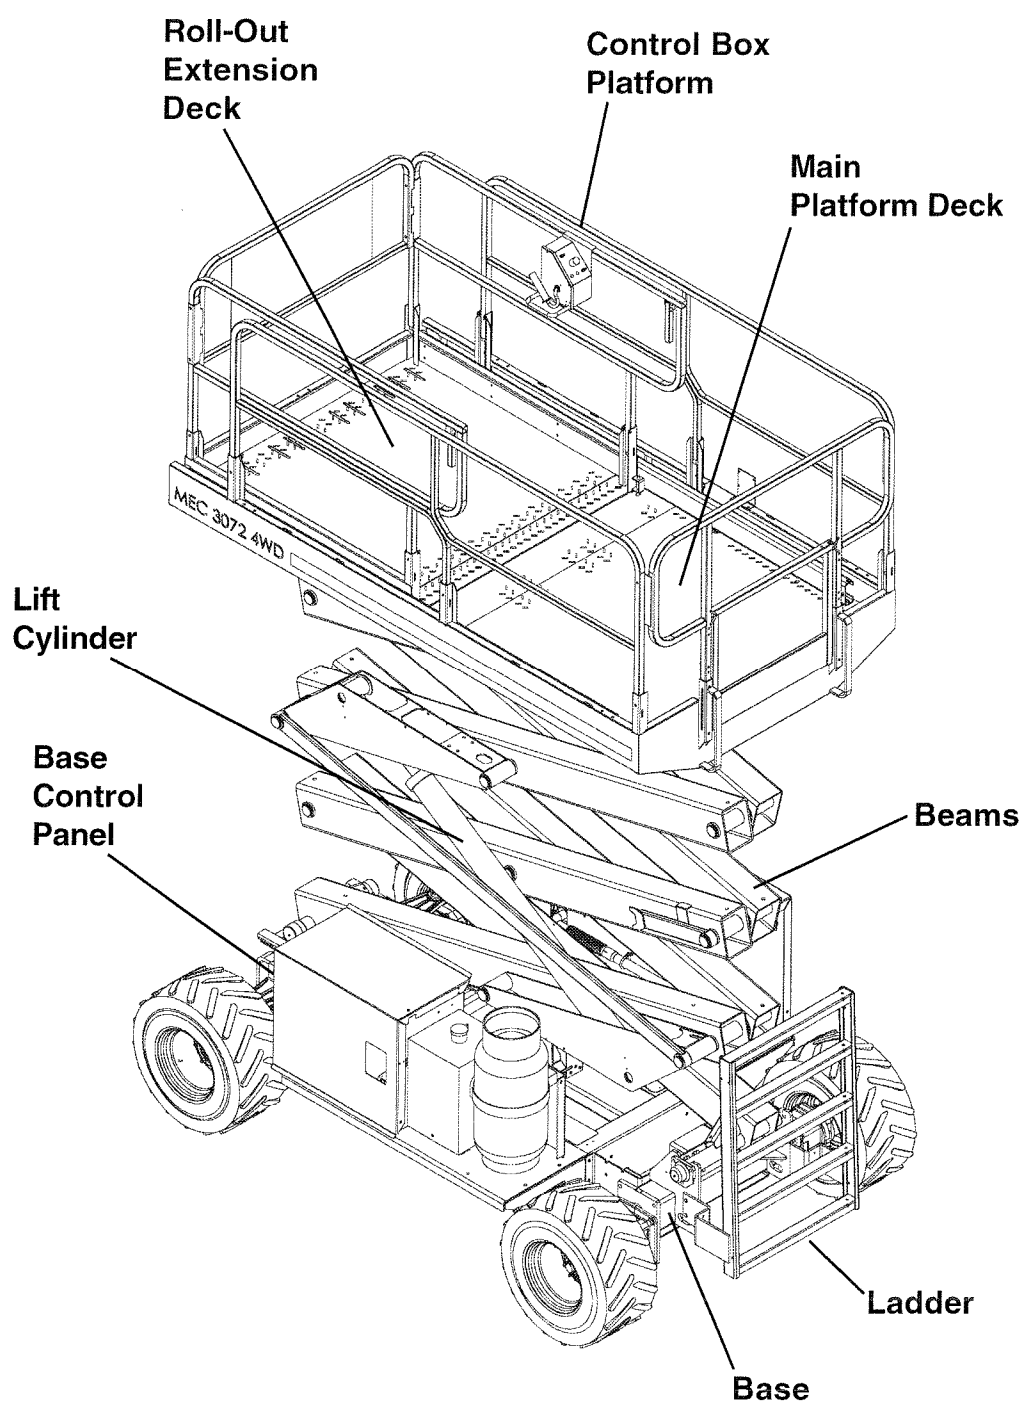

Operator Controls

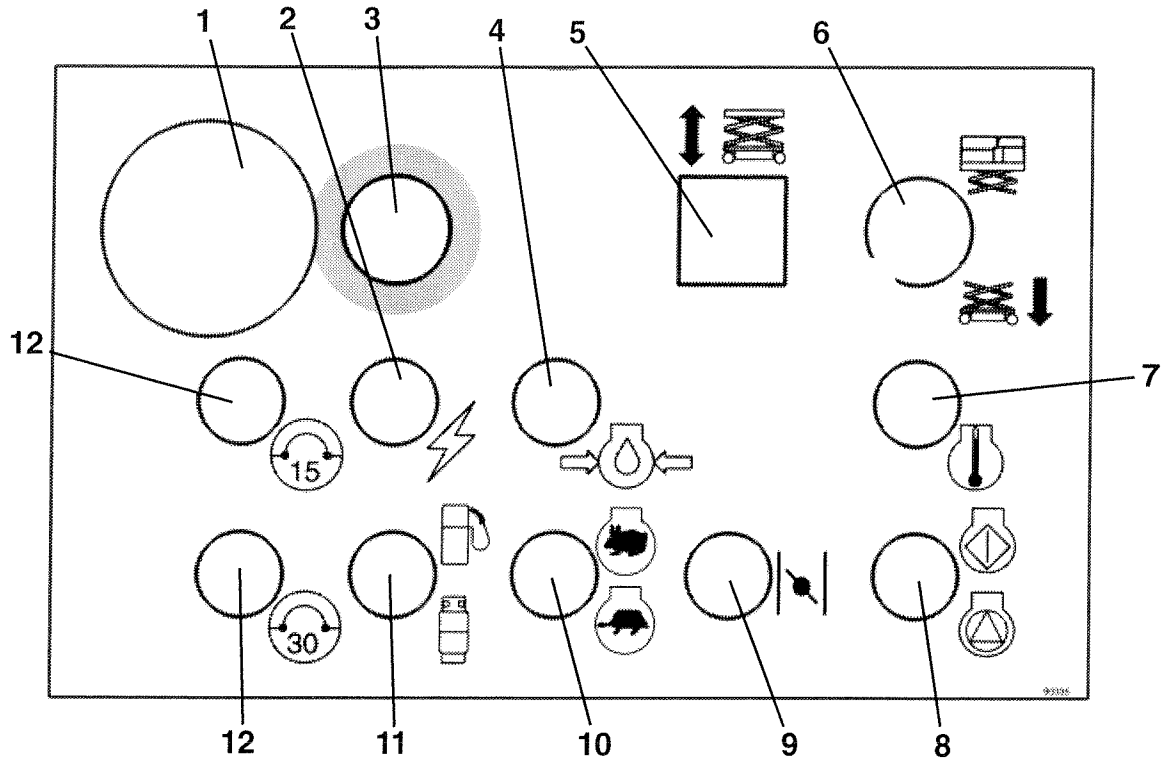

Base Control Dual Fuel

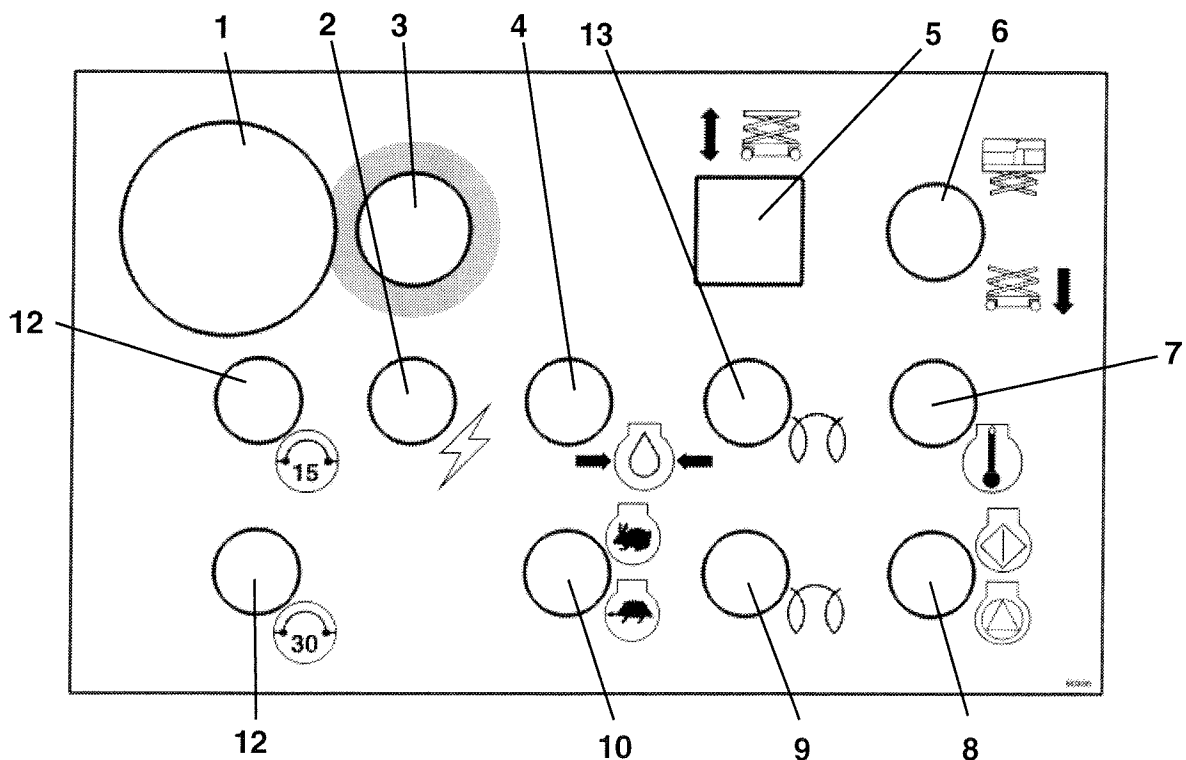


Base Control Diesel

Operator Controls (Continued)


BASE CONTROLS

	CONTROL	DESCRIPTION
1	Hour Meter	Indicates total elapsed time the engine has been operated.
2	Alternator Light	Indicates that the battery charging is inadequate.
3	Emergency Stop Button	Use to stop all functions in an emergency. Push for emergency stop. To reset turn clockwise.
4	Engine Oil Pressure Light	Indicates that the engine oil has dropped to an unsafe level.
5	Lift/Lower Switch	Use to control the lift and lowering of the platform from the base panel, when "BASE" position is selected as the primary control station.
6	Base/Off/Platform Selector Switch	Select "BASE" position to control operation of machine using the base controls. Select "PLATFORM" position to control operation of machine using the platform console. NOTE: A key shall be provided for European machines and will be removable in "PLATFORM" position only.
7	Engine Temperature Light	Indicates that the engine coolant temperature has reached an unsafe level.
8	Start Switch	Move the switch to the up/start position to start the engine. Release switch when engine starts running.
9	Choke/Glow Plug/Preheat Switch	Use to operate the choke when starting dual fuel engine or heating glow plug for Diesel engines.
10	Idle/Run Selector	Use to select/control engine speed. Switch should be in "IDLE" position to start engine and "RUN" to operate a function requiring high engine speed.
11	Gas/Propane	Move switch to "UP" for gasoline and "DOWN" for propane.
12	Circuit-breaker	Pops out when there is excessive electrical load in the 12-volt control circuit. Push in to reset.
13	Pre-Heat Indicator Light	Indicates that the diesel engine preheat switch is 'on' and engine is NOT ready for starting.

Operator Controls (Continued)

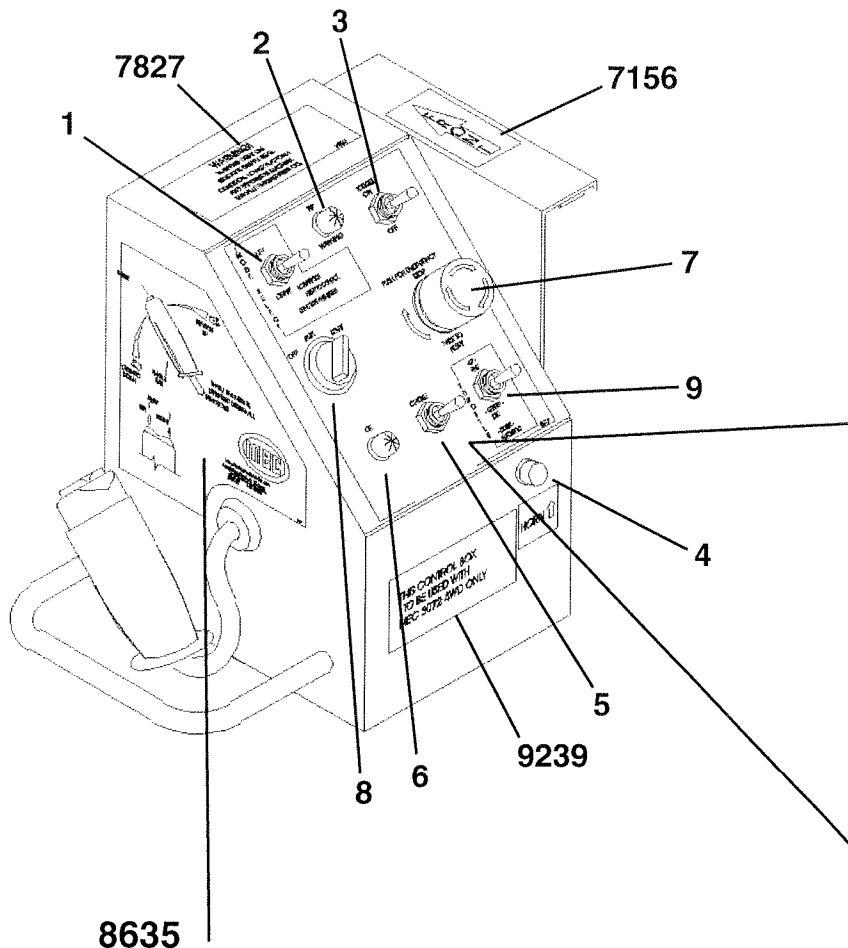


8517

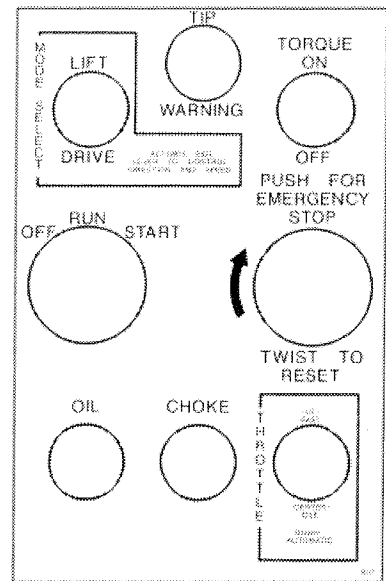


DUAL FUEL

90337

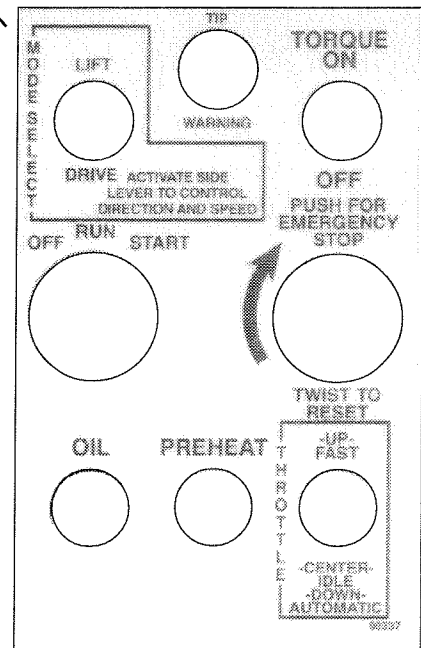

DIESEL

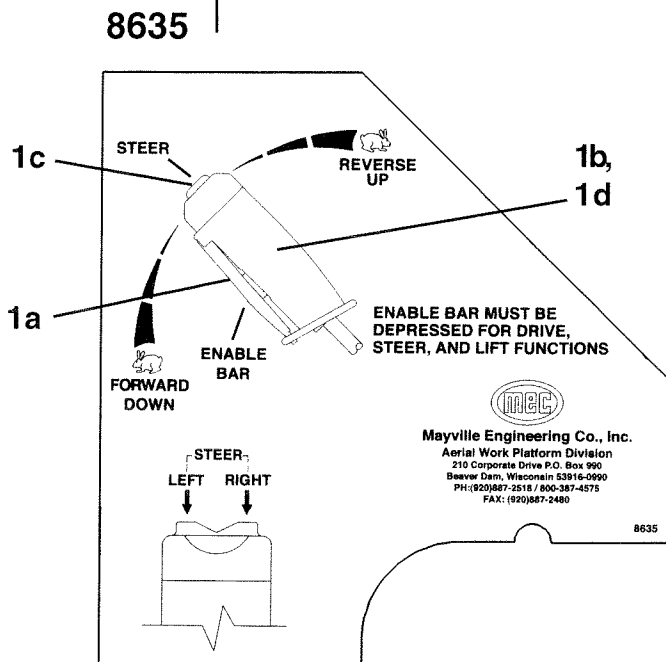

Operator Controls (Continued)

PLATFORM CONTROLS

CONTROL		DESCRIPTION
1	Mode Selector	Desired selection will allow either the lift or drive function using controller handle. Switch will self center and circuit will remain active for 15 seconds after controller is returned to the neutral position.
1a	Enable Switch	Must be depressed to activate drive, steer, and lift functions.
1b	"Forward/Reverse"	Controls forward and reverse machine travel at stepped speeds.
1c	"Left/Right"	Push Steer Rocker Switch (thumb) to the left and hold to turn steer wheels to the left, right to turn steer wheels to the right.
1d	"Lift/Lower" Controller	With enable switch depressed, moving controller handle towards the operator (up) will provide platform lift at 2 Stepped speed. Moving the handle away from the operator (down) will provide platform lowering at a fixed speed.
2	Tilt Warning Light	Indicates that machine is not level.
3	Torque On/Off Switch	"ON" selection will provide extra driving torque and reduce drive speed when the platform is under approximately 10 ft (3.05 m). "OFF" position is the normal mode.
4	Horn	Press button to sound warning horn.
5	Choke/Glow Plug/ Preheat Switch	Operate when starting dual fuel engine or heating glow plug for diesel engines.
6	Engine Oil Pressure Light	Indicates engine oil pressure has dropped to unsafe level.
7	Emergency Stop Button	Push to stop all functions in emergency. Reset by turning clockwise.
8	Engine Start/Off Switch	Push up to start the engine. Switch will return to "RUN" position for normal operation. Push the switch to "OFF" position to shut engine down.
9	Throttle "Fast/Idle/Automatic"	In "FAST" position engine maintains maximum RPM. In "IDLE" position, engine maintains minimum RPM. In "AUTOMATIC" position engine responds to maximum RPM whenever the enable switch is activated and reduces RPM automatically within 5 seconds of release of enable switch.

Prestart Inspection

Before use each day or at the beginning of each shift, the machine shall be given a visual inspection and functional test. Repairs (if any) must be made prior to operating the machine as it is critical to ensure safe operation of the machine.

- ◆ Visually inspect all machine components; for loose or missing parts, hydraulic fluid leaks, loose or damaged wires. Check for structural or weld cracks.
- ◆ Check engine oil, fuel and fluid levels with the platform fully lowered.
- ◆ Check the wheel lug nuts for tightness (Refer to “Machine Specifications”).
- ◆ Check that all warning and instructional labels are legible and secure.
- ◆ Check the platform guard rail system. Look at the chain or gate and make sure they latch properly and/ or close.
- ◆ Ensure that emergency stop buttons on the base control panel and the platform controls are disengaged. Reset by turning clockwise.
- ◆ Inside the engine compartment, ensure that the battery cutoff switch is in the “ON” position.



STARTING DUEL FUEL ENGINE

From Base Control Station

1. Place the selector switch to "Base" position.
2. Place the fuel selector switch to the desired fuel selection, "Gas" or "LP".
3. Ensure throttle selector switch is in the "Idle" position.
4. Press and hold the "Start" switch, releasing when the engine starts. Cold starts may require "Choke" switch to be pressed with "Start" switch.

From Platform Control Station

1. Place the selector switch at the base control station to the "Platform" position.
2. Place the fuel selector switch to the desired fuel selection, "Gas" or "LP".
3. Ensure throttle selector switch is in the "Automatic" position.
4. Check to see if Emergency Stop is deactivated.
5. Wait until all flashing lights stop.
6. Press and hold the "Start" switch, releasing when the engine starts. Cold starts may require "Choke" switch to be pressed with "Start" switch.

NOTE: A mechanical anti restart feature is incorporated in the start switch. Turn switch to "OFF" position to reset.

Switching Fuel

1. Fuel selection can be made while engine is running. Only minor hesitation should be encountered.

STARTING A DIESEL ENGINE

The engine can be started (or stopped) from either the base control panel or the platform console.

1. Place the selector switch "Platform/Base" in the desired position.
2. Ensure throttle selector switch is in the "Automatic" position.
3. Press and hold the "Start" switch and when the engine starts, release the start switch.
4. If engine is cold, hold the preheat switch in the "Up" position until preheat indicator lamp goes out. With preheat switch held, press and hold "Start" switch until engine starts. Release both switches once engine starts.

Refer to the following table for some recommended preheat times for different ambient temperatures:

Preheating Time	Ambient Temperature
5 seconds (approx.)	Above 50°F (10°C)
10 seconds (approx.)	50°F (10°C) to 23°F (-5°C)
20 seconds	Below 23°F (-5°C)
20 seconds	Limit Of Continuous Use

BASE CONTROL OPERATION AND CHECKS



BE SURE AREA ABOVE THE MACHINE IS CLEAR OF OBSTRUCTIONS TO ALLOW FULL ELEVATION OF PLATFORM.

DO NOT OPERATE THE MACHINE IF THE FOLLOWING CHECKS REVEAL A DEFECT.

- ◆ Turn selector switch to “BASE” position.
- ◆ Start engine.
- ◆ Activate the Lift/ Lower switch on the base control panel to elevate the platform to the end of its movement. Releasing the switch should stop elevation.
- ◆ Test the “Emergency Stop” function.
While the platform is moving, press the Emergency Stop button, platform should stop.
- ◆ Reset by rotating clockwise.
- ◆ Lower the platform about halfway by switching the Lift/ Lower switch. Releasing the switch should stop the lowering.
- ◆ Check for proper operation and hydraulic leaks.
- ◆ Lower platform to the stowed position.
- ◆ Turn off engine.

PLATFORM CONTROL OPERATION AND CHECKS

- ◆ Select the "Platform" position on the selector switch at base control station.
- ◆ From the platform, start the engine.
- ◆ Press the horn button briefly.

IMPORTANT: The Enable Switch must be activated to operate the controller for Drive, Steer, and Lift/ Lower Function.

- ◆ Check for proper operation and hydraulic fluid leaks.
- ◆ Move mode selector switch to "Lift" position, depress Enable bar and move control handle "up" (towards the operator).
- ◆ Test emergency stop function by pressing down on the red Emergency Stop switch. Reset by rotating clockwise.
- ◆ To lower platform, depress the Enable bar and move control handle "down" (away from the operator).



IF PLATFORM SHOULD FAIL TO LOWER DO NOT ATTEMPT TO CLIMB DOWN THE BEAM ASSEMBLY. SERIOUS INJURY MAY RESULT.

- ◆ Move the mode select switch to "Drive" position, depress Enable bar and move control handle "forward" and "backward" to check drive direction. Releasing the Enable bar or returning control handle to center position will stop motion of drive.
- ◆ Test the "Emergency Stop" function, while driving in both directions. Reset "Emergency Stop" by rotating the switch clockwise.
- ◆ Test Left/ Right steering by depressing Enable bar on control handle and pressing the rocker switch at the top of the handle. Press left side of switch for left steer direction and right side for right steer direction.

IMPORTANT: Always check front steer wheel direction before driving.

Operation



**THE OPERATOR MUST BE AWARE OF THE ENVIRONMENT.
DO NOT RAISE THE PLATFORM IF THE MACHINE IS NOT
ON A FIRM LEVEL SURFACE.**

**SAFE OPERATION BEGINS WITH A SAFETY CONSCIOUS
EQUIPMENT OPERATOR.**

Perform prestart inspection. Remember to place the selector switch in the "Platform" position before getting on the platform for operation.

DRIVING AND STEERING



**CHECK THAT THE ROUTE OF TRAVEL TO BE TAKEN IS
CLEAR OF PERSONS, OBSTRUCTIONS, DEBRIS, HOLES,
AND DROP OFFS, AND IS CAPABLE OF SUPPORTING THE
MACHINE.**

NOTE: The enable switch must be depressed to activate drive and steer functions. Steer wheels will not center themselves after a turn, and must be returned to the straight-ahead position with the steer switch.

Controller handle movement "away" from the operator will give FORWARD travel and pulling the handle "towards" the operator will give REVERSE travel.

Travel speed is stepped and is controlled by the movement of the controller handle. The further it is moved the faster the speed will be. The controller handle returns to neutral (center) position when released.

NOTE: Drive function is disabled at 27 ft. when machine is equipped with pneumatic tires and a platform capacity of 1000 LBS.

BRAKING



ACTIVATION OF THE PLATFORM “EMERGENCY STOP” BUTTON WILL APPLY BRAKES IMMEDIATELY. THIS MAY CAUSE UNEXPECTED PLATFORM MOVEMENT AS THE MACHINE COMES TO A SUDDEN STOP. BRACE YOURSELF AND SECURE OBJECTS ON THE PLATFORM DURING OPERATION OF MACHINE.

NOTE: For parking, the brake is automatically applied when the forward/reverse drive controller is positioned in the center (neutral) position.

ELEVATING THE PLATFORM

Using Platform Controls

To elevate the platform, the mode selector switch should be in the "Lift" position. Depressing the Enable bar and moving controller handle "towards" the operator will elevate the platform. Rate of lift has two speeds and is dependent on the movement of the controller handle.

Using Base Controls

With selector switch in the "Base" position, press and hold the Lift/ Lower toggle switch on the base control panel in the "Up" position until the desired height is reached or until the platform reaches maximum height.

LOWERING THE PLATFORM

Using Platform Controls

To lower the platform, the mode selector switch should be in the "Lift" position. Depressing the Enable bar and moving the controller handle "away" from the operator will lower the platform. Rate of descent is fixed - platform lowers at same rate regardless of handle position.

Using Base Controls

With selector switch in the "Base" position, press and hold the Lift/ Lower toggle switch in the "Down" position until the desired platform height is reached or until the platform reaches the stowed position.

EXTENDING THE ROLL-OUT EXTENSION DECK

- ◆ Lift handle at the rear of the extension deck to raise spring-loaded pin from the locked position.
- ◆ With both handles raised, push the deck out to the desired extended length and release the handles for the spring-loaded pin to lock into position.
- ◆ Extensions can be achieved in intervals of 8 inches (20.3 cm) throughout the entire length of the roll-out extension deck.



**IF THE ROLL-OUT DECK IS EXTENDED CHECK FOR
CLEARANCE UNDER DECK AREA BEFORE LOWERING
PLATFORM.**

LOWERING THE PLATFORM RAILINGS

- ◆ Place the platform control console on the platform floor.
- ◆ Remove safety snap pins holding the front extension railing to the corner post. Place the front rail on the platform floor.
- ◆ Remove pins from rear railing corner post. Lift rail and pivot forward and place on platform floor.
- ◆ Remove safety snap pins from extension side rails. Rotate rails down to platform floor.
- ◆ Repeat the procedure as you make your way around the platform to remove the rest of the railings.
- ◆ To return the machine to normal operation mode position/install all railings securely.
- ◆ Position platform control console.

SHUTDOWN PROCEDURE

- ◆ When finished with the machine, place the platform in the stowed position.
- ◆ Park the machine on a level surface.
- ◆ Shut off the engine by placing the Engine Start/ Off switch in the "Off" position.
- ◆ Carefully exit the platform using a constant three (3) point dismount/grip.
- ◆ Put a padlock on the battery disconnect switch to prevent unauthorized operation.

Moving The Machine


Machine can be winched or moved short distances in case of power failure at speeds not to exceed 5 MPH (8.05 km/hr).

Towing/Winching the Machine

Your machine is equipped with a brake release.

Release Brakes Before Towing:

- ◆ Close brake disable valve on hand pump manifold.
- ◆ Using the hand pump of the emergency down manifold, pump valve until pressure is built.

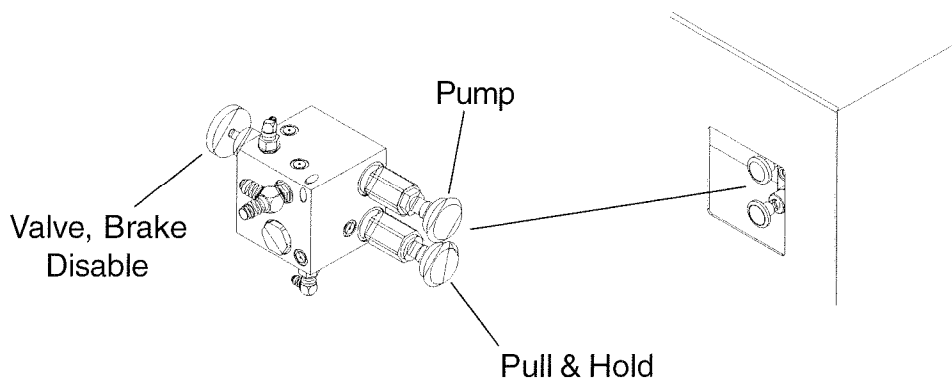

AFTER RELEASING THE BRAKES, THERE IS NOTHING TO STOP THE MACHINE'S TRAVEL. MACHINE WILL ROLL FREELY ON SLOPES. BE ON GUARD AGAINST RUNAWAY. DO NOT DRIVE MACHINE WITH BRAKES RELEASED.

To Reset Brakes:

- ◆ To return to normal operation, fully open brake disable valve.

Emergency Systems And Procedures



IF THE CONTROL SYSTEM FAILS WHILE THE PLATFORM IS ELEVATED, HAVE AN EXPERIENCED OPERATOR USE THE EMERGENCY LOWERING PROCEDURE TO SAFELY LOWER THE PLATFORM.

DO NOT ATTEMPT TO CLIMB DOWN BEAMS (SCISSORS) ASSEMBLY.



BEFORE LOWERING PLATFORM, RETRACT THE DECK EXTENSION.


EMERGENCY LOWERING

Emergency Down system is used to lower the platform in case of power or valve failure. To lower the platform, perform the following steps:

- ◆ Manually pull bottom valve plunger on the manifold block.
- ◆ While holding manually pump the top plunger until platform begins to lower.
- ◆ Releasing the bottom plunger will stop descent.

Emergency Lowering Decal

8866

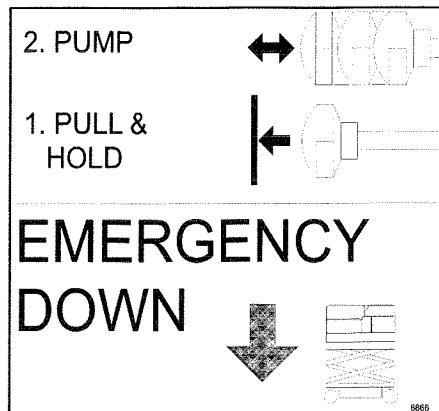



SECTION 3: MAINTENANCE

GENERAL MAINTENANCE TIPS

Regular inspection and conscientious maintenance is the key to efficient economical operation of your scissorlift. It will help to assure that your equipment will perform satisfactorily with a minimum of service and repair.

The actual operating environment of the machine governs the inspection schedule. Correct lubrication is an essential part of the preventive maintenance to minimize wear on working parts and ensure against premature failure. By maintaining correct lubrication, the possibility of mechanical failure and resulting downtime is reduced to a minimum.



NEVER PERFORM SERVICE ON THE MACHINE (WITH THE PLATFORM ELEVATED) WITHOUT FIRST BLOCKING THE BEAMS (SCISSORS) ASSEMBLY IN PLACE!

- ◆ Block scissors assembly using maintenance locks if machine is in the elevated/extended position.
- ◆ Never leave hydraulic components or hoses open. They must be protected from contamination (including rain) at all times.
- ◆ Never open a hydraulic system when there are contaminants in the air.
- ◆ Always clean the surrounding area before opening hydraulic systems.
- ◆ Use only recommended lubricants. Improper lubricants or incompatible lubricants may be as harmful as no lubrication.
- ◆ Watch for makeshift “fixes” which can jeopardize safety as well as lead to more costly repair.

GENERAL MAINTENANCE TIPS (Continued).....




IMMEDIATELY REPORT TO YOUR SUPERVISOR ANY DEFECT OR MALFUNCTION. ANY DEFECT SHALL BE REPAIRED PRIOR TO CONTINUED USE OF THE SCISSORLIFT.

INSPECTION AND MAINTENANCE SHOULD BE PERFORMED BY QUALIFIED PERSONNEL FAMILIAR WITH THE EQUIPMENT.

HYDRAULIC FLUID UNDER PRESSURE CAN PENETRATE AND BURN SKIN, DAMAGE EYES, AND MAY CAUSE SERIOUS INJURY, BLINDNESS, AND EVEN DEATH. CORRECT LEAKS IMMEDIATELY.

FLUID LEAKS UNDER PRESSURE MAY NOT ALWAYS BE VISIBLE. CHECK FOR PIN HOLE LEAKS WITH A PIECE OF CARDBOARD, NOT YOUR HAND.

ENGINE COOLANT LEVEL MUST BE CHECKED ONLY AFTER ENGINE HAS COOLED. IF RADIATOR CAP IS REMOVED WHILE THE COOLANT IS AT NORMAL OPERATING TEMPERATURE, PRESSURE WITHIN THE COOLANT SYSTEM WILL FORCE HOT LIQUID OUT THROUGH THE FILLER OPENING AND POSSIBLY CAUSE SEVERE SCALDING.



Failure to perform preventive maintenance at recommended intervals may result in the unit being operated with a defect that could result in injury or death of the operator.

SHIFT OPERATIONAL CHECKLIST

All checks must be completed before operation of the MEC Scissor Lift.

MODEL NUMBER _____ SERIAL NUMBER _____

1. Keep inspection records up-to-date.
2. Record and report all discrepancies to your supervisor.
3. A dirty machine cannot be properly inspected.

KEEP YOUR MACHINE CLEAN!!



THIS CHECKLIST MUST BE USED AT THE BEGINNING OF EACH SHIFT OR AFTER EVERY SIX TO EIGHT HOURS OF USE. FAILURE TO DO SO COULD AFFECT THE SAFETY OF THE OPERATOR. ALWAYS REMEMBER, A LITTLE PREVENTATIVE MAINTENANCE CAN SAVE MUCH MORE THAN IT COSTS.

INITIAL	DESCRIPTION
---------	-------------

- | | |
|-------|---|
| _____ | 1. Perform a visual inspection of all machine components, i.e. missing parts, torn or loose hoses, hydraulic fluid leaks, torn or disconnected wires, damaged tires etc. Replace components as necessary. |
| _____ | 2. Check the hydraulic fluid level with the platform fully lowered. |
| _____ | 3. Check the tires for damage. Check wheel lug nuts for tightness. |
| _____ | 4. Check the tire pressure (not required for foam filled tires).
(See Machine Specification). |
| _____ | 5. Check the hoses and the cables for worn areas or chafing. Replace if necessary. |
| _____ | 6. Check the platform rails and safety gate for damage. |
| _____ | 7. Check the pivot pins for security. |
| _____ | 8. Check that all warning and instructional labels are legible and secure. |



SHIFT OPERATIONAL CHECKLIST (Continued).....

INITIAL	DESCRIPTION
_____	9. Inspect the platform control. Ensure the load capacity is clearly marked.
_____	10. Check the hydraulic system pressure (See Machine Specification). If the pressure is low, determine the reason and repair in accordance with accepted procedures as outlined in the service manual.
_____	11. Check the base controls for proper operation. Check all switches and push buttons for proper operation.
_____	12. Check the platform controls for proper operation. Check all switches and push buttons, as well as ensuring that the drive controller returns to neutral.
_____	13. Follow the engine daily service requirements. Refer to the Engine Maintenance Manual.

DATE _____ INSPECTED BY _____

WEEKLY OPERATIONAL CHECKLIST

All checks must be completed before operation of the MEC Scissor Lift.

MODEL NUMBER _____ SERIAL NUMBER _____

1. Keep inspection records up-to-date.
2. Record and report all discrepancies to your supervisor.
3. A dirty machine cannot be properly inspected.

KEEP YOUR MACHINE CLEAN!!



THIS CHECKLIST MUST BE USED AT WEEKLY INTERVALS OR EVERY 25 HOURS, WHICHEVER OCCURS FIRST. FAILURE TO DO SO COULD AFFECT THE SAFETY OF THE OPERATOR. ALWAYS REMEMBER, A LITTLE PREVENTATIVE MAINTENANCE CAN SAVE MUCH MORE THAN IT COSTS.

INITIAL	DESCRIPTION
---------	-------------

- | | |
|-------|---|
| _____ | 1. Perform all checks listed on Shift Operational Checklist. |
| _____ | 2. Check wheel lug nuts for proper torque (see "Machine Specifications"). |
| _____ | 3. Inspect all arms and pivot points for signs of wear and/or damage. |
| _____ | 4. Lubricate the king pins, steering cylinder pivot points, and tie rod ends (see Lubrication Chart). |
| _____ | 5. Check all wire connections. |
| _____ | 6. Check battery electrolyte level and connections. |
| _____ | 7. Follow the engine weekly service requirements. Refer to the Engine Maintenance Manual. |

DATE _____ INSPECTED BY _____



MONTHLY OPERATIONAL CHECKLIST

All checks must be completed before operation of the MEC Scissor Lift.

MODEL NUMBER _____ SERIAL NUMBER _____

1. Keep inspection records up-to-date.
2. Record and report all discrepancies to your supervisor.
3. A dirty machine cannot be properly inspected.

KEEP YOUR MACHINE CLEAN!!



THIS CHECKLIST MUST BE USED AT MONTHLY INTERVALS OR EVERY 100 HOURS, WHICHEVER OCCURS FIRST. FAILURE TO DO SO COULD AFFECT THE SAFETY OF THE OPERATOR. ALWAYS REMEMBER, A LITTLE PREVENTATIVE MAINTENANCE CAN SAVE MORE THAN IT COSTS.

INITIAL	DESCRIPTION
_____	1. Perform all checks listed on Shift and Weekly Operational Checklists.
_____	2. Inspect the condition of hydraulic fluid in the reservoir. Oil should have a clear amber color.
_____	3. Inspect the entire machine for signs of damage, broken welds, loose bolts, improper or makeshift repairs.
_____	4. Check the pin joints and retaining rings for security.
_____	5. Check if tires are leaning in or out.
_____	6. Check that all adjustable flow valves are locked, check setting if any are not locked.
_____	7. Check that the platform does not drift down with a full load.
_____	8. Follow engine monthly service requirements. Refer to the engine maintenance manual.

DATE _____ INSPECTED BY _____

QUARTERLY OPERATIONAL CHECKLIST

All checks must be completed before operation of the MEC Scissor Lift.

MODEL NUMBER _____ SERIAL NUMBER _____

1. Keep inspection records up-to-date.
2. Record and report all discrepancies to your supervisor.
3. A dirty machine cannot be properly inspected.

KEEP YOUR MACHINE CLEAN!!



THIS CHECKLIST MUST BE USED AT QUARTERLY INTERVALS OR EVERY 300 HOURS, WHICHEVER OCCURS FIRST. FAILURE TO DO SO COULD AFFECT THE SAFETY OF THE OPERATOR. ALWAYS REMEMBER, A LITTLE PREVENTATIVE MAINTENANCE CAN SAVE MUCH MORE THAN IT COSTS.

INITIAL	DESCRIPTION
---------	-------------

- | | |
|-------|--|
| _____ | 1. Perform all checks listed on Shift, Weekly and Monthly Operational Checklists. |
| _____ | 2. Follow engine quarterly service requirements. Refer to the Engine Maintenance Manual. |

Additional Maintenance Requirements For Severe Usage Applications.

INITIAL	DESCRIPTION
---------	-------------

- | | |
|-------|--|
| _____ | 3. Change hydraulic filter element. |
| _____ | 4. Follow the engine severe usage service. Refer to the Engine Maintenance Manual. |

DATE _____ INSPECTED BY _____



SEMI-ANNUAL OPERATIONAL CHECKLIST

All checks must be completed before operation of the MEC Scissor Lift.

MODEL NUMBER _____ SERIAL NUMBER _____

1. Keep inspection records up-to-date.
2. Record and report all discrepancies to your supervisor.
3. A dirty machine cannot be properly inspected.

KEEP YOUR MACHINE CLEAN!!



THIS CHECKLIST MUST BE USED AT SIX MONTH INTERVALS OR EVERY 500 HOURS, WHICHEVER OCCURS FIRST. FAILURE TO DO SO COULD AFFECT THE SAFETY OF THE OPERATOR. ALWAYS REMEMBER, A LITTLE PREVENTATIVE MAINTENANCE CAN SAVE MUCH MORE THAN IT COSTS.

INITIAL DESCRIPTION

- | | |
|-------|--|
| _____ | 1. Perform all checks listed on Shift, Weekly, Monthly and Quarterly Operational Checklist. |
| _____ | 2. Have a hydraulic fluid sample analyzed at a test laboratory. Comply with the test results and recommendations to ensure long, trouble free operation. |

IMPORTANT: If Hydraulic Fluid Has Been Regularly Maintained It Should Only Require Changing Once Every Year Depending On Maintenance, Temperature, Application, Duty Cycle, And Atmospheric Conditions.

- | | |
|-------|--|
| _____ | 3. Check the operation speeds to ensure they are within specified limits (see Machine Specifications). |
| _____ | 4. Check the emergency lowering system. |
| _____ | 5. Clean and lubricate all push button switches with dry lubricant and ensure that the switches operate freely in all positions. |

SEMI-ANNUAL OPERATIONAL CHECKLIST (Continued).....

INITIAL	DESCRIPTION
_____	6. Check the tightness of the platform frame and the linkage pins.
_____	7. Check the overall platform stability.
_____	8. Check the electrical mounting and hardware connections for security.
_____	9. Replace the filter element.
_____	10. Check the king pins for excessive play.
_____	11. Follow engine semiannual service requirements. Refer to the Engine Maintenance Manual.

DATE _____ INSPECTED BY _____



TROUBLESHOOTING



SHOULD YOU EXPERIENCE ERRATIC OPERATION OR NOTICE ANY MALFUNCTION WHILE OPERATING THIS MACHINE, DISCONTINUE USE IMMEDIATELY.

CALL FOR ASSISTANCE AND REPORT THE INCIDENT TO YOUR SUPERVISOR, AND DO NOT USE THE MACHINE UNTIL IT HAS BEEN CHECKED BY A TRAINED, QUALIFIED MECHANIC.


WHAT TO CHECK IF MACHINE WILL NOT START

- ◆ Battery cutoff switch?
- ◆ Selector switch turned to proper position (base/ platform)?
- ◆ Emergency stop buttons at both base and platform activated? (Rotate clockwise to release).
- ◆ Battery fully charged?
- ◆ Are any wires pulled out or loose?
- ◆ Is there proper fuel (gas, propane, or diesel) in the fuel tank?
- ◆ If equipped for dual fuel operation, is the fuel selector switch in the proper position?
- ◆ No oil pressure?

WHAT TO CHECK IF FUNCTIONS WILL NOT OPERATE:

- ◆ Is a function toggle switch or the enable switch not activated?
- ◆ Is the Base/Off/Platform switch in the proper position?
- ◆ Hydraulic fluid level low?
- ◆ Obvious fluid leak or damaged component?
- ◆ Are any wires pulled out or loose?

LUBRICATION DIAGRAM

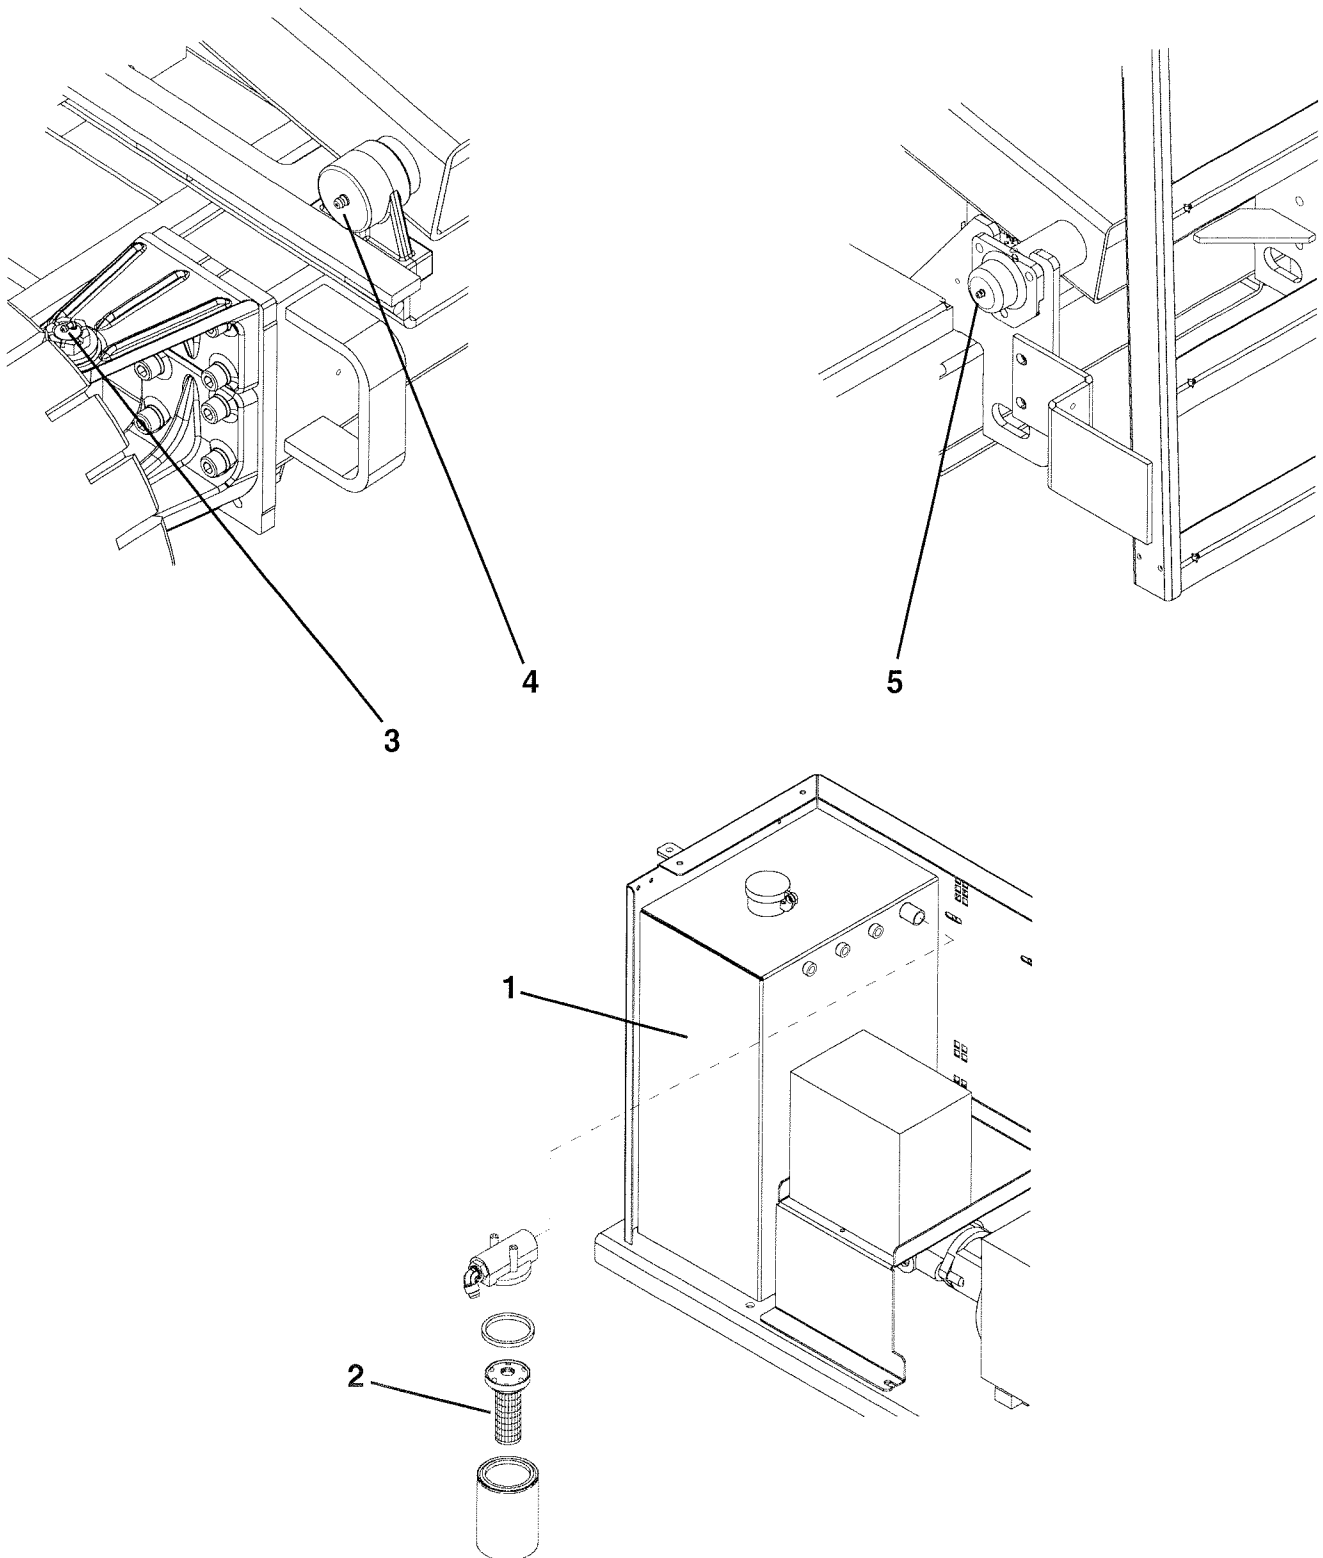

LUBRICATION CHART

NO.	ITEM	SPECIFICATION	FREQUENCY OF LUBRICATION
1	Hydraulic Reservoir	Anti-Wear 150 SSU (ISO 32/mil spec 0-5606) Fill To The Top Of The Sight Gauge With Platform In The Stowed Position.	Check Daily. Analyze Every Six (6) Months Or 500 Hours. Change Yearly Or Every 1,000 Hours, Whichever Occurs First.
2	Hydraulic Filter	Filter Element	Change Every Six Months Or 500 Hours, Whichever Occurs First For Normal Usage. Change Every Three Months Or 300 Hours, Whichever Occurs First For Severe Usage.
3	Front Hubs	Lithium N.L.G.I. #2 EP Purge Old Grease.	Weekly Or Every 25 Hours Whichever Occurs First.
4	Slide Block	Lithium N.L.G.I. #2 EP Purge Old Grease.	Weekly Or Every 25 Hours Whichever Occurs First.
5	Fixed Beam	Lithium N.L.G.I. #2 EP Purge Old Grease.	Weekly Or Every 25 Hours Whichever Occurs First.

Limited Owner Warranty

Mayville Engineering Company, Inc. (MEC) warrants its equipment to the original purchaser against defects in material and/or workmanship under normal use and service for one (1) year from date of registered sale or date the unit left the factory if not registered.

MEC further warrants the structural weldments of the main frame and elevating system as defined in MEC's current Warranty Policy & Procedures, to be free from defects in material or workmanship for five (5) years from date of registered sale or date unit left the factory if not registered.

Warranty claims within such warranty period shall be limited to repair or replacement, at MEC's option, of the defective part in question and labor to perform the necessary repair or replacement based on MEC's then current flat rate, provided the defective part in question is shipped prepaid to MEC and is found upon inspection by MEC to be defective in material and/or workmanship.

Mayville Engineering Company, Inc. shall not be liable for any consequential, incidental or contingent damages whatsoever. Use of other than factory authorized parts; misuse, improper maintenance, or modification of the equipment voids this warranty.

The foregoing warranty is exclusive and in lieu of all other warranties, express or implied. All such other warranties, including implied warranties of merchantability and of fitness for a particular purpose, are hereby excluded.

No Dealer, Sales Representative, or other person purporting to act on behalf of MEC is authorized to alter the terms of this warranty, or in any manner assume on behalf of MEC any liability or obligation which exceeds MEC's obligations under this warranty.





Aerial Work Platforms

Mayville Engineering Co., Inc.

An Employee Owned Company

210 Corporate Drive • P.O. Box 990 • Beaver Dam, WI • 53916-0990 USA

1-800-387-4575 • PH: 920-887-2518 • FAX: 920-887-2480

Email: awp@mayvl.com • Web: www.mayvl.com